

User's Manual

WALL MOUNT SERIES

RA7730SS/RA77B30SS
RA7736SS/RA77B36SS
RA7742SS/RA77B42SS
RA7748SS/RA77B48SS

NOTE: PLEASE INSPECT HOOD IMMEDIATELY UPON RECEIVING. CLAIM OF DAMAGE AFTER 7 DAYS OF DELIVERY WILL BE DENIED.

This unit is designed for indoor residential use only. DO NOT USE OVER A WOOD GRILL OR MOUNT IN OUTDOOR ENVIRONMENT.



Please read this operation manual thoroughly before using your range hood. Store it in a safe location for when you need to reference it in the future.

12 CLEANING & MAINTENANCE

CLEANING & MAINTENANCE

WARNING!!!

⚠ To prevent the possibility of a fire and explosion, do not use flammable liquids or solvents to clean the unit or any of its parts.

⚠ Check to make sure all power sources are disconnected before servicing or taking unit apart for cleaning.

⚠ Please thoroughly clean the unit weekly as stainless steel can rust under certain condition or by improper cleaning.

1. RANGE HOOD

- Use household cleaner to remove grease or dirt from the outer shell of the unit. Spray on wiping cloth or sponge and wipe in the direction of the grain to avoid scratching the unit. (DO NOT SPRAY DIRECTLY ONTO UNIT)
- Clean the inner working of the unit periodically to avoid grease build-up.
- Do not open control switch panel while the hood is connected to power.
- Use stainless steel cleaner to bring back the luster of the unit.

2. ALUMINUM FILTERS / BAFFLE FILTERS

- Remove filters from unit and place in warm soapy water.
- Clean each filter regularly to maintain efficient suction power.
- Do not drop filters.
- Let it soak thoroughly and then clean it with a wiping cloth or sponge.
- Filters may also be cleaned using residential dishwasher.