

Balance Shower Faucet Installation Manual

W-28.1(ES)

Warranty Duration

All parts of this faucet system are warranted to the original purchaser to be free from defects in material and workmanship for a lifetime.

Repair and Replacement

If the product has defects in material and workmanship within the warranty period, we will repair or replace the product free of charge. However, you may be required to provide the invoice when requesting repairs or replacement from us.

Exclusions

We shall not be responsible for the following cases:

- Damage to the product caused by improper installation, misuse, unauthorized repair or replacement, or abuse (including damage during shipment).
- Damage to the product caused by improper dismantlement after installation.
- Damage resulting from abnormal water pressure and impurities in water pipes is not covered under this warranty.
- Rust on the product due to insufficient care and maintenance is not covered under this warranty.
- Damage caused by natural disasters such as fire, flood, earthquake, electric storms, etc., is not covered under this warranty.

I hope this helps! If you have any further questions or concerns, please let me know.

Having Trouble? Contact us.

✉ Email: info@faucetsupport.com

☎ Toll Free: 1-888-969-6880



CEC FCC C E RoHS



M6484
SFS-1060
Model:A



M6483
SFS-1059
Model:B

CONTENT



1.Balance Shower Faucet Installation Manual	-----(1-10)
--	--------------------

CONTENIDO

1.Balance Shower Faucet Installation Manual	----- (11-20)
--	----------------------

◆ Installation and maintenance matters

1. Check the accessories list to verify that all parts are complete in this package.
2. Do not disassemble the main body by yourself.
3. Connect inlet pipes to supply valves.
4. Make sure inlet pipes and supply valves have no impurities and are cleaned, with no impurities in the pipeline.
5. After installation, check all joints for leakages.
6. Do not leave the rain shower system exposed to a severely corrosive environment.

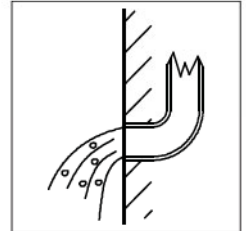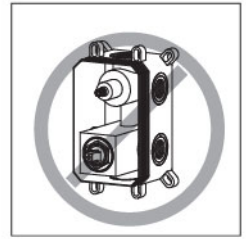


Do's

1. In order to keep the mixer surface bright, please clean the mixer regularly.
2. Rinse the faucet with clean water and wipe it with a soft cotton cloth.
3. Use one of the following cleaners to remove dirt from the surface:
a. Mild liquid cleaner.
b. Colorless glass cleaner and powder cleaner that do not cause abrasion and can be dissolved completely.
c. Polish liquid that does not cause abrasion.


Don'ts

- a. Avoid using cleaning powder, harsh cleaning chemicals, brushes and coarse cloth to prevent scratching and friction.
- b. Do not use acid cleaners to clean the faucet as they may cause surface corrosion of the faucet. If the faucet is exposed to harmful acid substances, please rinse it immediately with water.

TOOLS NEEDED:

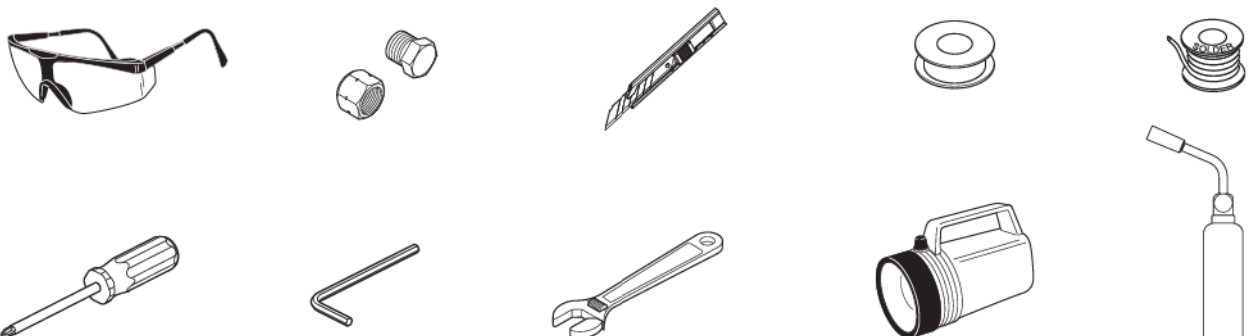


◆ **3-Function Luxury Shower Faucet**
Model:A
Accessories List

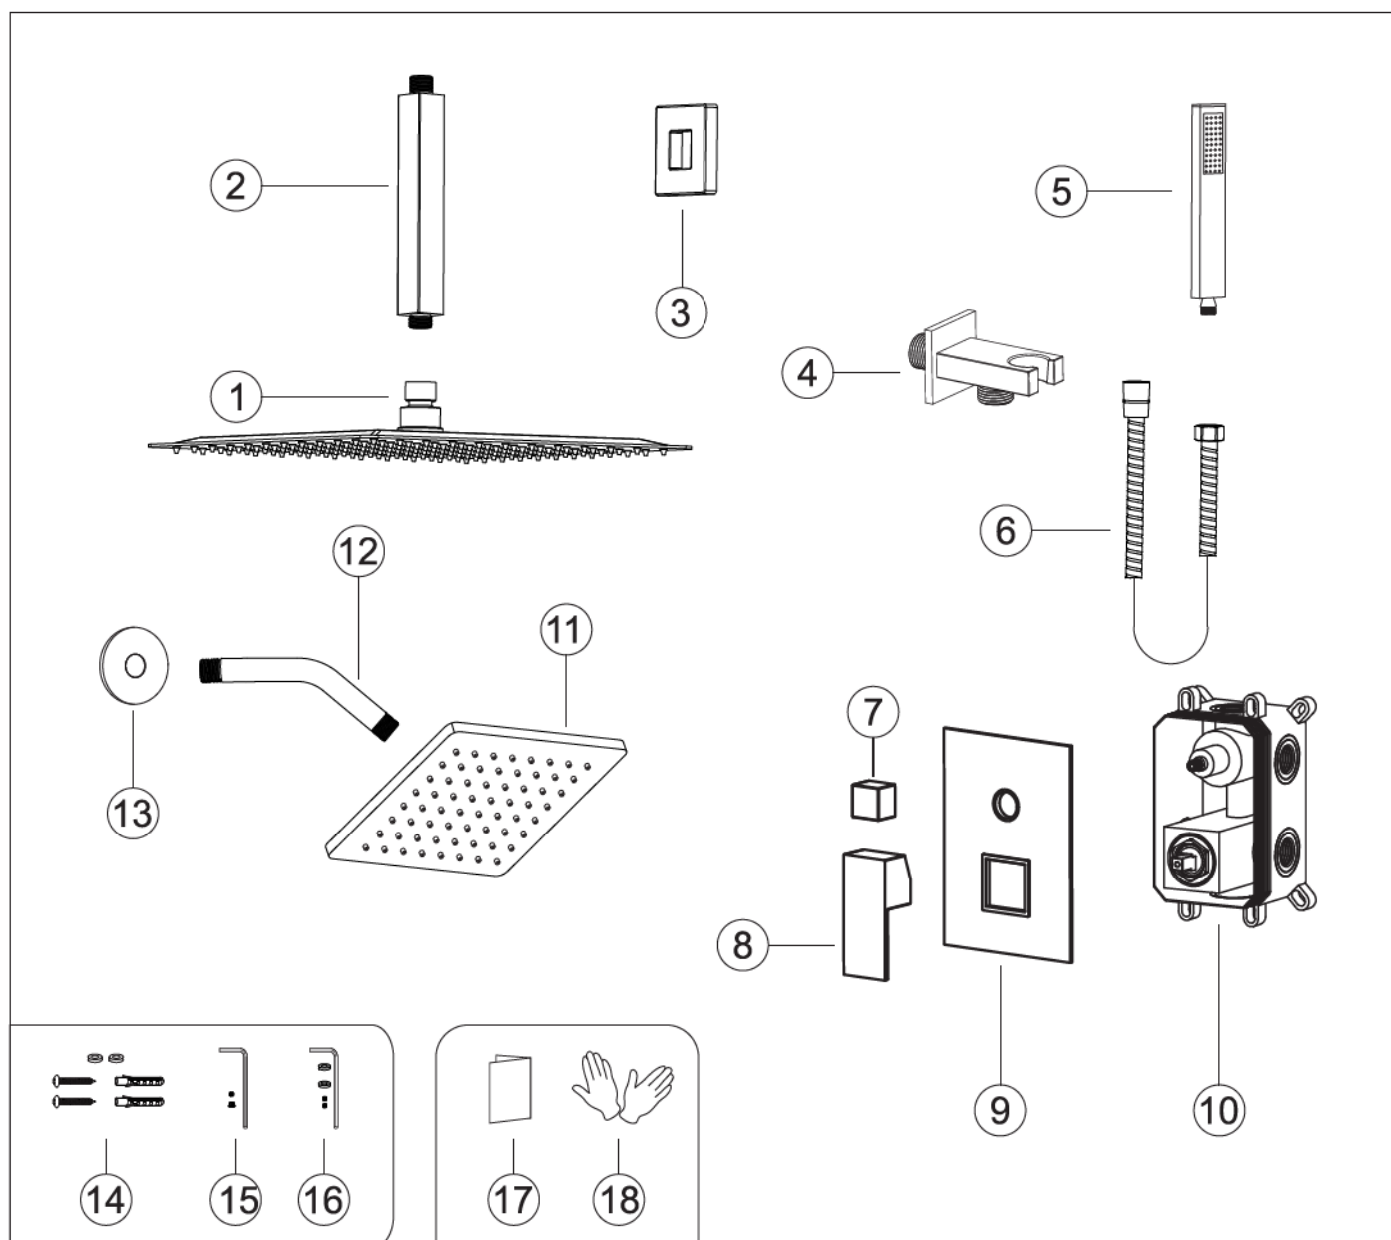


No.	Part name	Qty	No.	Part name	Qty
1	Shower head	1	10	Main body	1
2	Shower arm	1	11	6-inch Shower head	1
3	Shower arm cup	1	12	Shower arm	1
4	Hand shower holder	1	13	Shower arm cover	1
5	Shower hand	1	14	Main body spare parts	4
6	Shower hose	1	15	Handle parts	1set
7	Water diverter	1	16	Hand shower holder parts	1set
8	Handle	1	17	Instruction manual	1
9	Deck plate	1	18	Gloves	2

◆ Essential dimensions & water pipe line

Unit: mm/inch

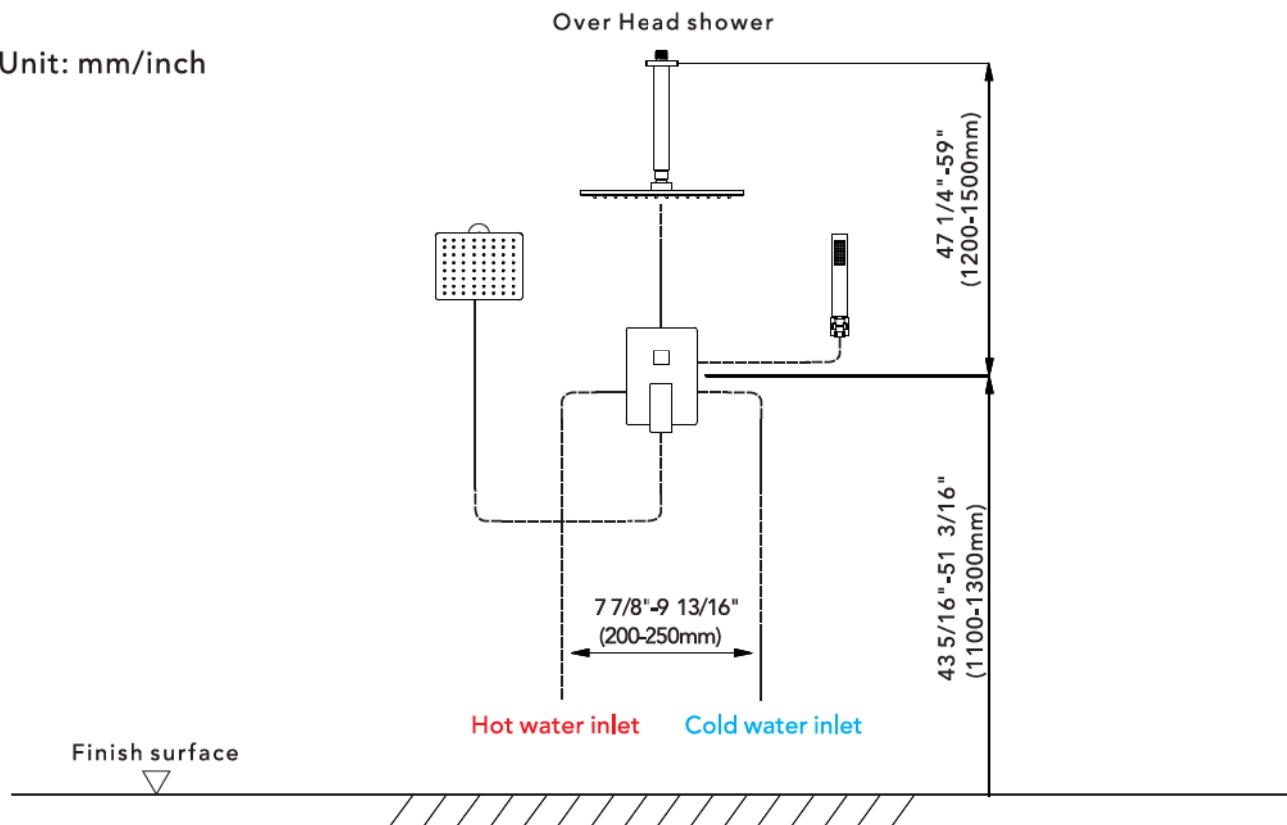


◆ The installation depth of shower holder and shower head

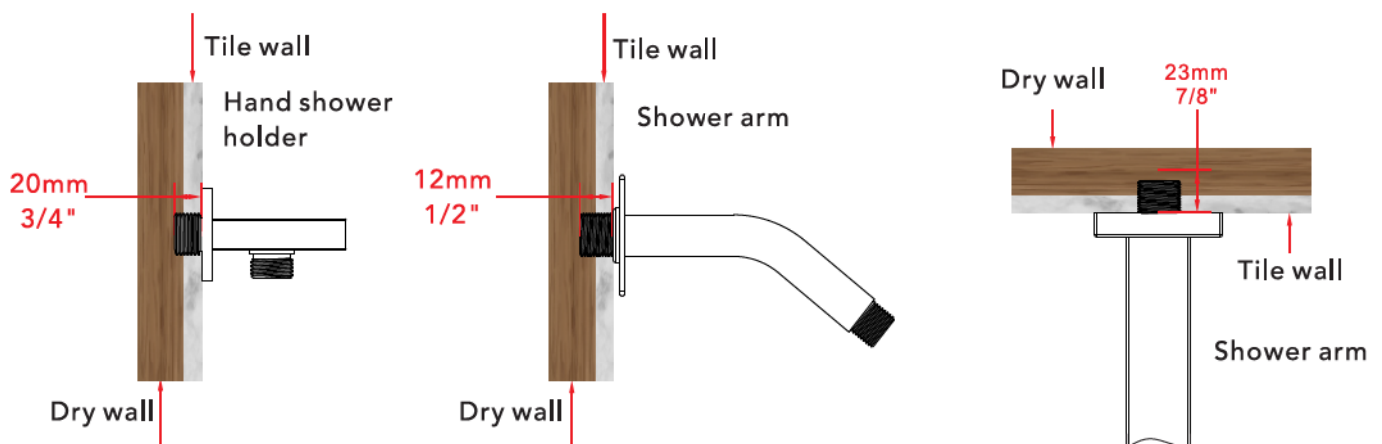

The thickness of the tile must be calculated for installation.


Connector size of male thread: USA: 1/2"-14NPT, Canada: 1/2"-14NPT, Europe: G1/2".

◆ The installation of the Shower head(Model :A)

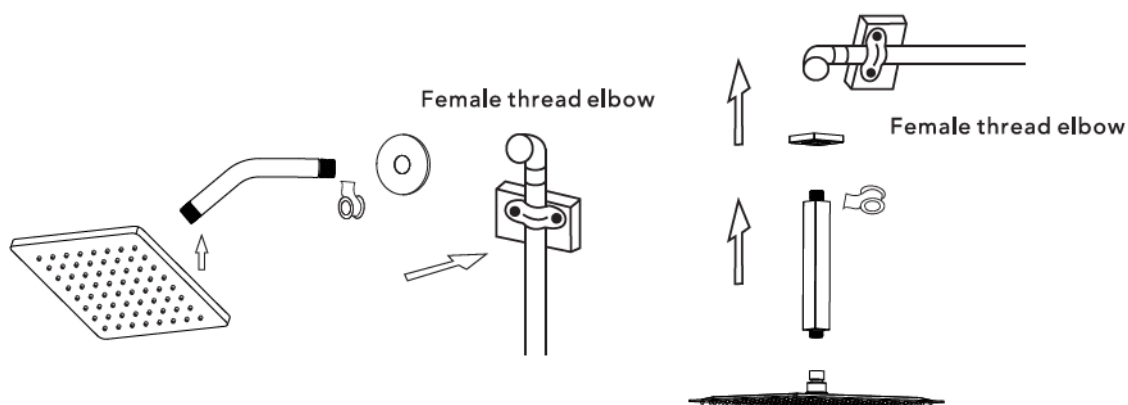


1. Connect shower arm with the cover before screwing arm into riser connection to prevent damage.
2. Fix shower head onto shower arm and apply tape to pipe threads on both ends.
3. Do not over tighten shower head. It is 360° swivel connection.

◆ Installation the Hand Shower Holder(Model :A)

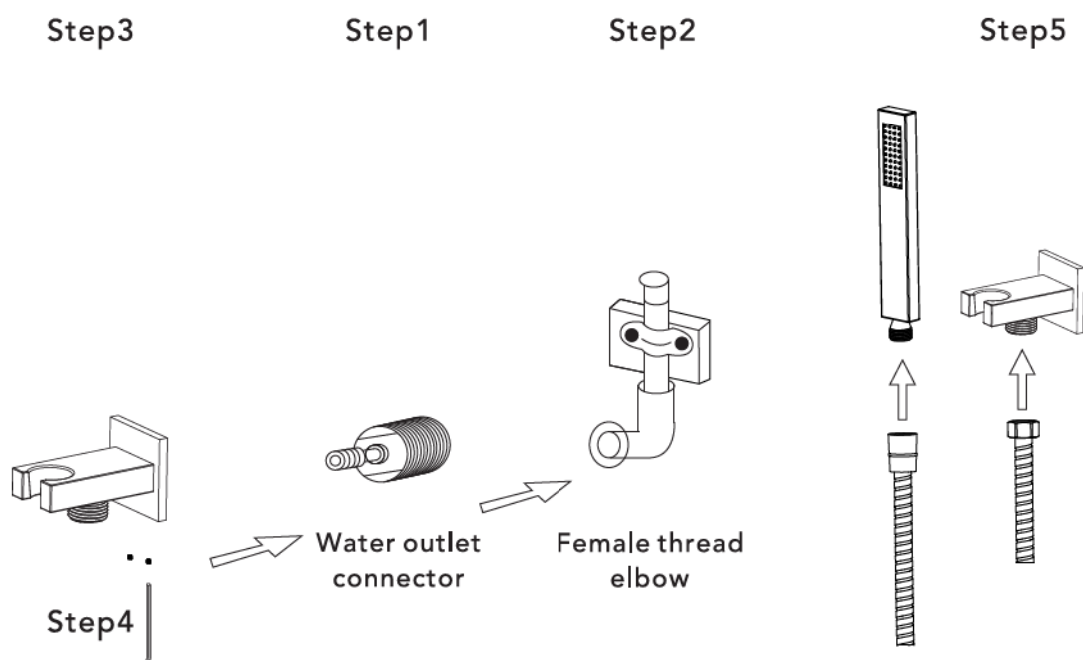

- Step1. Remove the male connector from the top of the shower holder (do not damage the gasket, otherwise it will leak).
- Step2. Screw the thread into the water pipe inside the wall
- Step3. Screw the main body into the thread.
- Step4. Rotate and fix the body with the special-shaped wrench
- Step5. Connect hand shower and the hose.


◆ **3-Function Luxury Shower Faucet**
Model:B
Accessories List

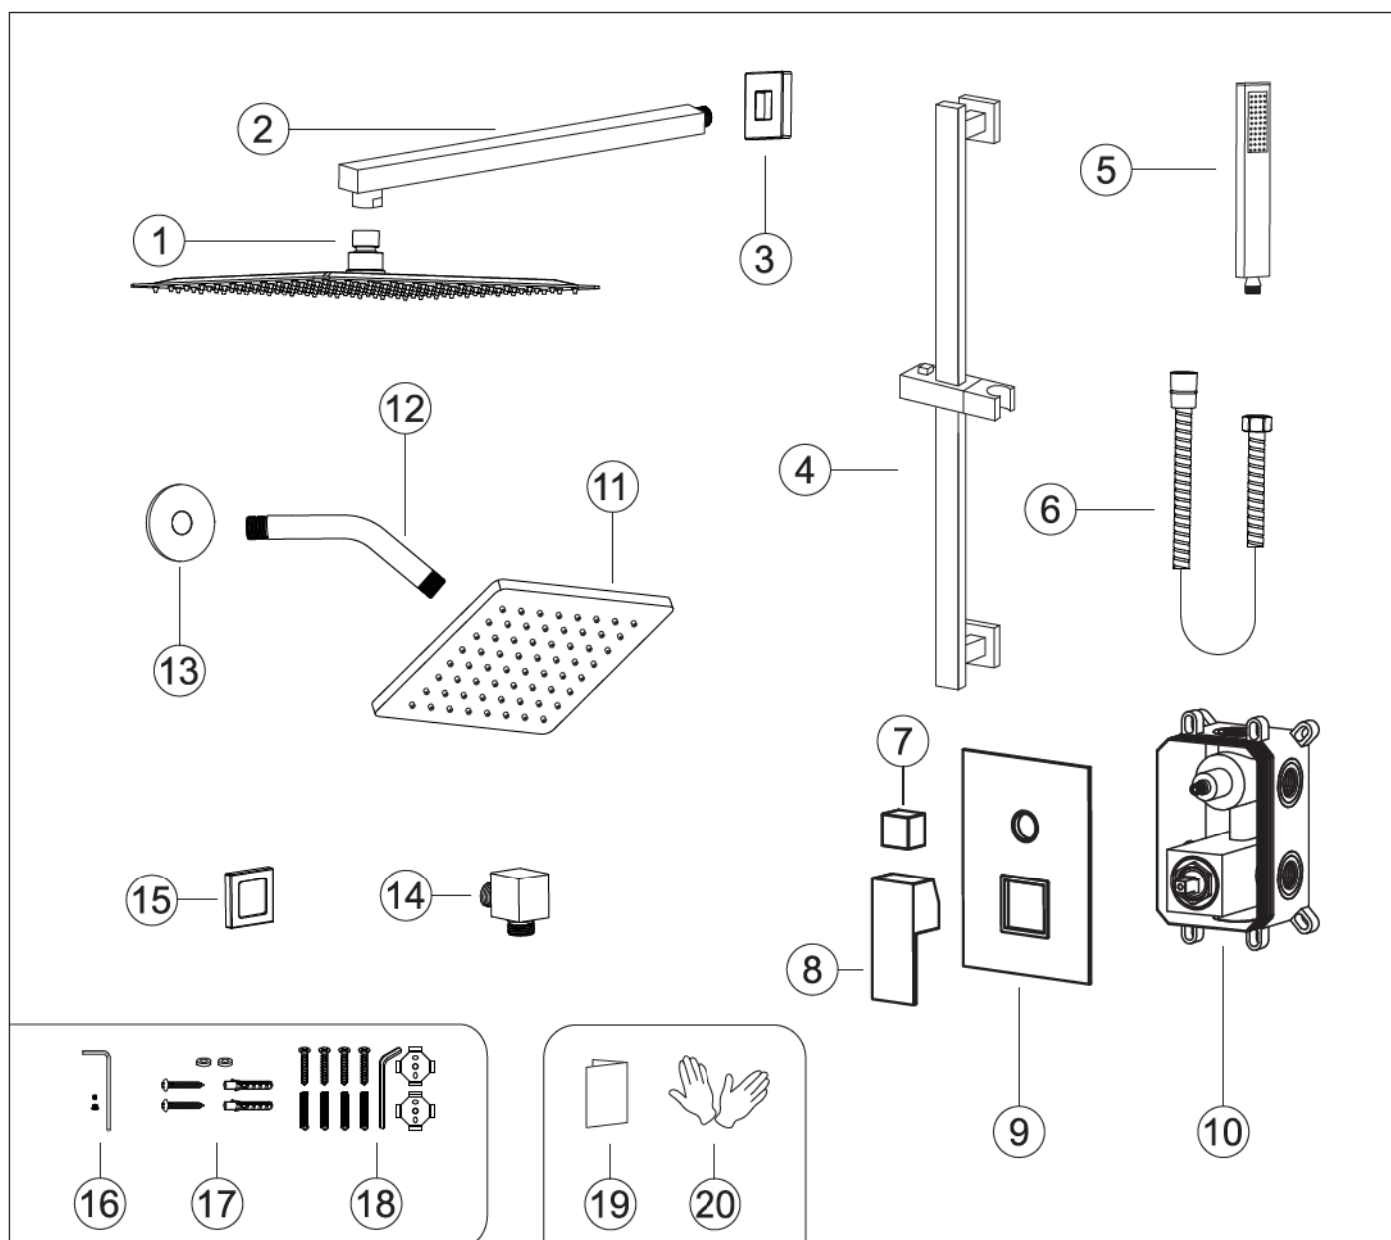


No.	Part name	Qty	No.	Part name	Qty
1	Shower head	1	11	6-inch Shower head	1
2	Shower arm	1	12	Shower arm	1
3	Shower arm cup	1	13	Shower arm cover	1
4	Lifting rod	1	14	Connector	1
5	Shower hand	1	15	Cup	1
6	Shower hose	1	16	Handle parts	1set
7	Water diverter	1	17	Main body spare parts	4
8	Handle	1	18	Lifting rod parts	1set
9	Deck plate	1	19	Instruction manual	1
10	Main body	1	20	Gloves	2

◆ Essential dimensions & water pipe line

Unit: mm/inch

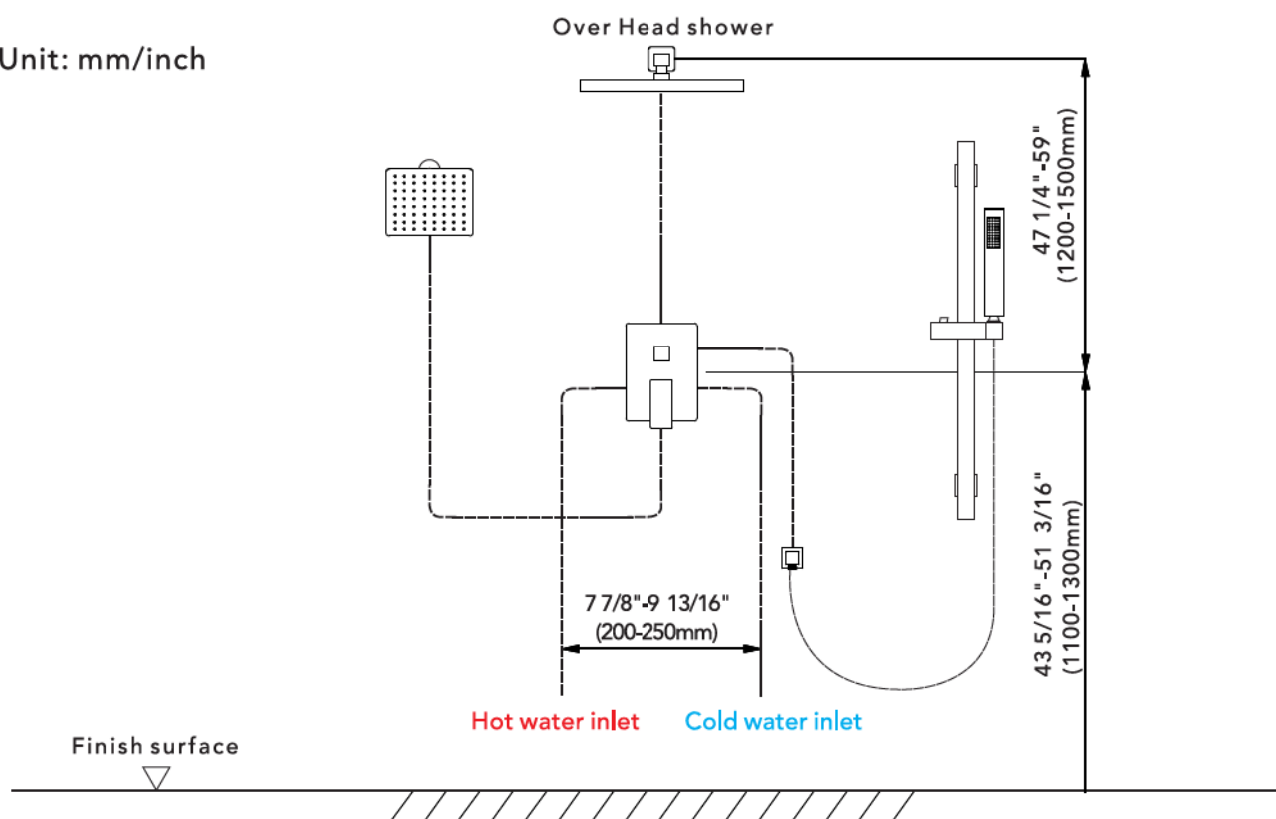


◆ The installation depth of shower holder

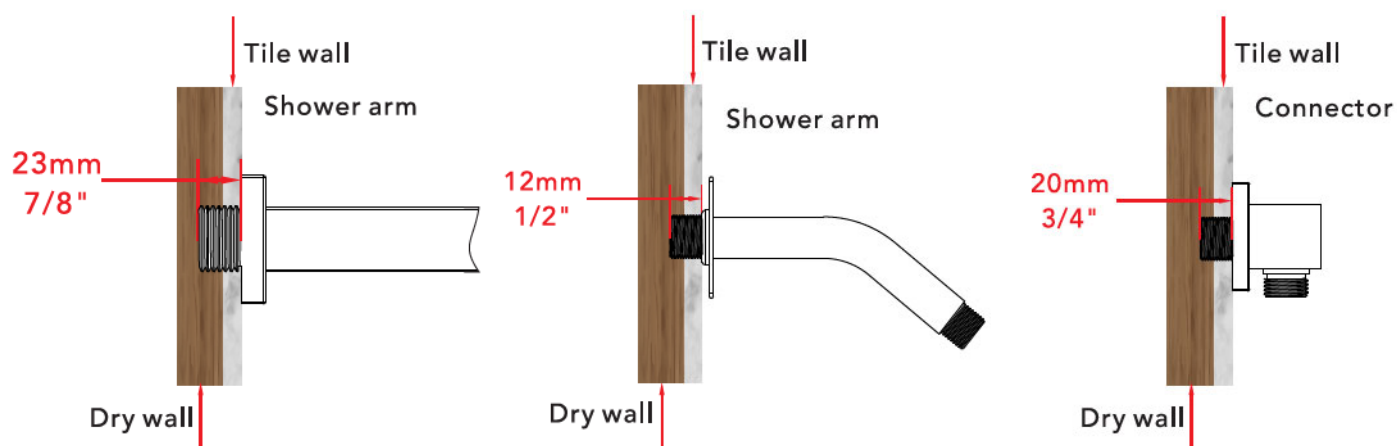

The thickness of the tile must be calculated for installation.







Connector size of male thread: USA: 1/2"-14NPT, Canada: 1/2"-14NPT, Europe: G1/2".

◆ The installation of the shower head(Model :B)

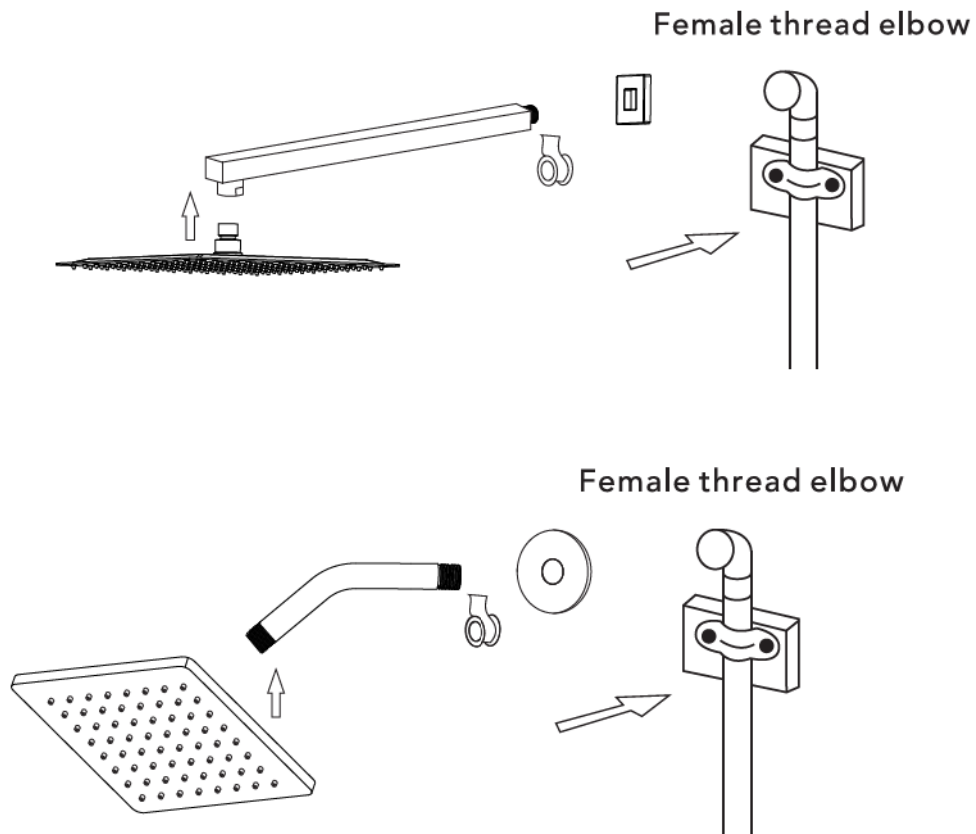

- 1.Connect shower arm with the cover before screwing arm into riser connection to prevent damage.
- 2.Fix shower head onto shower arm and apply tape to pipe threads on both ends.
- 3.Do not over tighten shower head. It is 360° swivel connection.

◆ Lifting Rod Installation

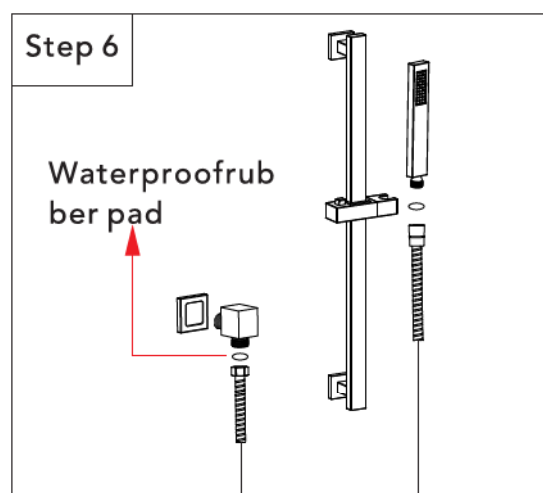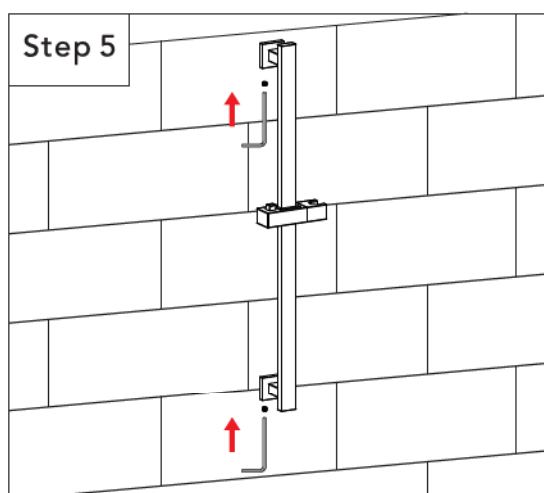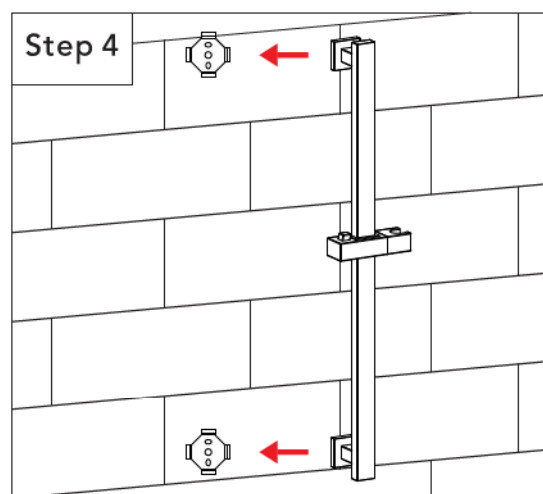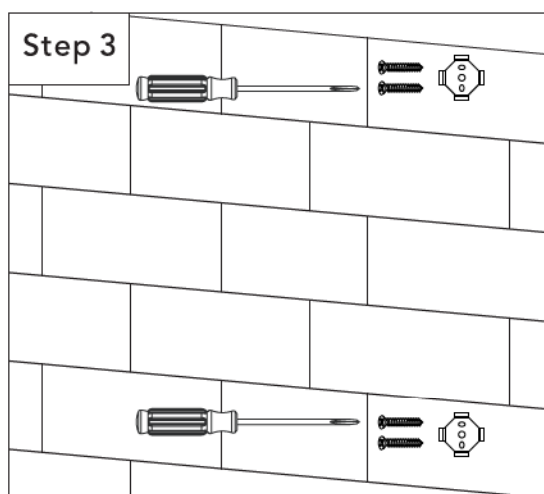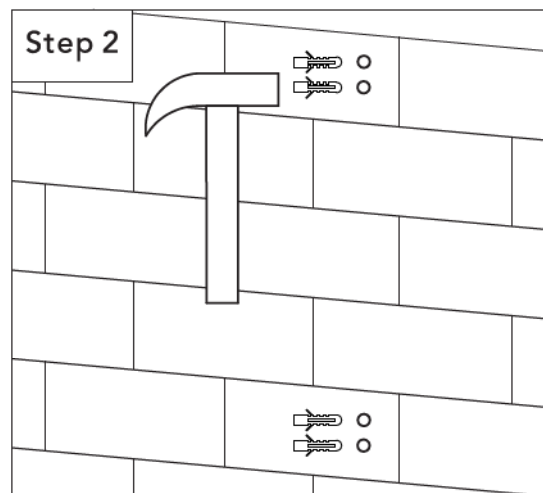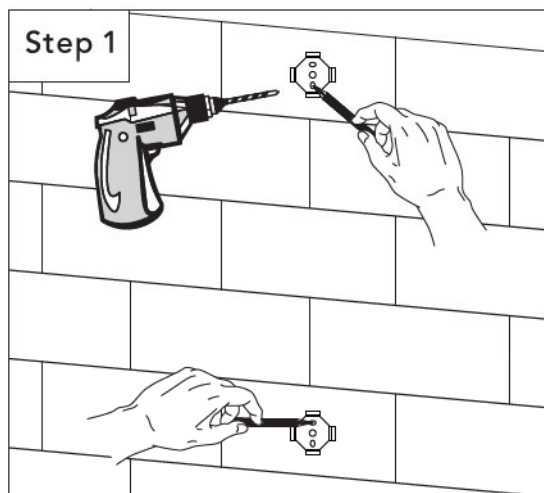


1. Mark the punch position with a pen, drill holes using a 6 mm electric drill, then knock the pellets in. Lastly, place the base and screw in the screws.

2. Put the Shower Elevator Rack into the base, then tighten the screw. Done.

Step 1. Wrap the connector with Teflon tape. Screw the thread into the water pipe inside the wall.


Step 2. Install the rubber pad on the shower hose and connect it to the connector.

◆ Installation Depth Of Main Body(Model :A&B)

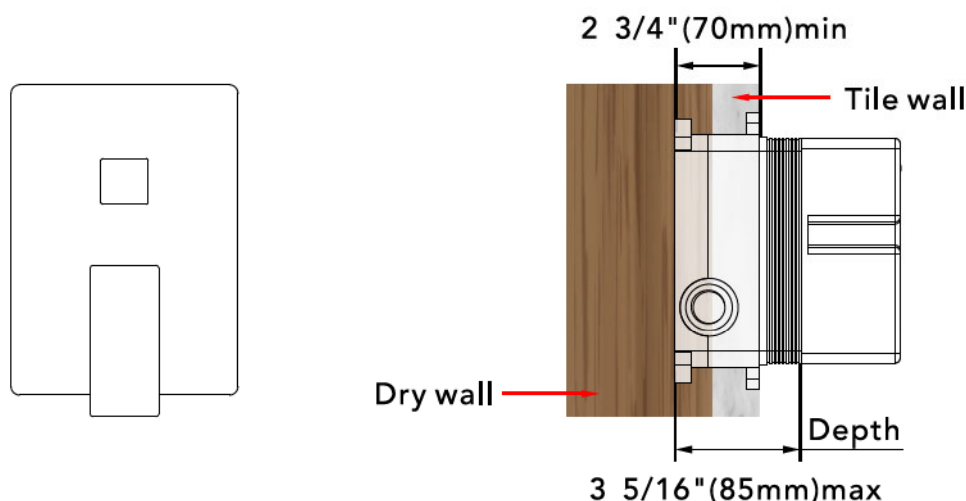

- Notice: 1. The installation depth of the main body should be no less than 2 3/4" (70mm) and no more than 3 5/16" (85mm), including the thickness of the tile. Otherwise, the deck plate cannot be installed.
2. The opening size of ceramic tile shall be smaller than the deck plate size.
-


◆ Piping Instructions Before Tiling(Model :A&B)

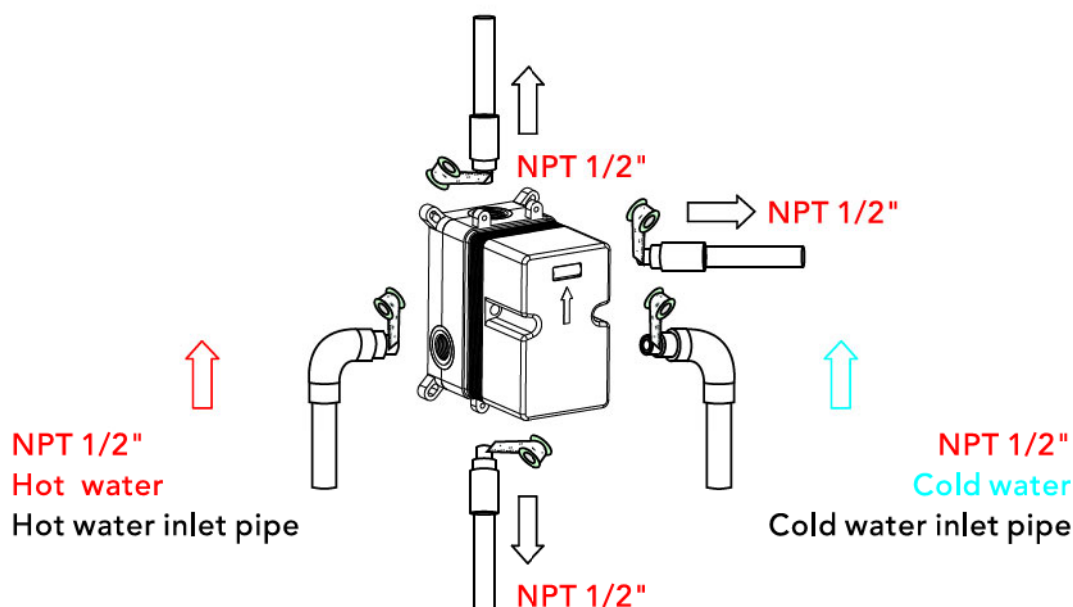

- 1.As shown in the figure, the inlet and outlet pipes are pre-buried. Please pay attention to the correct direction when installing the pre-buried main body.
 - 2.Before tiling, turn on the water to test whether the left and right inlet pipes are tightly connected without leakage.Then, adjust the flow switch to the "on" position to check for leaks in the mixed outlet pipes.
-


◆ Main Body Valve Installation(Model :A&B)

Step1

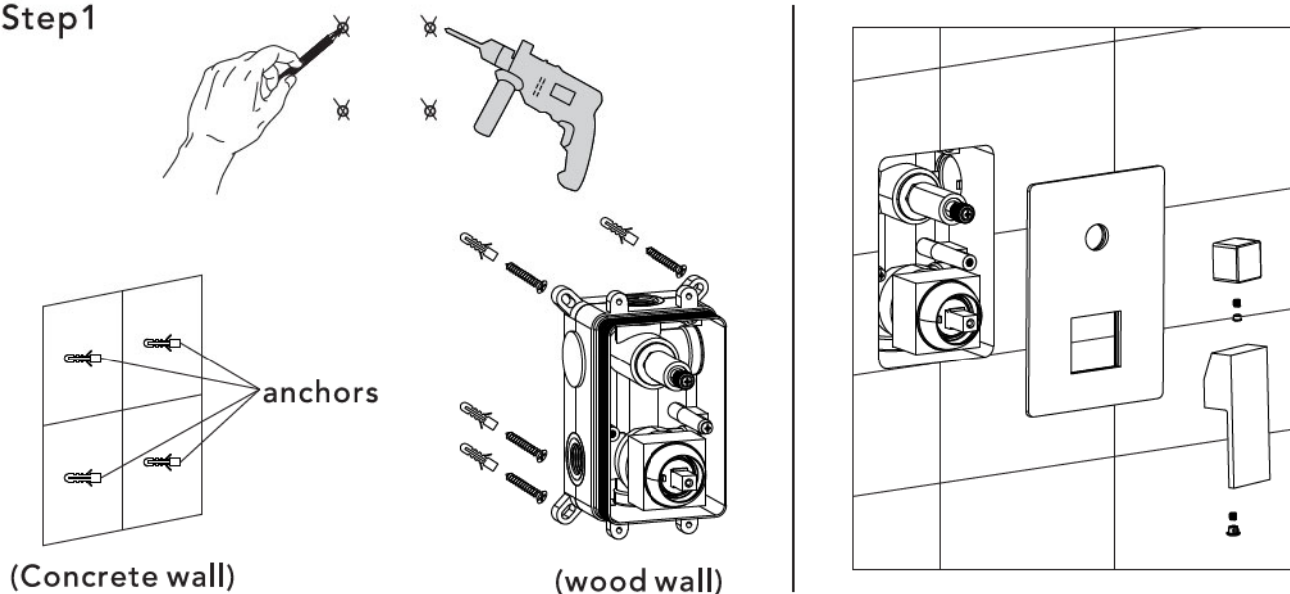

1. Make marks according to the size of the main body valve, and then drill anchors into the wall (concrete wall).
 2. Lock the main body to wood directly with screws (wood wall).
 3. When installing the main body, please mark the UP side up and do not install it upside down.
- ▲ Please note that the level meter should be parallel to the wall; otherwise, the deck plate cannot be installed.




◆ Main Body Water Outlet Switch Control(Model:A&B)

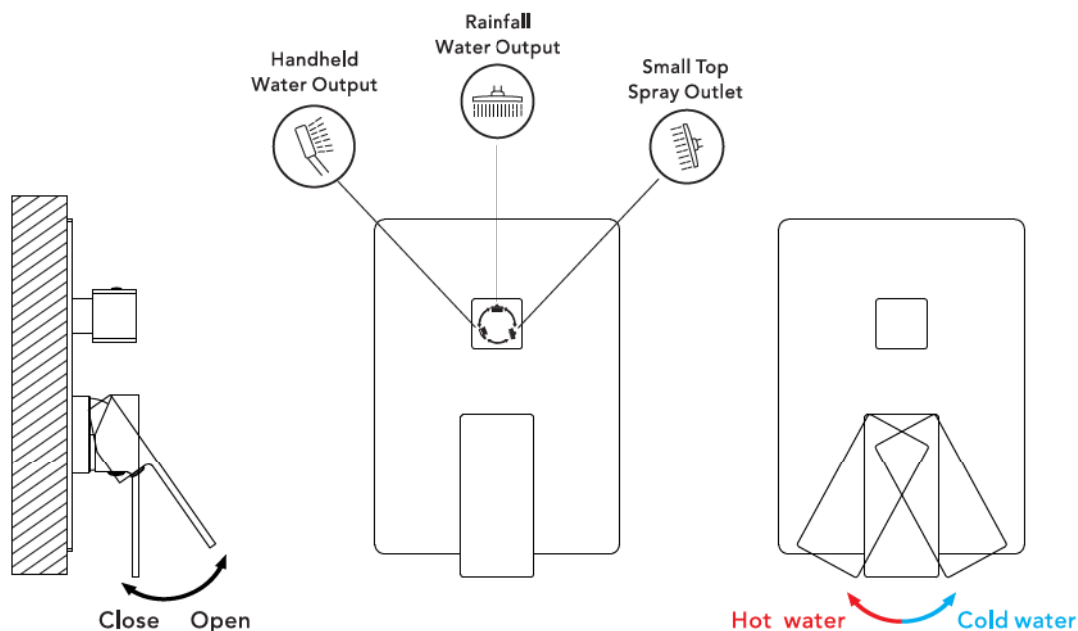

1. Open the water valve and check for any leakage
2. Turn the handle upwards to open the water valve. The turning angle can control the water outflow rate. Then, the user can turn it to the left or right to control the water temperature, where the left is for hot water and the right is for cold water.
3. The switch valve can alternate the water outlet between the shower head, overhead shower, and handheld shower.

◆ Instalación y cuestiones de mantenimiento

1. Verifique la lista de accesorios para comprobar que todas las partes están completas en este paquete.
2. No desmonte el cuerpo principal por sí mismo.
3. Conecte las tuberías de entrada a las válvulas de suministro.
4. Asegúrese de que las tuberías de entrada y las válvulas de suministro no tengan impurezas y estén limpias, sin impurezas en la tubería.
5. Después de la instalación, verifique todas las uniones para detectar fugas.
6. No deje el sistema de ducha tipo lluvia expuesto a un ambiente severamente corrosivo.

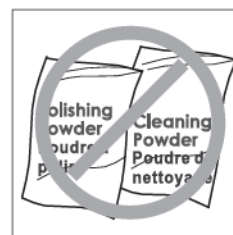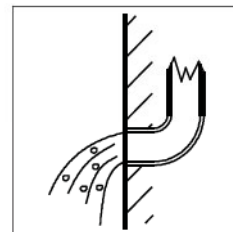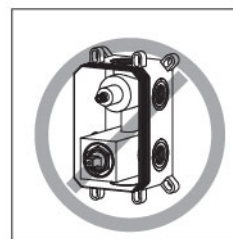





Hacer

1. En para mantener la superficie de la batidora brillante, limpie el mezclador regularmente.
2. Inse el grifo con agua limpia y límpielo con un suave ropa de algodón.
3. Utilice uno de los siguientes limpiadores para eliminar la suciedad de la superficie: a. Limpiador líquido suave. b. Limpiador de vidrio incoloro y limpiador en polvo que no causen abrasión y que se puedan disolver completamente. c. Líquido pulidor que no cause abrasión.

No es decir

- A. Valte con polvo de limpieza, productos químicos de limpieza duros, cepillos y tela gruesa para evitar rascar y fricción.
- B. No use limpiadores de ácidos para limpiar el grifo, ya que pueden causar corrosión superficial del grifo. Si el grifo está expuesto a sustancias ácidas dañinas, enjuague inmediatamente con agua.

    
HERRAMIENTAS NECESARIAS:



◆ Grifo de Ducha de Lujo con Tres Funciones

Modelo: A


Lista de Accesorios

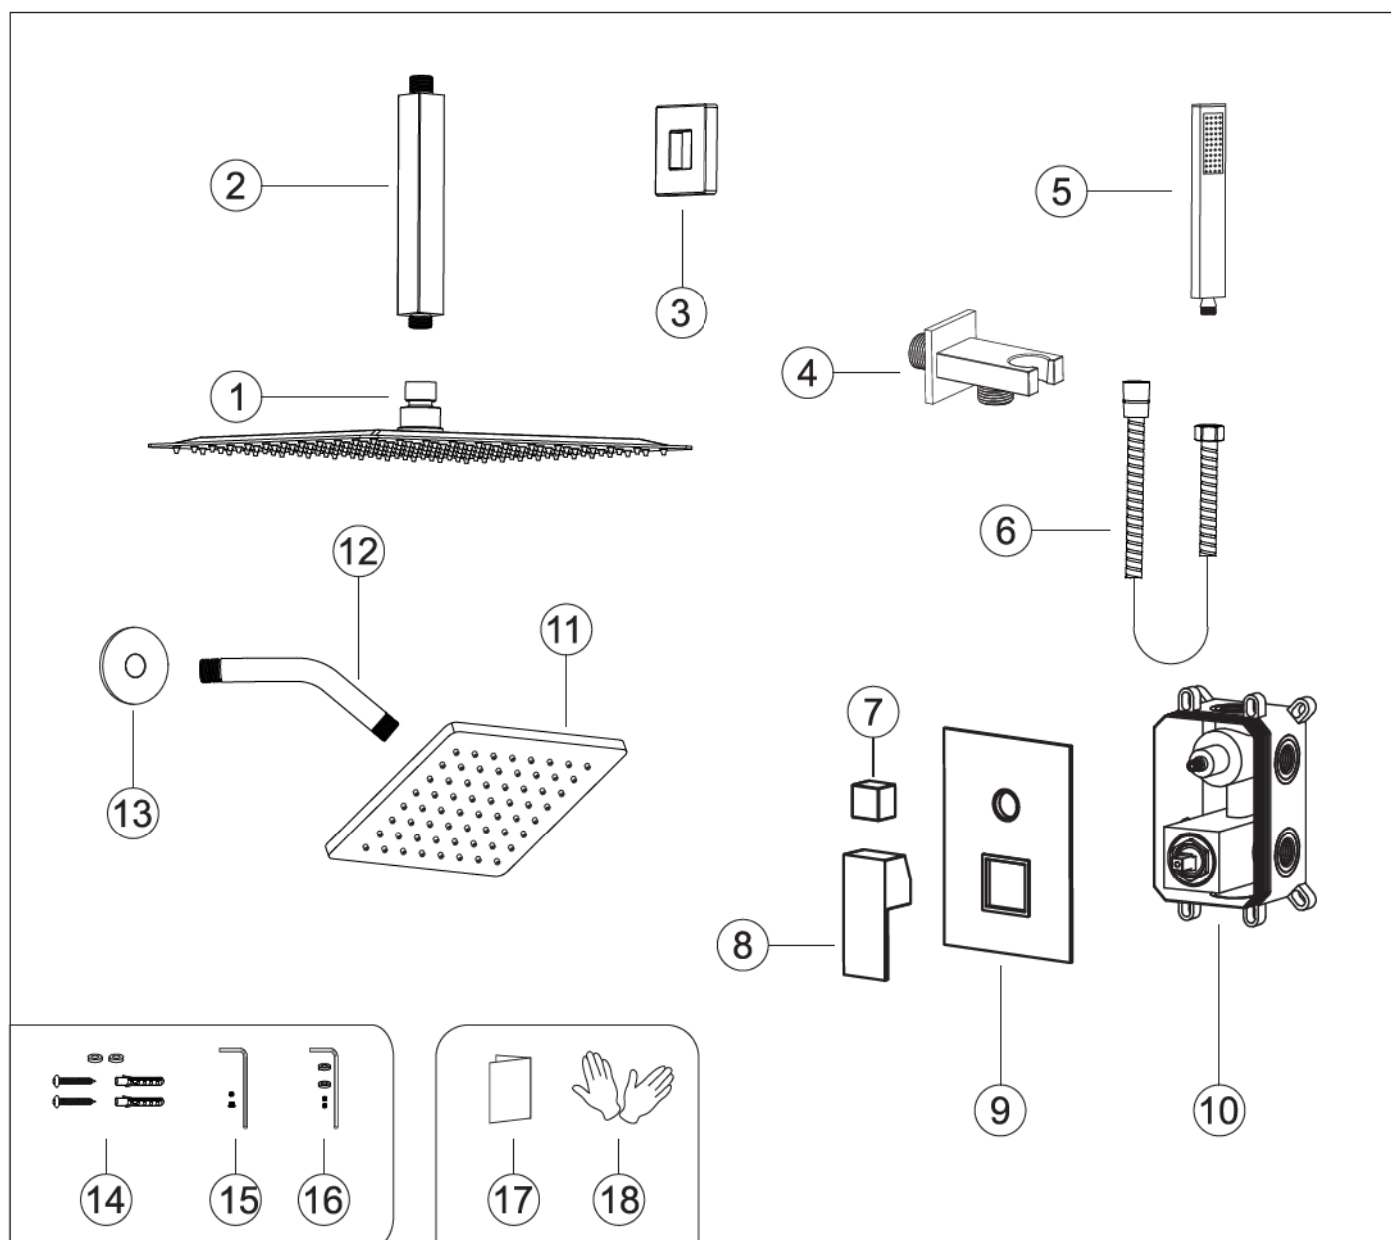


N.º	Nombre de la pieza	Cantidad	N.º	Nombre de la pieza	Cantidad
1	Cabezal de Ducha	1	10	Cuerpo Principal	1
2	Brazo de Ducha	1	11	Cabezal de Ducha de 6 Pulgadas	1
3	Taza de Brazo de Ducha	1	12	Brazo de Ducha	1
4	Soporte de Ducha de Mano	1	13	Cubierta de Brazo de Ducha	1
5	Ducha de Mano	1	14	Piezas de Repuesto del Cuerpo Principal	4
6	Manguera de Ducha	1	15	Piezas del Mango	1set
7	Desviador de Agua	1	16	Piezas del Soporte de Ducha de Mano	1set
8	Manija	1	17	Manual de Instrucciones	1
9	Placa de Cubierta	1	18	Guantes	2

◆ Dimensiones esenciales & línea de tubería de agua

Unidad: mm/pulgada

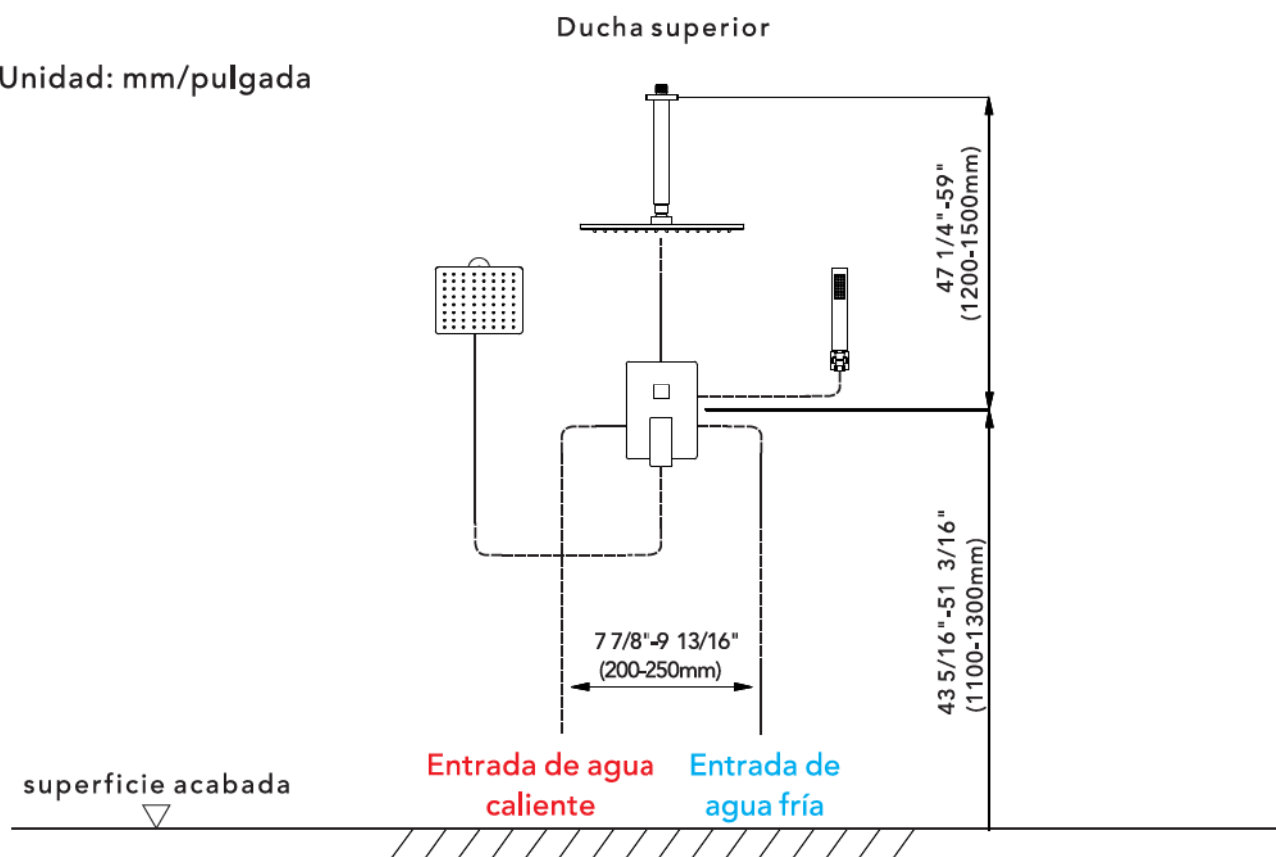


◆ La profundidad de instalación del soporte de ducha y del cabezal de ducha

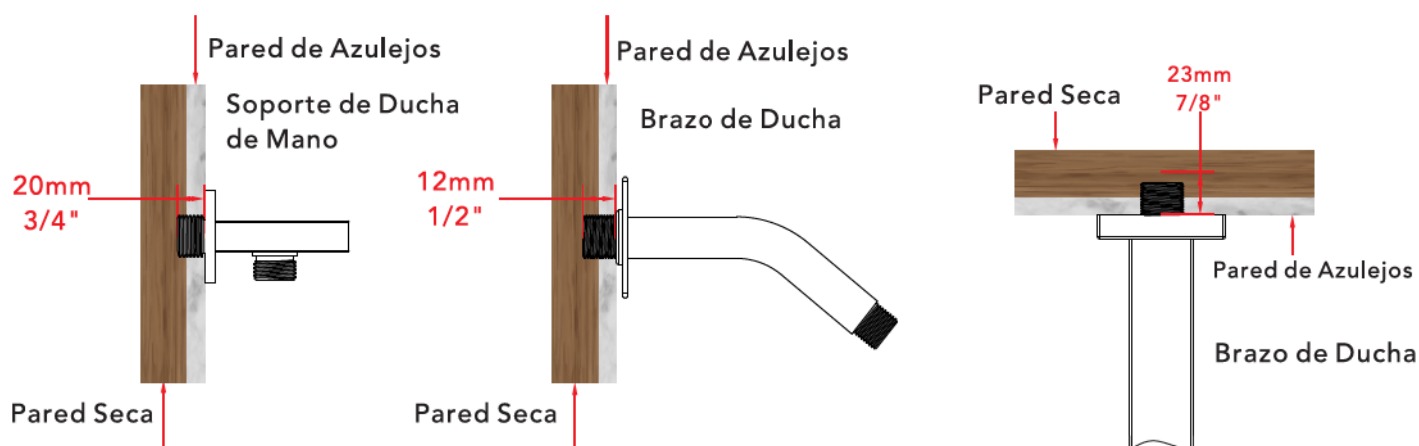

El grosor del azulejo debe ser calculado para la instalación.


Tamaño del conector de rosca macho: EE. UU.: 1/2"-14NPT, Canadá: 1/2"-14NPT, Europa: G1/2".

◆ La instalación del cabezal de ducha (Modelo: A)

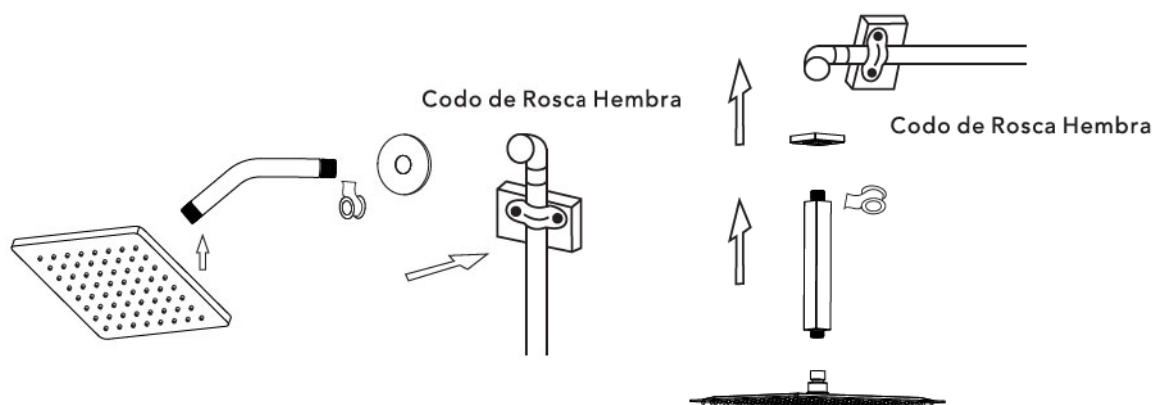

1. Conecte el brazo de la ducha con la cubierta antes de atornillar el brazo en la conexión del elevador para evitar daños.
2. Fije el cabezal de ducha al brazo de ducha y aplique cinta a las roscas de la tubería en ambos extremos.
3. No apriete demasiado el cabezal de ducha. Es una conexión giratoria de 360°.

◆ Instalación del Soporte de Ducha de Mano (Modelo: A)

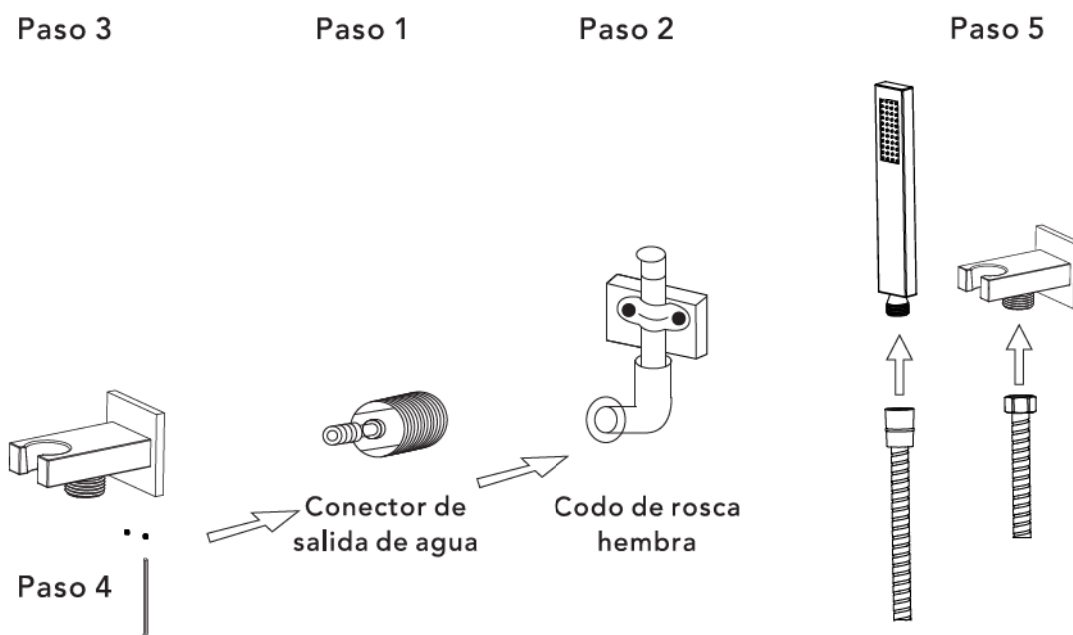


- Paso 1: Retire el conector macho de la parte superior del soporte de la ducha (no dañe la junta, de lo contrario, se producirá una fuga).
- Paso 2: Atornille la rosca en la tubería de agua dentro de la pared.
- Paso 3: Atornille el cuerpo principal en la rosca.
- Paso 4: Gire y fije el cuerpo con la llave de forma especial.
- Paso 5: Conecte la ducha de mano y la manguera.

◆ Grifo de Ducha de Lujo con Tres Funciones

Modelo: B


Lista de Accesorios

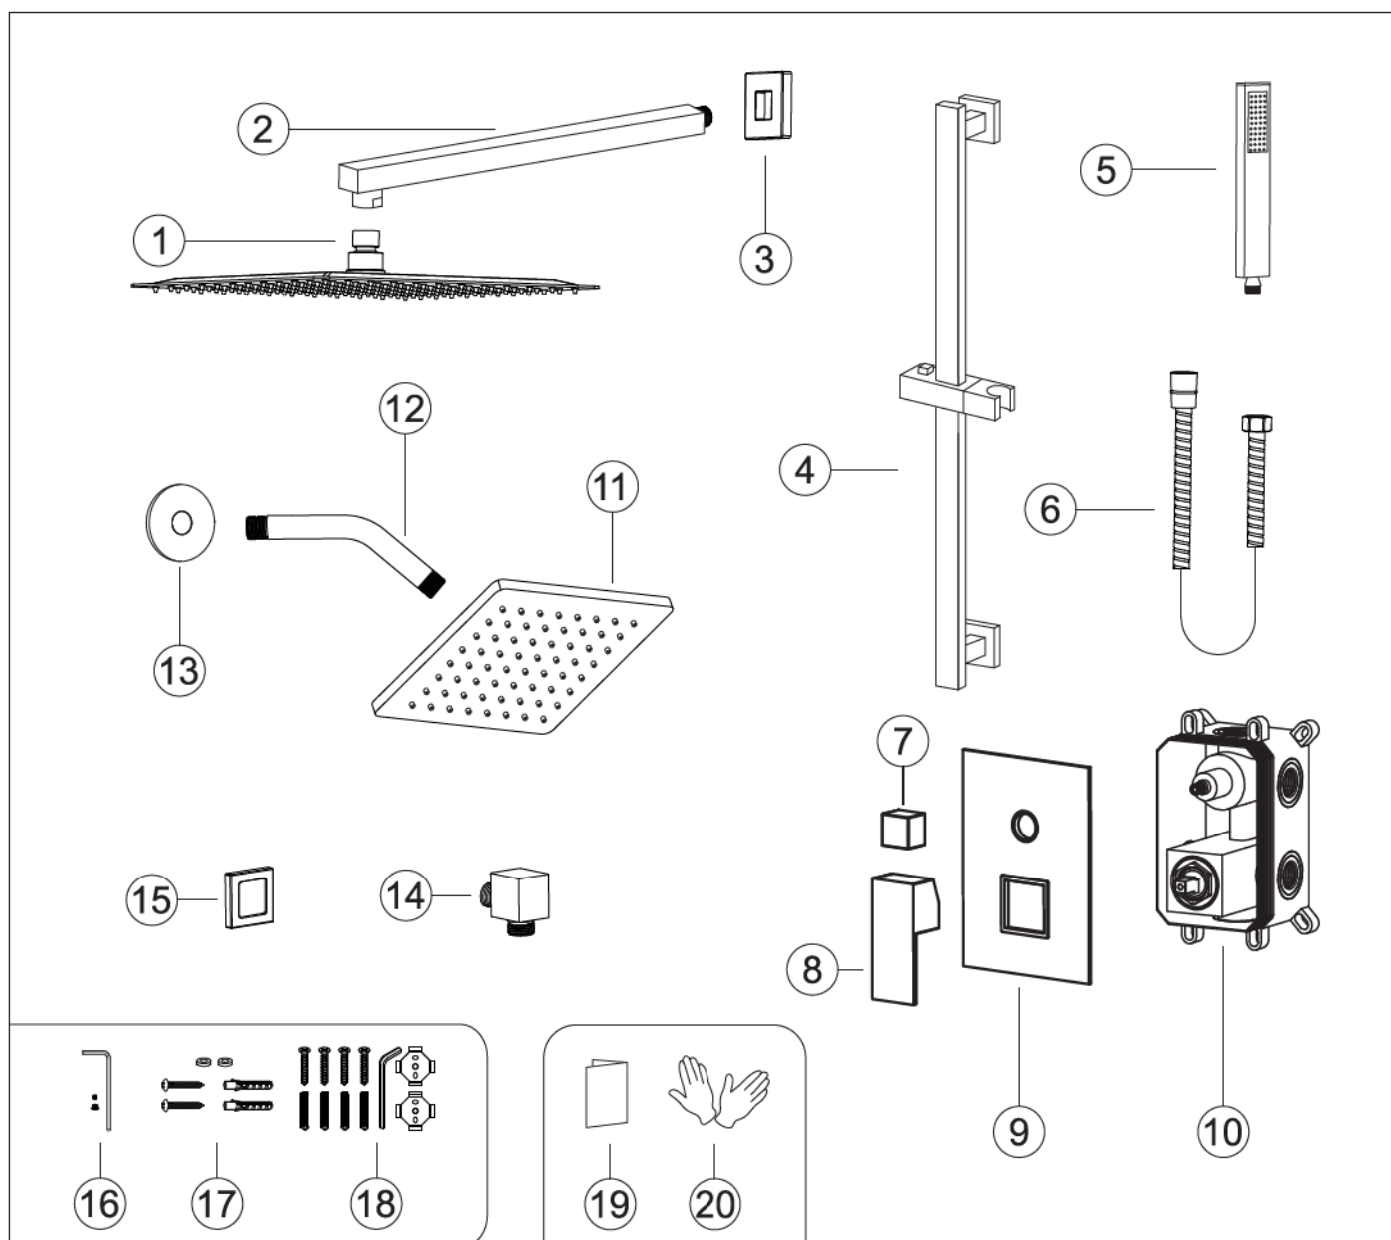


No.	Part name	Qty	No.	Part name	Qty
1	Cabezal de Ducha	1	11	Cabezal de Ducha de 6 Pulgadas	1
2	Brazo de Ducha	1	12	Brazo de Ducha	1
3	Taza de Brazo de Ducha	1	13	Cubierta de Brazo de Ducha	1
4	Barra de Elevación	1	14	Conector	1
5	Ducha de Mano	1	15	Taza	1
6	Manguera de Ducha	1	16	Piezas del Mango	1set
7	Desviador de Agua	1	17	Piezas de Repuesto del Cuerpo Principal	4
8	Manija	1	18	Piezas de la Barra de Elevación	1set
9	Placa de Cubierta	1	19	Manual de Instrucciones	1
10	Cuerpo Principal	1	20	Guantes	2

◆ Dimensiones esenciales & línea de tubería de agua

Unidad: mm/pulgada

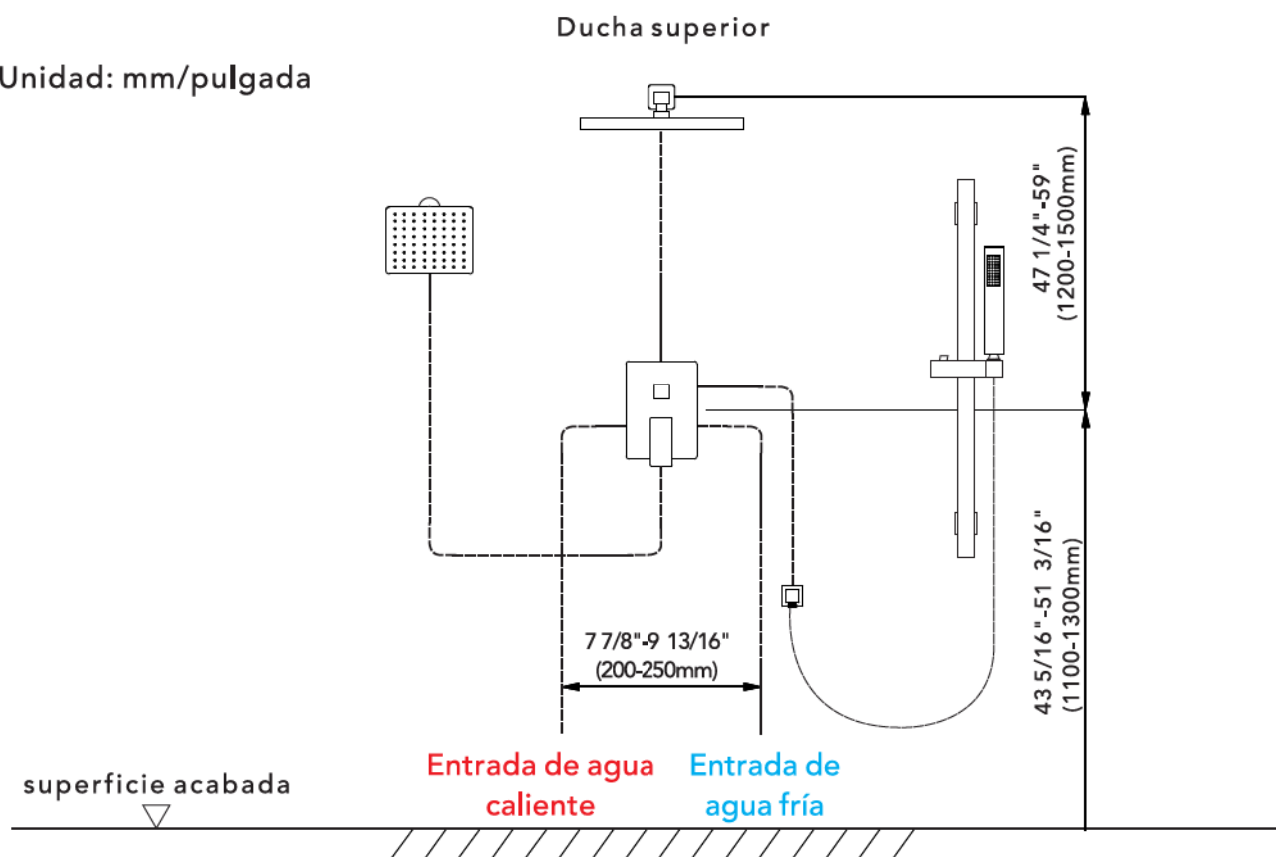


◆ The installation depth of shower holder

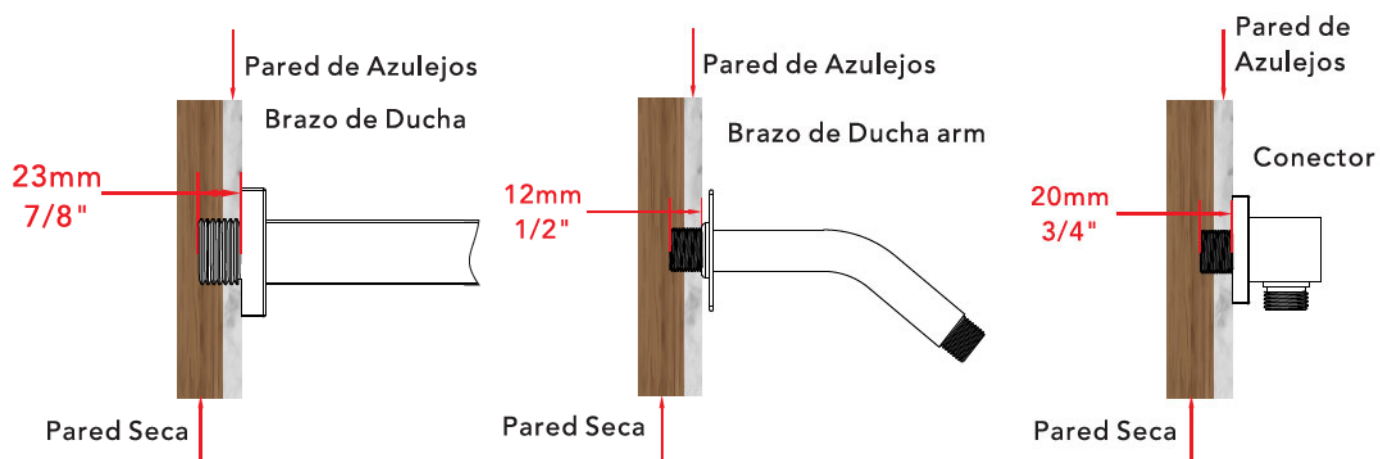

El grosor del azulejo debe ser calculado para la instalación.






Tamaño del conector de rosca macho: EE. UU.: $\frac{1}{2}'' - 14\text{NPT}$, Canadá: $\frac{1}{2}'' - 14\text{NPT}$, Europa: $G\frac{1}{2}''$.

◆ La instalación del cabezal de ducha (Modelo: A)

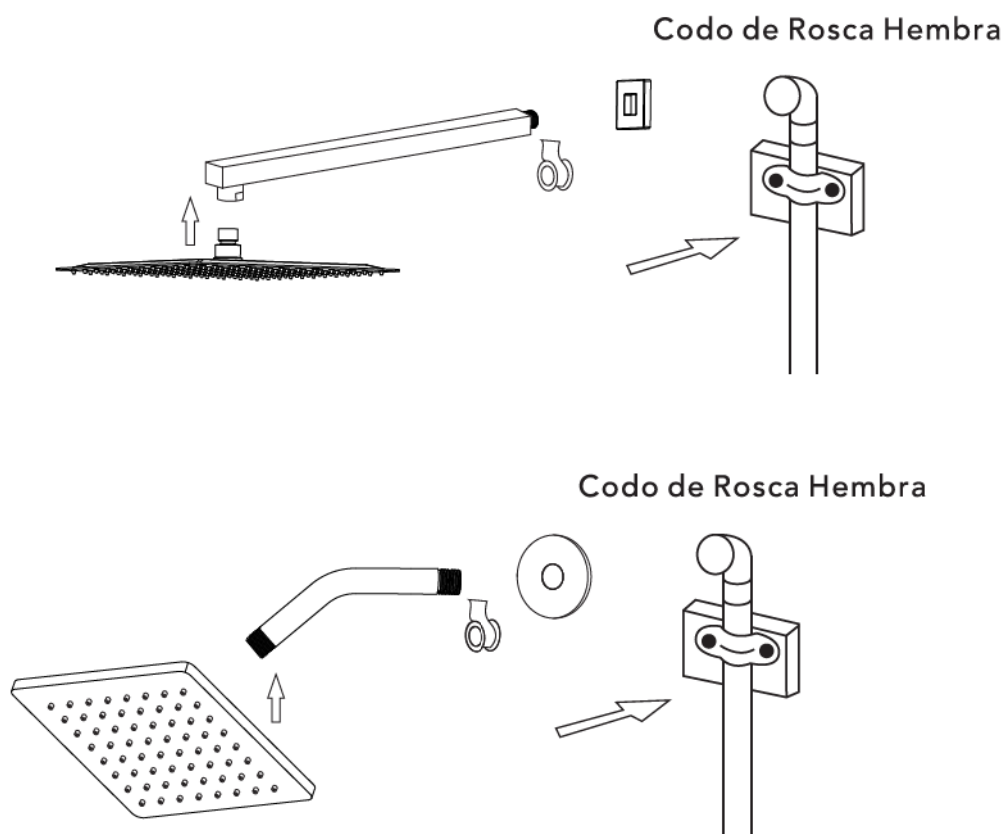

1. Conecte el brazo de la ducha con la cubierta antes de atornillar el brazo en la conexión del elevador para evitar daños.
 2. Fije el cabezal de ducha al brazo de ducha y aplique cinta a las roscas de la tubería en ambos extremos.
 3. No apriete demasiado el cabezal de ducha. Es una conexión giratoria de 360°.
-

◆ Instalación de la Barra de Elevación

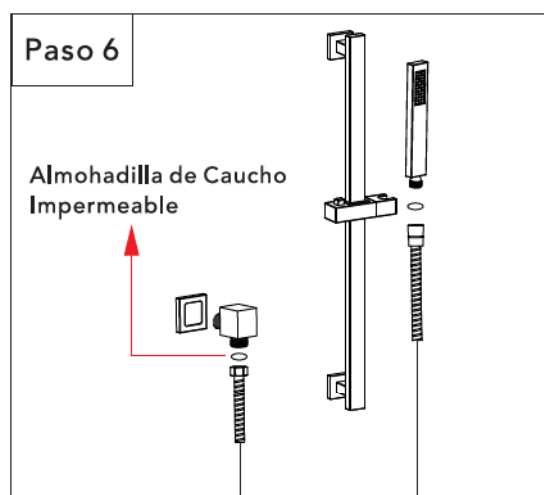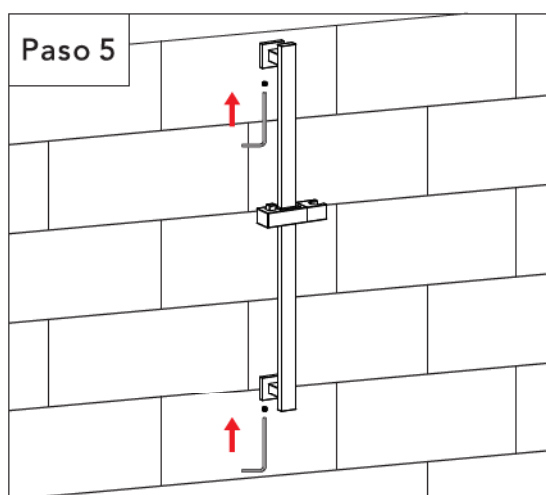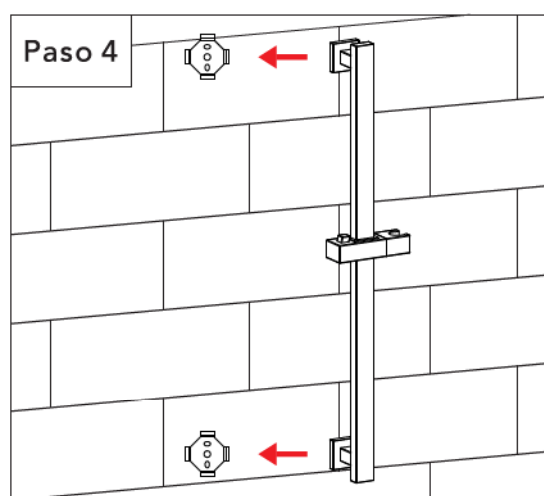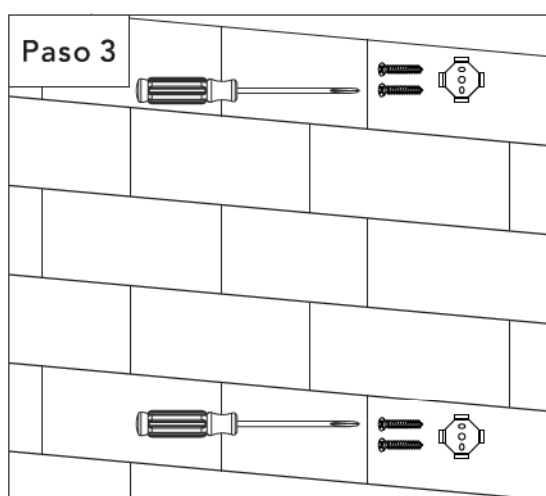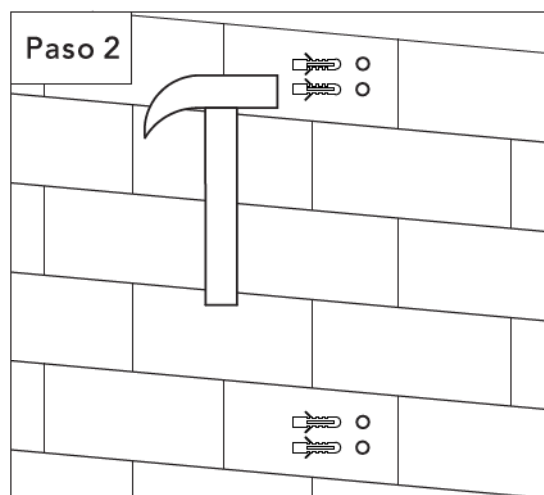


1. Marque la posición del orificio con un bolígrafo, taladre los agujeros usando un taladro eléctrico de 6 mm, luego coloque los pellets dentro. Por último, coloque la base y atornille los tornillos.

2. Coloque el Elevador de Ducha en la base, luego apriete el tornillo. Listo.

Paso 1: Envuelva el conector con cinta de Teflón. Atornille la rosca en la tubería de agua dentro de la pared.

Paso 2: Instale la almohadilla de goma en la manguera de la ducha y conéctela al conector.


◆ Profundidad de instalación del cuerpo principal (Modelo: A & B)

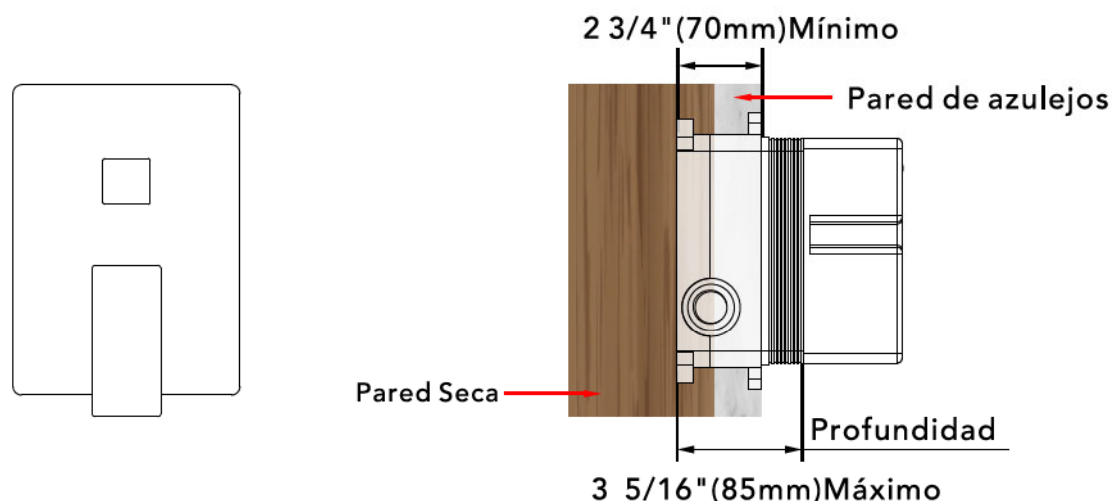

Aviso:


1. La profundidad de instalación del cuerpo principal debe ser no menor a 2 3/4" (70mm) y no mayor a 3 5/16" (85mm), incluyendo el grosor del azulejo. De lo contrario, no se podrá instalar la placa de cubierta.
2. El tamaño de apertura del azulejo debe ser menor que el tamaño de la placa de cubierta.

◆ Profundidad de Instalación del Cuerpo Principal (Modelo: A y B)

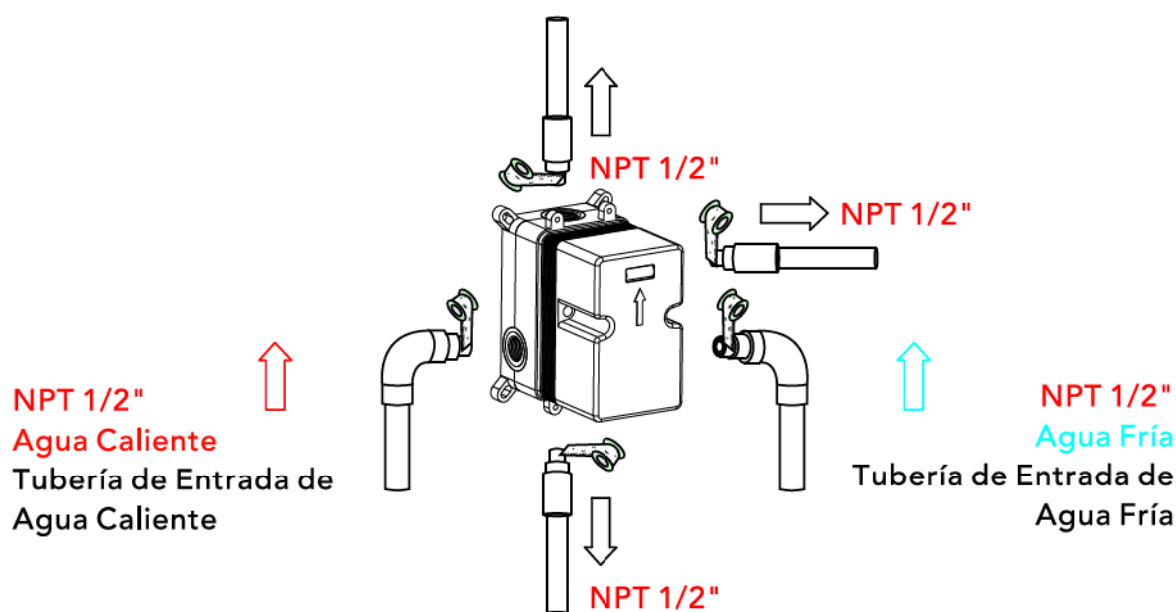


1. Como se muestra en la figura, las tuberías de entrada y salida están preenterradas. Preste atención a la dirección correcta al instalar el cuerpo principal preenterrado.
2. Antes de colocar los azulejos, abra el agua para probar si las tuberías de entrada izquierda y derecha están conectadas sin fugas. Luego, ajuste el interruptor de flujo a la posición "encendido" para verificar si hay fugas en las tuberías de salida mezcladas.

◆ Instalación de la Válvula del Cuerpo Principal (Modelo: A y B)

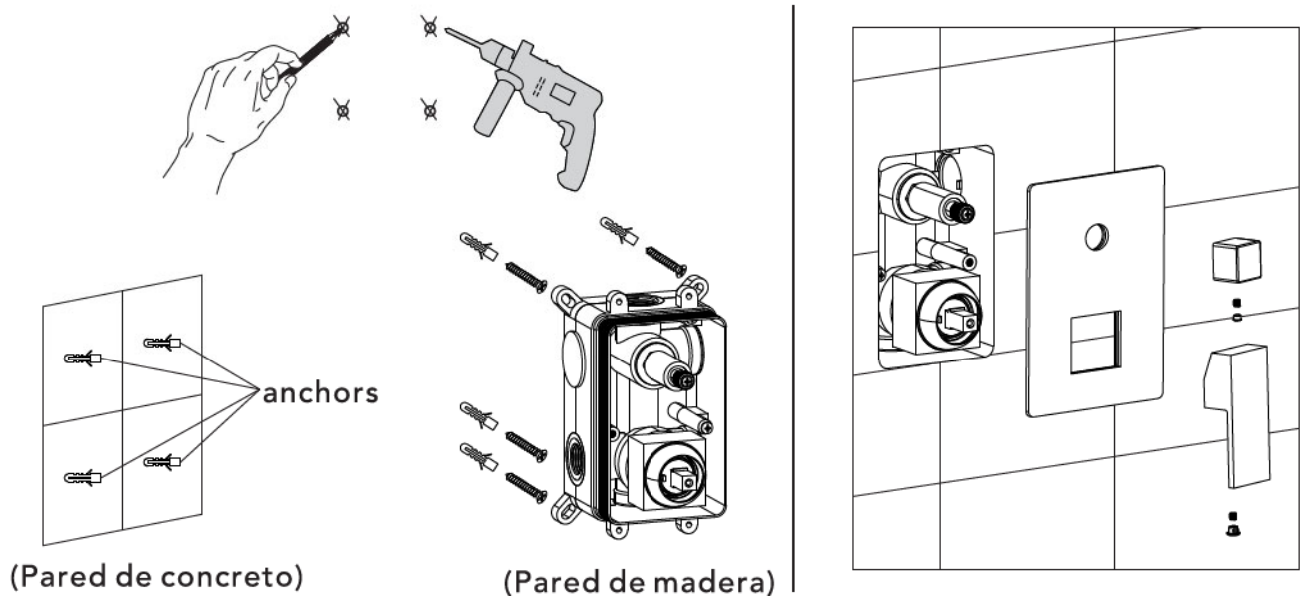

1. Haga marcas según el tamaño de la válvula del cuerpo principal y luego taladre anclajes en la pared (pared de concreto).
2. Fije el cuerpo principal a la madera directamente con tornillos (pared de madera).
Al instalar el cuerpo principal, marque el lado superior hacia arriba y no lo instale al revés.
▲ Tenga en cuenta que el nivel debe estar paralelo a la pared; de lo contrario, no se puede instalar la placa de cubierta.

◆ Control del Interruptor de Salida de Agua del Cuerpo Principal (Modelo: A y B)

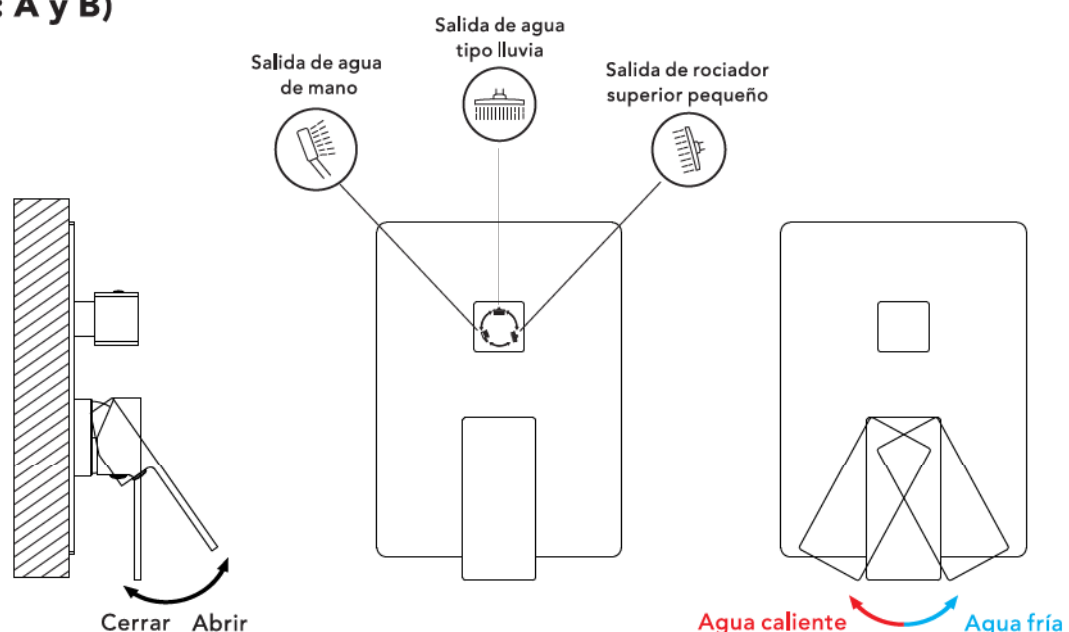

1. Abra la válvula de agua y verifique si hay alguna fuga.
2. Gire la manija hacia arriba para abrir la válvula de agua. El ángulo de giro puede controlar la tasa de flujo de agua. Luego, el usuario puede girarlo a la izquierda o a la derecha para controlar la temperatura del agua, donde la izquierda es para el agua caliente y la derecha para el agua fría.
3. La válvula de cambio puede alternar la salida de agua entre la cabeza de la ducha, la ducha superior y la ducha de mano.