

COMMERCIAL REFRIGERATOR AND FREEZER
USER'S MANUAL

GLASS DOOR MERCHANDISERS

Model: SGDM-13R,SGDM-23R, SGDM-45R,
SGDM-45RS,SGDM-52R, SGDM-13F,
SGDM-23F, SGDM-45F, SGDM-72F

***PLEASE READ THE MANUAL THOROUGHLY PRIOR TO
EQUIPMENT SET-UP, OPERATION AND MAINTENANCE.***

INSTALLATION

- The refrigeration system operates most efficiently when installed in an area with cool, dry air circulation.
- There must be at least 6 inches of clearance on both sides and the back of the cabinet.
- Select a location away from the heat and moisture generating equipment such as stoves, ovens, etc.
- Avoid direct sun rays.
- Be sure that the floor where you intend to install the unit is strong and level enough to support the total weight of the unit and its contents.
- To minimize shock and fire hazards, be sure that the unit is properly grounded. For your safety and protection, all units are equipped with a special three-prong grounding plug on the service cord.
- All units are designed for indoor use. Outdoor use may cause significant damage to the unit.

PRECAUTIONS

- To minimize shock and fire hazards, be sure not to overload the outlet.
- To minimize electric shock and malfunction, do not spray the unit with water.
- To minimize fire hazards, do not use flammable spray products near the unit.
- After unplugging the unit, wait at least 6 minutes before re-plugging it. It may cause compressor failure if plugged in before 6 minutes waiting period.
- Cautions for cleaning:
 - * Unplug the power cord before cleaning.
 - * Do not unplug/plug the power cord with wet hands.
 - * Do not use an abrasive cleaners, solvents or polishing agents on plastic parts. Doing so might cause cracking or discoloring.
- When it is not in use:
 - * Unplug the power cord.

* Wipe inside with dry cloth, and you may leave the door slightly open to eliminate moisture and odor.

OPERATION/MAINTENANCE

- When loading the unit:
 - * Be careful not to block the air duct located at the back and the fan on the ceiling of the unit with contents.
 - * Blocking the air flow may cause decrease in performance.
 - * For the best performance, maintain at least 4 inches of clearance between the contents and the air duct.
- Set the shelves that comes with the unit to fit your needs.
- Temperature controller:
 - * The controller is located at the right, front corner of the ceiling.
 - * Temperature is set as "4" at default.
- Do not leave the unit door open for long period of time. For the most efficient operation, close the door immediately after the use.