
Assembly Instructions

Caution: You must read this before you proceed

CHAIR-N759P307029

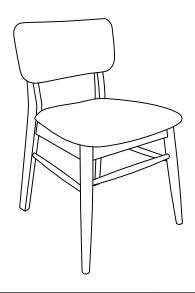

WARNING: These Chairs are intended only for normal use with all four Chair legs on the ground. These Chairs have relatively thin legs and are not designed to be sat in with only two legs on the ground (as from tipping back, forward, or to the side), as such usage can cause stress and failure of one or more Chair legs. Any misuse of the Chairs voids any warranties, expressed or implied.

Parts List				
Label	Picture	Description	QTY	
Α		Back Rest	1	
В		Chair Seat	1	

С	0 0	Left Front Leg	1		
D	00	Right Front Leg	1		
E	C	Side Stretcher	2		
F		Front Stretcher	1		
<u>Hardware</u>					
Label	Picture	Description	QTY		
1)		Bolt (M6 x 35mm)	2		
2		Bolt (M6 x 60mm)	4		
3		Bolt (M6 x 80mm)	4		
4		Spring Washer	10		
(5)	0	Washer	10		
6		Allen Key	1		
Ø	()2222222	Screw (M4 x 38mm)	6		
Assembly Preparation					
Before Beginning Assembly:					



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-

Assembly Steps

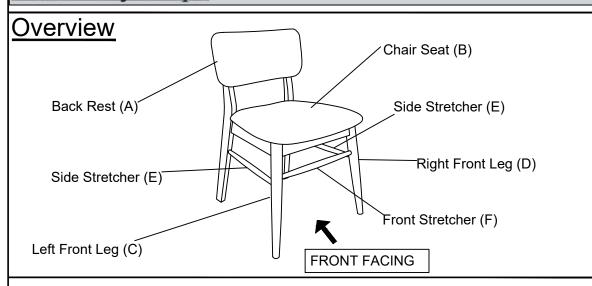


This Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

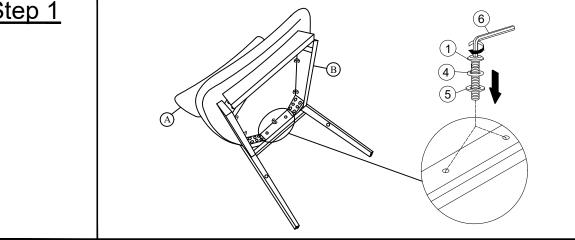


Attach Chair Seat(B) to Back Rest(A) using Bolt(1), Spring Washer(4), and Washer(5) with Allen Key(6). Do not fully tighten the Bolts.

Step 2

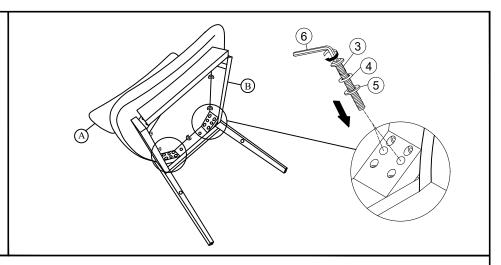

Attach Chair Seat(B) to Back Rest(A) using Bolts(3), Spring Washers(4), and Washers(5) with Allen Key(6). Do not fully tighten the Bolts.

Step 3

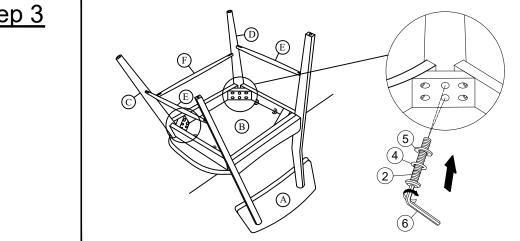


Carefully place the Chair facedown on a clean, non-marring surface.

Insert Left Front Leg(C) and Right Front Leg(D) into Chair Seat(B) as shown above.

Attach Left Front Leg(C) and Right Front Leg(D) to Chair Seat(B) using Bolts(2), Spring Washers(4), and Washers(5) with Allen Key(6).


Do not fully tighten the Bolts.

Step 4

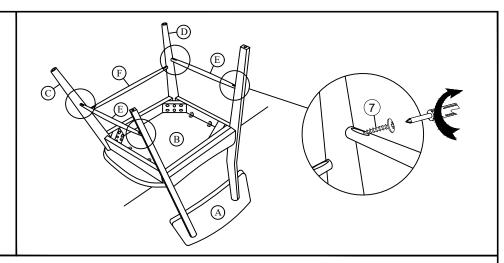

Attach Left Stretcher (E) to Left Front Leg (C), Right Front Leg (D) by using Screws (⑦)

Step 5

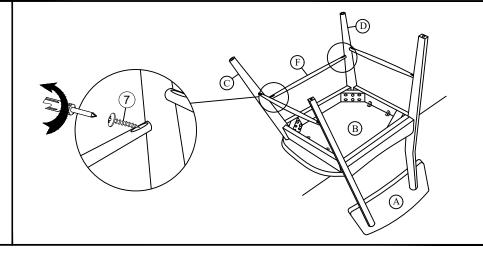

Attach Front Stretcher (F) to Left Front Leg (C), Right Front Leg (D) by using Screws (7)

Step 6 1 If wobble 3 Test again 2 30 - 50cm


Place the Chair on a Level Surface to check for wobbles. If it wobbles, lift the Chair some 30 to 50 cm high from the ground, keep your feet and toes well away from the drop zone, and drop the Chair vertically with all four Legs, hitting the ground at the same time. The Drop Test will help to ensure that all Bolts and gaps reach full alignment.

Test again for evenness on a Level Surface.

If no wobbles are found, proceed to tighten all the Bolts.

When tightening the Bolts, tighten sequentially. Do not tighten any Bolt fully and then move on to the next one, this could cause the frame to warp. If it still wobbles, loosen the Bolts and execute this same drop test.

If the Chair is not Stable it could lead to damage to the product.

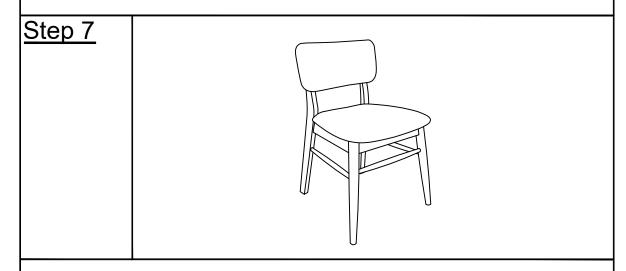

Your Chair is ready for use.

This Chair can only be used on a flat, level surface.

Care & Maintenance

Care & Maintenance

O Do not put h

Do not put hot items directly on furniture surface

Do not clean furniture with harsh cleansers or polish.

Do not place furniture under direct sunlight.

Do not place furniture near heating or cooling vents.

Do not write on furniture without a padded barrier to protect the surface.

Not for commercial use. For residential use only .

Stains may be removed with mild soap solution and damp cloth.

Children should not climb or jump on the furniture.

✓ Dust and pick-up spills using a clean, non-colored, lint-free cloth .

What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.

Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

