 


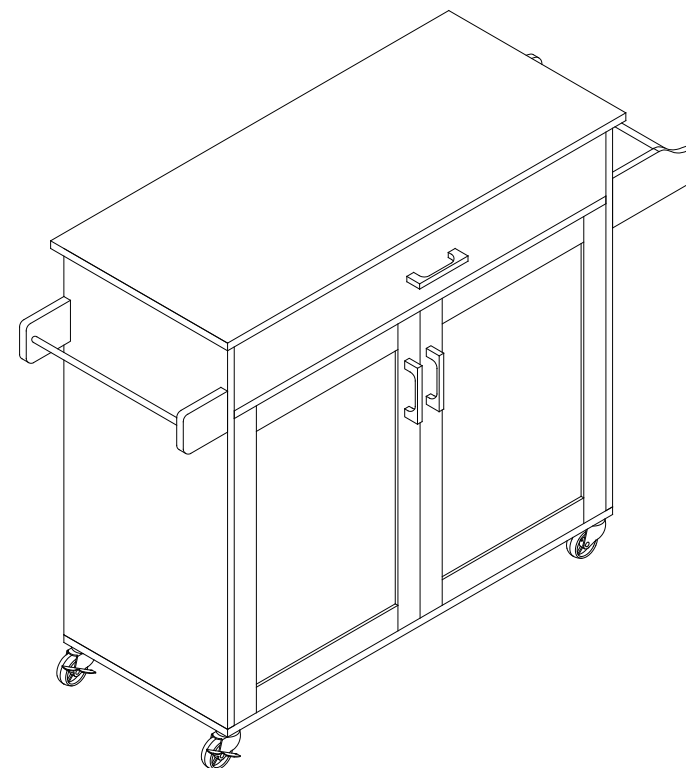


**USER'S MANUAL/HANDBUCH/MANUEL DE L'UTILISATEUR
/MANUAL DEL USUARIO/MANUALE UTENTE/INSTRUKCJA OBSŁUGI**

**Kitchen Island / Küchenwagen / Chariot de Cuisine/
Carro de Cocina / Carrello da Cucina / Wyspa kuchenna**

KC51983

 
EN DE FR ES IT PL



Ax21



 Bx21



Cx4
8x30




Dx17
4x35



Ex10
3x12



 
Fx2



Gx4



 Hx6

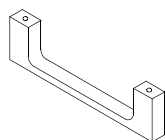

Ix3




3x14
Jx2




Kx1



 
Lx4

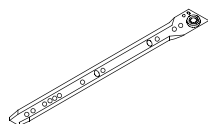


Mx1

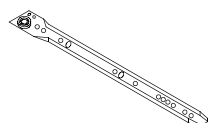 


Nx1

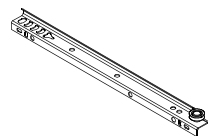 


Ox1

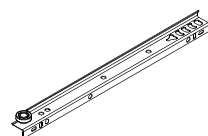 

Px1

 

Qx2

 


Rx2




Sx16



 
3.5x12
Tx24

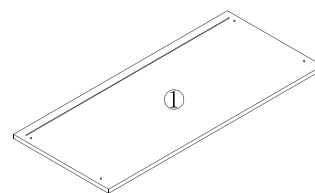


1

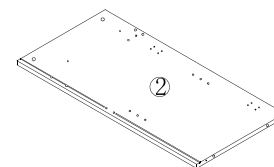 


2

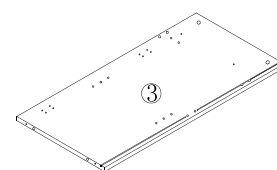 


3

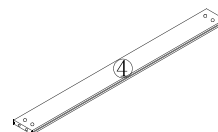 

4

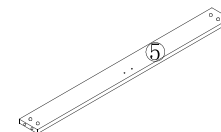 


5

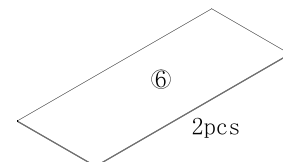 

6

 
2pcs

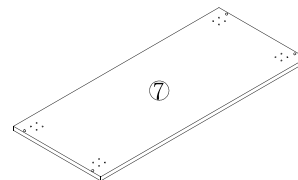


7



 8




9

 

10

 2pcs




11




12

 
2pcs

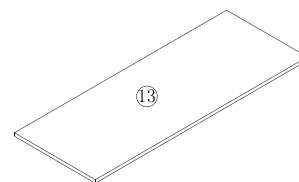


13

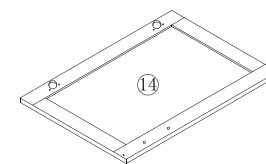 


14

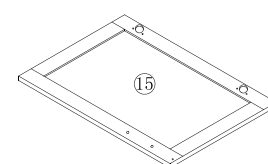 


15

 


16

 


17

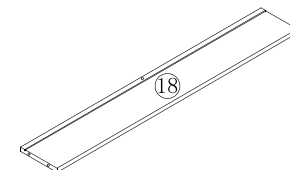 


18

 



19

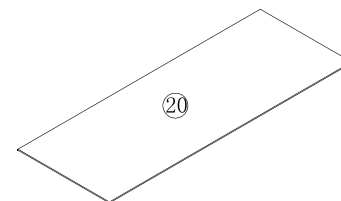 



20

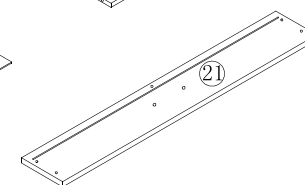 



21

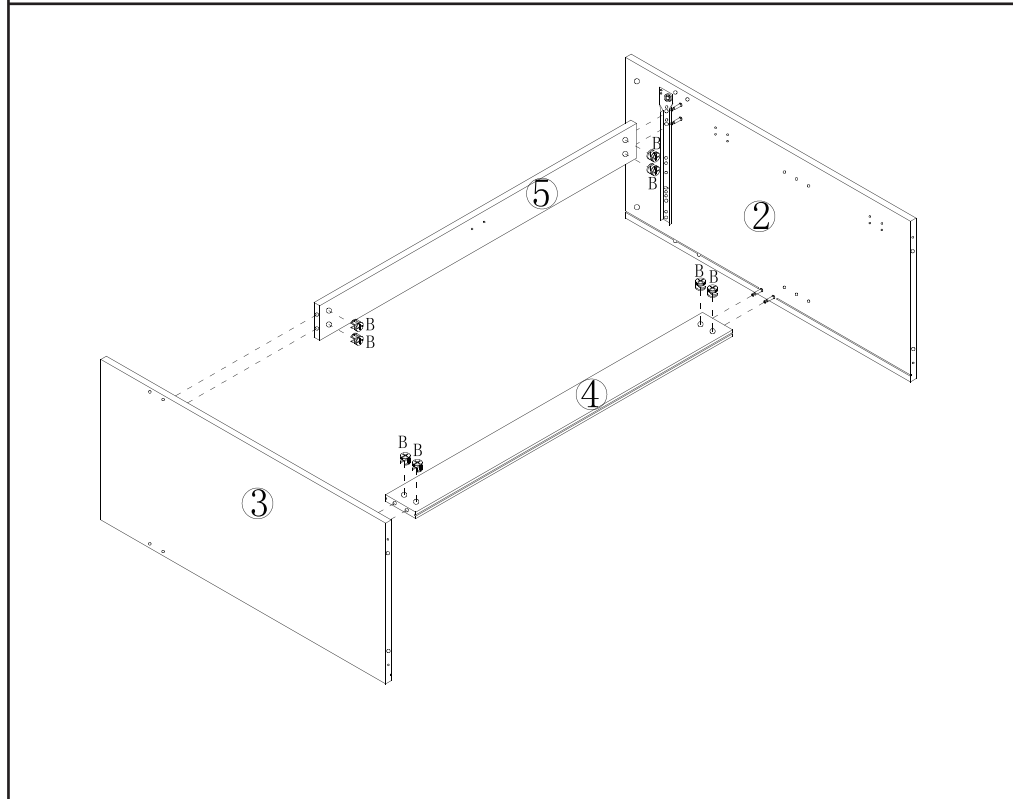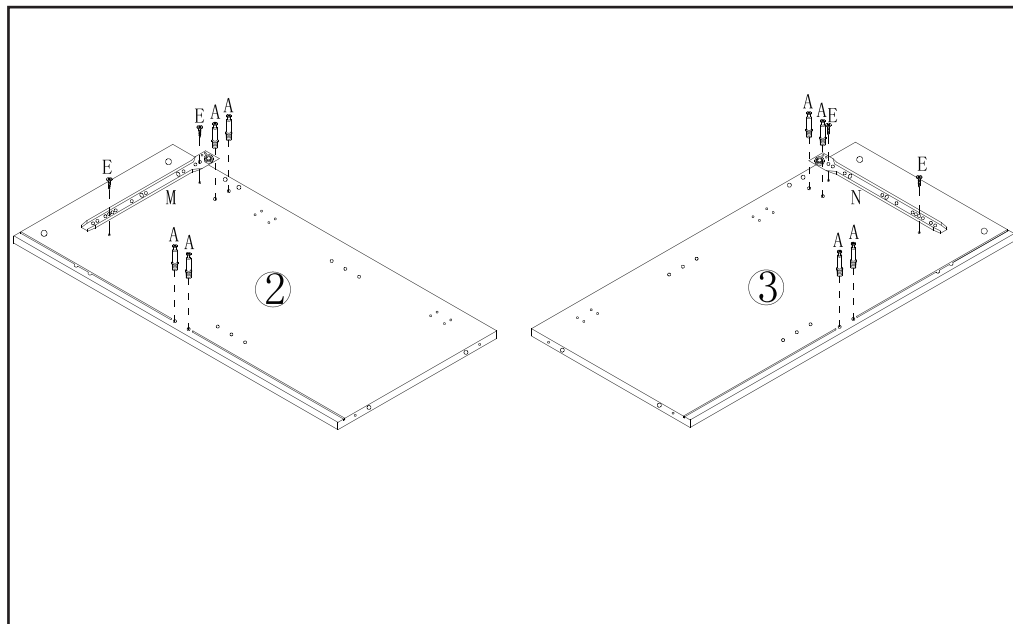  



04

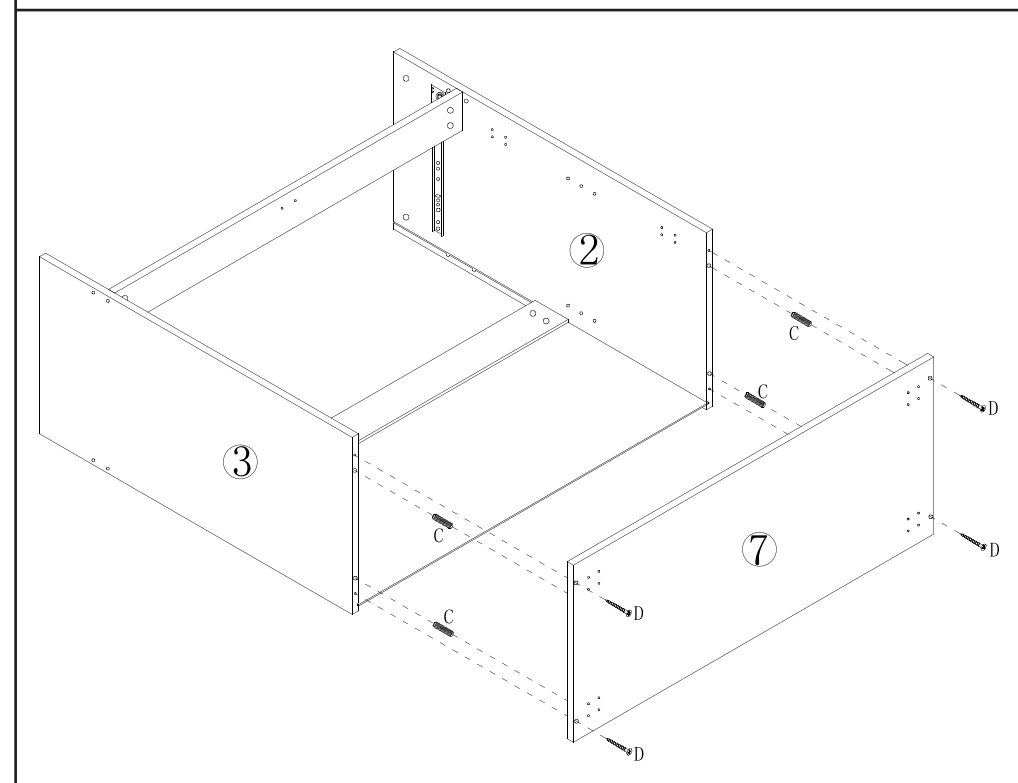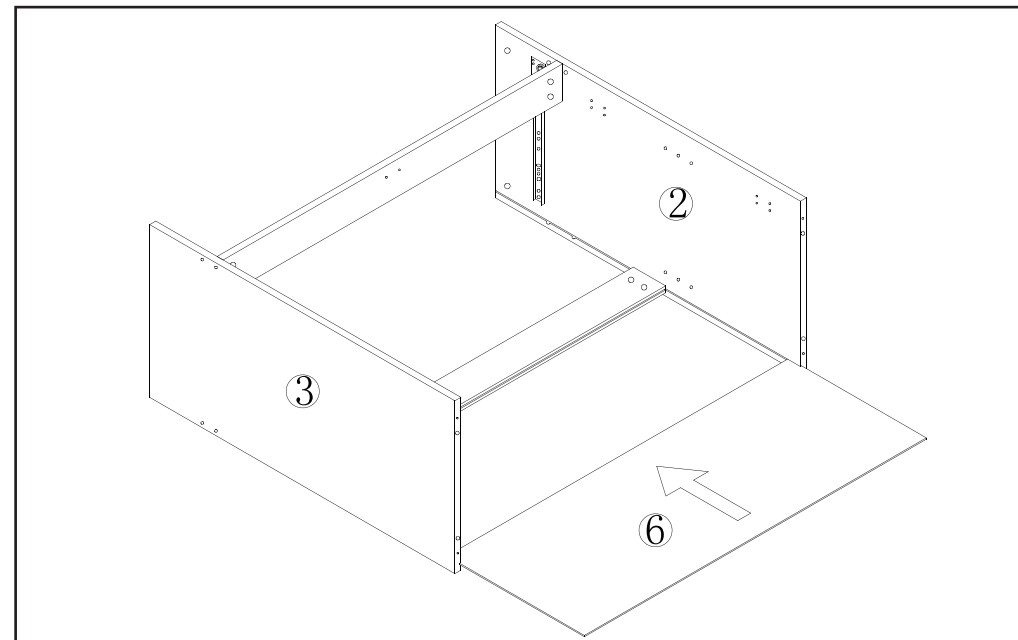  



05

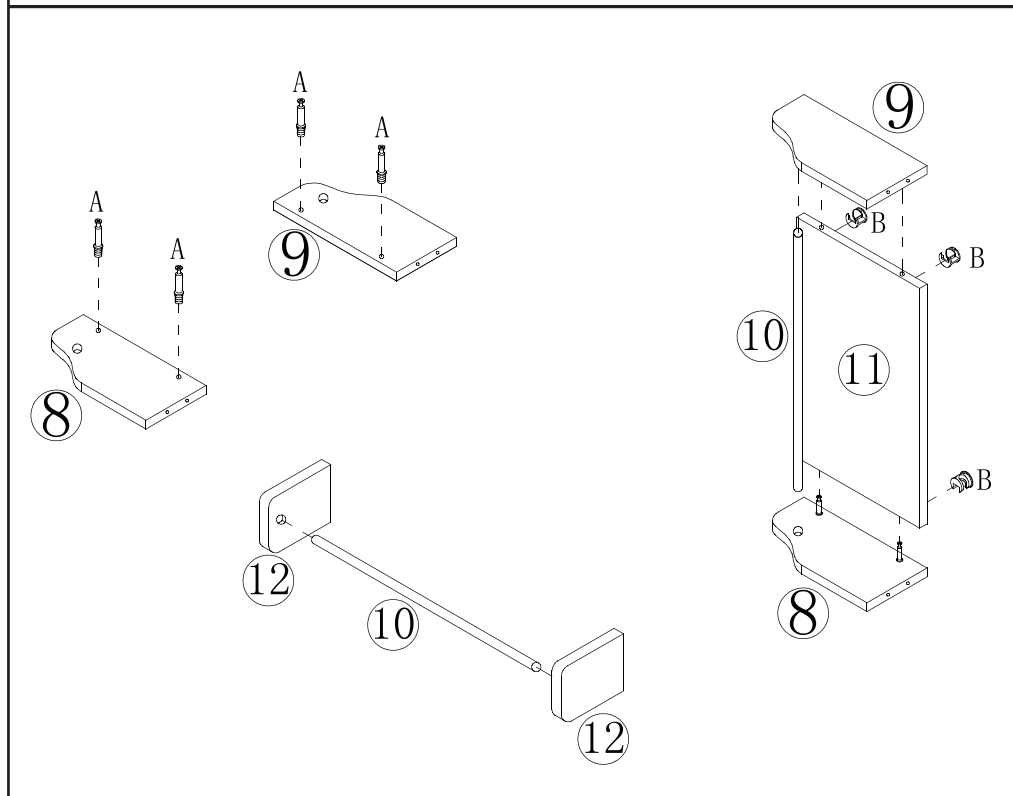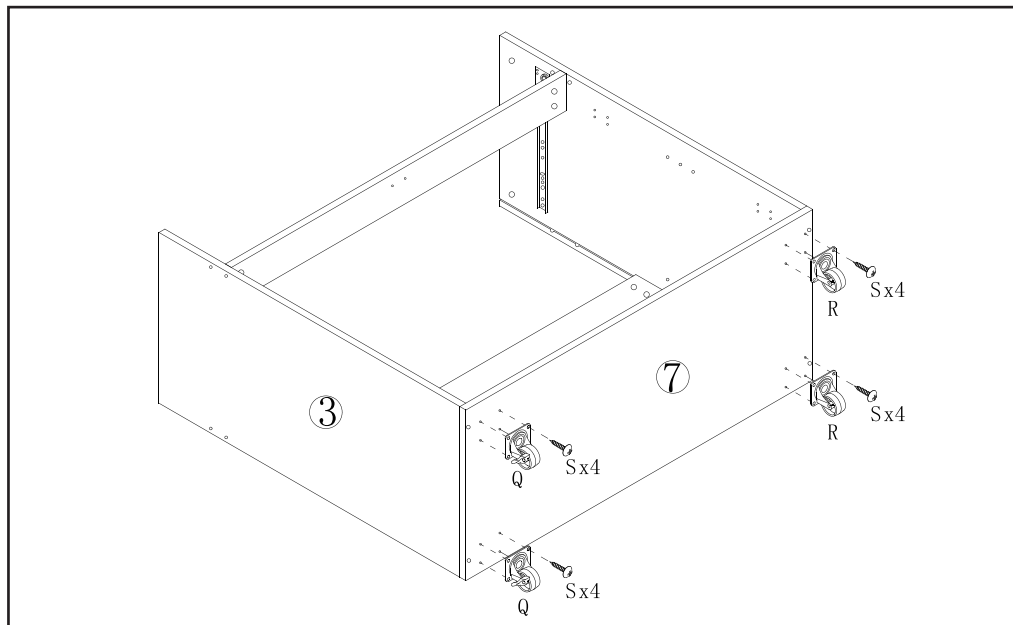  



06

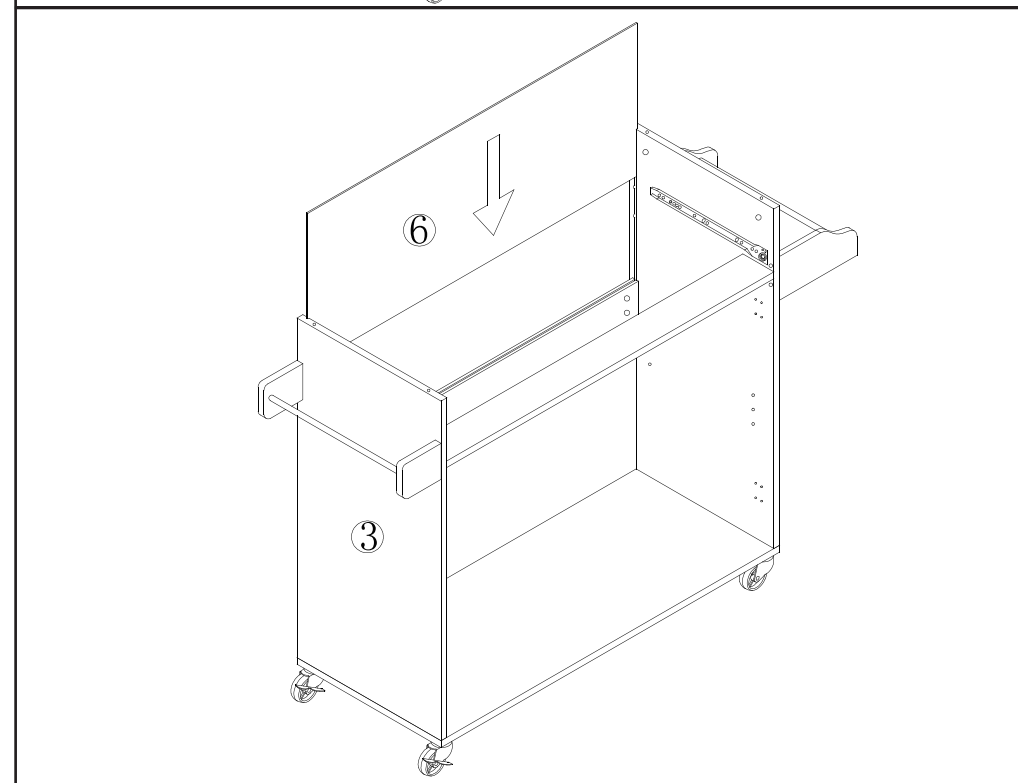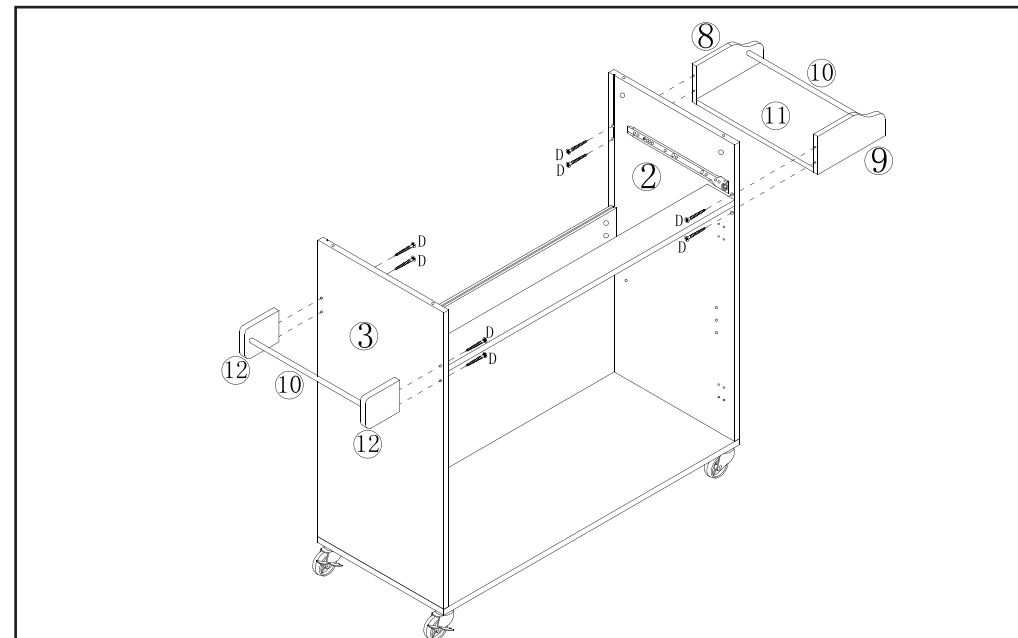  

07

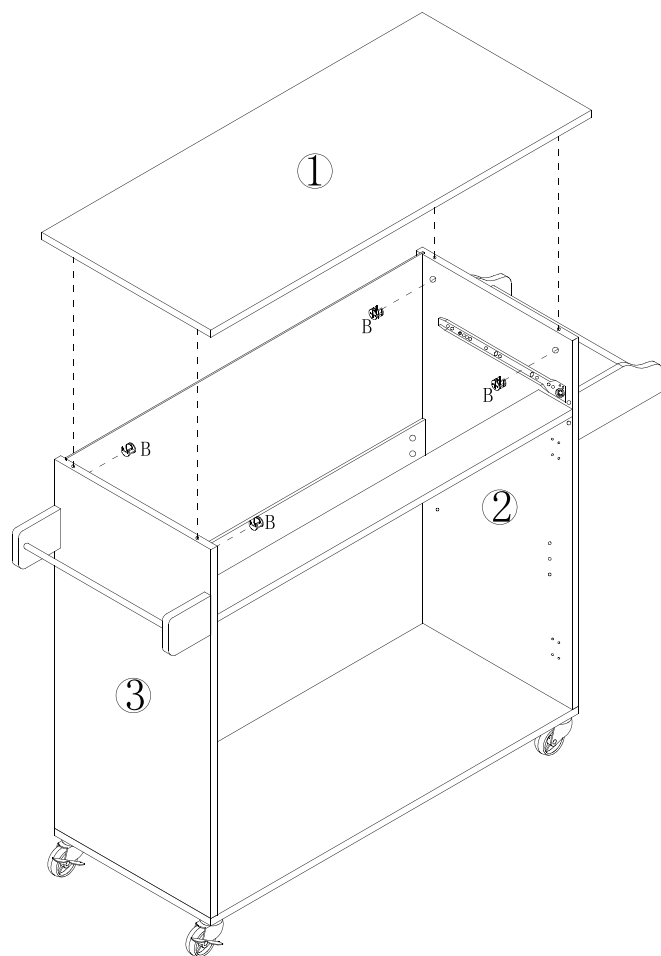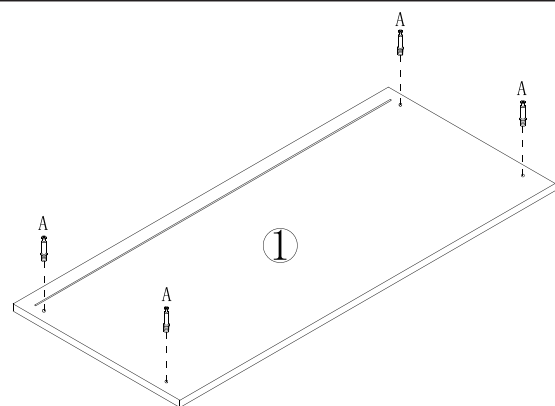  

08

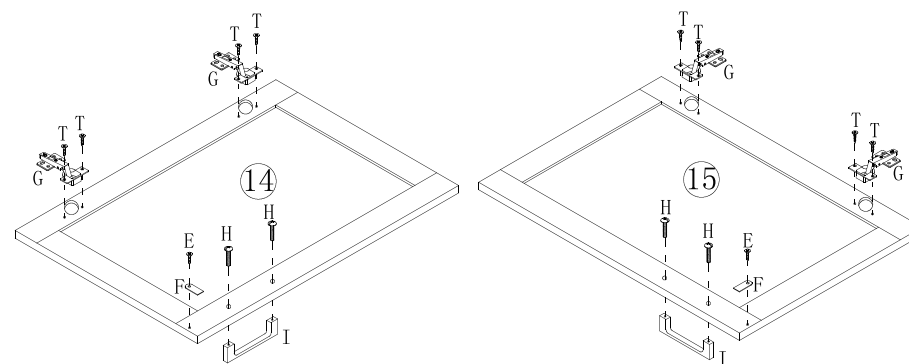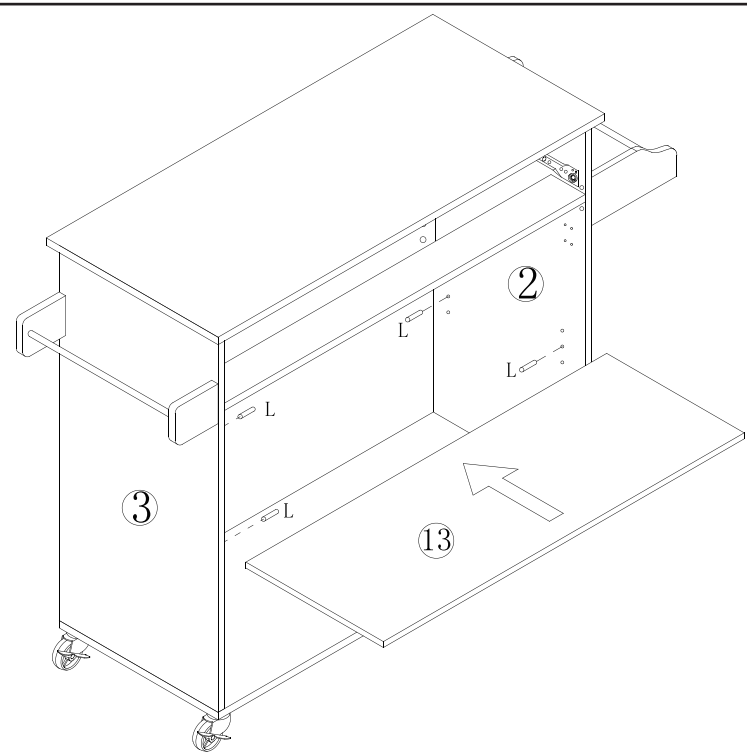  

09

