• Replace a spool when the twine used out.

- 1. Pull the T-plug out.
- 2. Take out the empty spool and insert a new one.
- 3. Insert the T-plug back, press and make it firm.

