


# SUPER WASHER 822

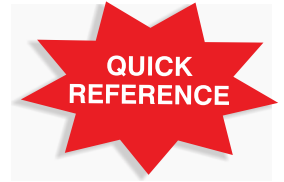

## DIRECTIONS FOR USE

1

### INSTALLATION

- Remove 2 Shipping Rods (located on back panel). This releases red tag to free power cord.
- Connect Hot & Cold Water hoses (included).
- Plug power cord into a 110V/60Hz outlet.
- Insert hose into U-connector and insert into standpipe or over sink 24"-40" high.

2

### LAUNDRY PREP

- Load clothes in the machine.
- Use High Efficiency (HE) detergent - approximately 1 tablespoon.
- Use liquid fabric softener - items tumble more freely.
- DELAY START: Press to delay start time up to 24 hours.



+



3

### OPERATION

- Press POWER button
- Turn Knob to wash setting - Press START

Cycles	Wash Time	
	H	M
NORMAL	1	01
Heavy + Prewash	1	15
Quick 20'	0	20
ECO	0	42
Wool	0	41
Delicate	0	36
POWER WASH	1	01
Drain	0	02
Winterize	0	02
Allergen 131°	1	05
Self Clean	0	45
PET	0	52
Baby	1	00
Sanitize 165°	1	09
Quiet 60 dB	0	49

DIAGNOSTIC MENU		
Code	Description	Component
E1	Door close failure	Door Switch
E2	Drain water failure	Drain Pump
E3	Water inlet failure	Water Inlet Valves
E4	Water overflow	Water Inlet Valves
E5	Motor failure	Motor +Electronic Module
E6	Communication between display & electronic module	Communication Cable
E7	Washing heater failure	Washing Heater
E8	Washing thermistor failure	Washing Thermistor
E10	Water level sensor failure	Water Level Sensor

## QUESTIONS / SERVICE

Phone/Text : 1-800-776-3538

Email: Service@ApplianceDesk.com