


Allen Wrench



2 - People



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

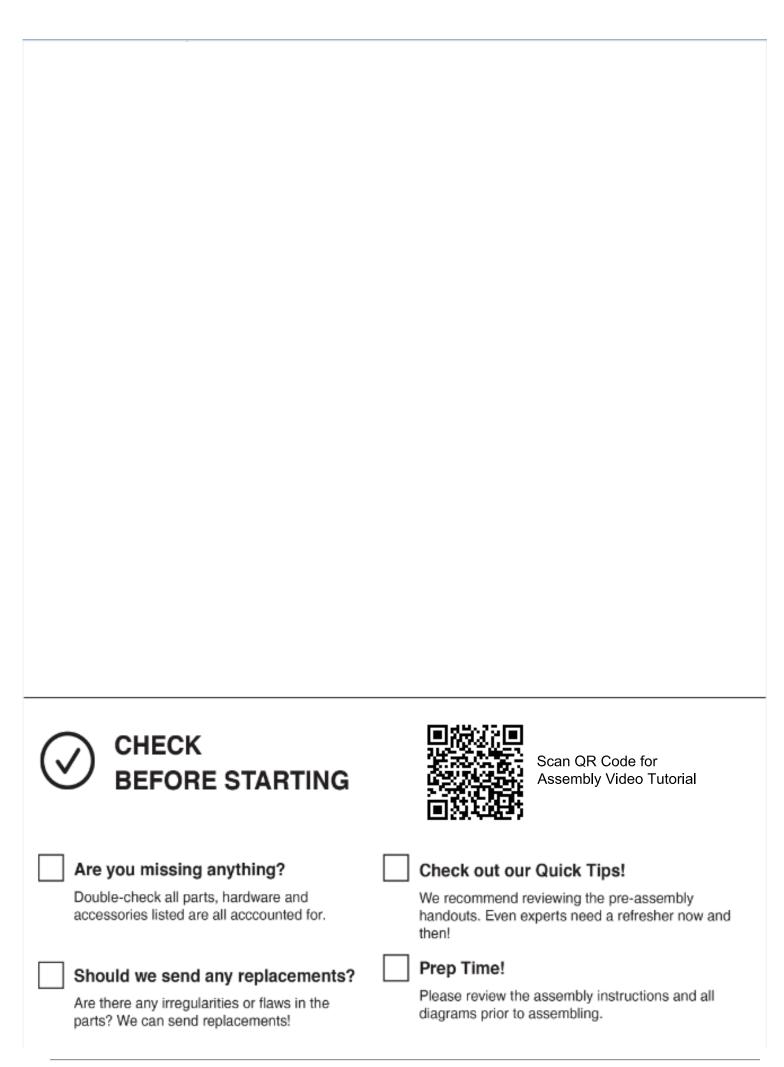

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.




Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

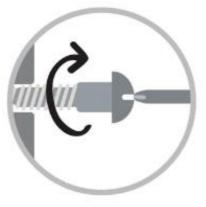

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.




Save the instructions and store any supplied tools for later maintenance.

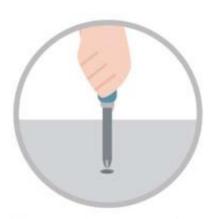

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAMLOCK FASTENER ASSEMBLY INSTRUCTIONS

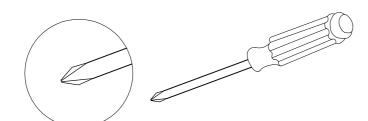

Note: Every cam lock bolt must have a cam lock connector in order to fasten the parts together.

(1) Secure the threded end of the cam bolt by using a screwdriver.

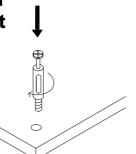

Align the cam connector with its side opening (or arrow) pointing to the small drilled hole.


Tun right (clokwise) to tighten.

(2)


Insert the cam lock bolt into the pre-drilled hole above the cam connector.



(3) Two parts should fit snugly against each other.

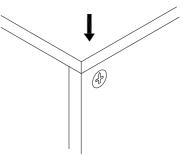

(4)

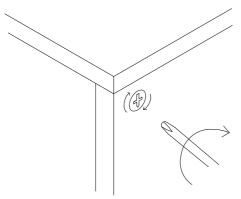

Turn right(clockwise) to tighten.


Turn the cam connector with a screwdriver until it will not turn any more with light to moderate force.




CONSOLE





- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

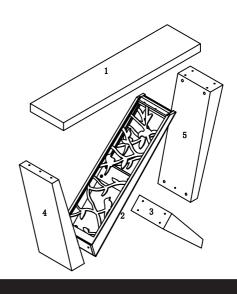


PARTS

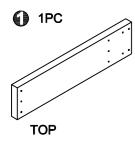


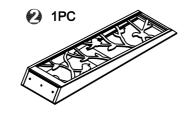

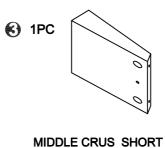

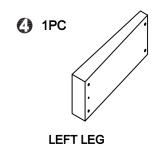

MIDDLE CRUS LONGUS

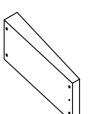

RIGHT LEG

1PC

HARDWARE















CAMBOLT L29 4PCS CAMLOCK L Ø15 4PCS

DOWEL Ø8X25 5PCS STICKER Ø22 4PCS













SMALL SCREW Ø4X35 2PCS WOOD SCREW Ø7X48 6PCS **GASKET** Ø8X16

8PCS

FULL TOOTH SCREW Ø8X60 2PCS











SEMICIRCLE 2PCS Ø8

BIG STICKER Ø45 2PCS WRENCH M13 1PC NUT M8

2PCS

❿



1



METAL BRACKETS

2PCS



STARP

197X5X1 1PC

DRYWALL ANCHOR Ø8X40 1PC

66


12X12X1


DRYWALL SCREW


Ø5X40 1PC





FLATHEAD SCREW Ø4X25 1PC

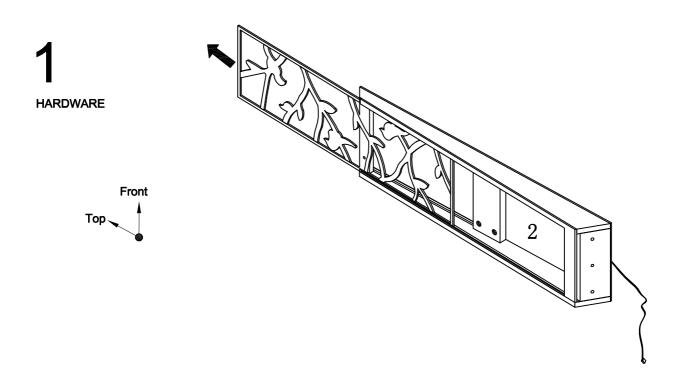


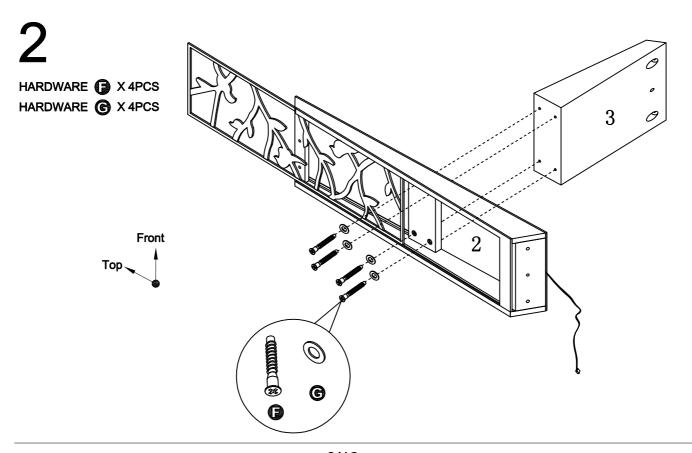


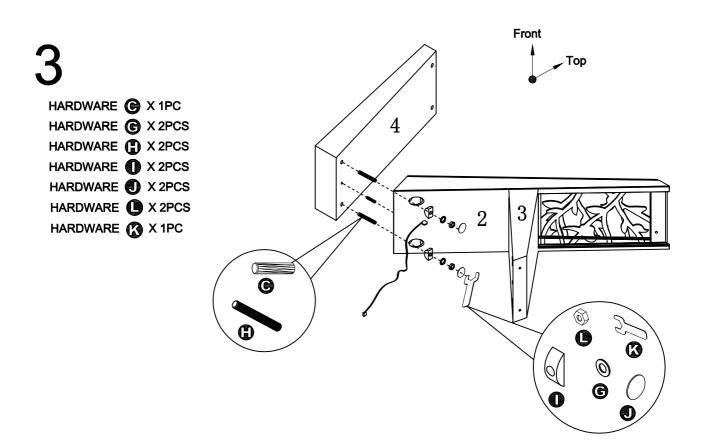


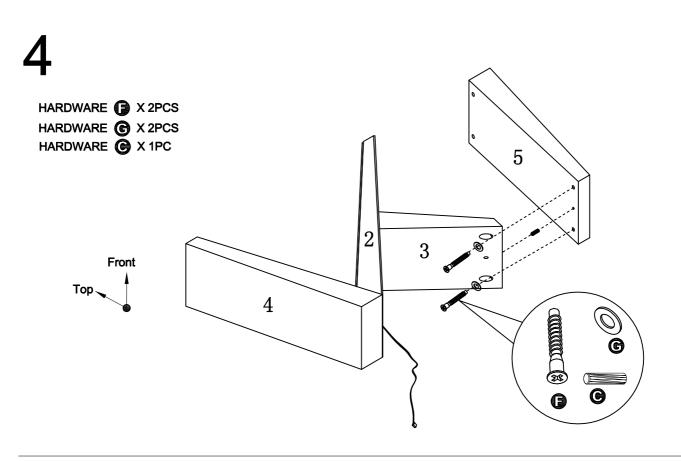

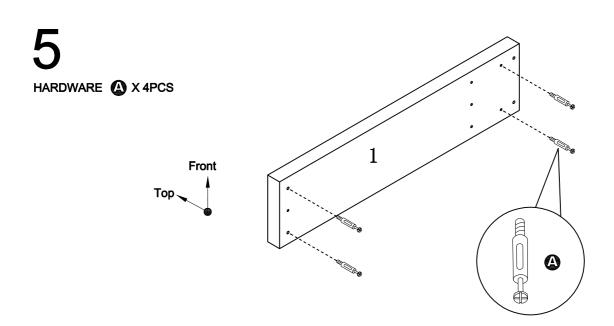

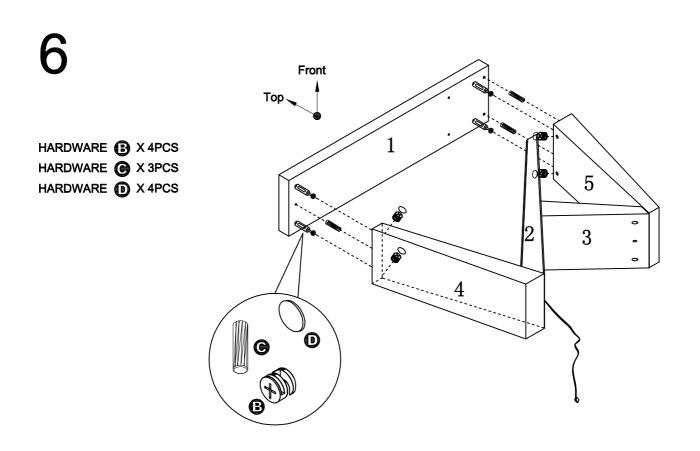

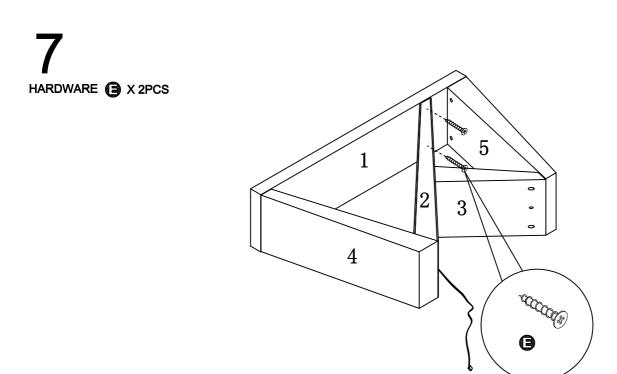

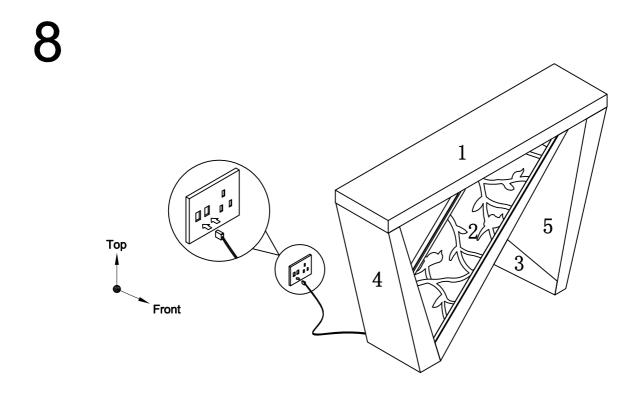

HARDWARE (M) X 1PC
HARDWARE (M) X 1PC
HARDWARE (M) X 2PCS
HARDWARE (M) X 1PC
HARDWARE (M) X 1PC


SAFETY STRAP TO PREVENT TIP-OVER

SAFETY STRAP TO PREVENT TIP-OVER

Drywall: Select a location where you want the table to be mounted. Place the assembled table against the wall and, on the wall, mark the location where the anchor will be placed. Drill a hole slightly smaller then the size of the screw . Push the anchor as far as it will go with your finger. Tap gently with a hammer until the anchor is flush with the wall surface. Secure the strap using a Phillips screwdriver to tighten the screw through the strap and into the anchor. On the other end of the strap, secure it using a Phillips screwdriver to tighten the screw through the strap and into the back of the table.

If the location happens to be a wood stud, do the following:

No anchor will be needed if securing to a wood stud. Drill a hole slightly smaller then the size of the screw . Secure the strap using a Phillips screwdriver to tighten the screw through the strap and into in the wall (wood stud). On the other end of the strap, secure it using a Phillips screwdriver to tighten the screw through the strap and into the back of the table.

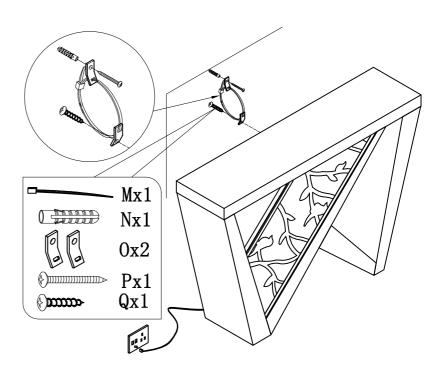

Before strapping, make sure the table is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.

ASSEMBLY IS COMPLETED

RF Wireless 24-key RGB Controller Specification

Instructions for the use of remote control keys:

RF Remote Controller

The static effect of whit

Flash 7

Strobe 7

Flash 16

Strobe 16

Brightness/Speed + Brightness/Speed -

Static monochrome

Corresponding color

Shortcut button Press the display

Product Profile:

ON

Press the ON button to turn on the light.

OFF

Press the OFF button to turm off the light.

Static Color Shortcut

Each button is assign to a color, press the button to select your desire color.

Increase

Press the increase button to increase brightness in static color mpde.

Press the increase button to increase effect speed in light effect node.

Decrease

Press the decrease button to decrease brightness in static color mode.

Press the decrease button to decrease effect speed in light effect mode.

Flash 7

Press the button to enable spectrum cycle mode.

The colors will cycle between red, green blue, orange, cyan, violet, and white.

Strobe 7

Press the button to enable color breathing mode.

The colors will cycle between red, green blue, orange, cyan, violet, and white.

Flash 16

Press the button to enable spectrum cycle mode.

The colors will cycle between all 16 collors.

Strobe 16

Press the button to enable color breathing mode.

The colors will cycle between all 16 collors.

USER INSTRUCTION (REMOTE CONTROL)

RF Wireless 24-key RGB Controller Specification

Technical parameters:

Working temperature:-20°C-60°C (-4°F-76°F)

Power supply voltage: DC5-24V

Output: 3 Loops

Connection mode: Gongyang


Remote control distance: 8-15 meters Remote control mode: walkable

The size of remote controller: L51.6 * W7.1 * H84.6mm

Static power consumption: <0.5W

Output current: <3A(each circuit) 5V<30W 12V<108 24V<216W

Fourth, remote control size:

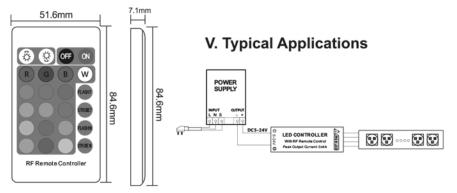

Install / Replace Battery

The remote control is provided with CR2025 batteries.

- Press and slide of the back cover from the remote control.
- Insert CR2025 batteries into the battery compartment and make sure to install batteries in the correct polarity.
- The negative end of the battery should be install against the spring inside the battery compartment.

To see

△CAUTION /WARNING

- Dispose old / used battery at a suitable recycling point or according to local regulations.
- DO NOT ingest battery. If accidentally swallowed, seek for medical help immediately.