 


INSTALLATION

 
 
Product Manual

Version: 210273-01-24A-PM

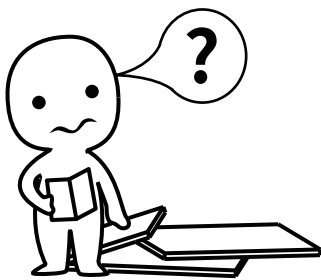


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

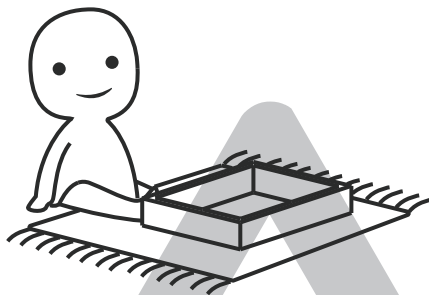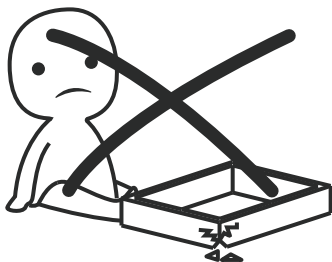



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

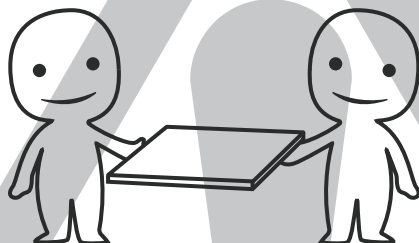

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

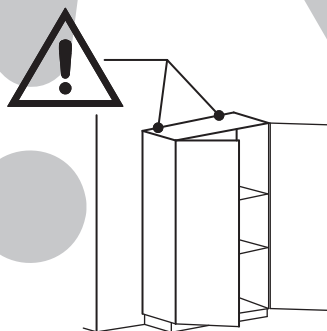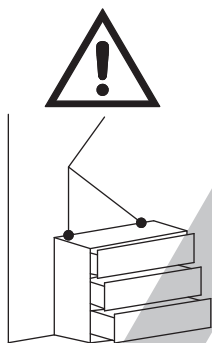

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

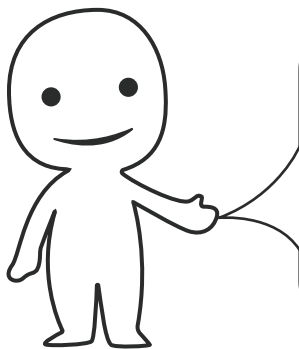

Please prepare the following tools

 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 55




CRB1295A

 B x 55




CRA0640A

 C x 21




CRC0540A

 D x 4

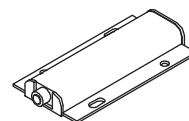

E x 2

 


CRE0825A

F x 2




L = 235 mm

 G x 68



CRD0312A

 H x 4



J x 1




K x 24




CRD3512A

 
L x 4

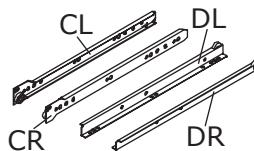

WX0814A

  Power plug x 1



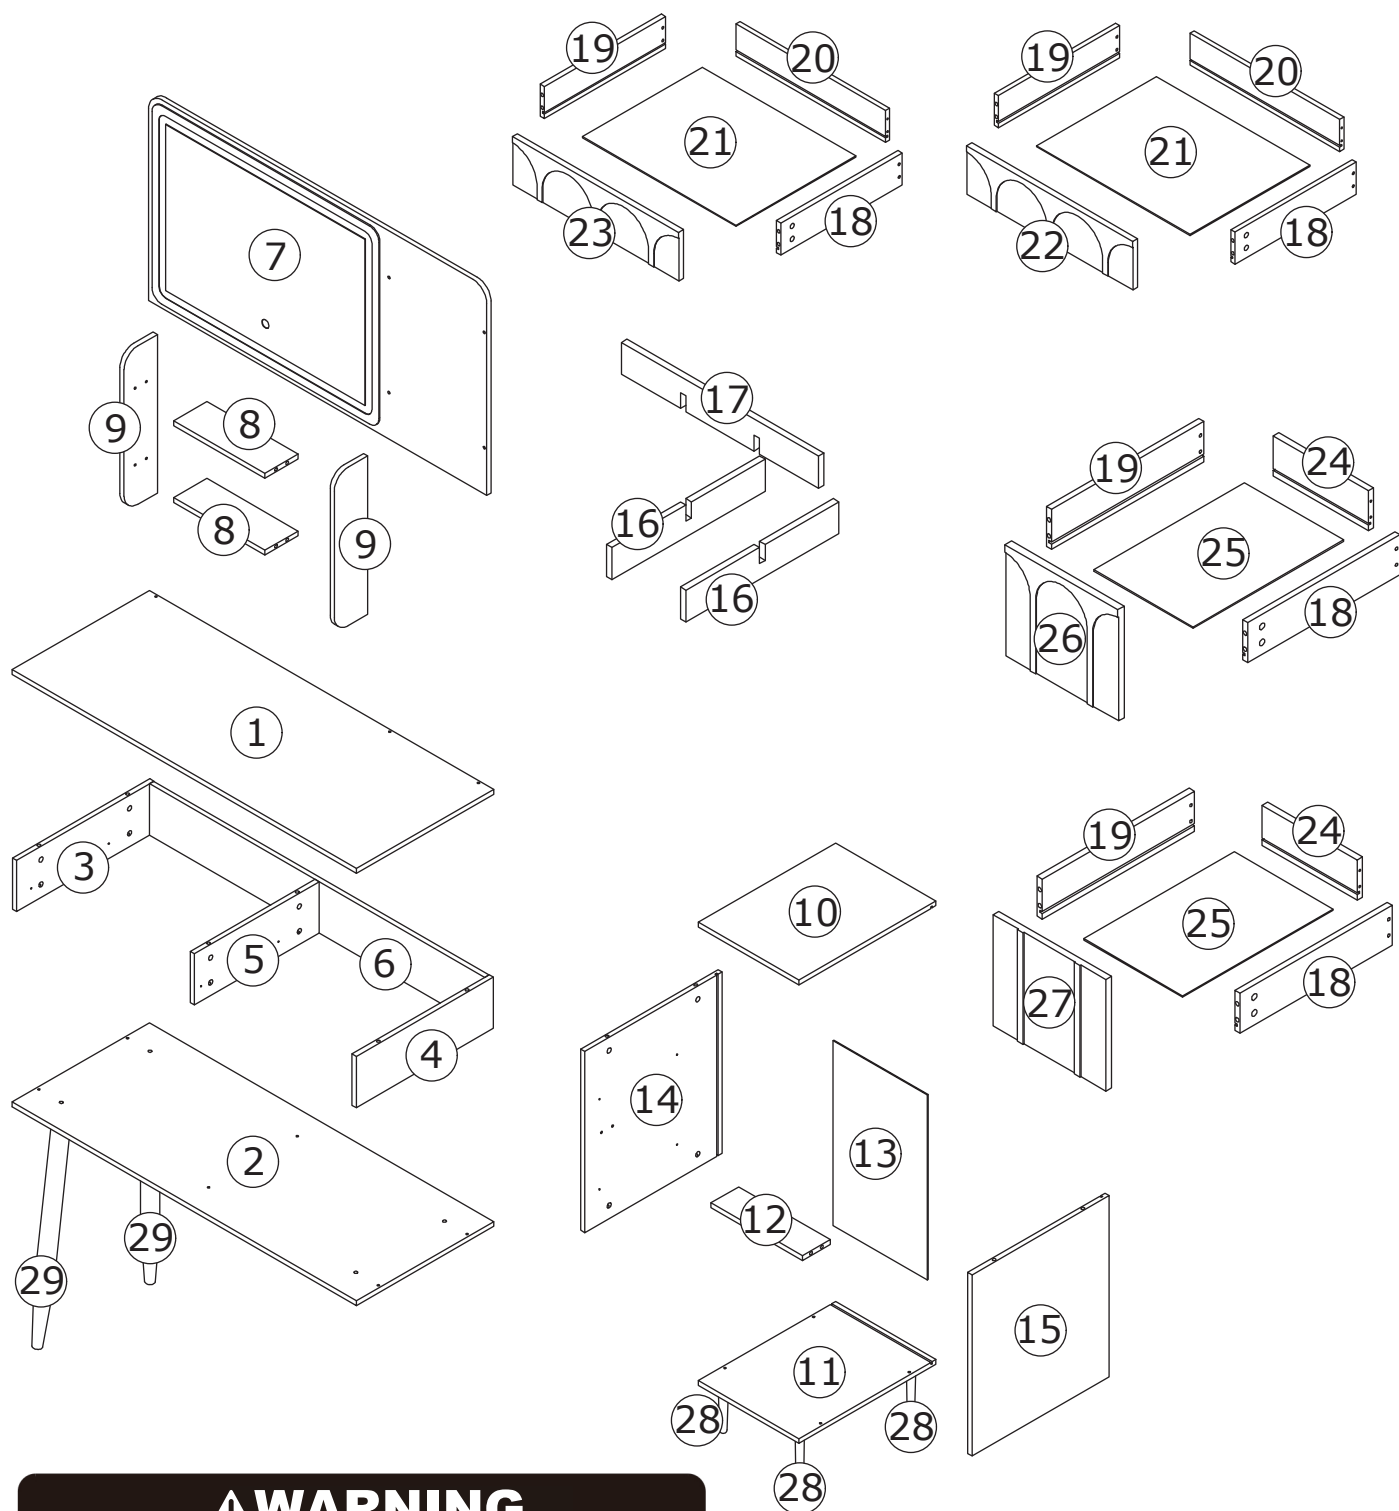


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:




- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

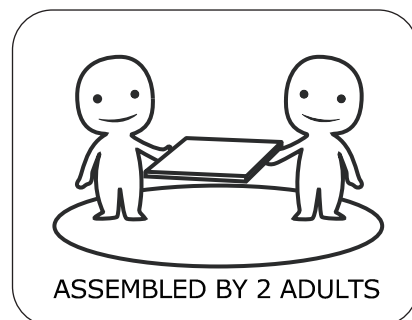


1

  
 
B x 8
CRA0640A

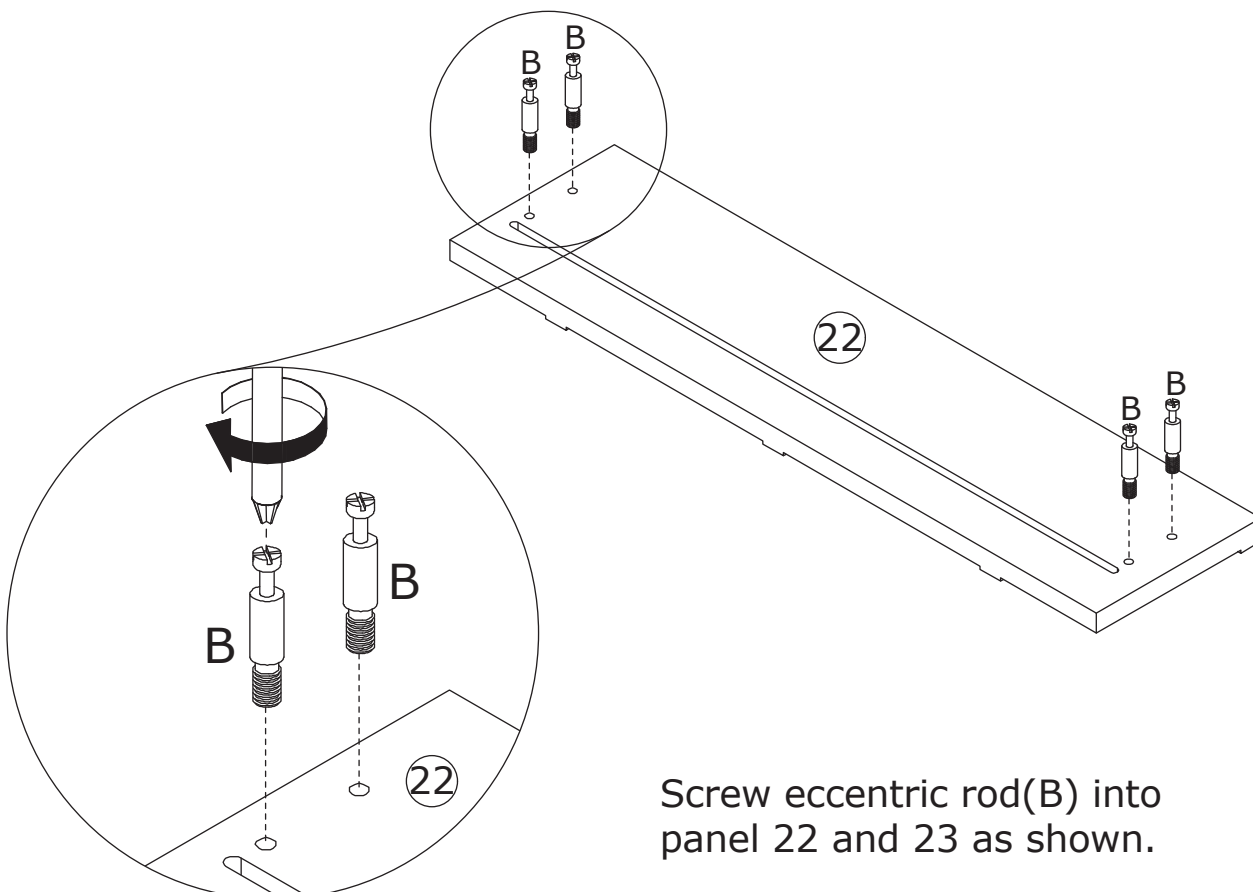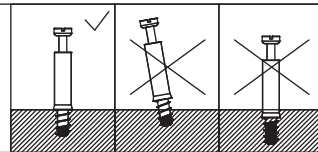


 
Screw eccentric rod(B) into panel 22 and 23 as shown.

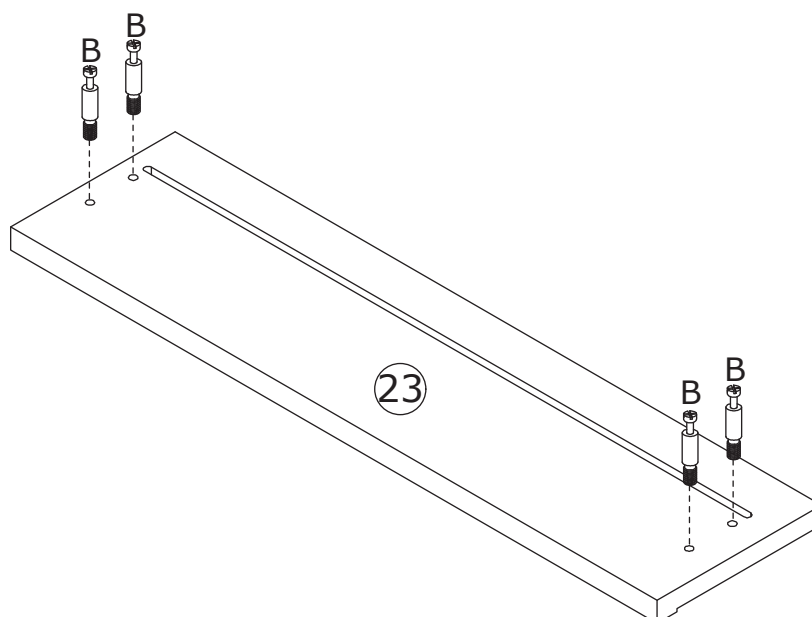




2

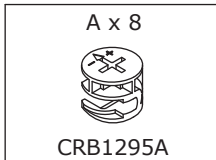  

  Fix panel 18 and 19 to panel 20 with screw(C) as shown.
Insert bottom panel 21 along available grooves.

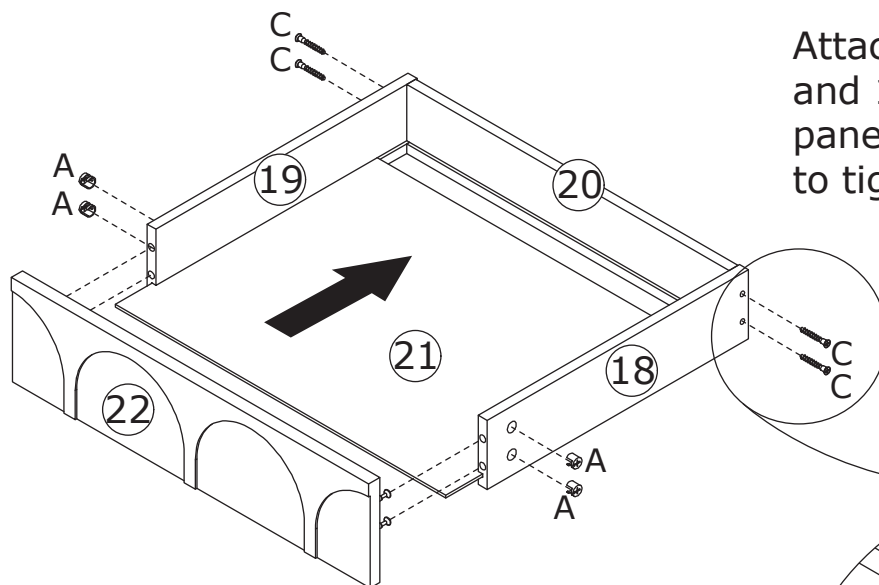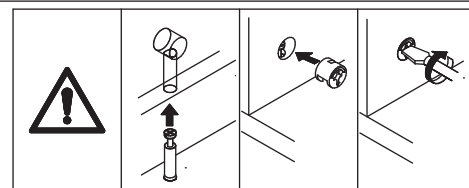

 
 
 
Attach panel 22/23 to panel 18 and 19, add cam lock(A) into panel 18,19 and turn clockwise to tighten as shown.

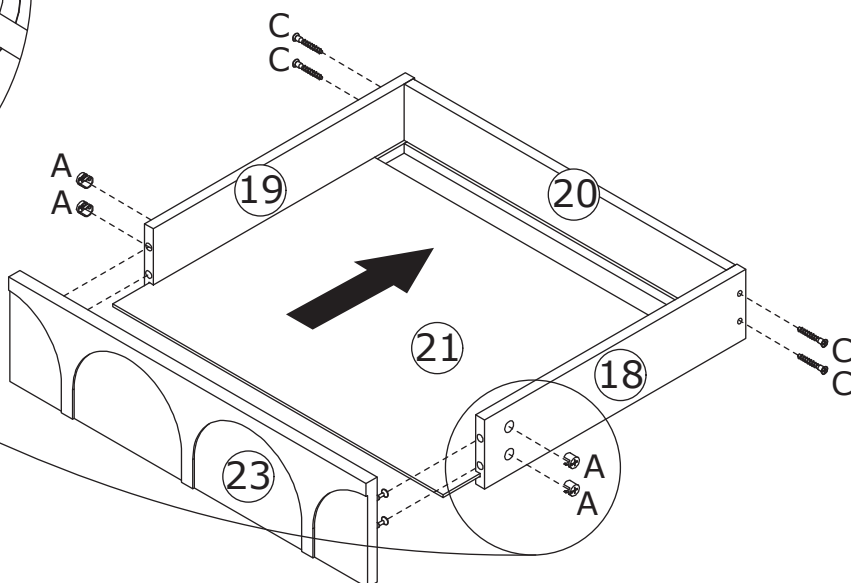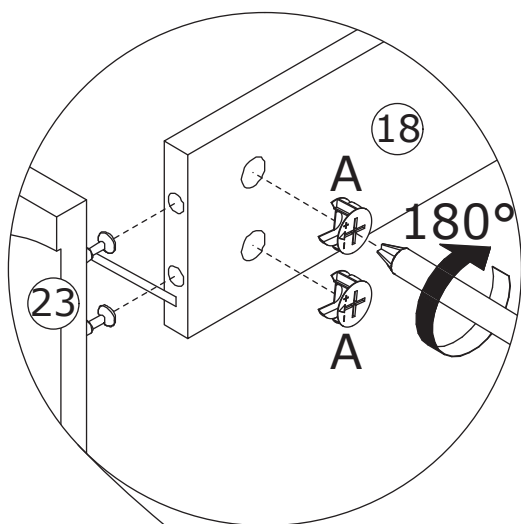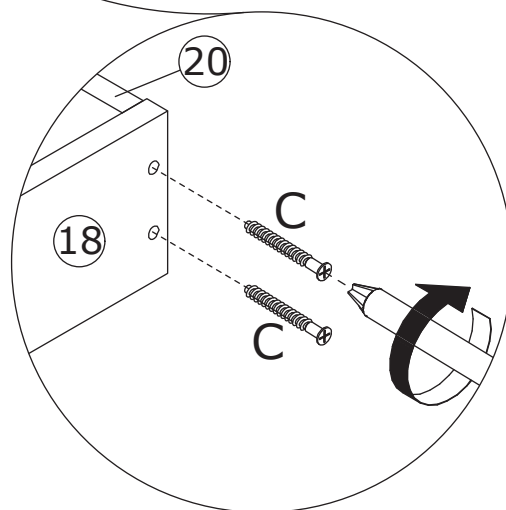



3

G x 8
CRD0312A

   L x 2
DL
DR
WX0814A

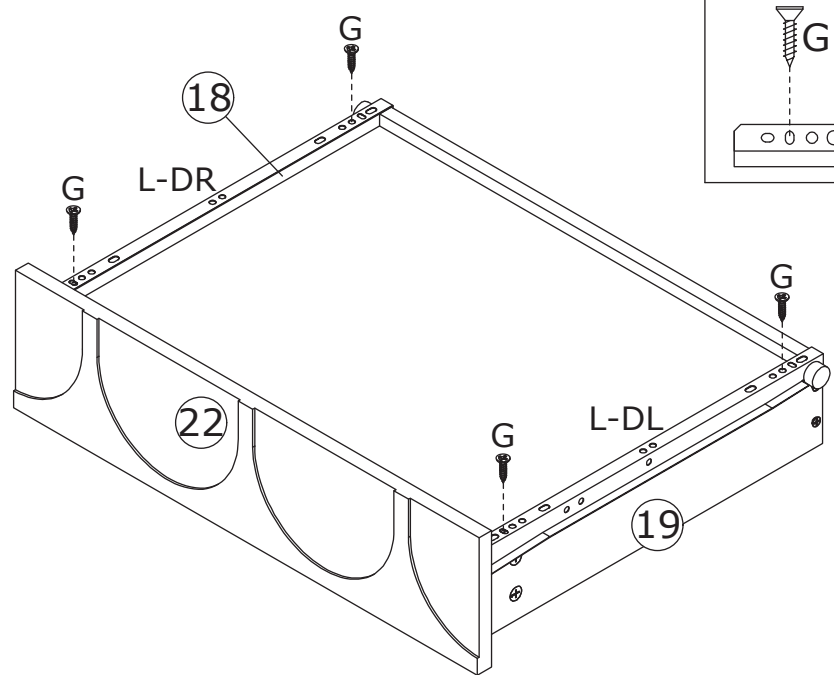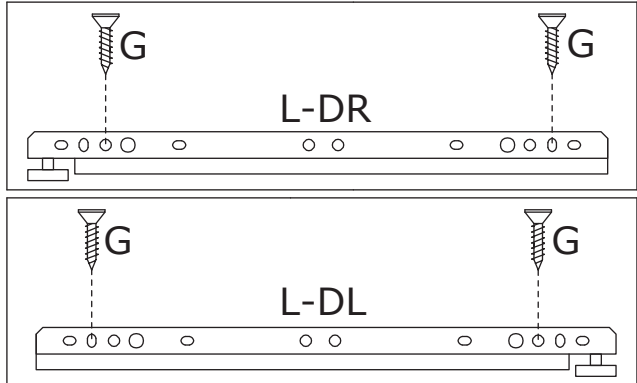


  Fix runner(DR/DL) to panel 18 and 19 with screw(G) as shown.



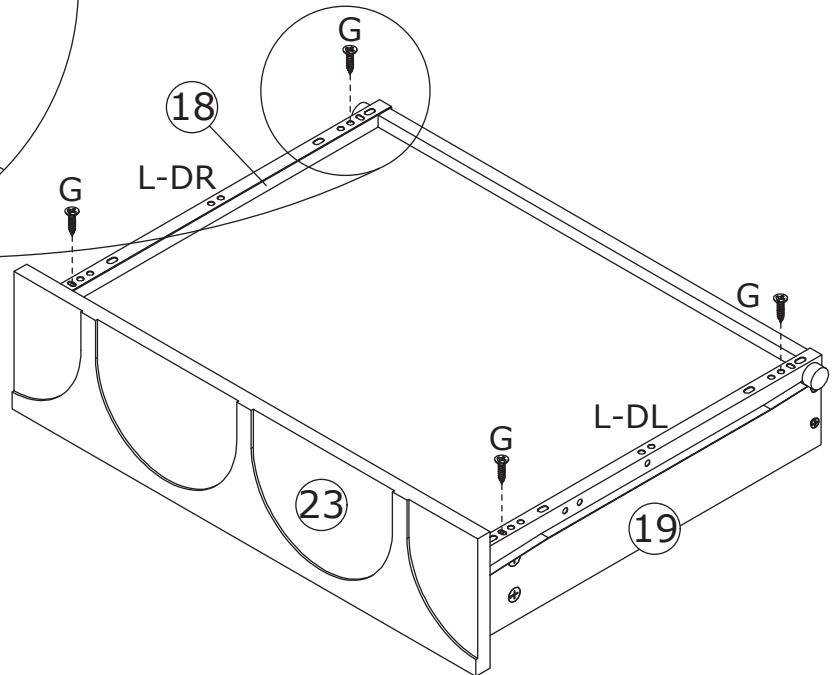
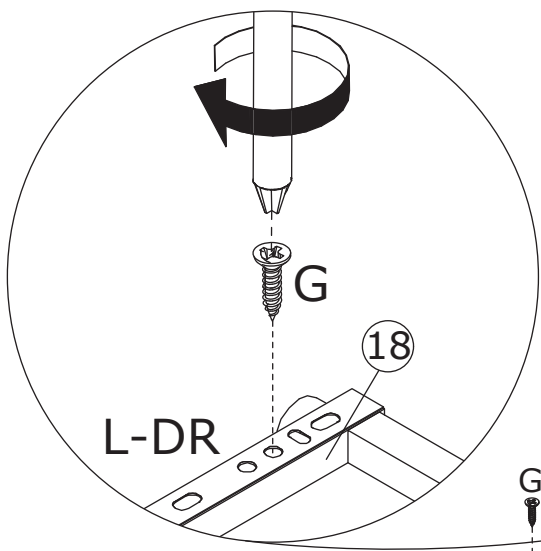


4

 
B x 8



CRA0640A

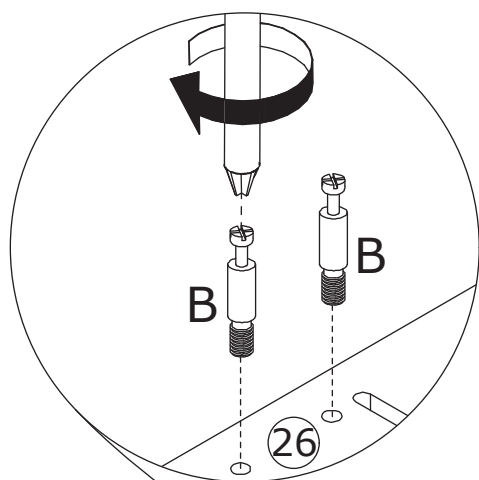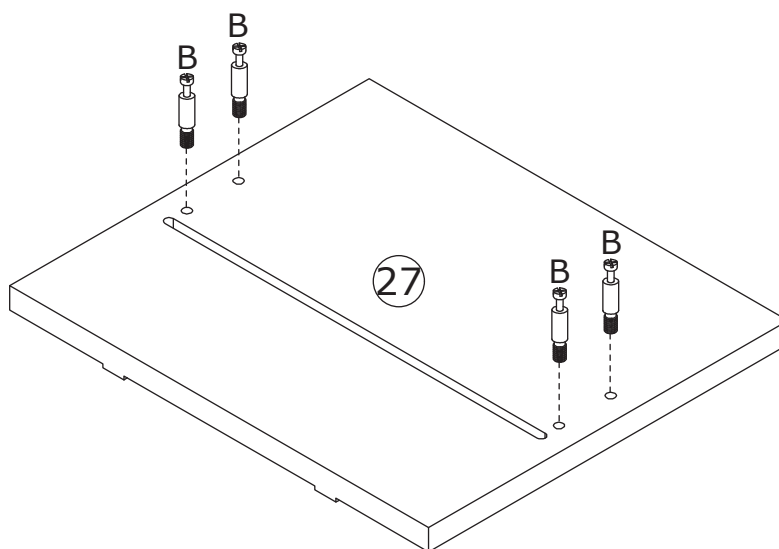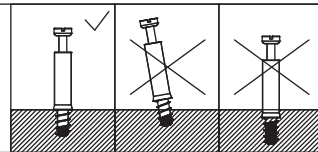    

 Screw eccentric rod(B) into panel 26 and 27 as shown.

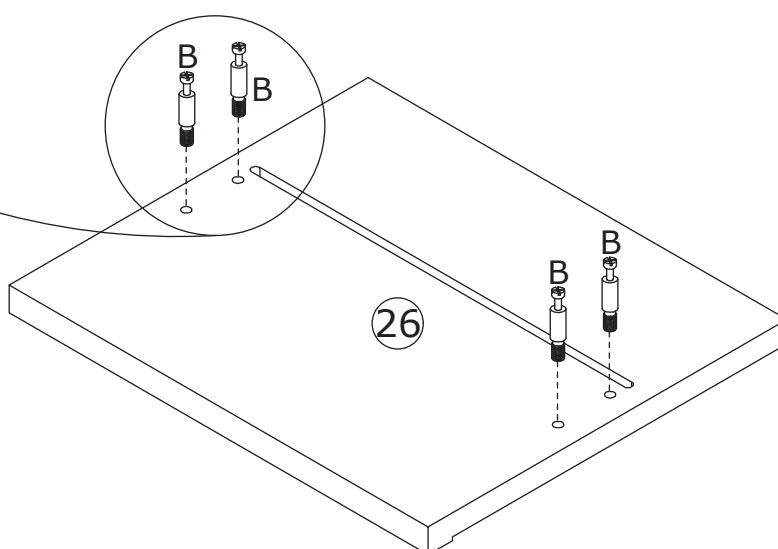


5

A x 8




CRB1295A

 
C x 8




CRC0540A

 

 Fix panel 18 and 19 to panel 24 with screw(C) as shown.
Insert bottom panel 25 along available grooves.

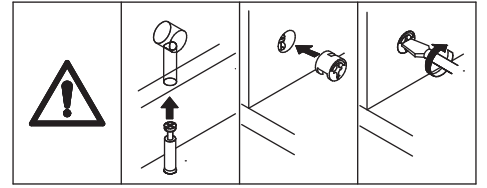

 Attach panel 26/27 to panel 18 and 19, add cam lock(A) into panel 18,19 and turn clockwise to tighten as shown.

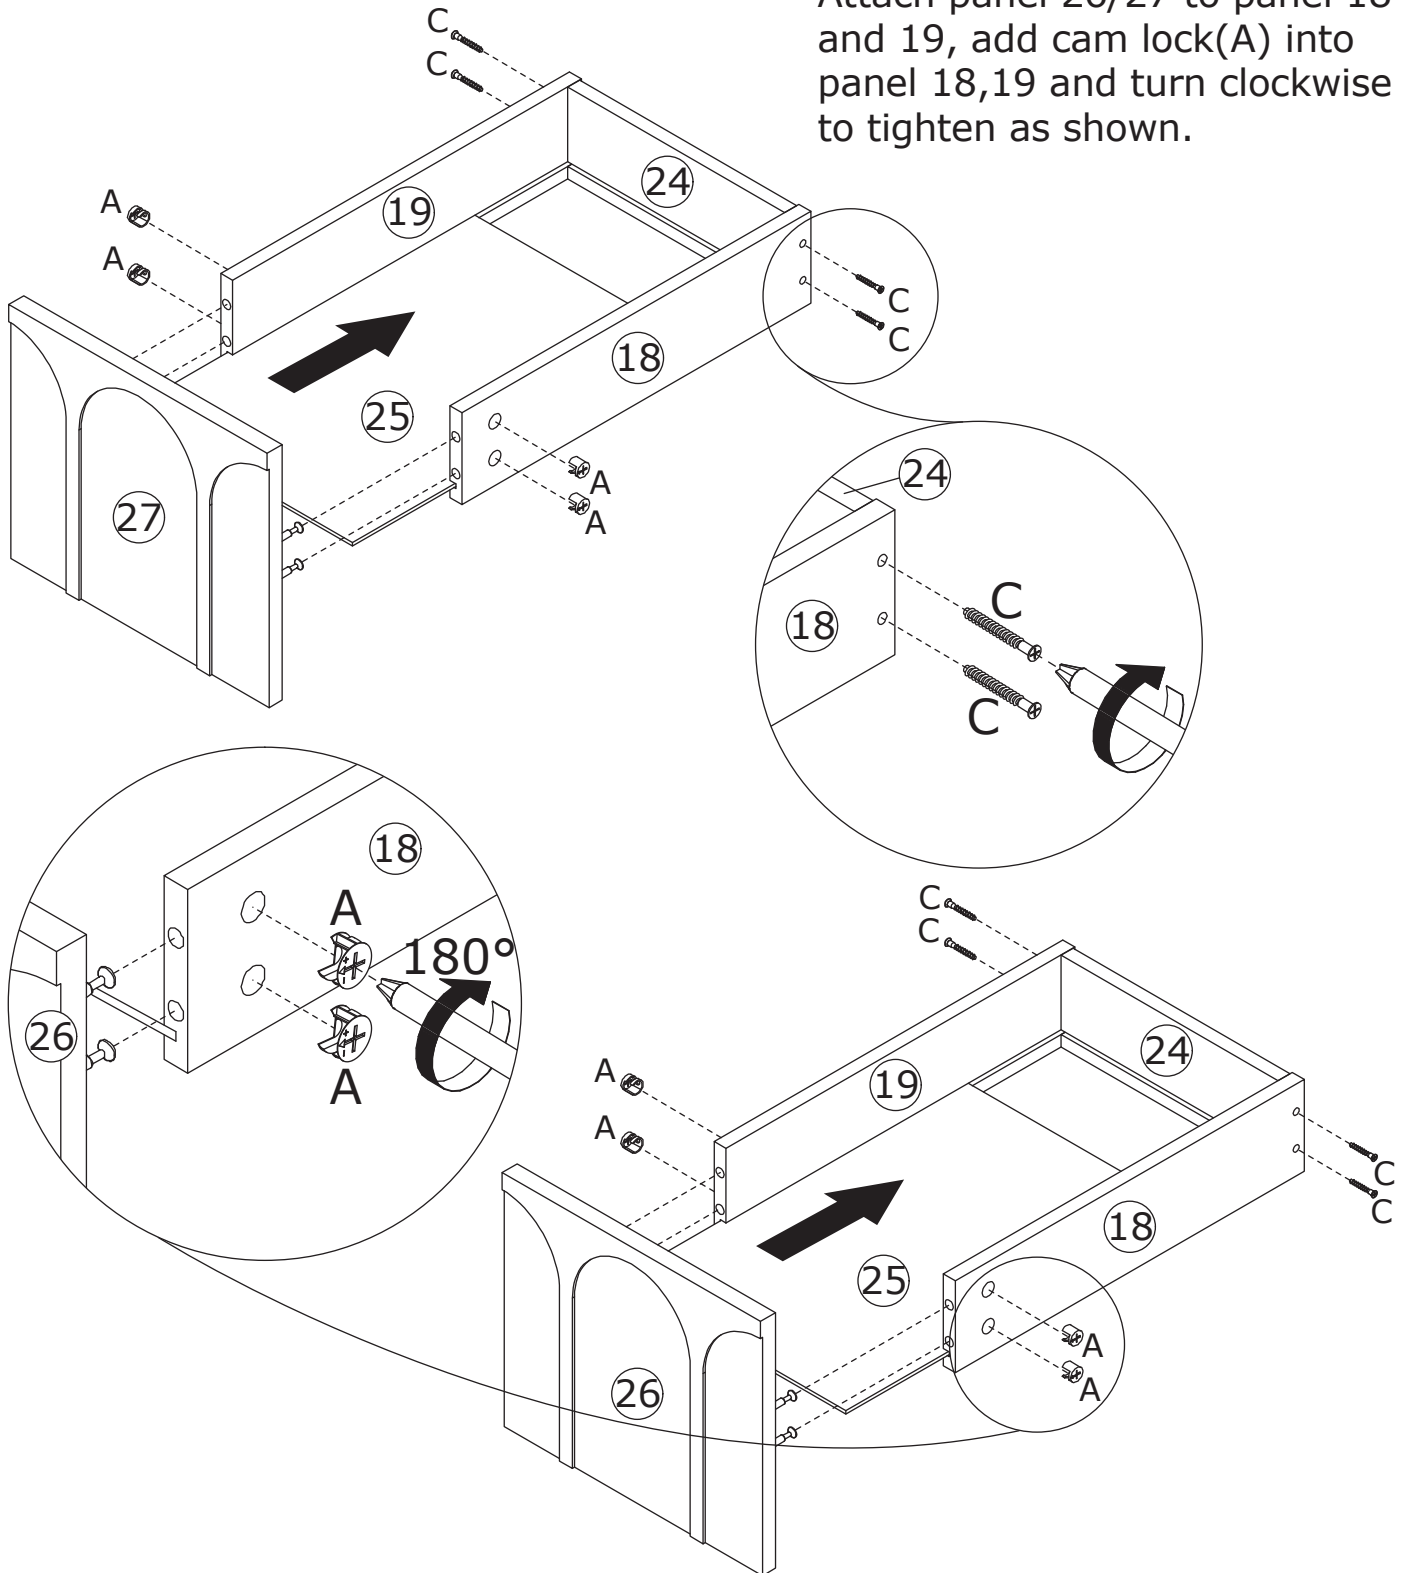

6

G x 8



CRD0312A




L x 2

DL



DR




 
 
 
WX0814A

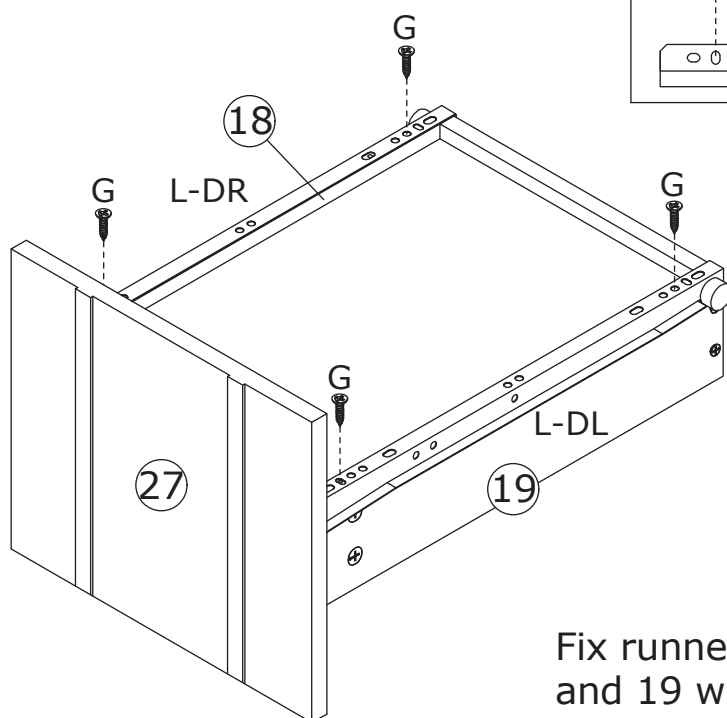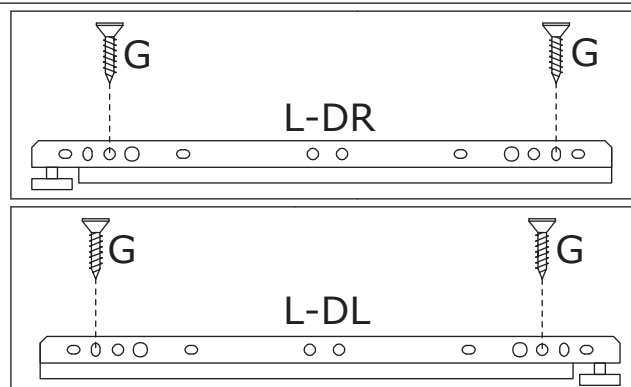

  
Fix runner(DR/DL) to panel 18 and 19 with screw(G) as shown.

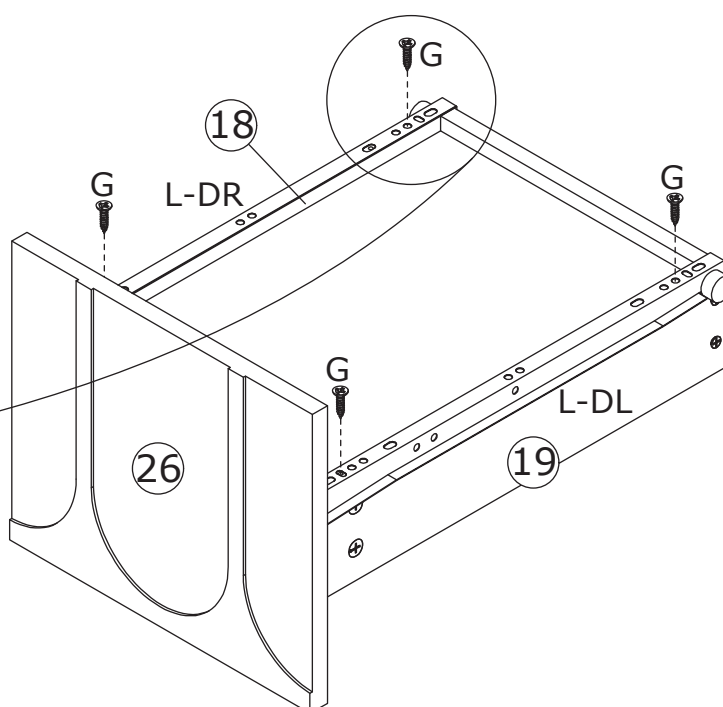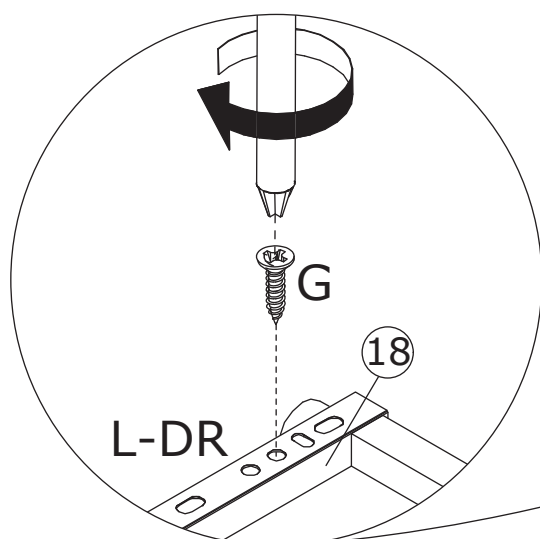



7

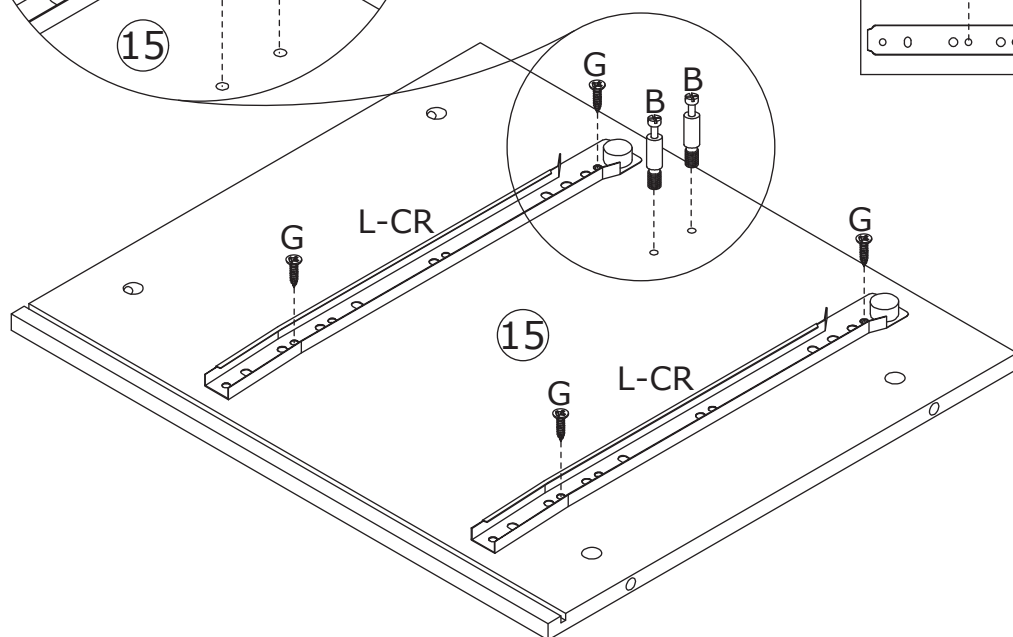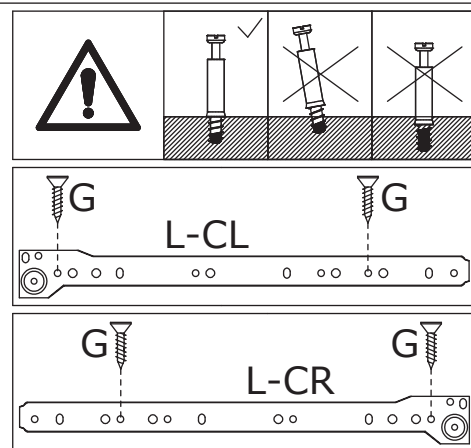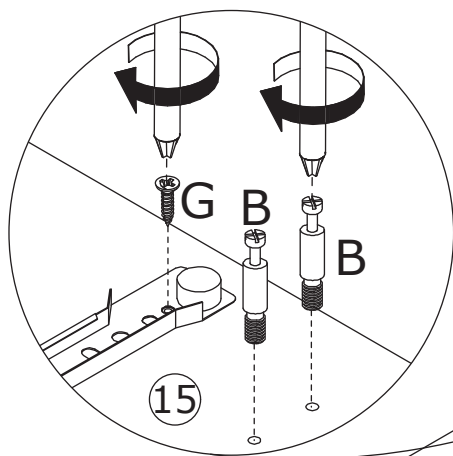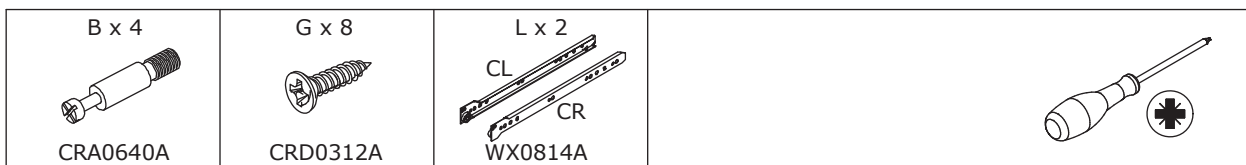    

 
Screw eccentric rod(B) into panel 14 and 15 at first.
Fix rail(CL/CR) to panel 14 and 15 with screw(G) as shown.

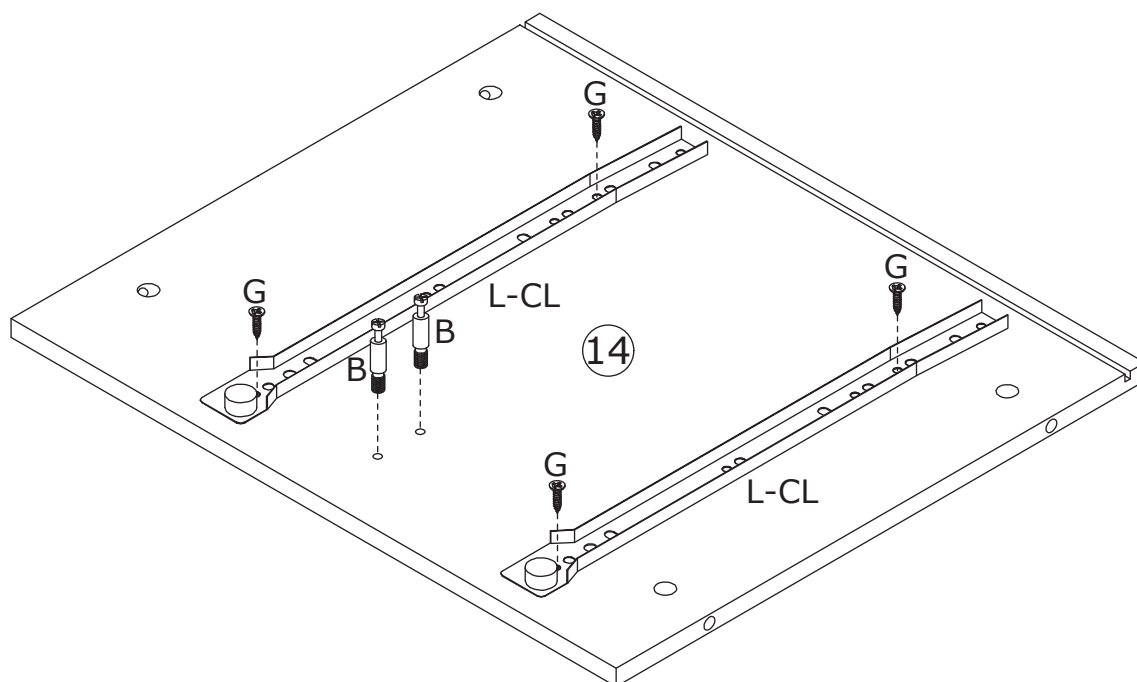

8

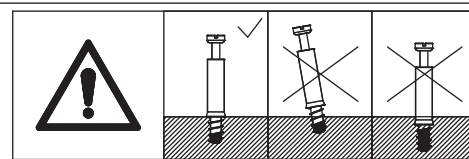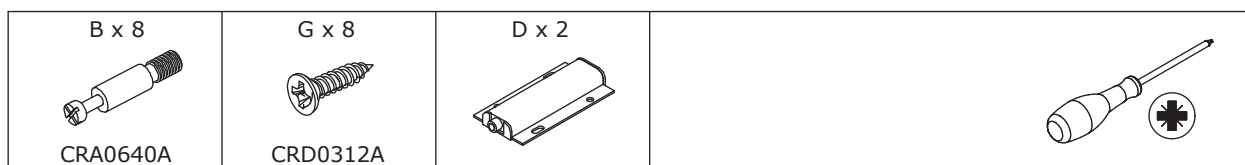  

 Screw eccentric rod(B) into panel 10 and 11 at first.
Fix part(D) to panel 10 and 12 with screw(G) as shown.

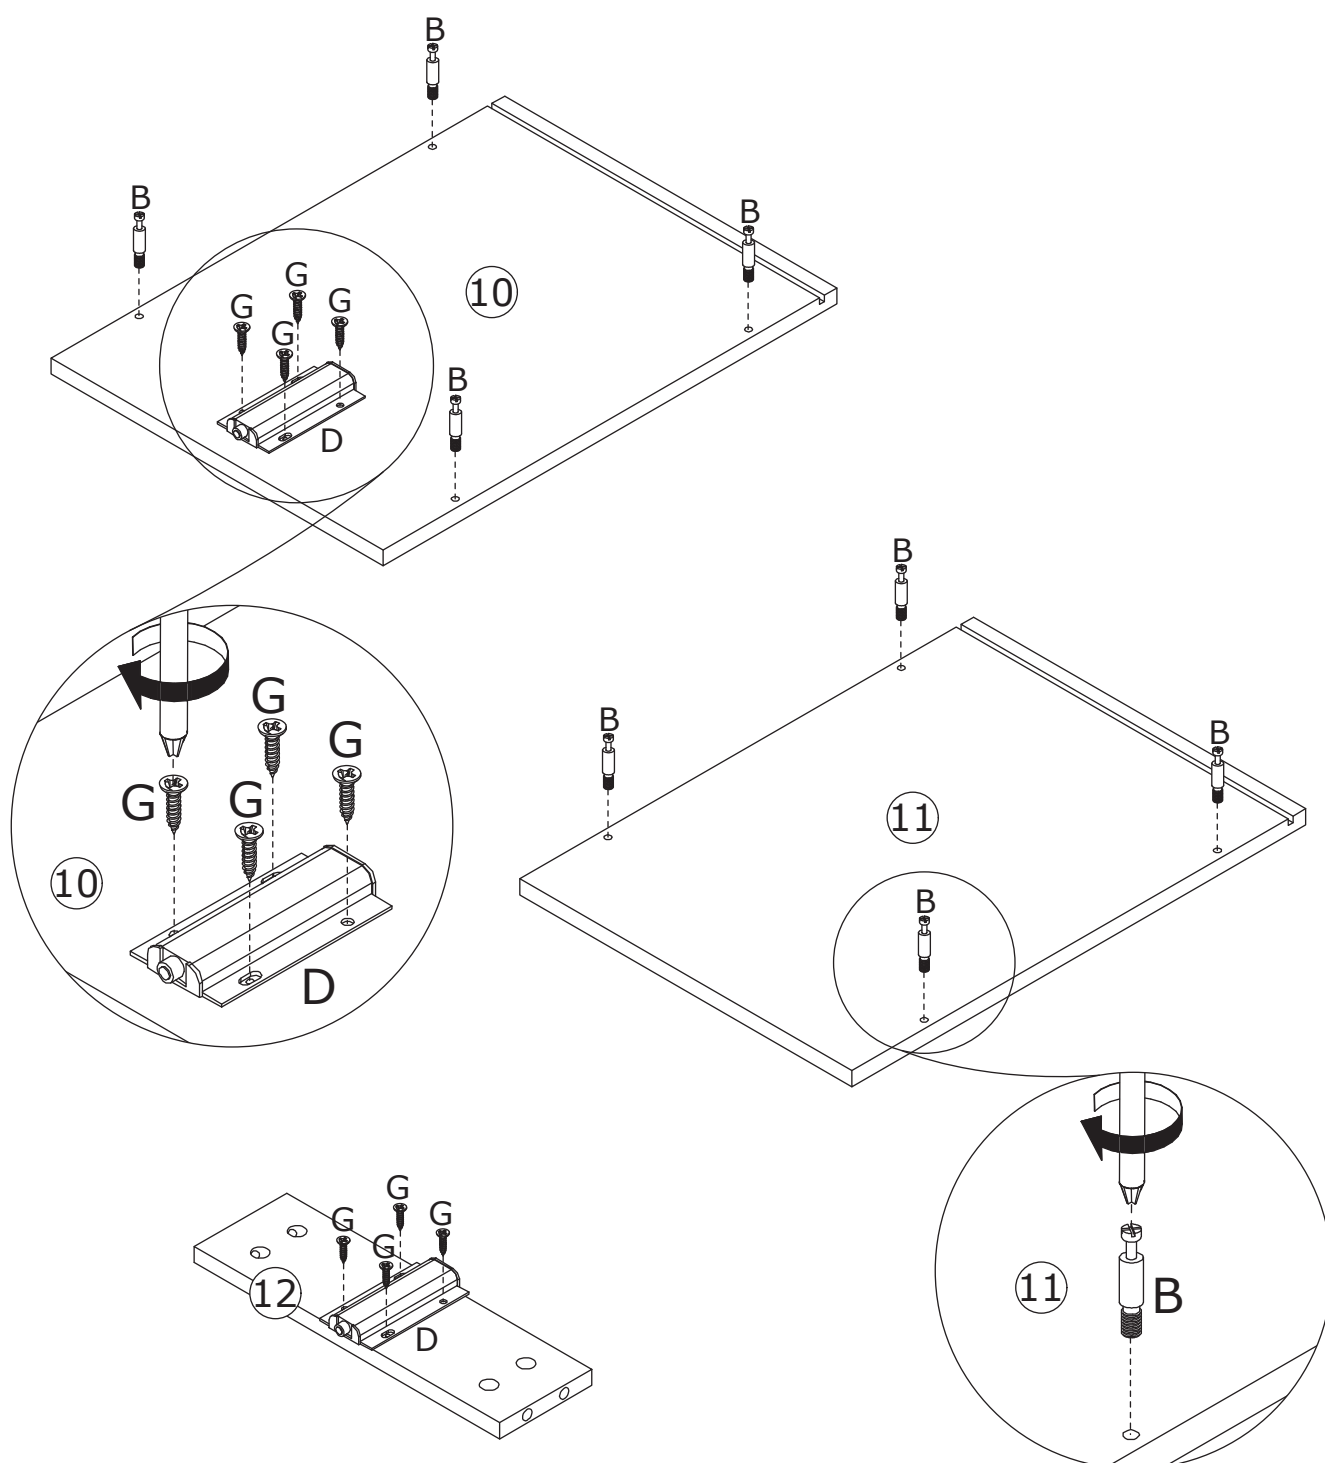


9


A x 4



 CRB1295A



 Connect panel 14 and 15 to panel 12, add cam lock(A) into panel 12 and turn clockwise to tighten as shown.


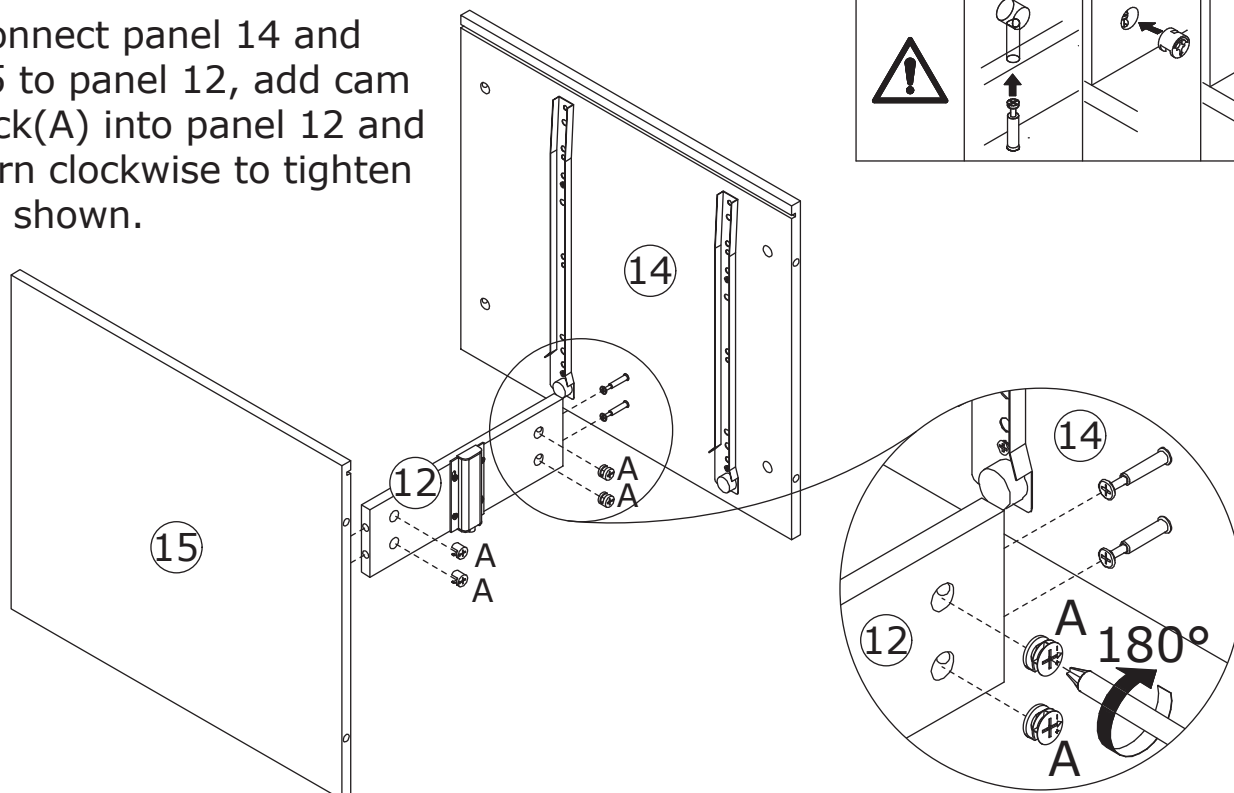


10

A x 8







  CRB1295A

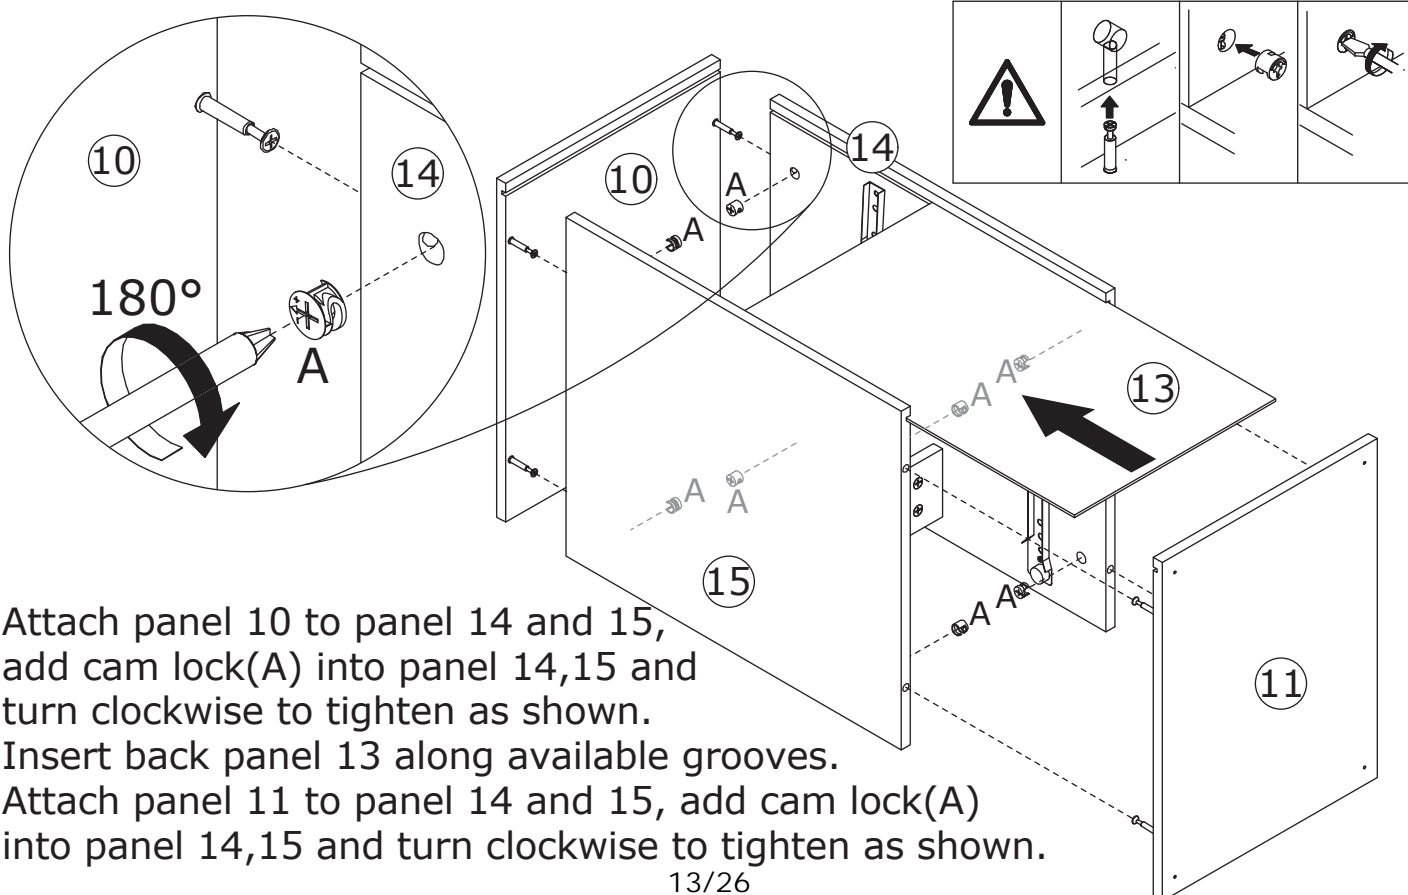


Attach panel 10 to panel 14 and 15, add cam lock(A) into panel 14,15 and turn clockwise to tighten as shown. Insert back panel 13 along available grooves. Attach panel 11 to panel 14 and 15, add cam lock(A) into panel 14,15 and turn clockwise to tighten as shown.

    
11

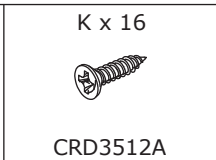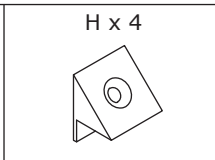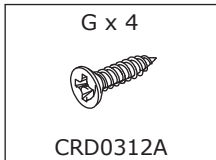

  Insert buckle(H) into back slots and fix with screw(G) as shown.
Fix leg 28 to panel 11 with screw(K) as shown.

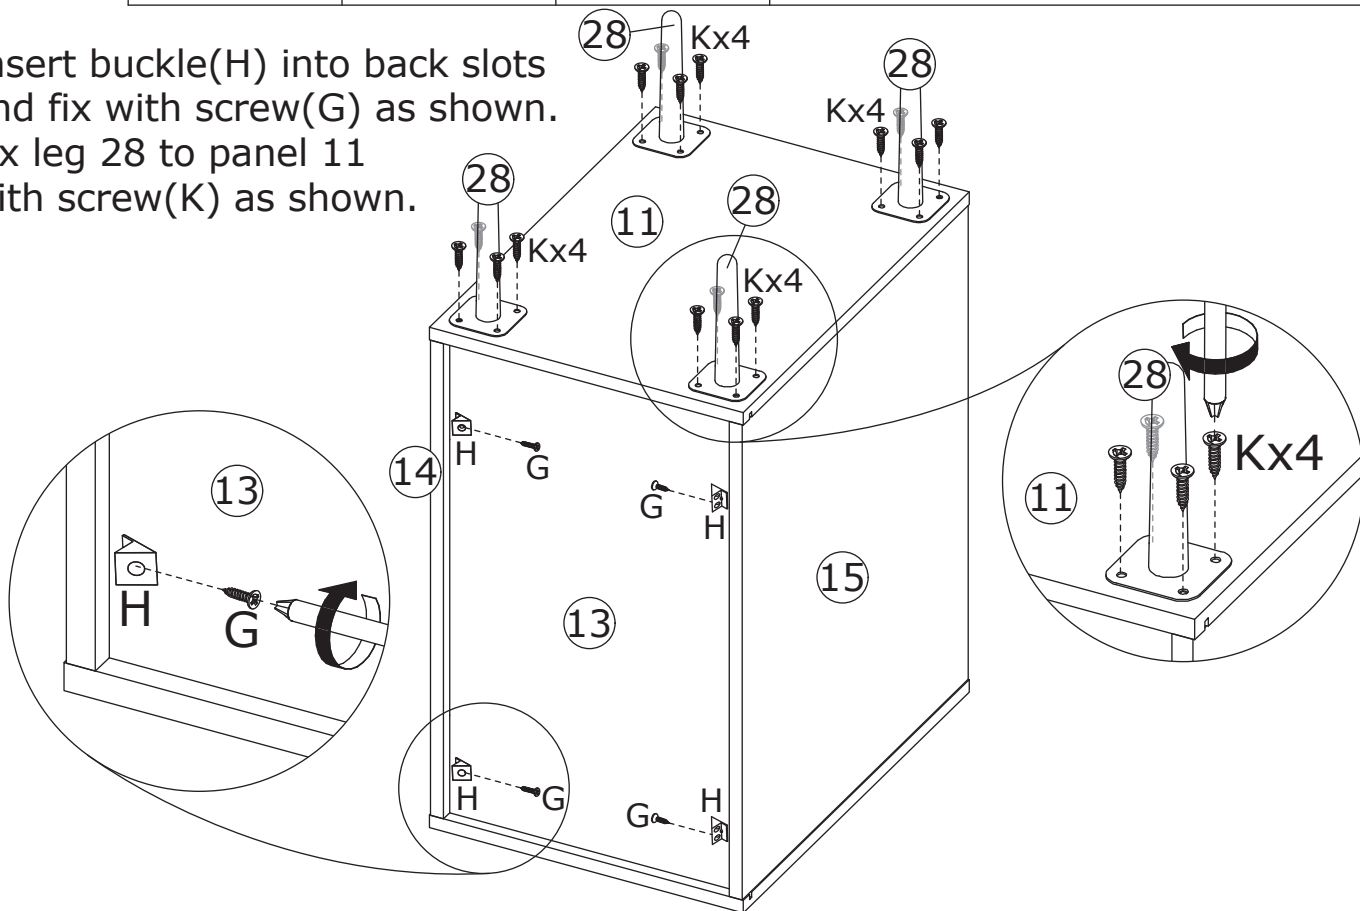


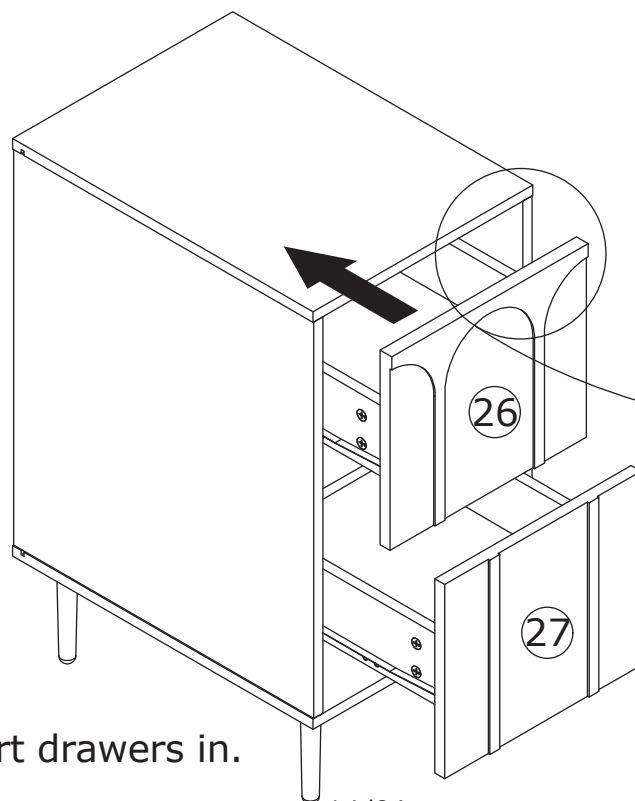



12



 
Align rails, insert drawers in.



13
 
<p>E x 2</p>  <p>CRE0825A</p>	<p>J x 1</p> 	<p>K x 8</p>  <p>CRD3512A</p>	
----------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

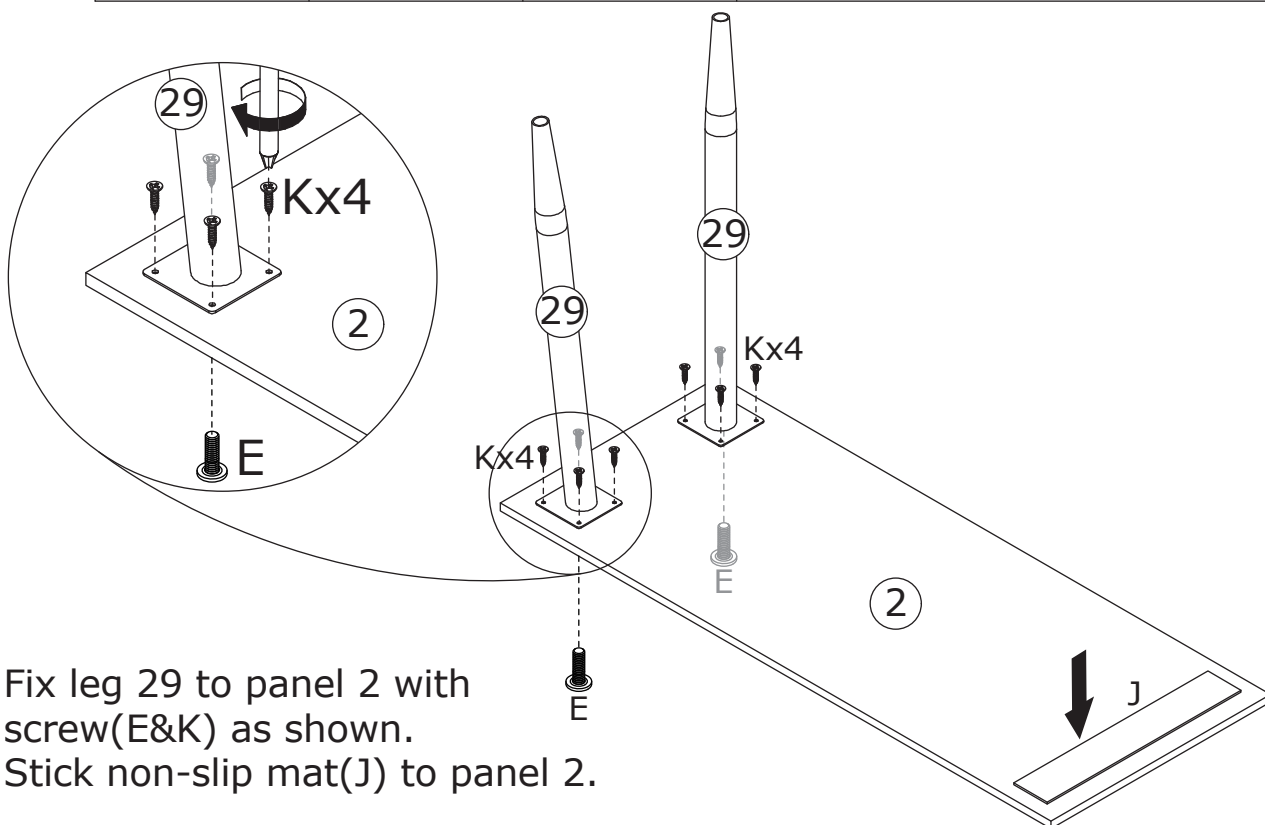 




14
 
<p>B x 6</p>  <p>CRA0640A</p>	
------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------


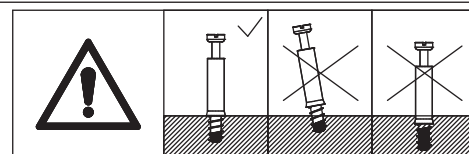 
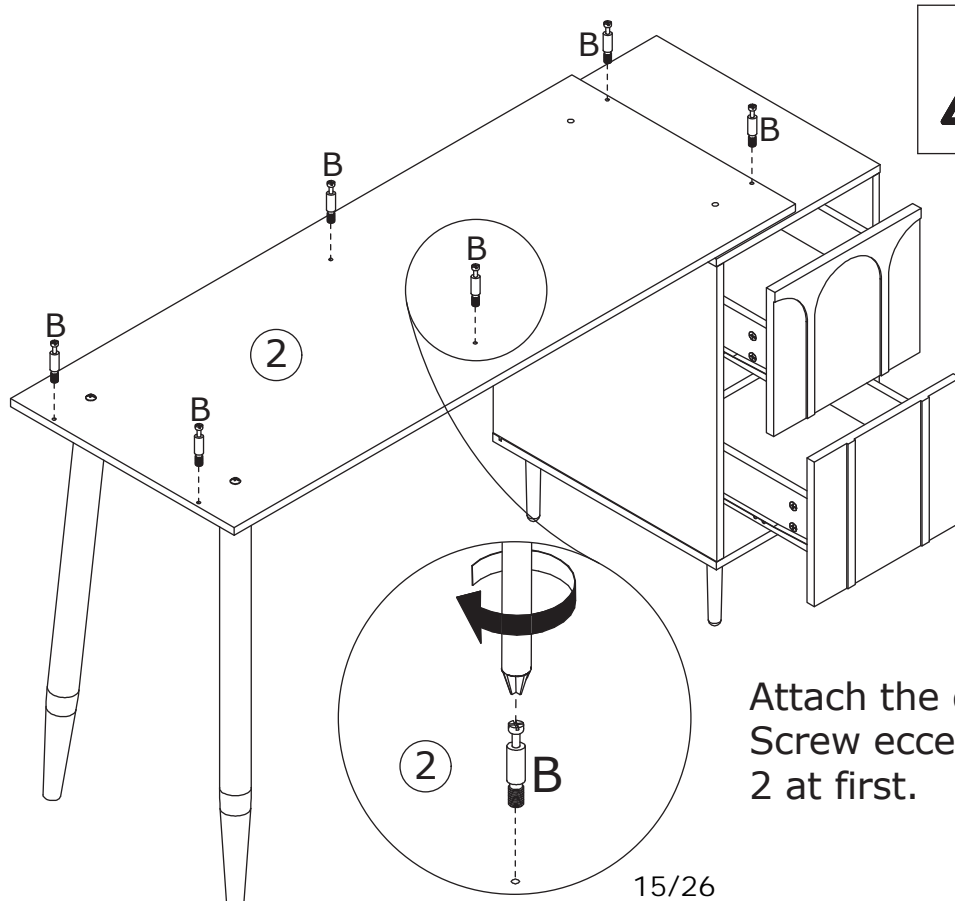 


Attach the desk to the cabinet.
Screw eccentric rod(B) into panel 2 at first.

 
 
 
15

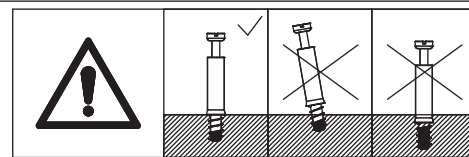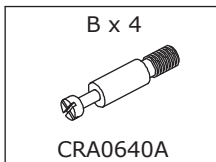

  
 
Screw eccentric rod(B)
into panel 3 and 4 at first.

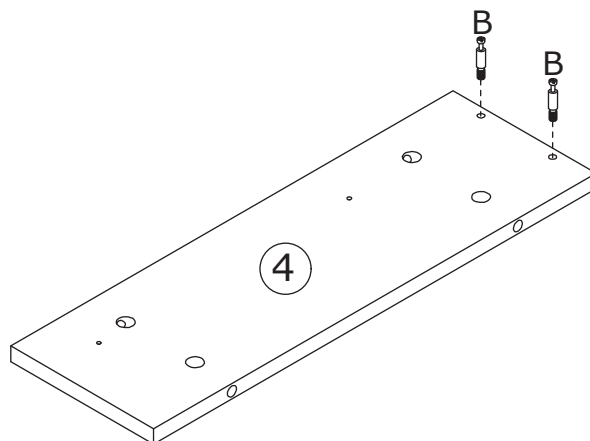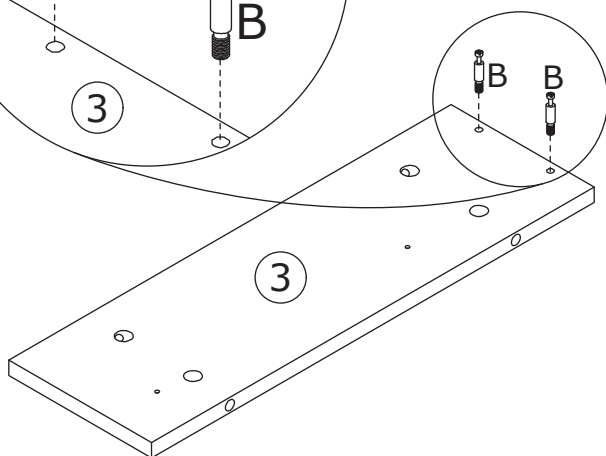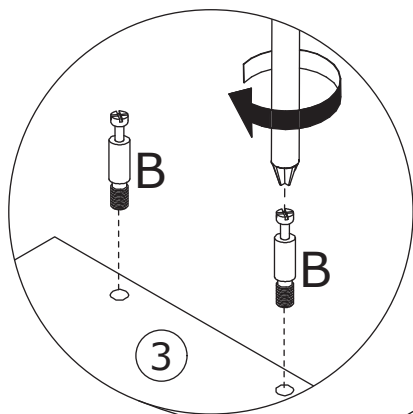

16

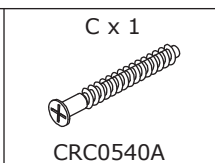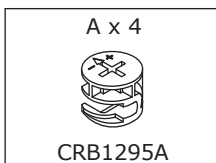   

  Fix panel 5 to panel 6 with screw(C) as shown.
Attach panel 3 and 4 to panel 6,
add cam lock(A) into panel 6
and turn clockwise to
tighten as shown.

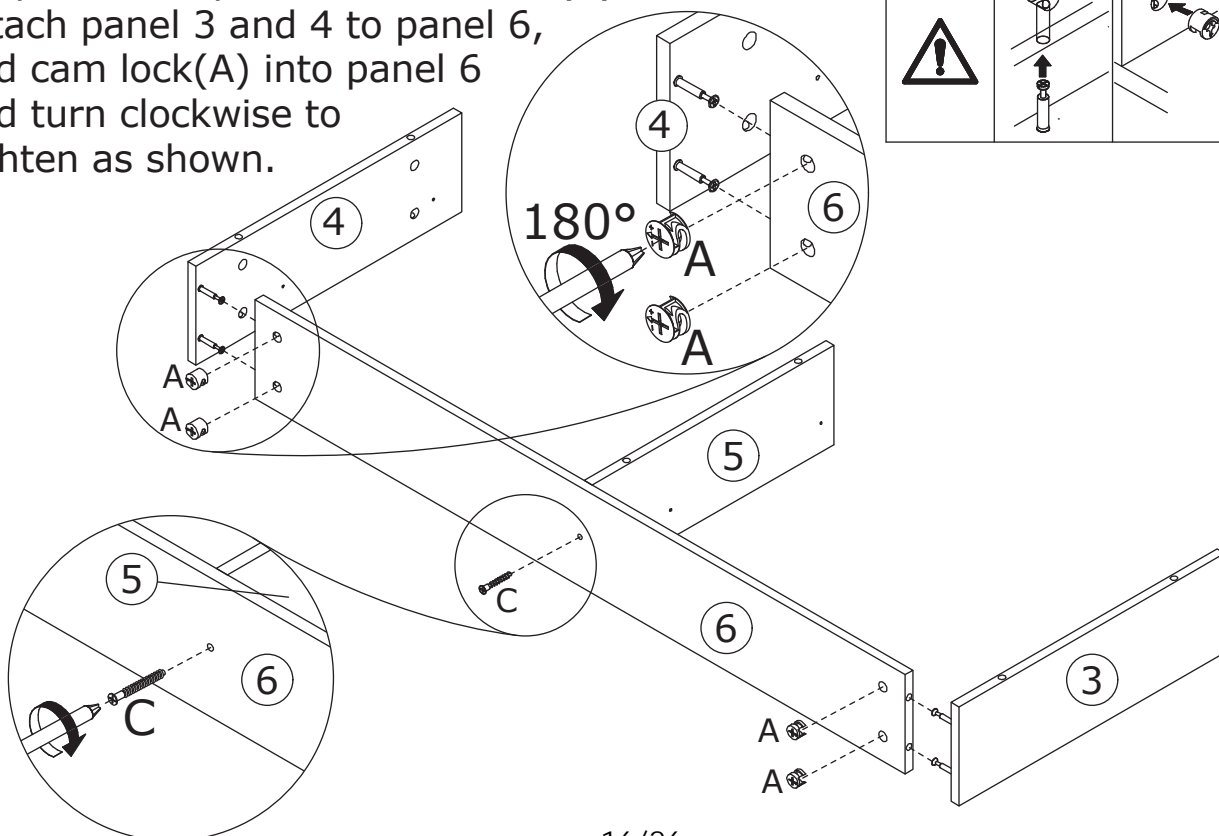
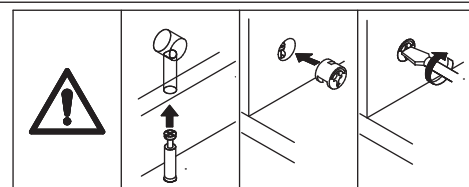


17


A x 6



  CRB1295A

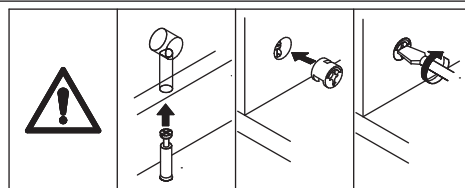

 Attach the component to panel 2,
add cam lock(A) into panel 3,5,4
and turn clockwise to tighten as shown.

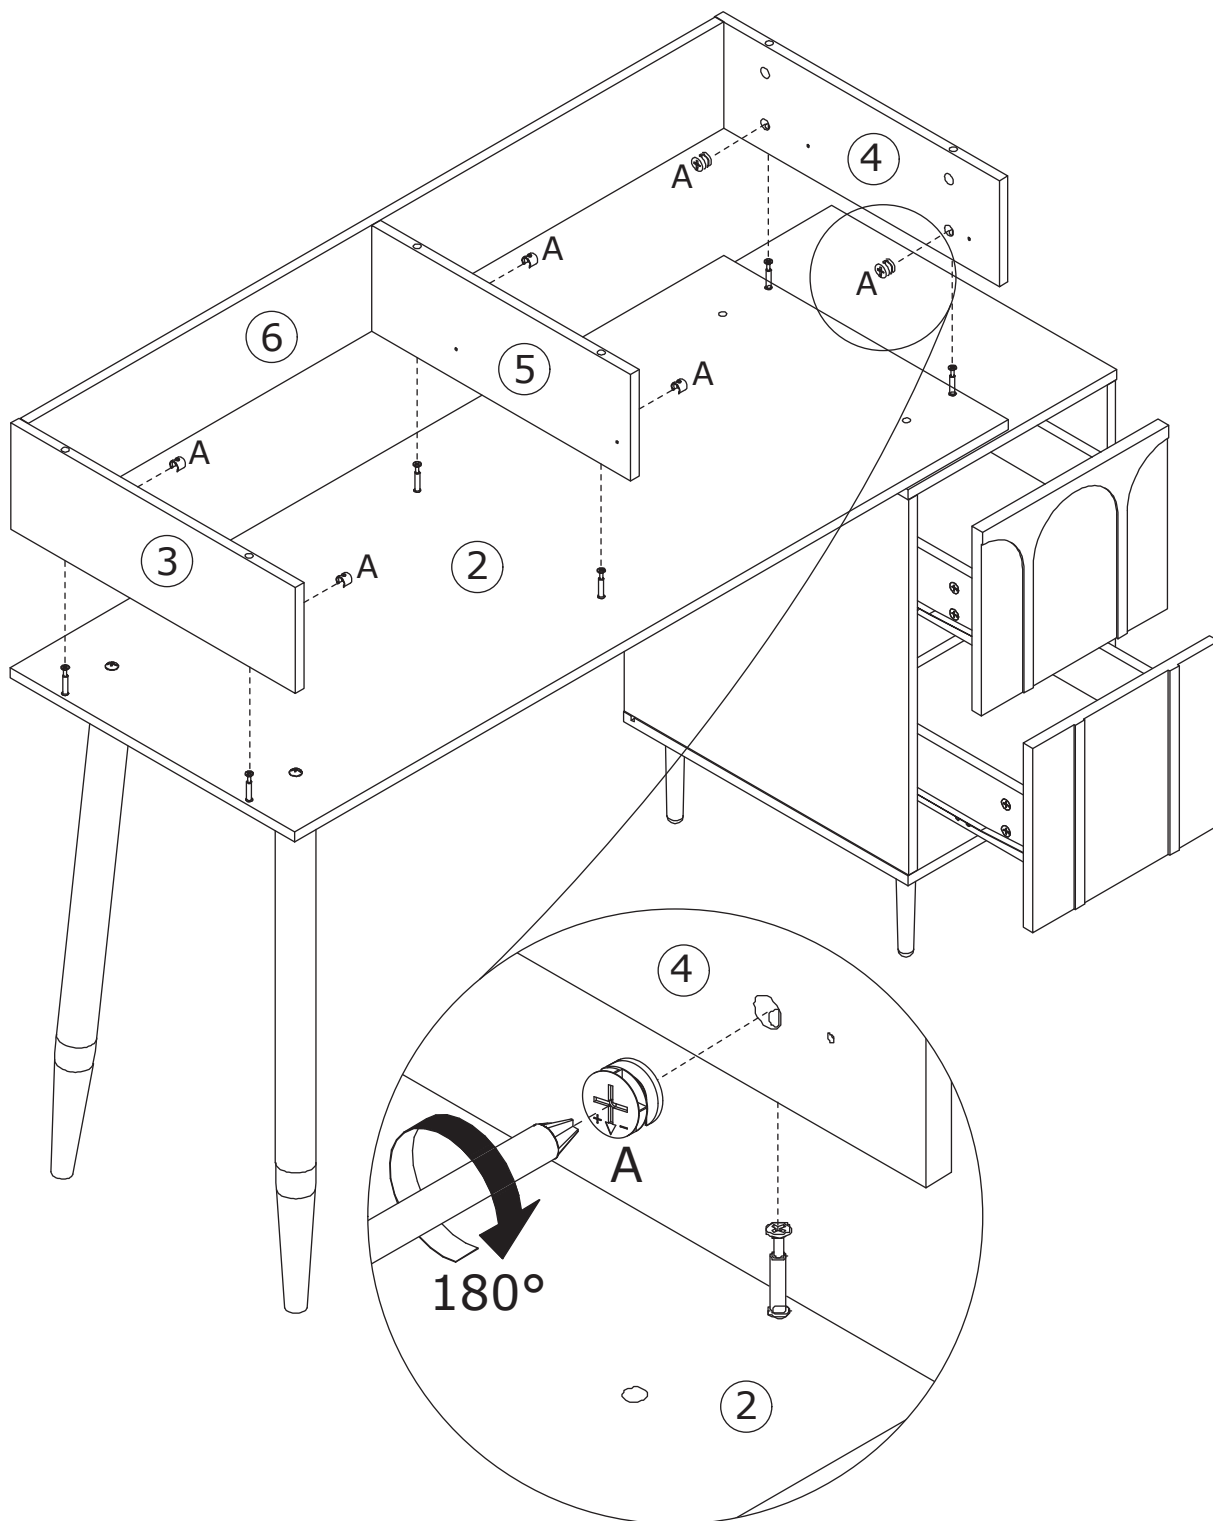


18

G x 8





CRD0312A

 
L x 2










WX0814A

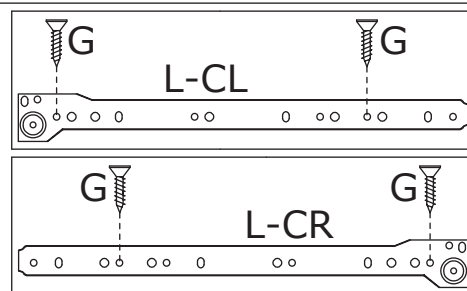  

 
Fix rail(CL/CR) to panel 3, 4 and 5 with screw(G) as shown.

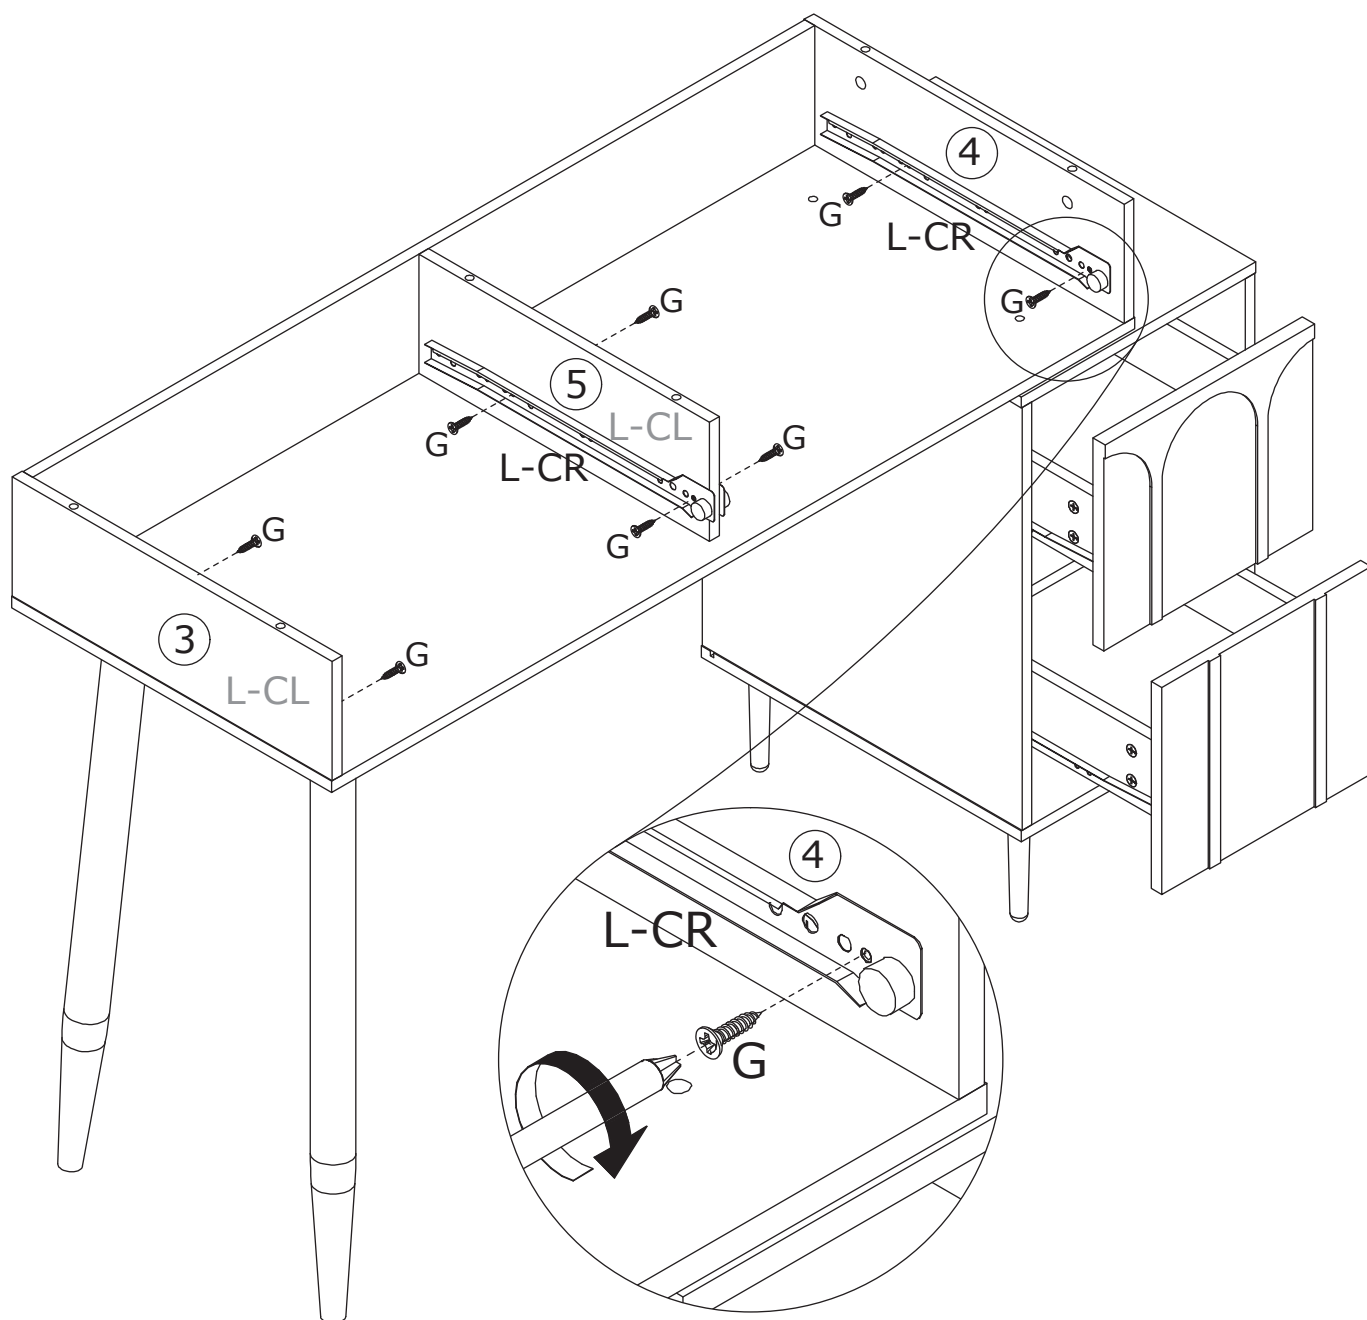

19

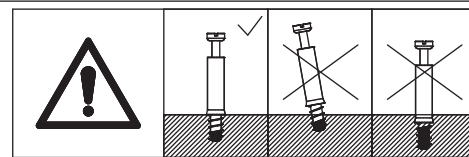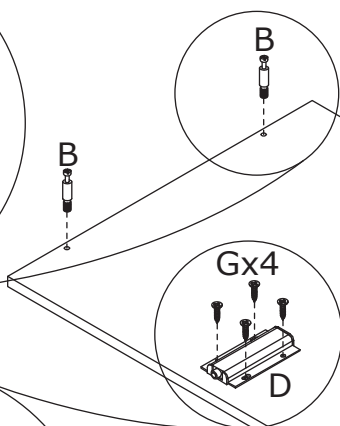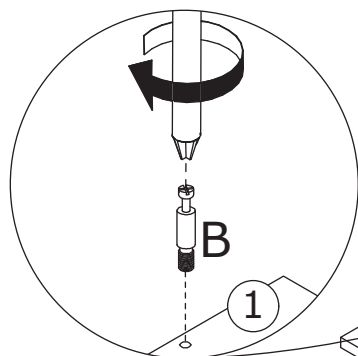    
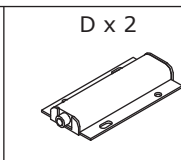 
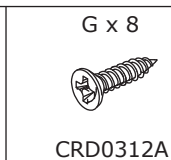 
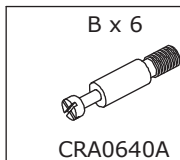 


 Screw eccentric rod(B) into panel 1 at first.

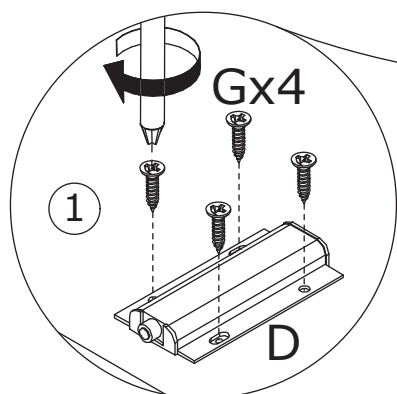


Fix part(D) to panel 1 with screw(G) as shown.

    20

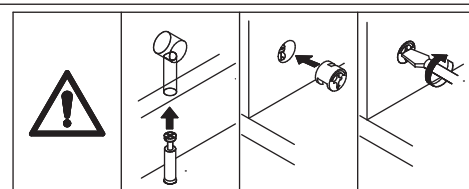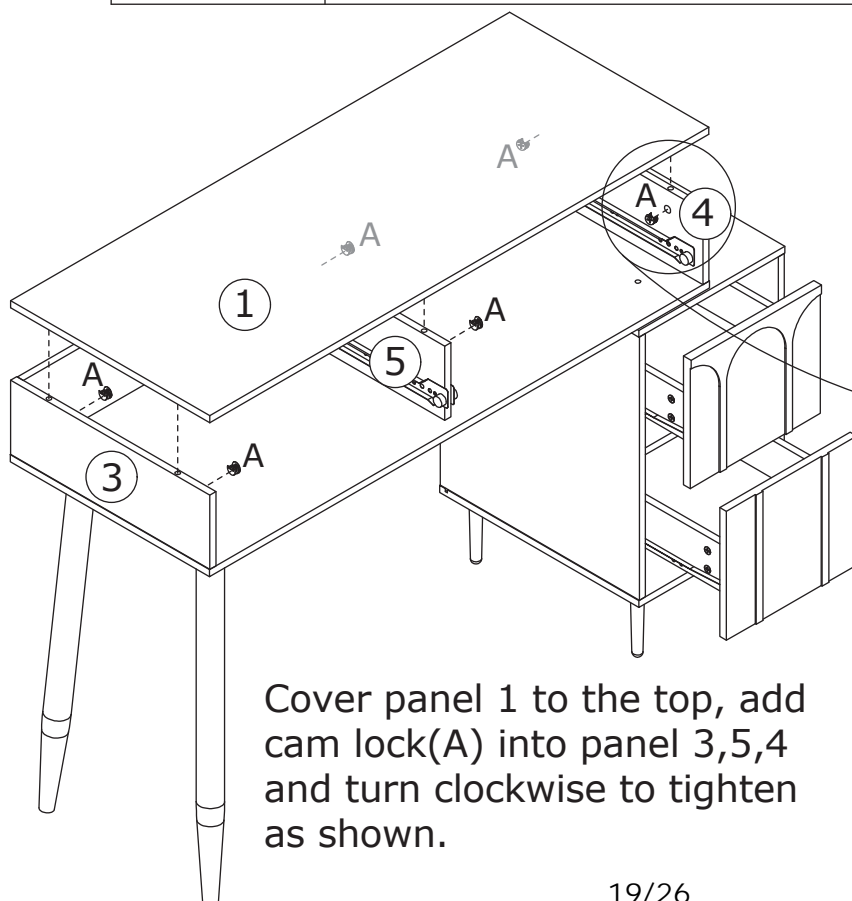
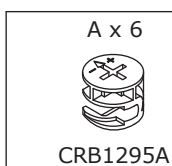


 Cover panel 1 to the top, add cam lock(A) into panel 3,5,4 and turn clockwise to tighten as shown.

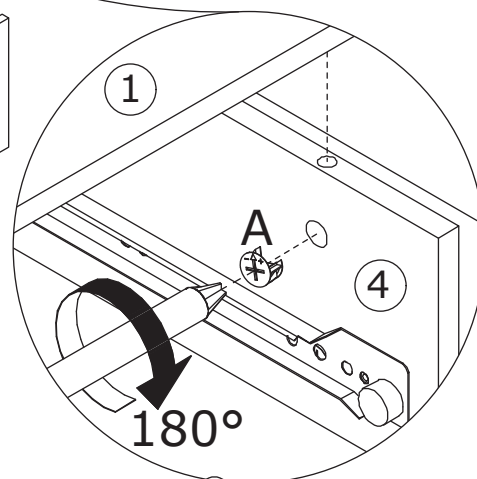


21

  B x 3
CRA0640A

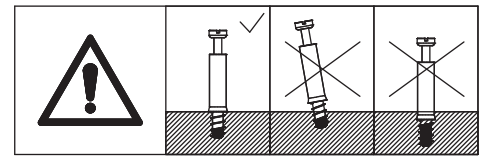

 Screw eccentric rod(B)
into panel 1 as shown.

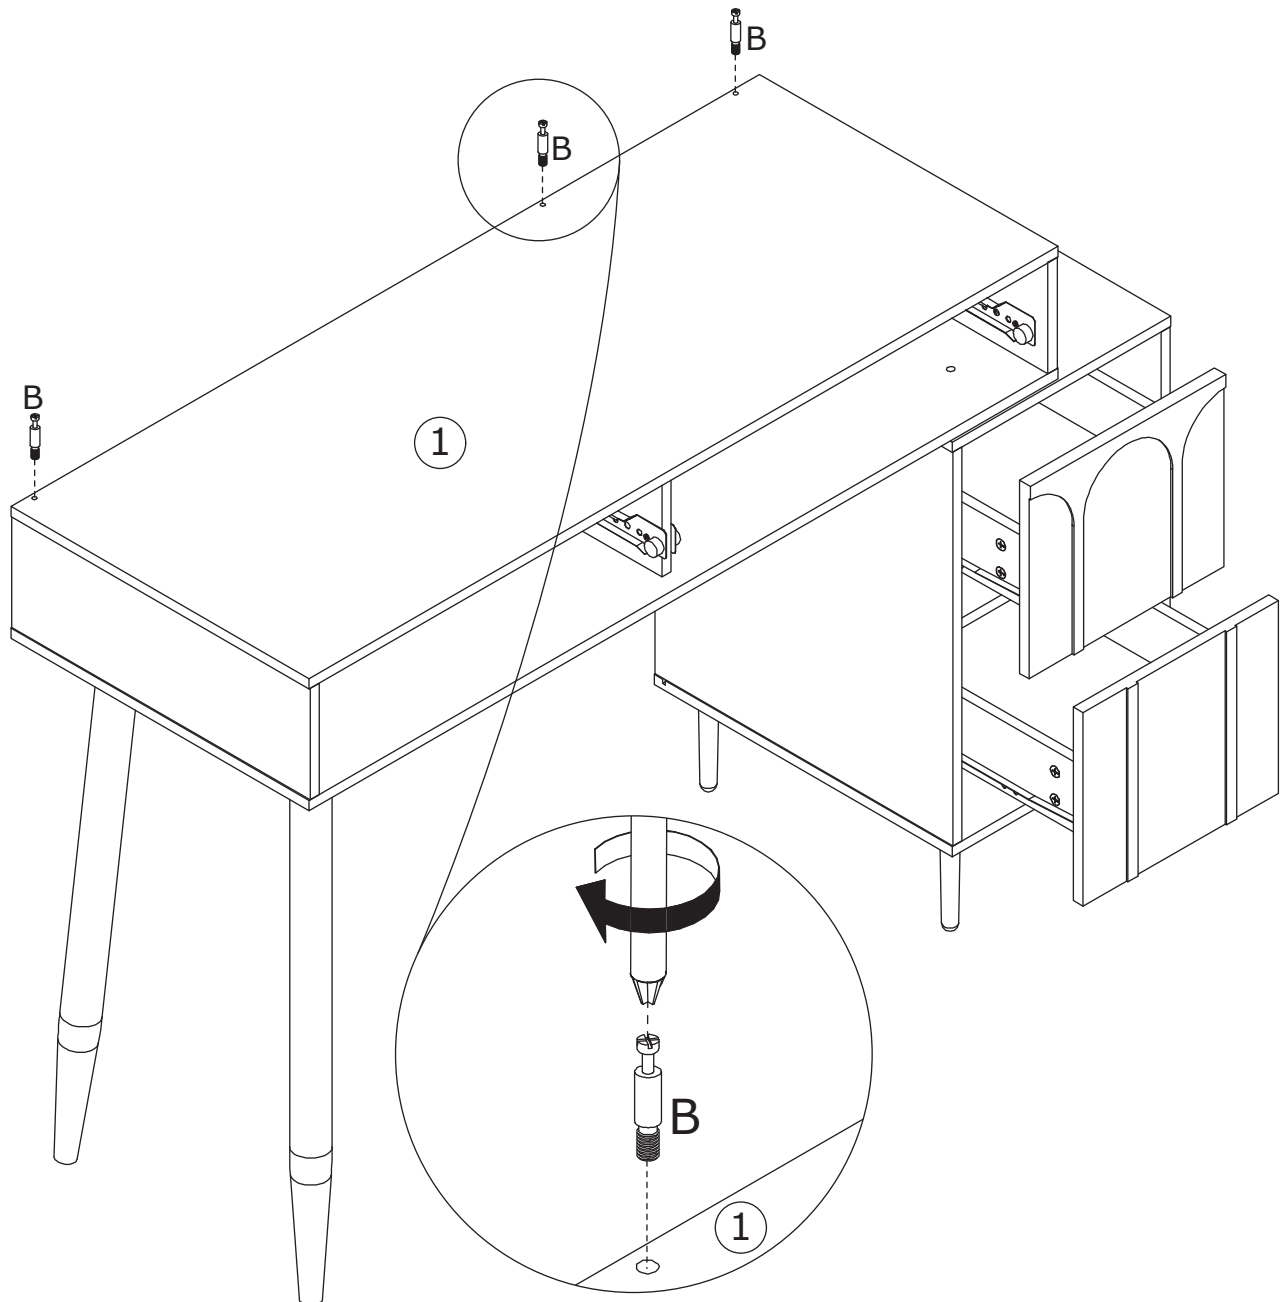

22

A x 3



CRB1295A





F x 2




G x 16



    CRD0312A




 Attach panel 7 to panel 1, add cam lock(A) into panel 7 and turn clockwise to tighten as shown. Fix part(F) to panel 7 and 6 with screw(G) as shown.



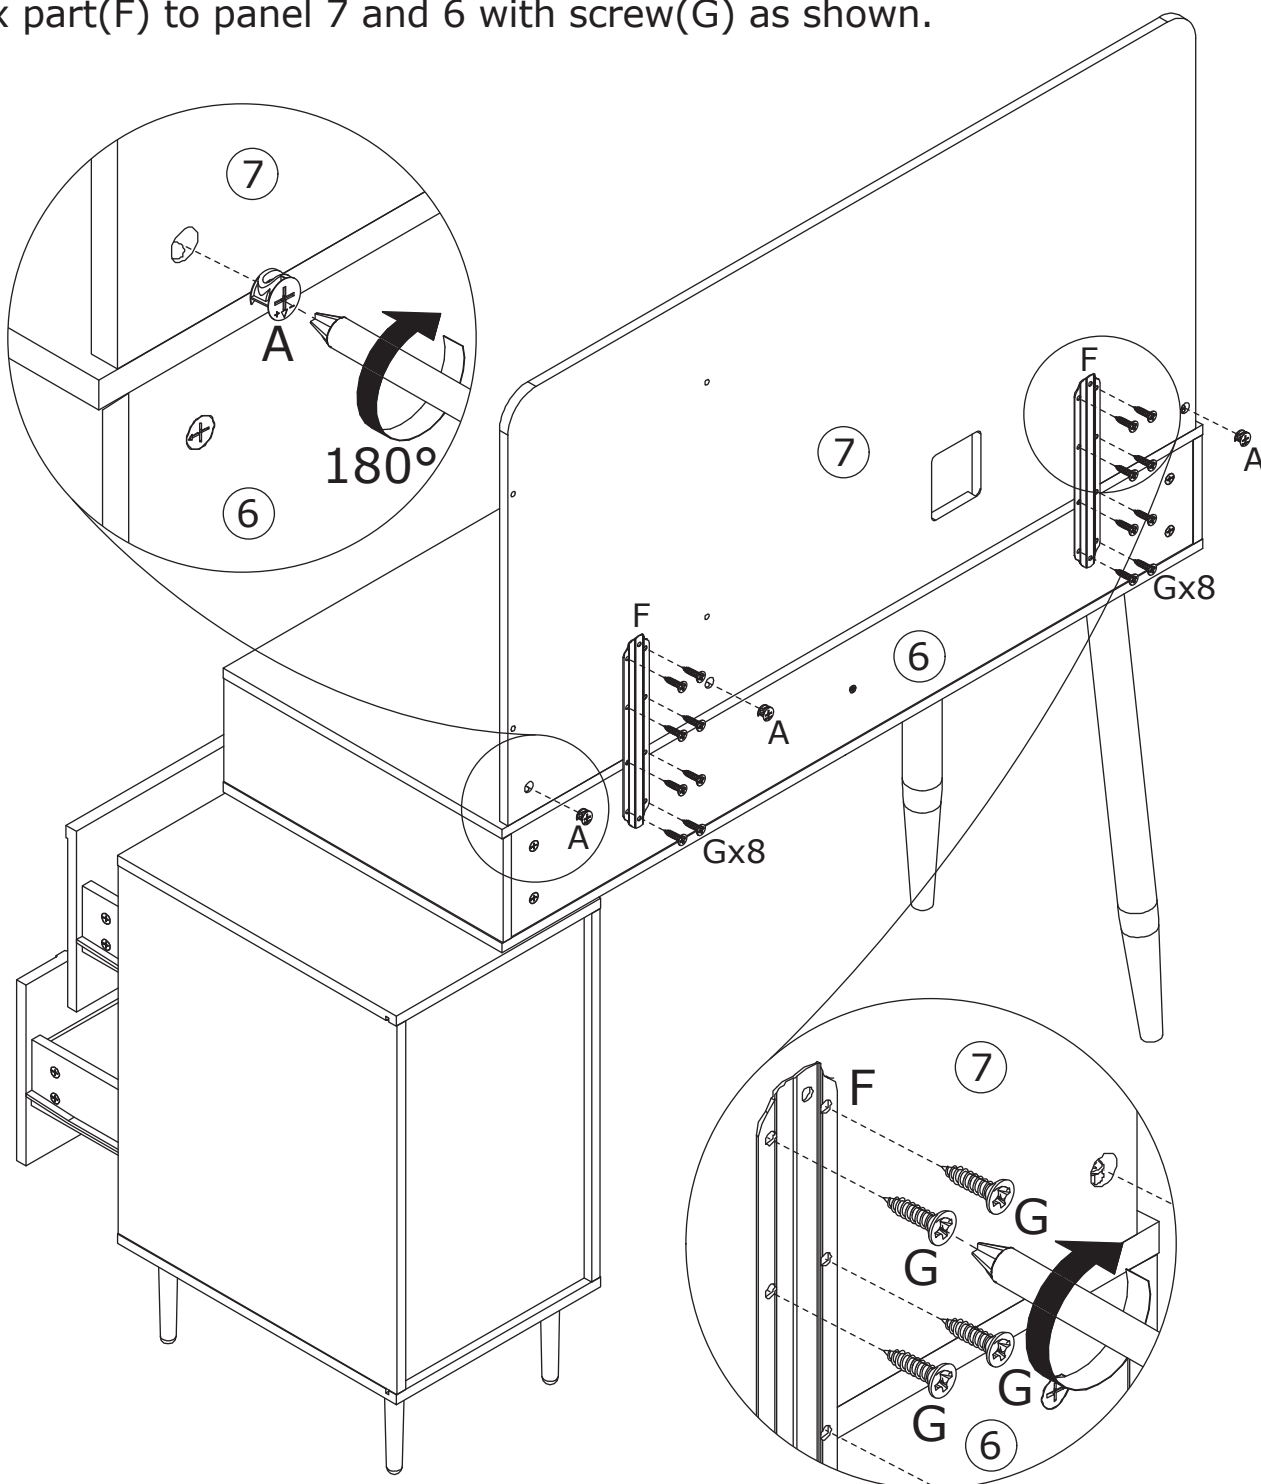


23

 B x 8



CRA0640A

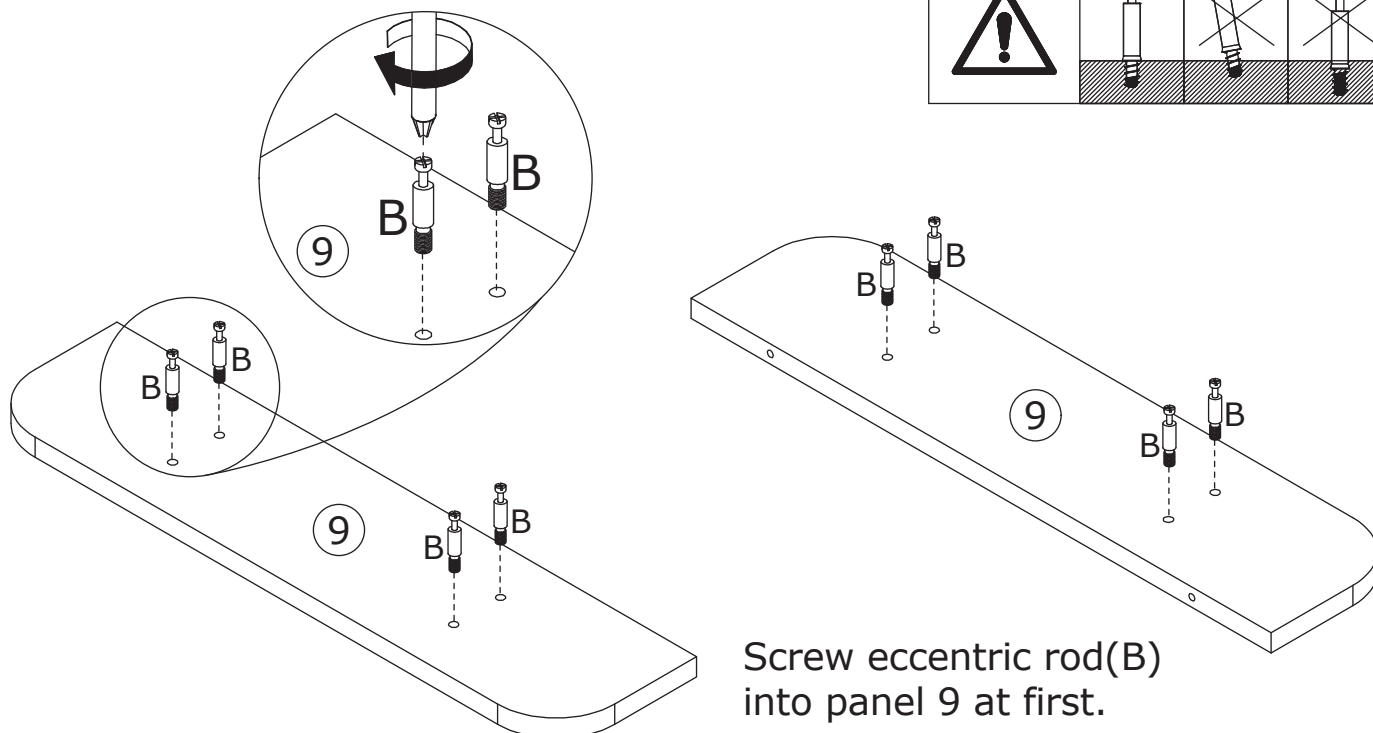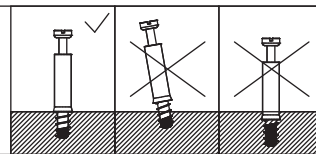   



Screw eccentric rod(B)
into panel 9 at first.

24


A x 8



  CRB1295A

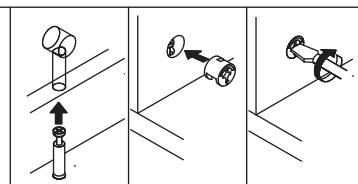


 Connect panel 9 to panel 8,
add cam lock(A) into panel 8
and turn clockwise to tighten
as shown.

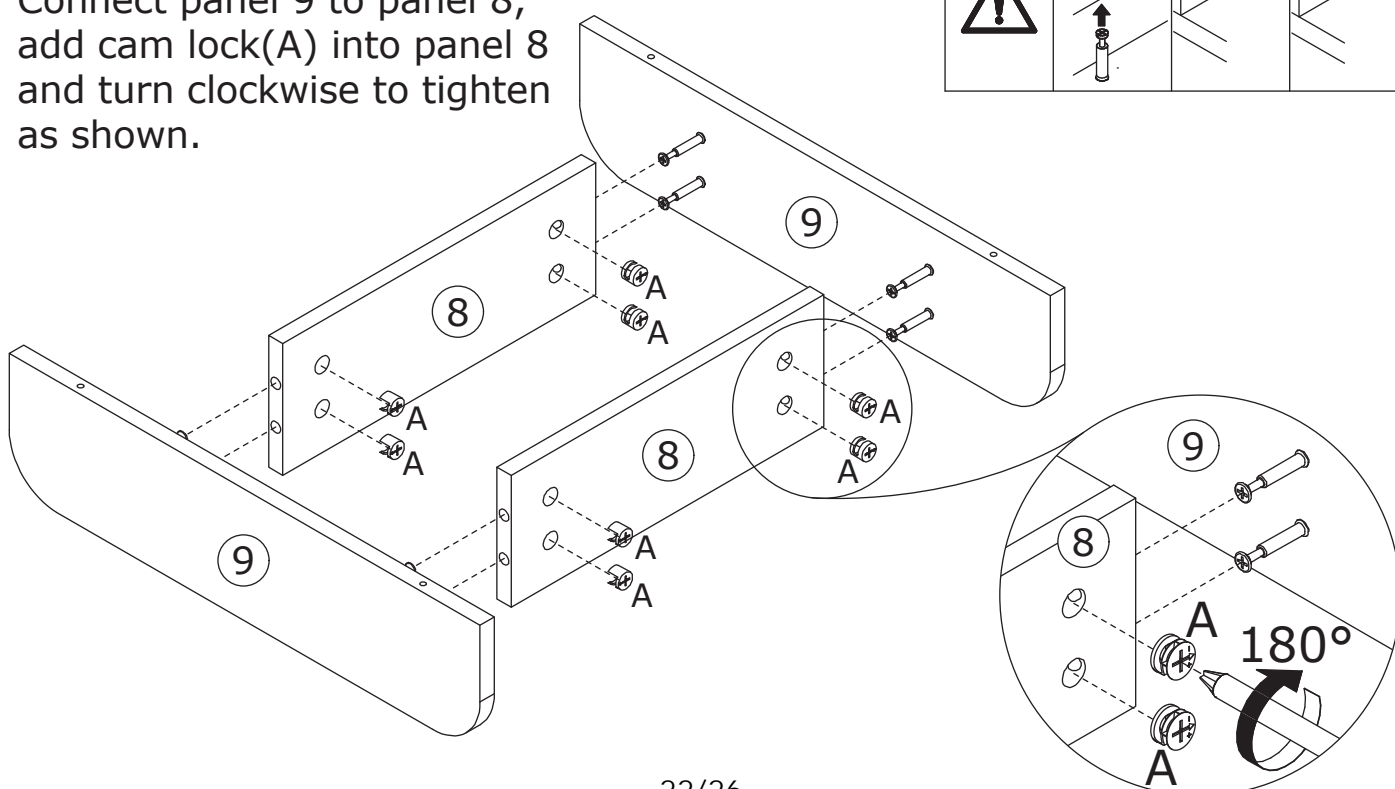


25

 
C x 4



CRC0540A

 


 Fix the component to panel 7
with screw(C) as shown.

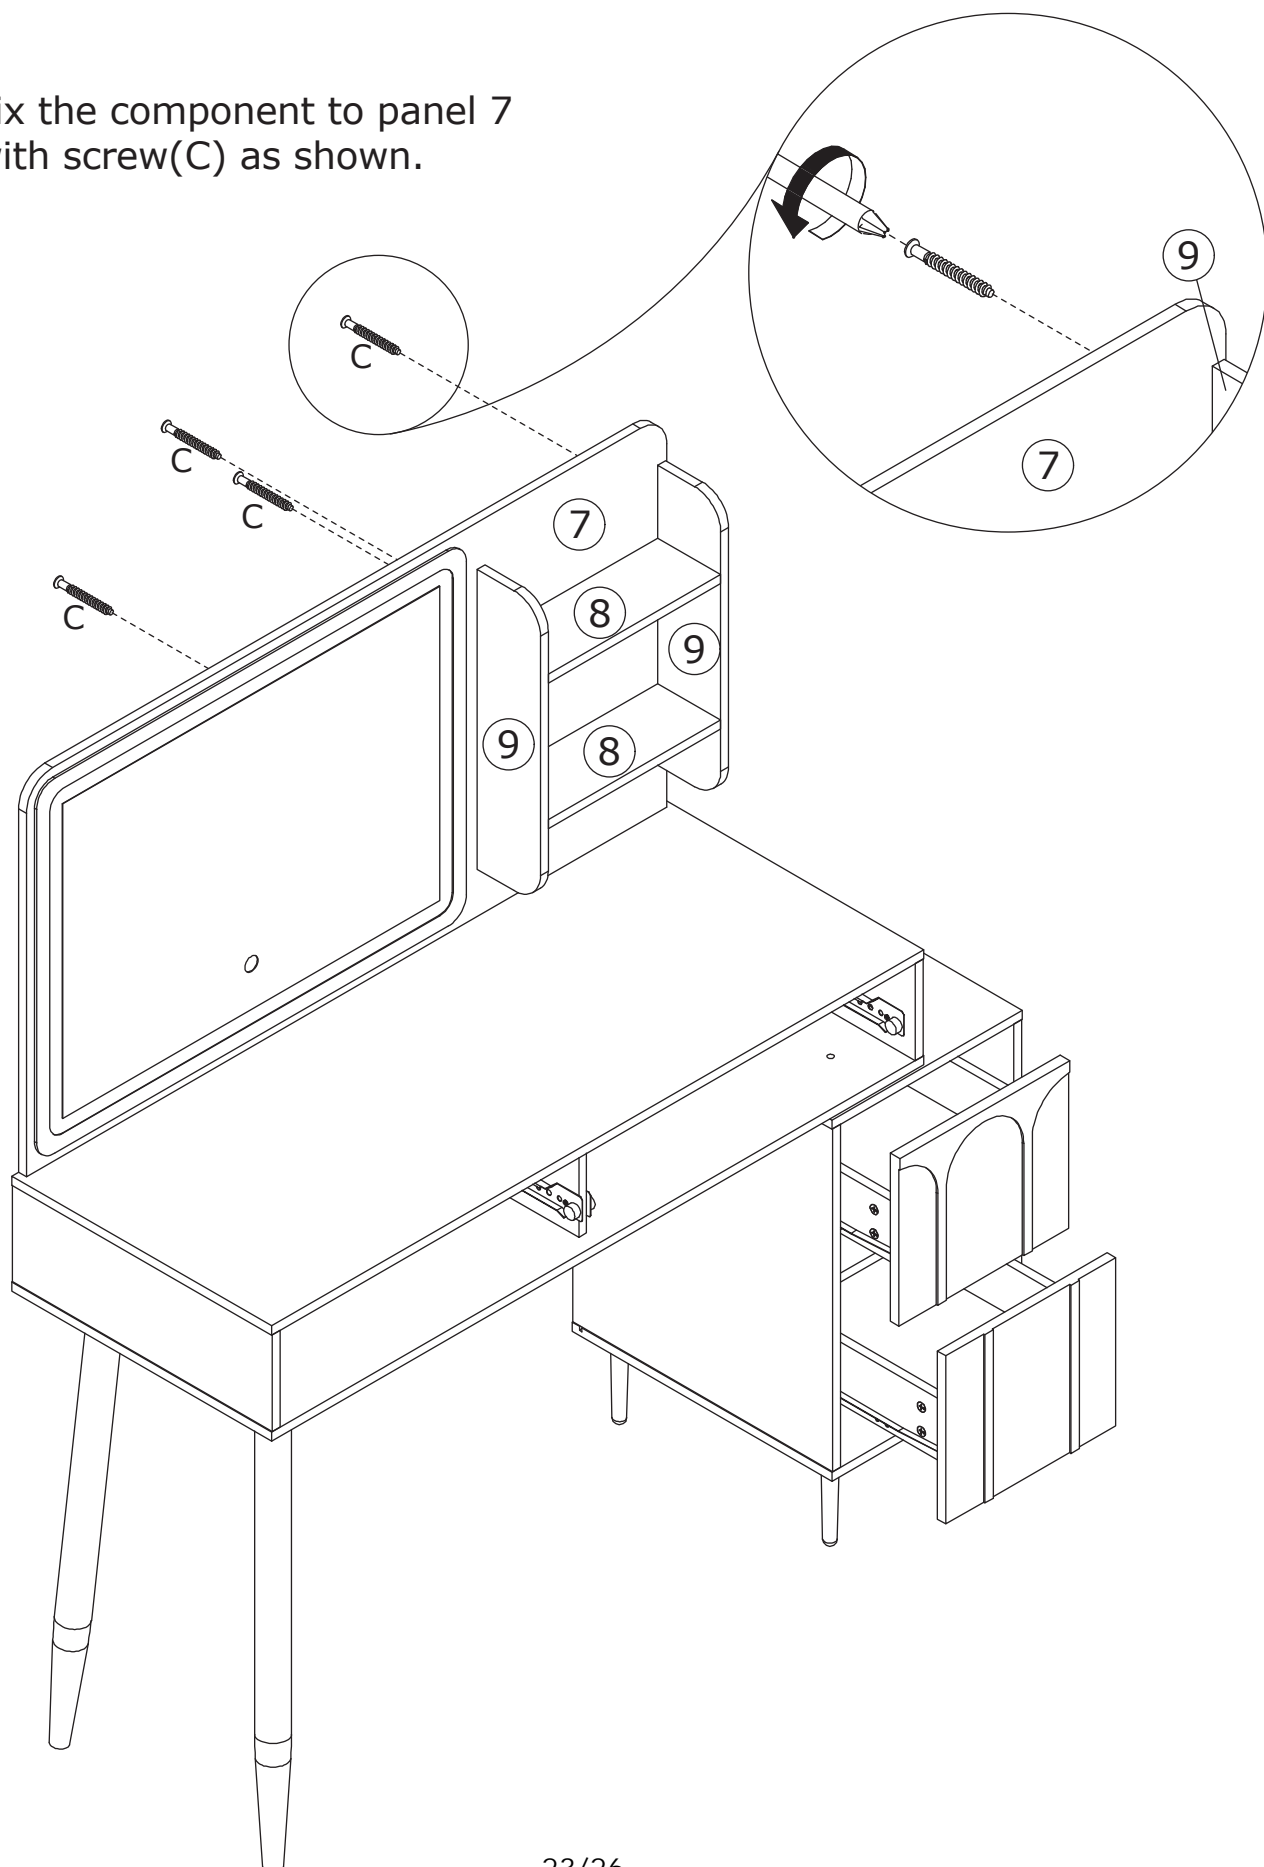


26

 Embed panel 17 into panel 16.


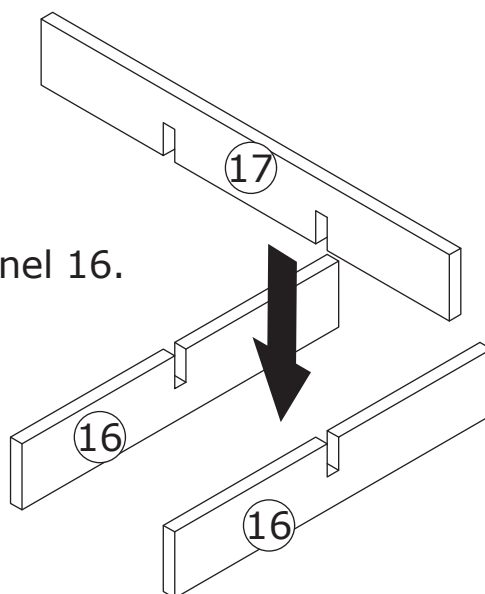


27

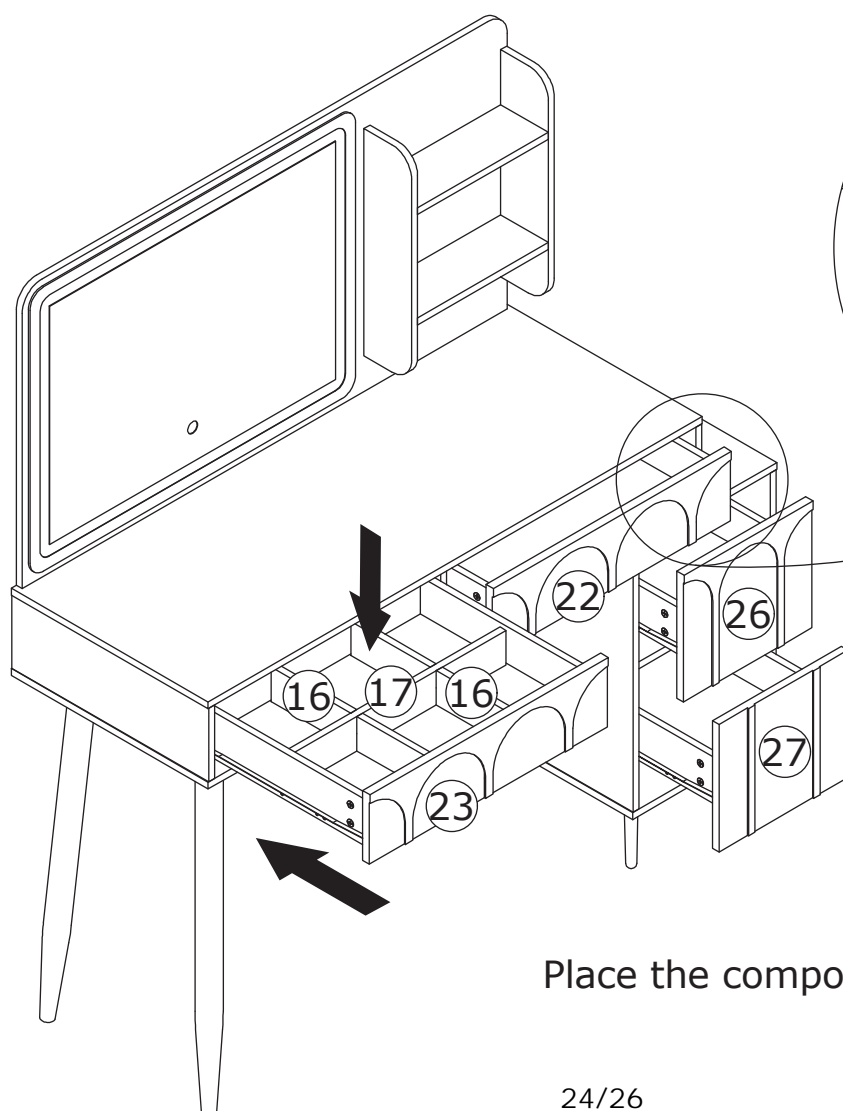 


Place the component into large drawer.

  If the drawers do not pop out after pressing,
adjust this component.
Loosen clockwise to shorten, and tighten
counter clockwise to extend.

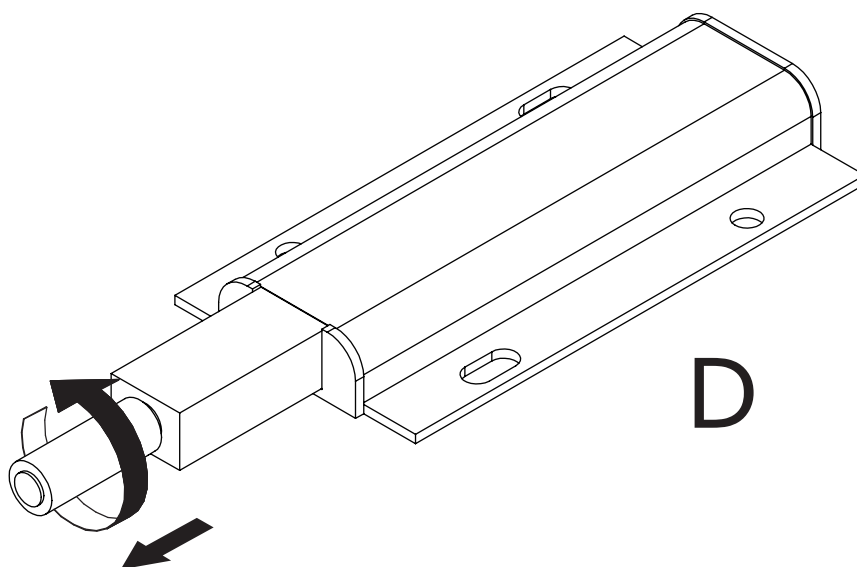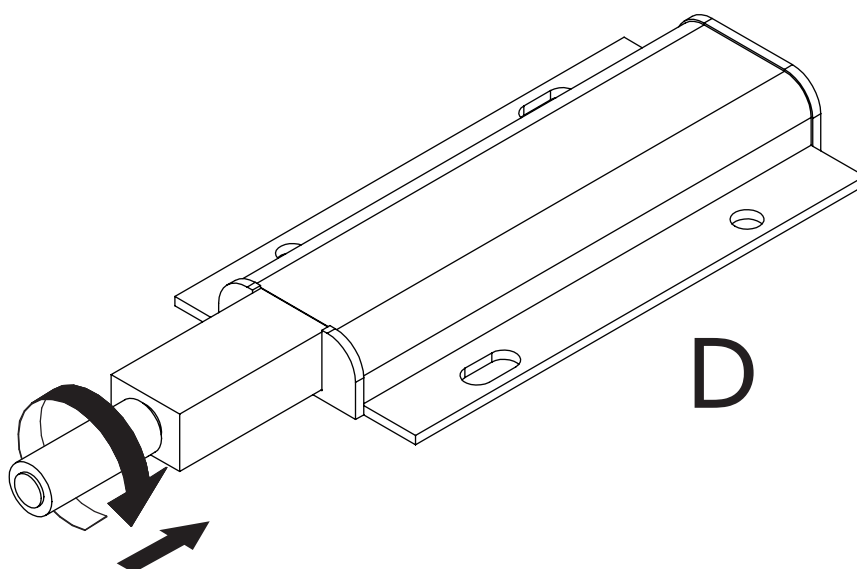


29

 Power plug x 1



 Connect the power cable with light connectors.

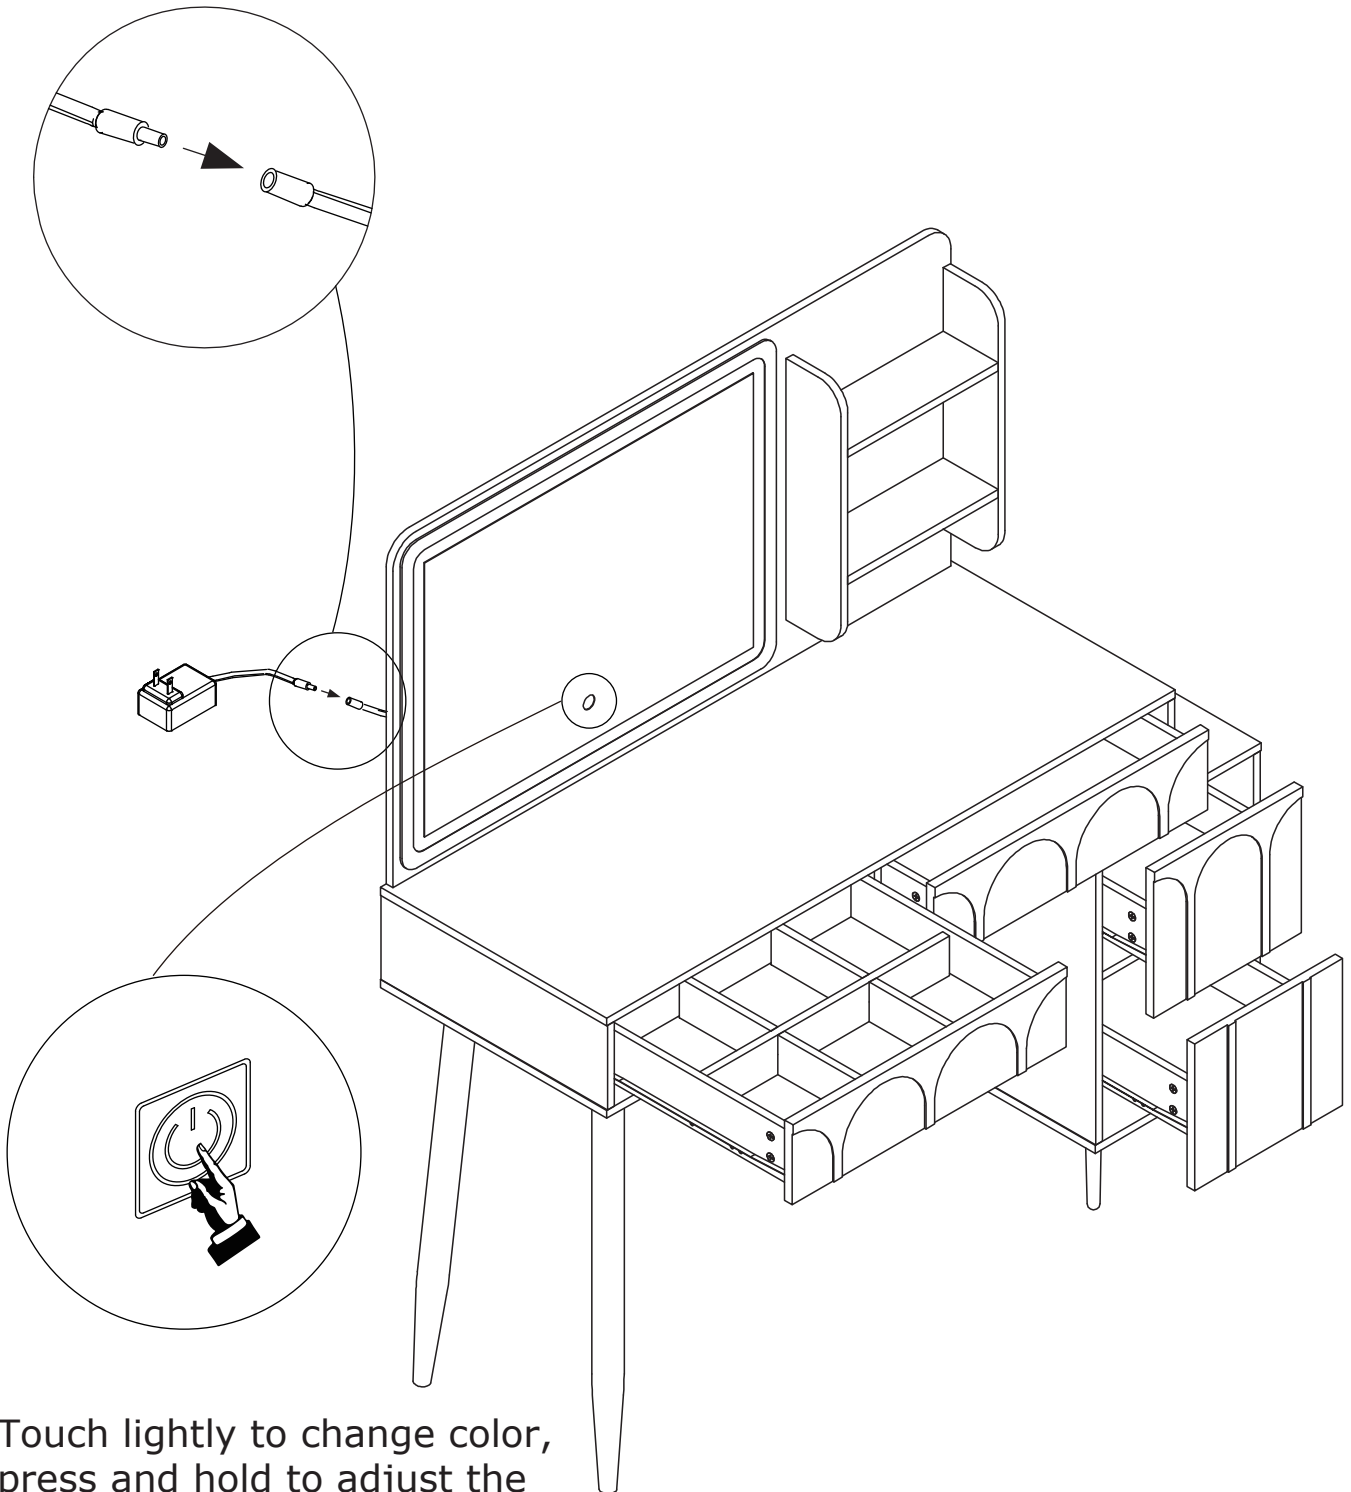

Touch lightly to change color,
press and hold to adjust the
brightness.

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387