
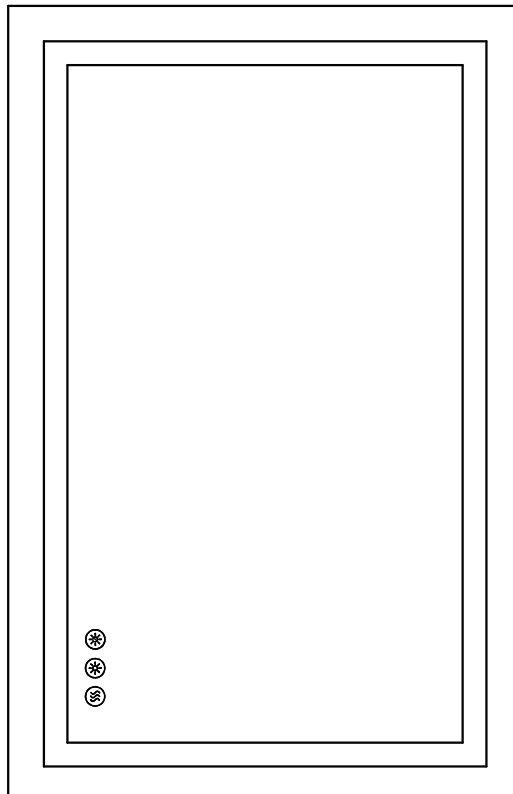


INSTALLATION INSTRUCTIONS

DeerValley®

LED Bathroom Mirror

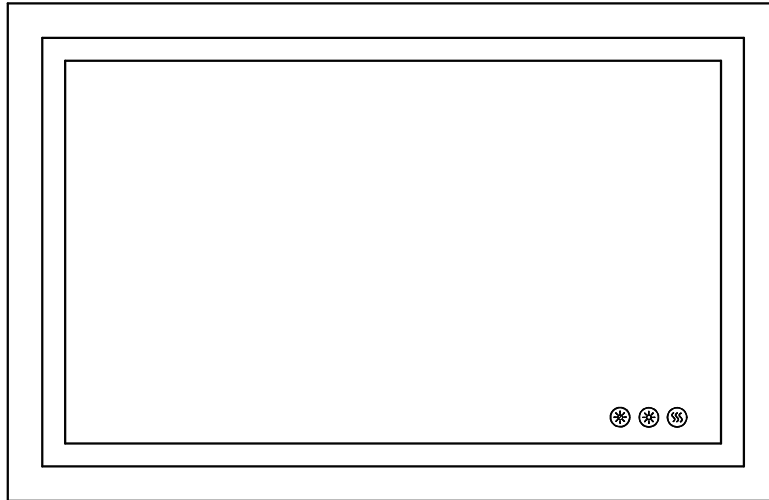

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation steps. Follow the relevant sections for your specific installation to avoid costly mistakes. In addition to proper installation, make sure to review all operating and safety instructions.
- These instructions contain important information on care, cleaning, and warranty. Please leave them with the consumer.
- Before installation, carefully inspect the fixture for any signs of damage.

 **WARNING: Risk of injury or product damage.**

 **WARNING:** Do not use acidic, alkaline cleaners, or alcohol to clean the surface. Use a damp cloth for cleaning.

 **CAUTION: Risk of electric shock.** Electrical wiring may need to be relocated.

 **Important Information:**
Check the wall cavity for obstructions.

Grounding Instructions:

This product must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an alternate path for the electric current.

 **WARNING: Risk of electric shock.** Improper use of the grounding plug may result in electric shock.

- If repair or replacement is needed, it must be performed by qualified maintenance personnel.
- This product is equipped with a specific electric cord. If it needs to be reconnected to a different type of electrical circuit, the connection should be made by qualified service personnel.

**If you have any questions or concerns
please contact us at:**

(+1) 312-626-9466
service@deervalleybath.com

Triple Touch Switch

Key 1: Backlight Control

- To turn the light on or off: Tap the switch on the bathroom mirror with your finger.
- To change the light color: Tap the switch again.
- To adjust the light brightness: Touch and hold the switch for more than 5 seconds.

Key 2: Front Light Control

- To turn the light on or off: Tap the switch on the bathroom mirror with your finger.
- To change the light color: Tap the switch again.
- To adjust the light brightness: Touch and hold the switch for more than 5 seconds.

Key 3: Fog Removal Function

- Tap to activate the fog removal function.



Required Tools (Not Included)



Electric Drill



 
Drilling Bit
(Ø 8mm / 0.31 inches)



Tape



Pencil



Spirit Level

Supplied Spare Parts



Connecting Terminals x3



Wall Plug x3



Screws x3



Hangers x1

ELECTRICAL SAFETY INSTRUCTIONS

All connections must be installed by a licensed electrician in accordance with current building codes. Consult a qualified electrician.



INSTALLATION CARE & SAFETY

- Wear suitable eye protection when drilling.
- Take care when using power tools.
- Be cautious of hidden cables or pipes.
- Exercise caution when drilling on tiled surfaces to prevent drill slippage.
- Apply a piece of masking tape to the wall before marking out fixing holes to prevent the drill from wandering.


IMPORTANT

- Do not strike glass components with hard or pointed items.
- Do not place very hot or very cold items against or near glass surfaces unless adequately thick insulation material is used to prevent contact with the glass.
- If the glass becomes chipped or broken, replace it immediately.


1. Remove the product from the packaging and take out the hanging bracket. (Note: the product can be hung horizontally or vertically).

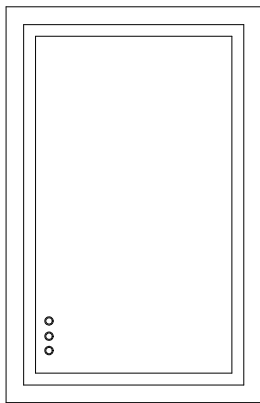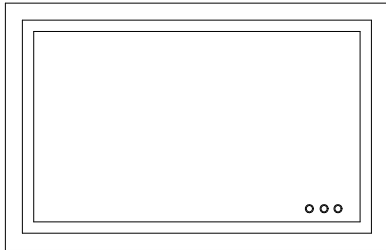


2. Align the hanging bracket on the wall in the desired position, then mark the drilling points.

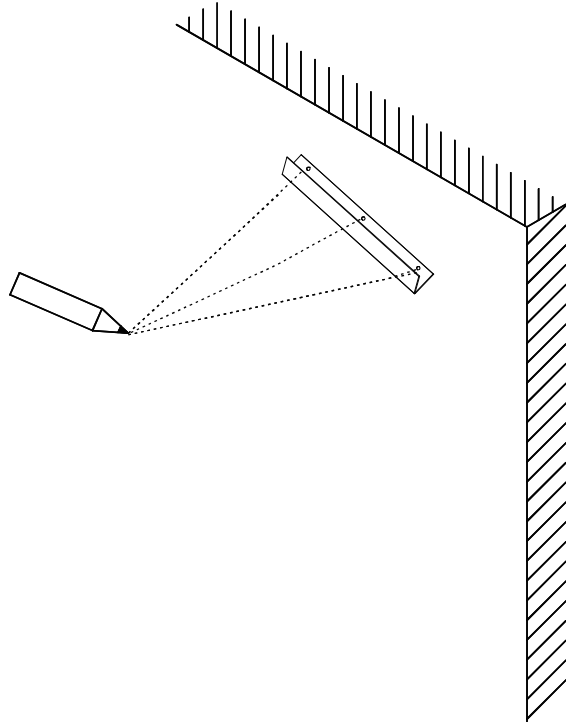

3. Drill the marked holes and insert wall plugs.

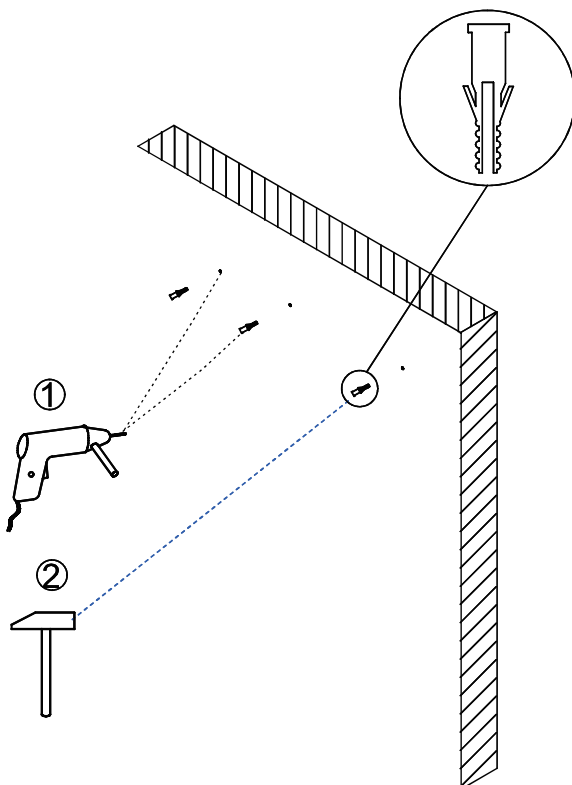


4. Screw the hanging bracket into the wall using screws, and adjust it with a spirit level to ensure it is straight.

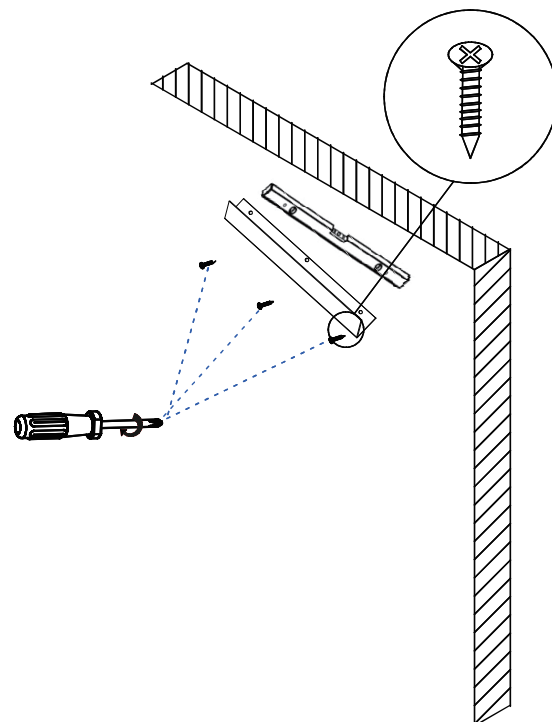


Using Plug

5-1. Insert the plug directly into the standard socket and hang the mirror on the bracket (pay attention to electrical safety).

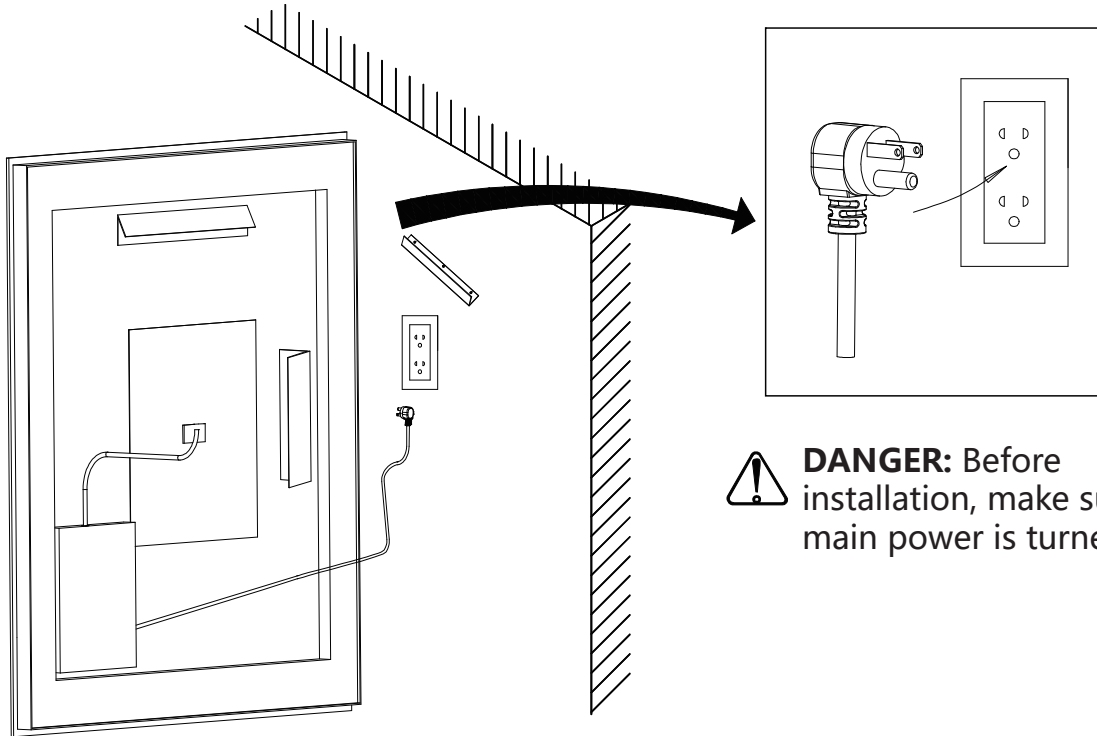


6. Place the mirror against the wall, align the hook with the bracket slot, and slowly lower it so that the hook fits into the slot. Gently shake the mirror to ensure it is securely installed.

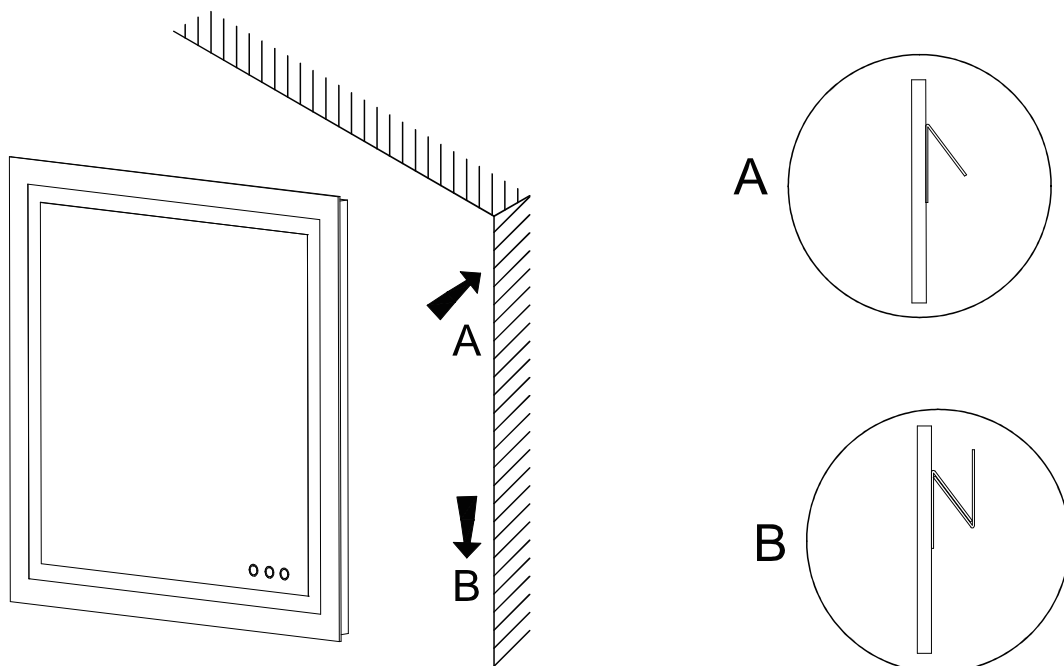


Hardwiring Connection

5-2. Cut the plug and connect the mirror's wire to the power using wire connectors.

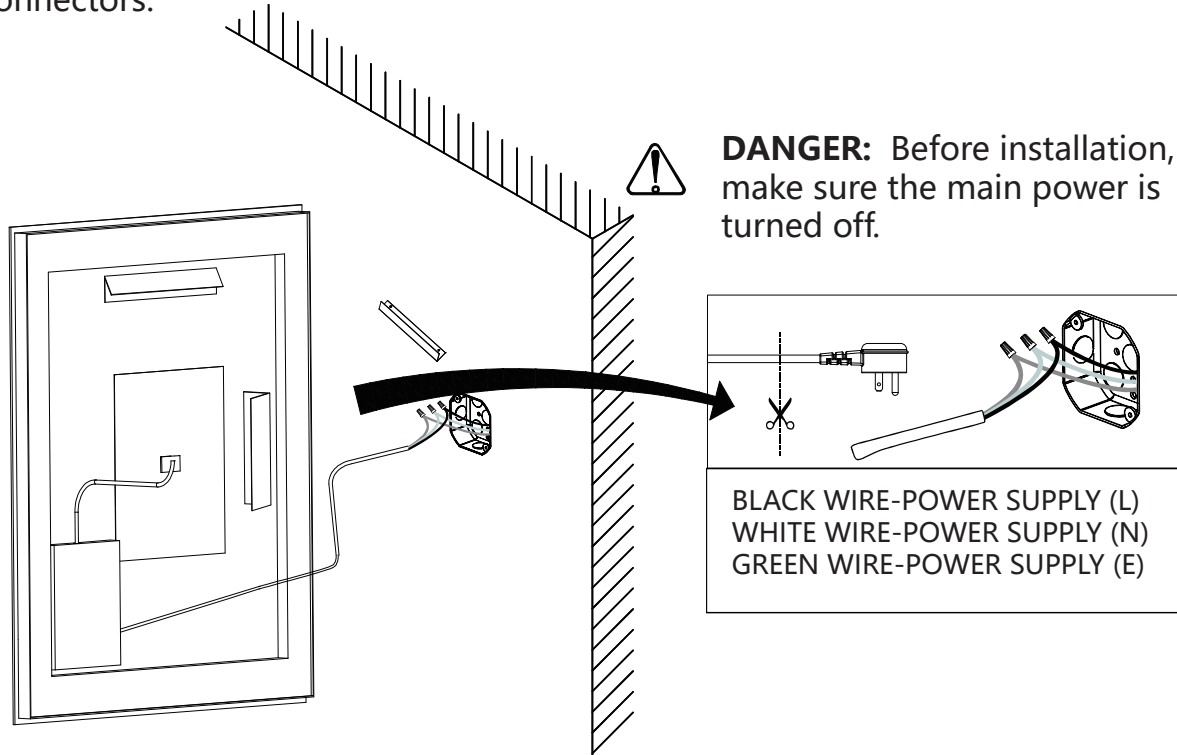

6. Place the mirror against the wall, align the hook with the bracket slot, and slowly lower the mirror so that the hook fits into the slot. Gently shake the mirror to ensure it is securely installed.

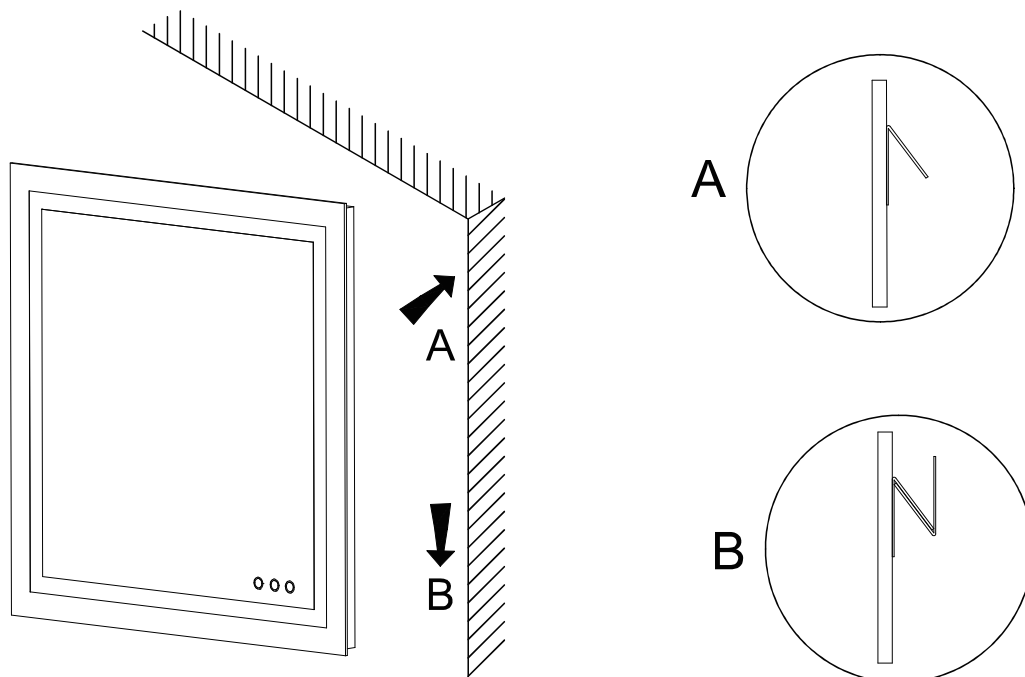

LIMITED WARRANTY COVERAGE

1-YEAR LIMITED WARRANTY

DeerValley products are made with quality materials and excellent craftsmanship to provide customers with a long-lasting product. If any defects in materials or craftsmanship are found under normal use within the first year of delivery, DeerValley will provide replacement parts at no charge or, at its option, replace any product or part of the product deemed defective under normal installation, use, service, and maintenance. This warranty applies only to the original purchaser. Proof of purchase will be required to process any claims. **SCRATCHES ARE NOT COVERED UNDER WARRANTY.**

The manufacturer warrants that this product will be free from manufacturing defects for the duration of the above-mentioned warranty period. Please retain a copy of the original invoice as proof of purchase.

DeerValley will, at its option, (1) repair or replace the defective part(s) or product(s) at no charge; (2) issue a refund for the original purchase price of the product(s) (valid within 30 days from the date of delivery); or (3) issue a credit to be applied toward the purchase of a new DeerValley product. Shipping/delivery charges may apply and are at DeerValley's sole discretion.

DeerValley recommends that installations be performed by a licensed, professional plumber. DeerValley will not be held responsible for any damage or product failure resulting from improper installation, misuse, or failure to hire a licensed professional. Additionally, DeerValley is not responsible for any removal or installation costs.

This limited warranty does not cover goods that have been subjected to accidents, negligence, improper installation, product abuse, product misuse, or the use of cleaners containing abrasives, alcohol, or other organic solvents. Such exclusions apply regardless of whether the actions were performed by a contractor, service company, or the purchaser.

DeerValley's responsibility under this limited warranty is limited solely to the replacement of parts and does not cover any other costs. DeerValley will not be responsible for labor charges or any damage incurred during installation, repair, or replacement, nor for any indirect, incidental, or consequential damages, losses, injuries, or costs of any kind related to this product. Except as required by law, this limited warranty replaces and excludes all other warranties, conditions, and guarantees, whether expressed or implied, statutory or otherwise, including but not limited to those regarding merchantability or fitness for a particular purpose.

RESPONSIBILITIES OF OTHERS

It is the responsibility of the installer or building contractor, acting on behalf of the user, to inspect the unit prior to installation. They are responsible for ensuring that the unit is free from defects or damage.

Notices are placed on and within the unit, as well as on the shipping carton, to inform the installer of their responsibility.

If a problem is identified, the unit must not be installed. DeerValley is not responsible for failures or damage that could have been identified, repaired, or prevented through proper inspection and testing prior to installation.

Damage occurring during transit is the responsibility of the carrier. The user or installer must open the crate and inspect the unit for damage upon delivery. If damage is discovered, it must be reported immediately to the seller and the carrier in writing, and an inspection must be requested. If the carrier fails to respond, the issue should be reported to both the seller and the carrier. Freight claims should be filed promptly thereafter.

LIMITATIONS AND EXCLUSIONS

This warranty does not cover negligence, misuse, abuse, improper installation, carelessness, accidents, hard water or mineral deposits, exposure to corrosive materials, misapplication, damages resulting from improper maintenance, alteration of the product, or failure to follow the care or installation instructions provided with your product. The warranty becomes void if the DeerValley product is altered or if repairs are attempted using unauthorized accessories or parts not provided by DeerValley.

DeerValley is not liable for the loss of use of its products, inconvenience, or any other incidental or consequential costs, expenses, or damages. Please note that some states do not allow the exclusion or limitation of incidental damages.

DISCLAIMER

Except as expressly stated, no warranties or obligations, whether express, implied, oral, or statutory, are provided. No dealer or other individual has the authority to make any warranties or representations regarding DeerValley or its products. DeerValley shall not be held responsible for any such unauthorized warranties or representations.

WARRANTY SERVICE

NOTE: When requesting warranty service, please ensure you have the following:

- A copy of the original invoice
- Date of installation
- Description and pictures of the defect
- Model number or product description

To obtain warranty service or replacement parts, contact DeerValley Customer Service. DeerValley will determine whether to repair or replace the product, issue a refund, or provide a credit.