

ITEM # AIRMOVER

3-SPEED UTILITY AIR BLOWER



READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

**IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE,
DO NOT OPERATE THIS PRODUCT!**

CALL US FIRST FOR HELP!

If you experience a problem, have questions or need parts for this product, call Customer Service at 1-636-532-9888, Monday-Friday, 8 AM - 4 PM Central Time. A copy of the sales receipt is required.

**FOR CONSUMER USE ONLY – NOT FOR PROFESSIONAL USE.
KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE
REFERENCE.**

ITEM # AIRMOVER

FEATURES:

AIRMOVER is intended to move air and to dry small areas where the large air mover is not applicable such as crawl spaces, inside cabinets, under counters, inside ceilings, basements, etc. AIRMOVER can also be used as high velocity fan for household use.

- 3-Speed Settings: 1550 / 1300 / 1120 RPM
- Max air volume: 900 CFM
- 1/3 HP
- Two 115V outlets / 2 AMP
- Daisy chain up to 5 units
- 10 ft. power cord
- Low power draw with high velocity air flow
- Easy carrying handle and stackable up to 4 units high
- Easy and quick to disassemble for thorough cleaning and service
- Easy cord wrap on handle
- 3-speed switch
- 4 air flow positions (0°, 20° Kickstand, 45° and 90°)
- Create a powerful air flow to dry carpet and floors



IMPORTANT SAFETY INSTRUCTIONS

STOP!

Before using this product, if you have any questions regarding the hazard and safety notices listed in this manual and/or on this product, call 1-636-532-9888, Monday - Friday, 8 AM - 4 PM Central Time.

⚠ WARNING

Usage: Avoid the use of extension cords if possible. If you choose to use them, be sure they are sized adequately to handle the flow of electricity. An undersized cord can overheat, short out and cause a fire.



NOTE:

1. To prevent electric shock, do not operate the unit in standing water. Never plug in or unplug the unit with wet hands or while standing in water.
2. To avoid risk of injury, do not direct air flow at face or body.
3. To reduce the risk of fire or electric shock, do not use AIRMOVER with any solid-state speed control device.
4. Use only with GFCI protected receptacles.
5. Do not operate AIRMOVER with a damaged cord or plug.
6. Unplug AIRMOVER from the power supply before servicing or cleaning.
7. Do not run the power cord under carpeting. Do not cover the power cord with throw rugs, runners, or similar coverings. Place the power cord away from traffic area to prevent tripping.
8. Do not allow children to play with or around AIRMOVER at any time.
9. Do not move or carry the AIRMOVER while unit is operating.
10. Only use AIRMOVER units together in the daisy chain.
11. AIRMOVER has an on-board circuit breaker. If the auxiliary outlet overloads, the circuit breaker will trip. If the breaker trips. unplug the units and press the circuit breaker reset button. Plug the units back into the power source and turn on the switch.

USAGE


Stackable up to 4 high

- A. Plug the electrical cord into the 3-prong GFCI outlet.
 - B. Carefully place AIRMOVER unit on a stable, flat dry surface.
 - C. The unit is capable to be used at 4 different angles to direct air flow.
 - D. Turn the power switch to desired speed and make sure unit operates normally.
- NOTE: AIRMOVERs, when in operation, must be supervised at all times.

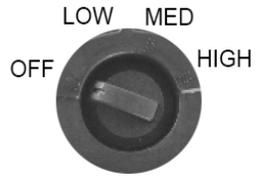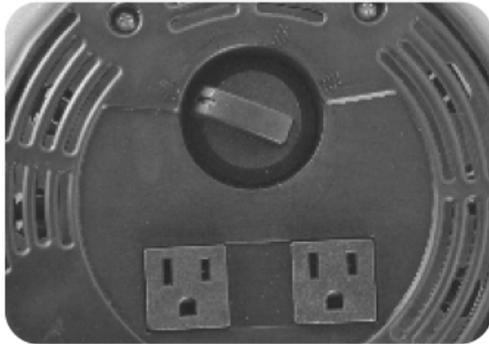

Power Switch offers 3 speed settings

Daisy chain up to 5 units

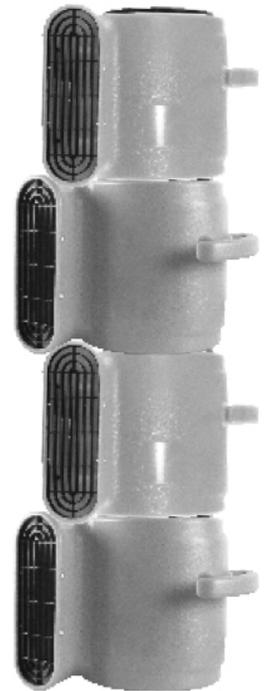

4 Airflow positions

0°



20°



45°



90°



MAINTENANCE INSTRUCTIONS


1. To keep AIRMOVER clean, use a damp cloth to wipe the surface of the housing.
2. Never clean AIRMOVER with water.
3. When not in use, unplug and store Mini Air Mover in a dry indoor place out of reach of children.
4. Always disconnect AIRMOVER from its power source before performing any maintenance or cleaning.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Air Mover not running	No power input	Plug in the Air Mover; check circuit breaker
	Switch not turned on	Turn on switch
	Air Mover fan wheel jammed	Remove material jamming fan wheel
	Intake or exhaust blocked	Turn unit off and allow to cool, then remove blockage
Air Mover vibrates	Accumulation of dirt on fan blades	Clean Air Mover fan blades

PARTS DIAGRAM

Item No.	Parts Name	Item No.	Parts Name
1	screw	2	on/off rocker switch, blk
3	on/off rocker switch, cap	4	strain relief-lq tight
5	power cord	6	nut, hex
7	front guard	8	AC motor
9	housing - blower	10	rubber foot
11	blower wheel, cage	12	kickstand
13	Socket	14	Circuit breaker

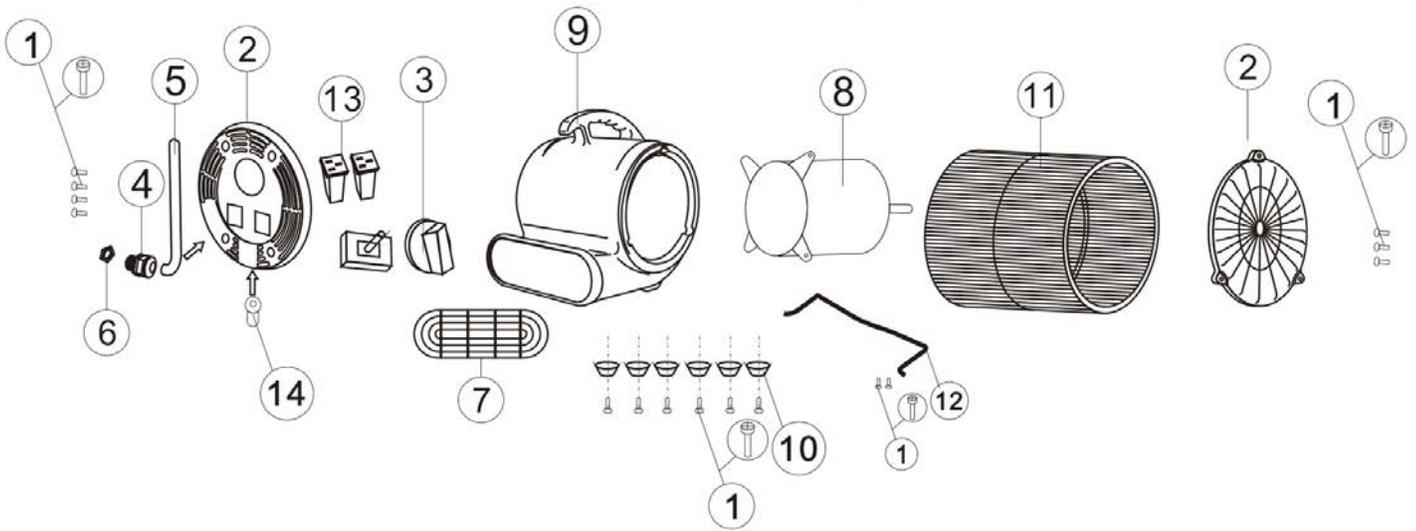

201806