 
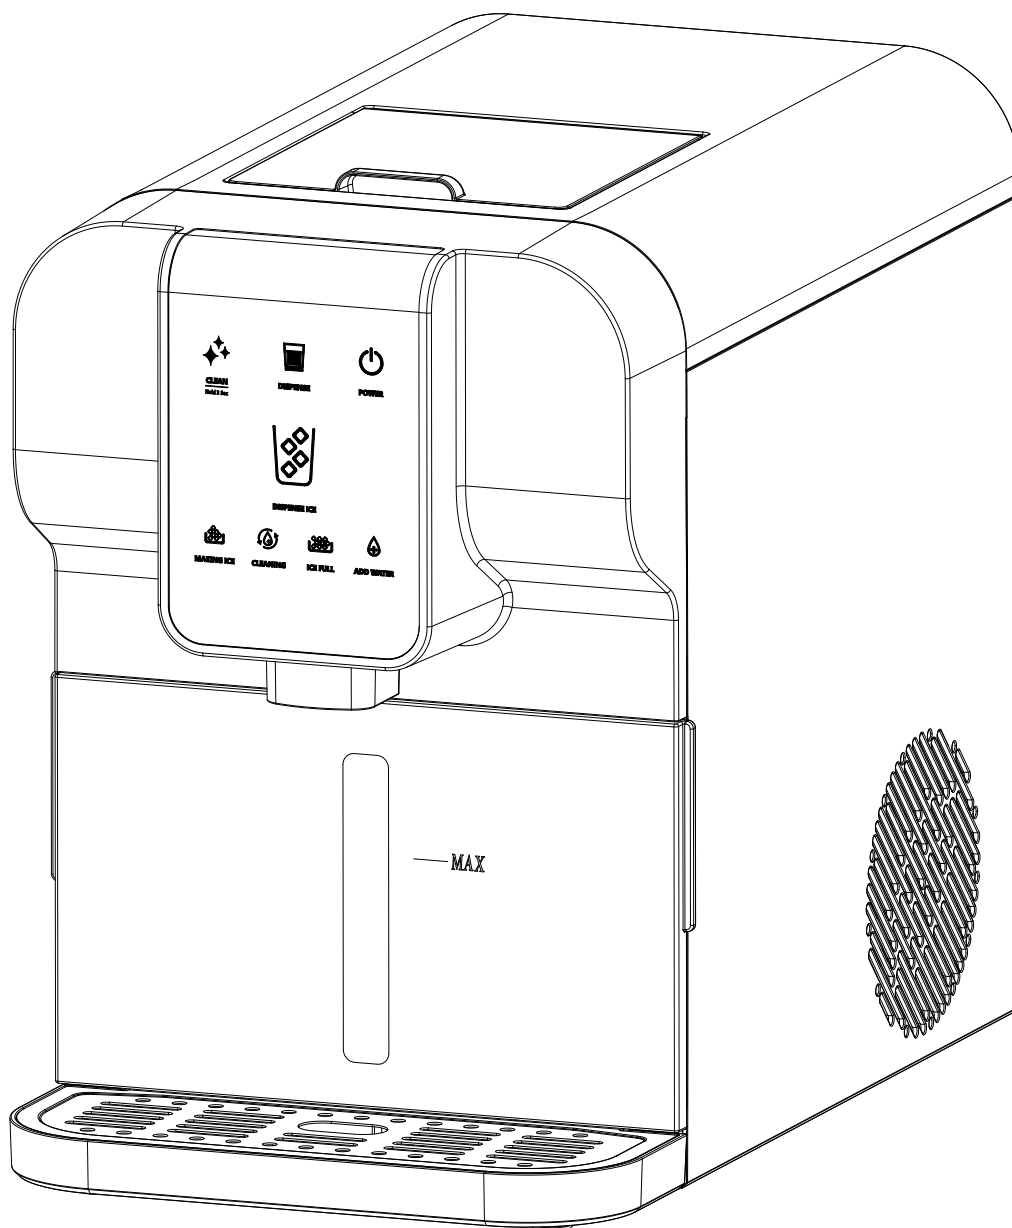 


Ice Maker

Instruction Manual

SKU: IM029-NBL-USZX

model: IM029-N

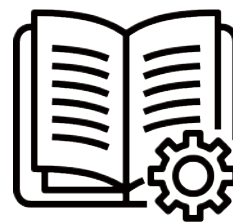

For Customer Service Support

 1-833-632-0897

 support @homyd.com

Dear Customer:

Welcome to our family. Thank you for purchasing one of our products.

Here's how we support you.

Our goal is to provide you with superior service. If your appliance isn't working properly or if you need any assistance, we offer several ways for you to get in touch with us.

You can reach us by emailing **support@homyd.com** directly.

For specific product categories, we also offer potential upgrades to enhance your warranty to our VIP service.

we normally respond to emails and forms within **24 business hours**. If you reach out via email, sometimes our emails might end up in your spam folder, so please check there to make sure you don't miss our response. The proof of purchase will be needed when you request a warranty service.

In addition to our one-year warranty, we offer lifetime technical support. After the warranty expires, you can arrange for service at an additional cost.

Feel free to contact us anytime with any issues.

Our mission:

- * To be the most trusted appliance brand.
- * To create practical, compact appliances that better your life.

Contents

Important Safety Instructions	01
Know Your Ice Maker	04
Before First Use	06
Cleaning And Maintenance	08
Troubleshooting	09
Warranty	12

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, explosion, electric shock, or injury when using your ice maker, follow these important safety instructions:

1. Before using, check and make sure that the voltage and power correspond to the ones shown on the appliance nameplate.
2. Do not remove any safety, warning, or product information labels from your ice maker.
3. Plug the ice maker into an exclusive grounded outlet. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the receptacle.
4. This appliance must be grounded. It is equipped with a cord having a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.
5. Avoid the use of an extension cord because it may overheat and cause a risk of fire. However, if it is necessary to use an extension cord:
 - (1) Use only extension cords with grounding plug.
 - (2) The marked rating of an extension cord must be equal to or greater than the rating of this appliance.
 - (3) It should be positioned such that it does not drape over the counter or tabletop where it can be pulled on by children intentionally.
6. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.



Warning; Risk of fire/flammable materials

9. **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.



Warning; Risk of fire/flammable materials

10. Do not let cord hang over edge of table or counter.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.

12. Place power cord in such a way it cannot be pulled on by children or cause a tripping hazard.
13. Place power cord in such a way that it is not in contact with hot surfaces.
14. The use of attachment not recommended or sold by manufacturer may cause fire, electric shock or injury.
15. Do not touch the ice-making parts when using the ice maker or making ice to avoid being suffer from frostbite.
16. Do not immerse any part of the product in water.
17. To disconnect, turn any control to “OFF”, then remove plug from wall outlet.
18. Do not plug or unplug the product with wet hands.
19. Unplug the product before cleaning, maintaining and when not in use.
20. Do not use with water that is micro biologically unsafe or of unknown quality.
21. Do not clean your ice maker with any flammable fluids. The fumes may create a fire hazard or explosion.
22. Do not overturn the ice maker. If the ice maker is overturned accidentally, make it stand steadily for 2 hours before power it on again.
23. If the ice maker is brought in from outside in wintertime, do not use for a few hours, allowing the unit to warm up to the room temperature before operating.
24. Never put flammable, explosive and corrosive articles into the ice maker.
25. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
26. Never use the ice maker when there is flammable gas leakage.
27. Never store or use gas and other flammable articles near the ice maker to avoid any fire.
28. Unplug the ice maker before moving it to avoid damaging the refrigerating system.
29. Do not attempt to disassemble, repair, modify, or replace any part of your product.
30. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
31. Children should be supervised to ensure that they do not play with the appliance.
32. Close supervision is necessary when any appliance is used by or near children.
33. Do not leave the appliance unattended while in use.

34. Do not use the appliance for other than intended use.
35. Do not use outdoors.
36. **WARNING:** Risk of fire/flammable materials
37. Please abandon the ice maker according to the local regulations as it uses flammable blowing gas and refrigerant.
38. Please dispose of the flammable refrigerant and blowing gas used in the appliance according to the local regulations.
39. **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
40. **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
41. **WARNING:** Do not damage the refrigerant circuit.
42. **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
43. Cautionary statements concerning the handling, moving and use of the refrigerator or freezer to avoid either damaging the refrigerant tubing, or increasing the risk of a leak: the appliance shall be handled with care and shall not be moved or installed violently.
44. Component parts such as compressor, condenser, motor and copper pipe etc. shall be replaced with like components and that servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.
45. It is declares that the conformity to the applicable provisions of applicable US Federal requirements, including 21 CFR, Chapter 1, Subchapter J, Radiological Health.
46. The appliance must be powered off before the maintenance is performed to prevent the service personnel from being subject to electric shock.
47. **WARNING:** Never pour colored drinks or porridge-like drinks into the machine.
48. **DANGER** - Risk of fire or explosion. Flammable refrigerant used. Do not use mechanical devices to defrost refrigerator. Do not puncture refrigerant tubing, follow handling instructions carefully.
49. **DANGER**- Risk of fire or explosion. Flammable refrigerant used. To be repaired only by trained service personnel. Use only manufacturer-authorized service parts. Any repair equipment used must be designed for flammable refrigerants. Follow all manufacturer repair instructions. Do not puncture refrigerant tubing.

50. **CAUTION** - Risk of fire or explosion. Dispose of refrigerator properly in accordance with the applicable federal or local regulations. Flammable refrigerant used.

51. This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

KNOW YOUR ICE MAKER

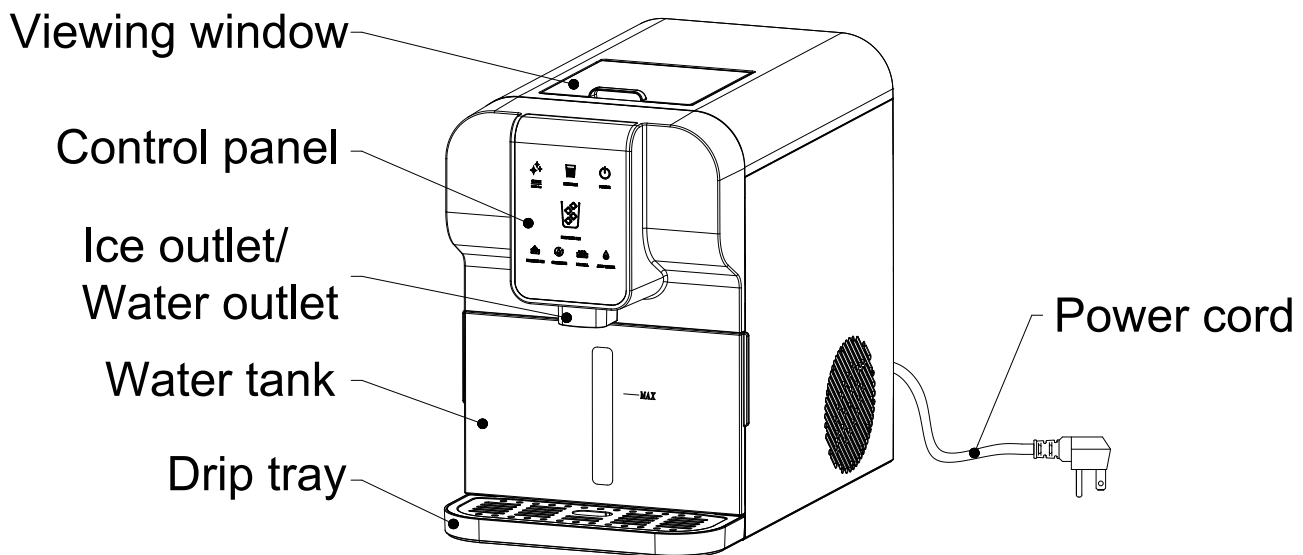 


Fig.1

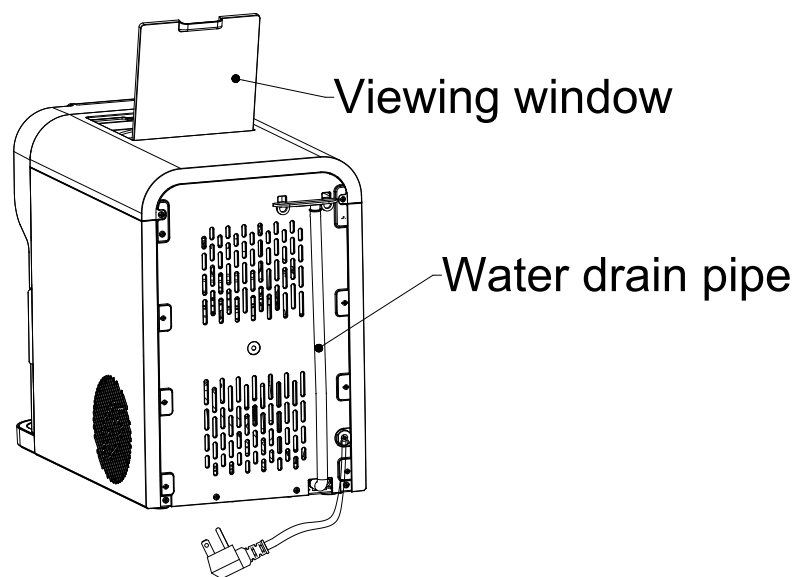 


Fig.2

CONTROL PANEL



Indicator	Status and Description
 Power button indicator	Illuminates solidly: Ice-making mode or Clean mode Extinguishes: Standby mode
 Dispense water button indicator	Illuminates solidly: Water is dispensing.
 Clean button indicator	Illuminates solidly: Clean mode Flashes: Need to perform cleaning
 Dispense ice button indicator	Illuminates solidly: Ice is dispensing
 Making ice indicator	Illuminates solidly: Ice-making mode Flashes: Defrost mode
 Cleaning indicator	Illuminates solidly: Clean mode Flashes: Need to perform cleaning
 Ice full indicator	Illuminates solidly: Ice is full
 Add water indicator	Illuminates solidly: The water tank is lack of water. Flashes: The water tank is not installed well in place or there is no water tank be placed.

BEFORE FIRST USE

1. Unpack the appliance, then check and make sure that all the accessories are complete. Please contact with the client service department if some accessories are missed.
2. Please ensure the ice maker is placed on a level and stable table or platform to avoid malfunction.
3. The incline angle of the ice maker cabinet should not exceed 45° during transportation or use. Do not turn the ice maker upside down. Doing so could cause the compressor or refrigerating system to operate incorrectly. Please allow time for the fluids in the compressor to settle after the ice maker is moved or transported. Before using the ice maker for the first time, please wait for 2 hours after the unit has been leveled and positioned in the proper place.
4. The appliance must be placed on a dry and level surface with sufficient ventilation, far from heat sources such as ovens, heaters and corrosive gases. Leave a clearance of 15cm on all sides of the ice maker for proper ventilation.
5. Do not fill the water tank with hot water. This may damage the ice maker. It is best to fill the water tank with water of room temperature or lower.
WARNING: Fill with potable water only.
6. Do not use the appliance at a very cold environment (lower than 5°C).
7. Clean the appliance by following the operation of “**CLEANING AND MAINTENANCE**” before operate.

USING YOUR ICE MAKER

1. Ensure that the plug of water drain pipe at the back of ice maker is closed well.
2. Plug the ice maker into the wall outlet, one beep can be heard, all the indicators illuminate for 1 second and then extinguish, and the appliance enters into the standby mode.

NOTE: Please make the ice maker rest for 30 minutes before plugging in if it has been moved.

3. Pull the water tank out of the main body and fill the watertank with water.

NOTE: The water level shall not exceed the MAX mark.

4. Replace the water tank well in position. One ticking sound can be heard after the water tank is installed well in position.

5. Hold and press the Power button “” for about 3 seconds, one beep is heard, and then release the Power button, the Power button indicator “” and the Making ice indicator illuminate solidly, and the appliance enters into the ice-making mode.

6. The ice-making cycle will last approximately 15-25 minutes, depending on the ambient temperature and water temperature.

7. When need to dispense ice, put a ice-holding container in the middle of the drip tray, then hold and press the Dispense ice button “”, and then the ice dispenses out of the ice outlet and drops into the ice-holding container. Release the Dispense ice button “” to stop dispensing ice.

8. When need to dispense water, put a ice-holding container in the middle of the drip tray, then shortly press the Dispense water button “”, and then the water dispenses out of the water outlet and drops into the ice-holding container. Press the Dispense water button “” again to stop dispensing water.

9. The appliance will make ice automatically. When the ice storage chamber is full, the Ice full indicator “” will illuminate solidly and the appliance will stop making ice automatically.

10. When the Add water indicator “” illuminates, refill the water tank with water and then replace the water tank well in position.

11. It is suggested that the water should be replaced once a week. And please empty the water tank if the ice maker will not be used for a long time.

12. When the Clean button indicator “” and the Cleaning indicator “” illuminate solidly, it means that the ice maker needs to be cleaned. After performing cleaning, simultaneously hold and press the Clean button “” and the Power button “” for 3 seconds, then the Clean button indicator “” and the Cleaning indicator “” turn off.

13. After each use, follow the operation as below to empty the water in the drip tray: Grasp the water tray with both hands and pull it out, and then remove the metal baffle to empty the water. After it, replace the drip tray well in position.

14. During the operation of the appliance, please do not remove the water tank randomly

when the water tank has enough water so as to prevent the water from the cleaning process and the ice-melting process from flowing back to the outside of the appliance.

15. When the appliance is used for the first time, fill the water tank with 1L of water. Firstly hold and press the Power button  for about 3 seconds, one beep is heard, and then release the Power button, and the appliance enters the ice-making mode. Then hold and press the Clean button  for 3 seconds to make the appliance enter into the clean mode. After the cleaning is completed, the appliance enters the ice-making mode directly, at that time, please turn off the appliance, empty the water inside the appliance and refill the appliance with water for normal ice-making operation.

16. When the appliance is powered on, it is normal that some noise is produced when removing the water tank, that is because the water pump is working, and this phenomenon will disappear after 3 seconds.

CLEANING AND MAINTENANCE

To keep the ice fresh and the ice maker in good condition, we recommend cleaning your ice maker once per week.

1. Remove the water tank and clean it well.

2. Add the water and cleaning agent in the water tank, firstly hold and press the Power button  for about 3 seconds, one beep is heard, and then release the Power button, and the appliance enters the ice-making mode. Then hold and press the Clean button  for about 3 seconds, the Clean button indicator  and the Cleaning indicator  illuminate while the Making ice indicator  extinguishes, and the appliance enters the clean mode. After cleaning for 5 minutes, the appliance stops cleaning, the Clean button indicator  and the Cleaning indicator  extinguish while the Making ice indicator  illuminates solidly, and the appliance enters the ice-making mode. At that time, please turn off the appliance.

3. Remove the water drain pipe and place it on a sink. Open the plug of the water drain pipe to let the dirty water flow out of the pipe until the water inside the appliance is emptied.

4. Close the plug of the water drain pipe and refill the water tank with water. Firstly hold and press the Power button  for about 3 seconds, one beep is heard, and then release the Power button, and the appliance enters the ice-making mode. Then hold and press the Clean button  for about 3 seconds again, the Clean button indicator  and the Cleaning indicator  illuminate solidly, and the appliance enters into the clean mode. After cleaning for 5 minutes, the appliance stops cleaning, the Clean button indicator  and the Cleaning indicator  extinguish while the Making ice indicator  illuminates solidly, and the appliance enters the ice-making mode. At that time, please turn off the appliance.

5. After the cleaning agent is rinsed, repeat the operation of Step 3.
6. Clean the inside of appliance with a piece of soft cloth soaked with warm water and vinegar.
7. Close the plug of the water drain pipe and then fix the plug of water drain pipe at the fixing groove at the back of appliance.
8. Clean the exterior of the ice maker with a soft damp cloth. Use a mild dishwashing soap, if necessary.

NOTE: Do not use organic solvent, boiled water, strong acid and strong alkali etc. for cleaning.

9. Please empty the water tank and dry it for storage if the ice maker will be not used for a long time.

TROUBLESHOOTING

Problem	Possible causes	Solution
 ADD WATER Add water indicator illuminates solidly	1. Be lack of water. 2. The water filter at the bottom of water tank is blocked. 3. Pump malfunction. 4. The water tank is not installed well in position.	1. Refill the water tank with water and then insert the water tank well in place to restart the ice-making cycle. If the above operation does not work, the water level sensor may be damaged, please send it to the authorized department for repair. 2. Remove the filter in the water tank for cleaning 3. Send it to the authorized department for repair. 4. Wipe off the water on the outer surface of the water tank and the water on the surface of the water level sensor.

 ADD WATER Add water indicator flashes	The water tank is not installed well in place or there is no water tank be placed.	Install the water tank well in position.
 ICE FULL Ice full indicator illuminates	1. The ice storage chamber is full. 2. Malfunction of infrared ray.	1. Remove the ice from the ice storage chamber and then press the Power button “” to restart the ice-making cycle. 2. The sensor is damaged, please send it to the authorized department for repair.
 MAKING ICE Making ice indicator flashes	The ice-making assembly is frozen.	No need to deal with it. Under this condition, let the appliance defrost automatically for about 30 minutes, and then the appliance will conduct judging again and it will work normally again after 45 minutes.
The appliance does not produce ice or only produces little ice.	1. Poor heat dissipation. 2. The water temperature is too high. 3. The ambient temperature is too high. 4. The ice-making system is abnormal.	1. Leave a clearance of 15cm at the air outlet for proper ventilation. 2. Fill the water tank with water ranges between 8°C and 28°C 3. Operate the ice maker at a environment with an ambient temperature between 10°C and 32°C. 4. Call customer service.
The ice dispenses slowly or no ice is dispensed.	1. The ice is blocked at the ice outlet. 2. The failure of	1. Release the Dispense ice button “” to stop dispensing ice, after about 3 seconds, press

	transmission mechanism.	the Dispense ice button “” again to dispense ice. 2. Do not press the Dispense ice button “”, open the viewing window after the rotating disc stops running completely, and then use a tool to loosen the ice if the ice is clumped. 3. The transmission mechanism is damaged, please send it to the authorized department for repair.
--	-------------------------	---

TECHNICAL PARAMETERS

Model:	IM029-NBL-USZX
Class:	I
Power source:	120V/60Hz
Rated power:	170W
Refrigerant/Refrigerant amount:	R600a / 16g
Foaming agent:	C ₅ H ₁₀
Net weight:	16.5kg
Housing:	ABS
Unit size (D×W×H):	490*282*420mm

WARRANTY

We offers a limited 1-year warranty ("warranty period") on all of our products purchased new and unused from our company, with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts, or workmanship during the warranty period. The warranty does not apply where damage is caused by other factors, including without limitation:

- (a) normal wear and tear.
- (b) abuse, mishandling, accident, or failure to follow operating instructions;
- (c) exposure to liquid or infiltration of foreign particles;
- (d) servicing or modifications of the product;
- (e) commercial or non-household use.

The warranty covers all costs related to restoring the proven defective product through repair or replacement of any defective part and necessary labor so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product. Our exclusive obligation under this warranty is limited to such repair or replacement. A receipt indicating the purchase date is required for any claim, so please keep all receipts in a safe place. Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase. The warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by our, are used. You may also arrange for service after the warranty expires at an additional cost. These are our general terms for warranty service, but we always urge our customers to reach out to us with any issue regardless of warranty terms. If you have an issue with a product, please contact us (support@homyd.com), and we will do our best to resolve it for you.

SKU: IM029-NBL-USZX

model: IM029-N

