
### **TOOLS REQUIRED**



Allen Wrench

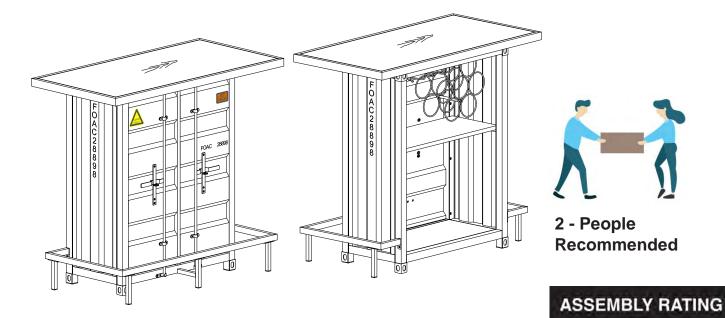

## $\mathbf{OOO} \odot \odot$

EASY DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



_		

#### Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.



#### Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

#### **Check out our Quick Tips!**

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

#### **Prep Time!**

 
Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

# **PRE ASSEMBLY** INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

















# **Avoid Scratches**

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

#### **Flat Surface**

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

### ALWAYS have at least two people

Teamwork

to help with transporting and assembling the product to avoid potential injury and/or damage.

#### Suitable Location

Assembling near the area of the intended location is highly recommended.

#### **Sufficient Space**

Make sure you have enough space to move around during the assembly.

# ASSEMBLY AND CARE ADVICE

 


FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.







Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

# BAR TABLE


			777 33
future refe • Check the irregularity	ep instructions for erence. e quantity and y of parts and before you start.		
	PAR	$\frown$	
(#1) 1pc	(#2) 1pc	(#3) 2pcs	(#4) 1pc
Front Panel	Back Frame	Side Panel	Тор
(#5) 1pc	(#6) 1pc	(#7) 2pcs	(#8) 1pc
		E	
Cup Hanger	Small Frame	Wine Rack	Connect Tube
(#9) 1pc	#10 1pc	#11 1pc	#12 4pcs
$\langle \rangle$	$\langle \rangle$		
Middle Shelf	Bottom Shelf	Out Frame	Support Leg
#13 1pc	#14 1pc	#15 1pc	
L Shape Leg	Adaptor	RF Wireless	

# BAR TABLE



 Please keep instructions for future reference.

• Check the quantity and irregularity of parts and hardware before you start.

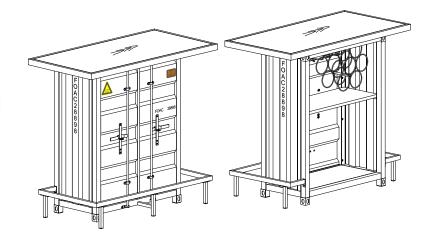

### HARDWARE











Bolt 1/4" x 5/8"


Bolt 1/4" x 2"


Bolt 1/4" x 2-3/16"

Allen Wrench M4

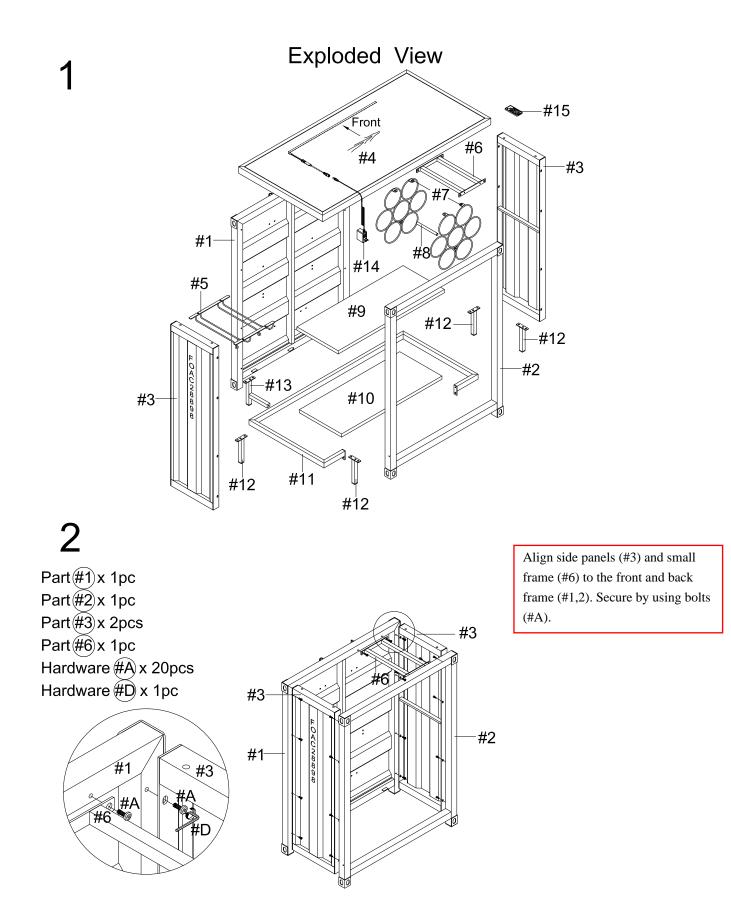


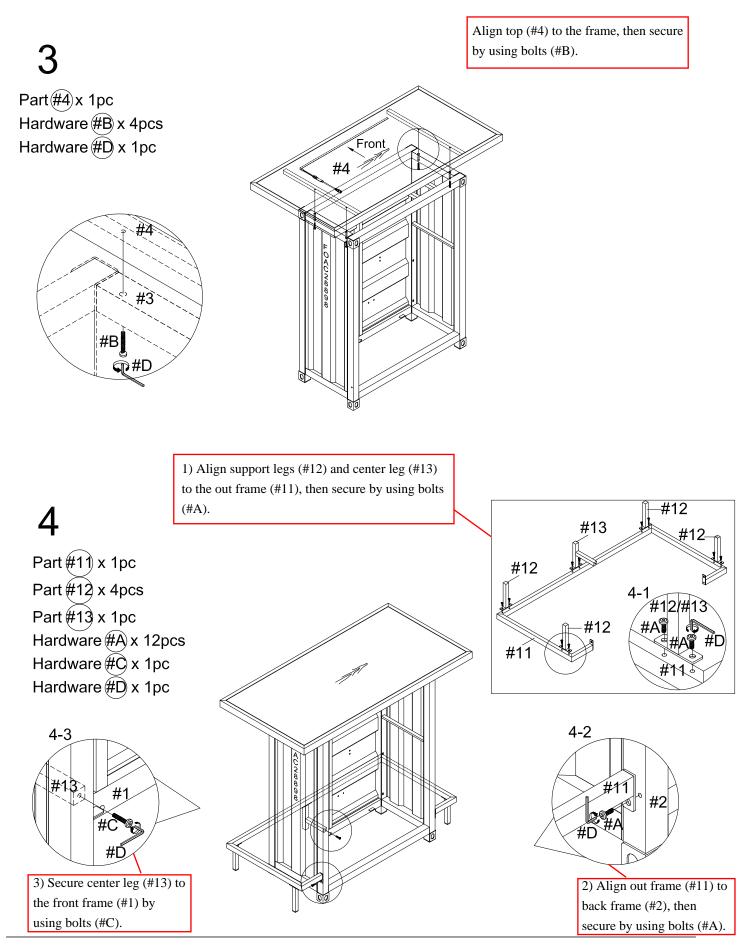

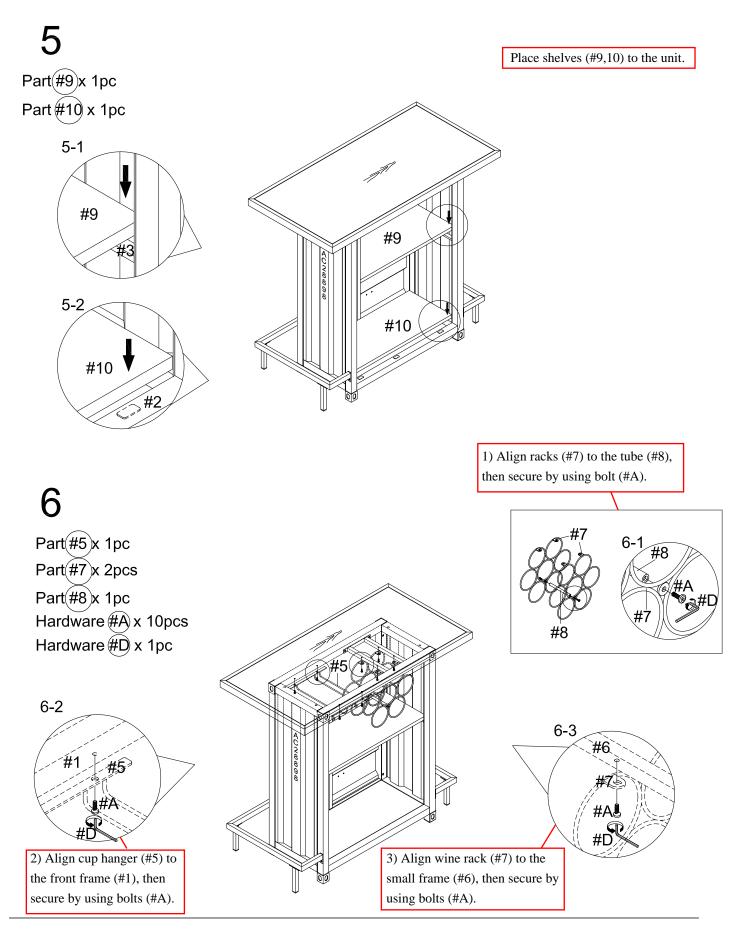


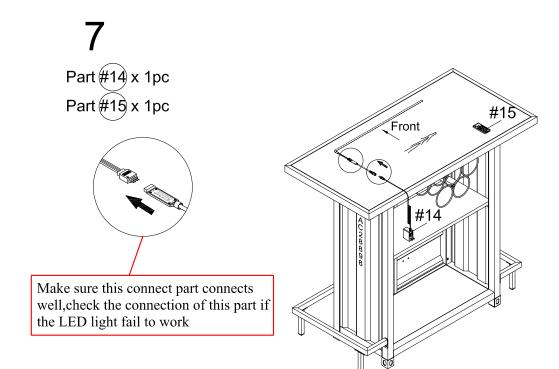

Connect the adaptor (#14) to the plug on the top (#4).

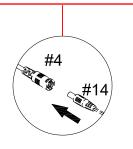

8

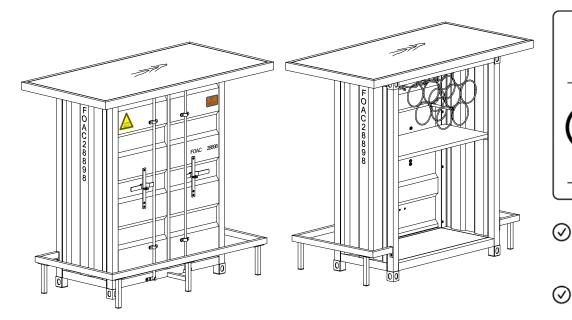





Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

#### ) Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

#### ✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.