 


ASSEMBLY INSTRUCTIONS


DINING TABLE

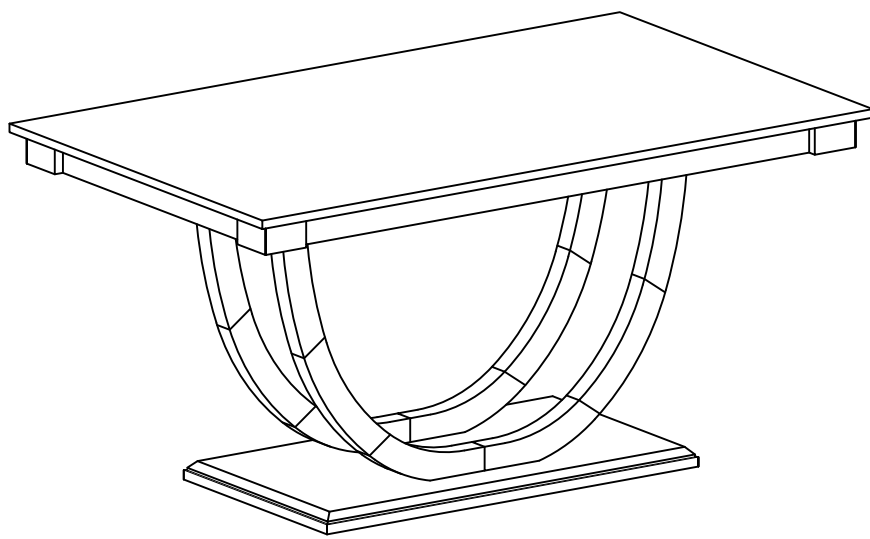

WF309855

IMPORTANT NOTE:

 - PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY SET-UP.

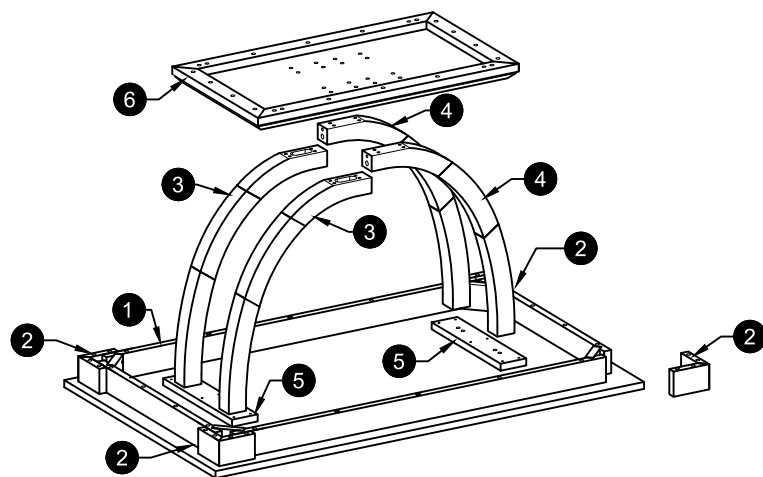

CARTON CONTENT:

WF309855 :


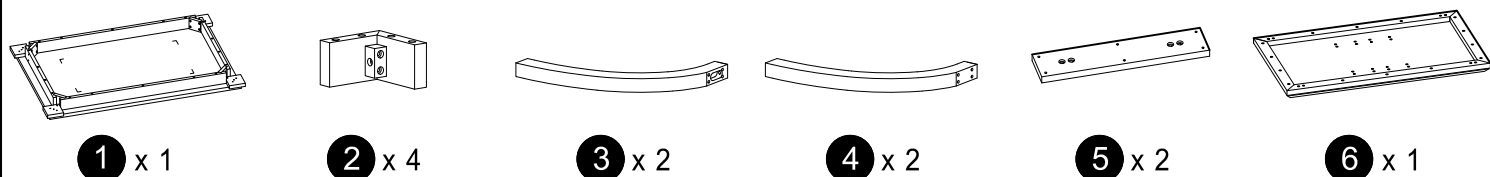 


TABLE PART LISTS


NO.	DESCRIPTION	SKETCH	QTY
1	TABLE TOP		1 PC
2	APRON DECO		4 PCS
3	TABLE LEG (L)		2 PCS
4	TABLE LEG (R)		2 PCS
5	LEG SUPPORT		2 PCS
6	LEG BOTTOM		1 PC

TABLE HARDWARE LISTS


NO.	DESCRIPTION	SKETCH	QTY
A	JCBC BOLT M6 x 45mm		24 PCS
B	JCBC BOLT M6 x 60mm		2 PCS
C	SPRING WASHER 1/4"		26 PCS
D	FLAT WASHER 1/4"		16 PCS
E	WOOD DOWEL M12 x 30mm		2 PCS
F	ALLEN KEY M4		1 PC
G	C/B SCREW M4 x 30mm		12 PCS
H	C/B SCREW M4 x 50mm		16 PCS
I	ADJUSTER M6 x 23mm		4 PCS

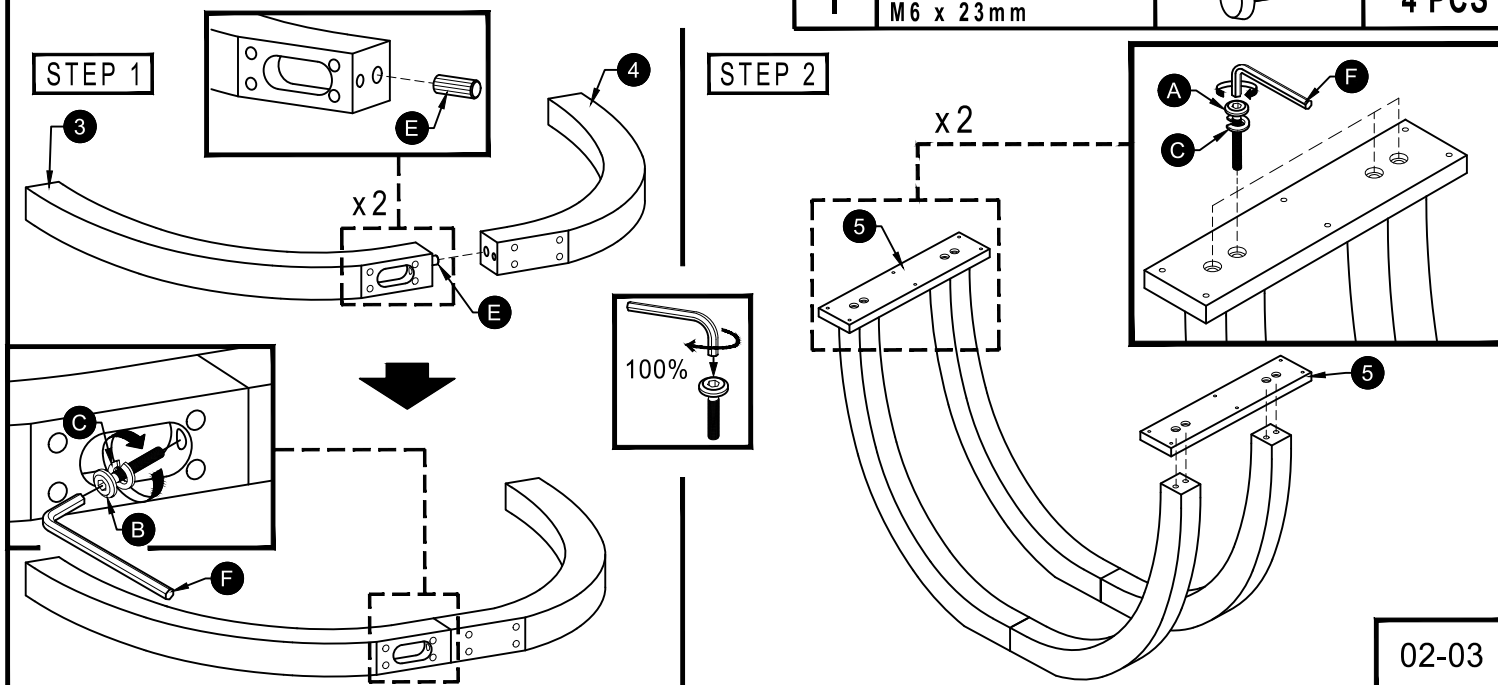 

 
STEP 3

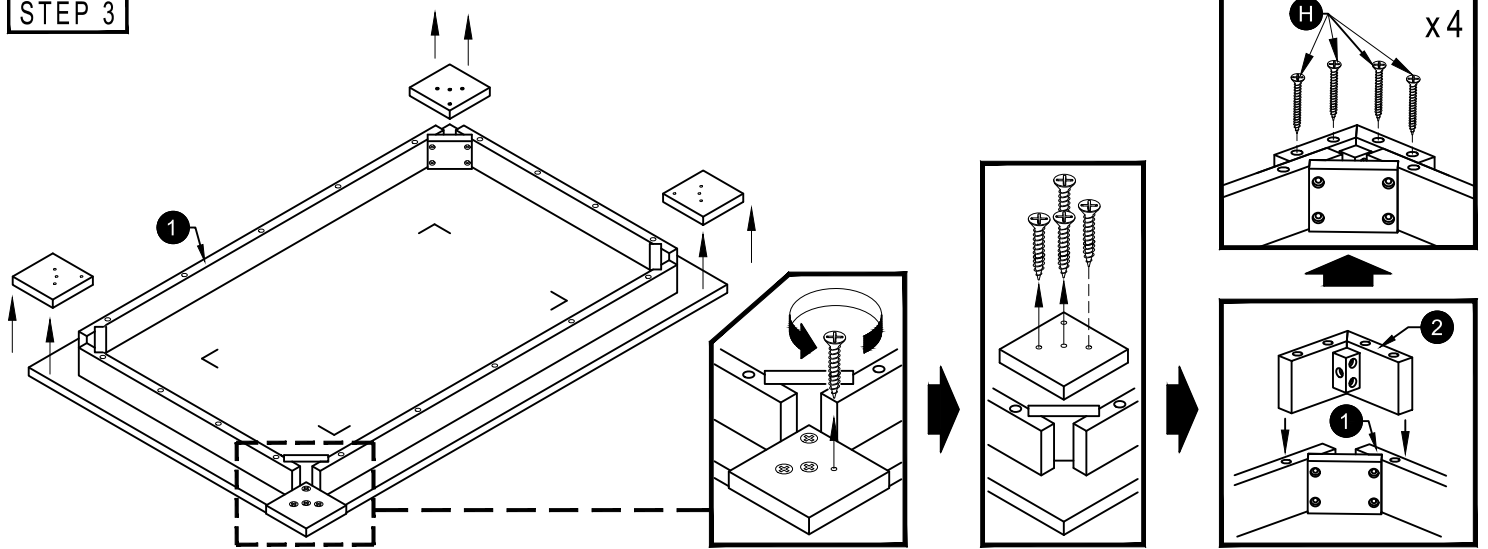

 STEP 4

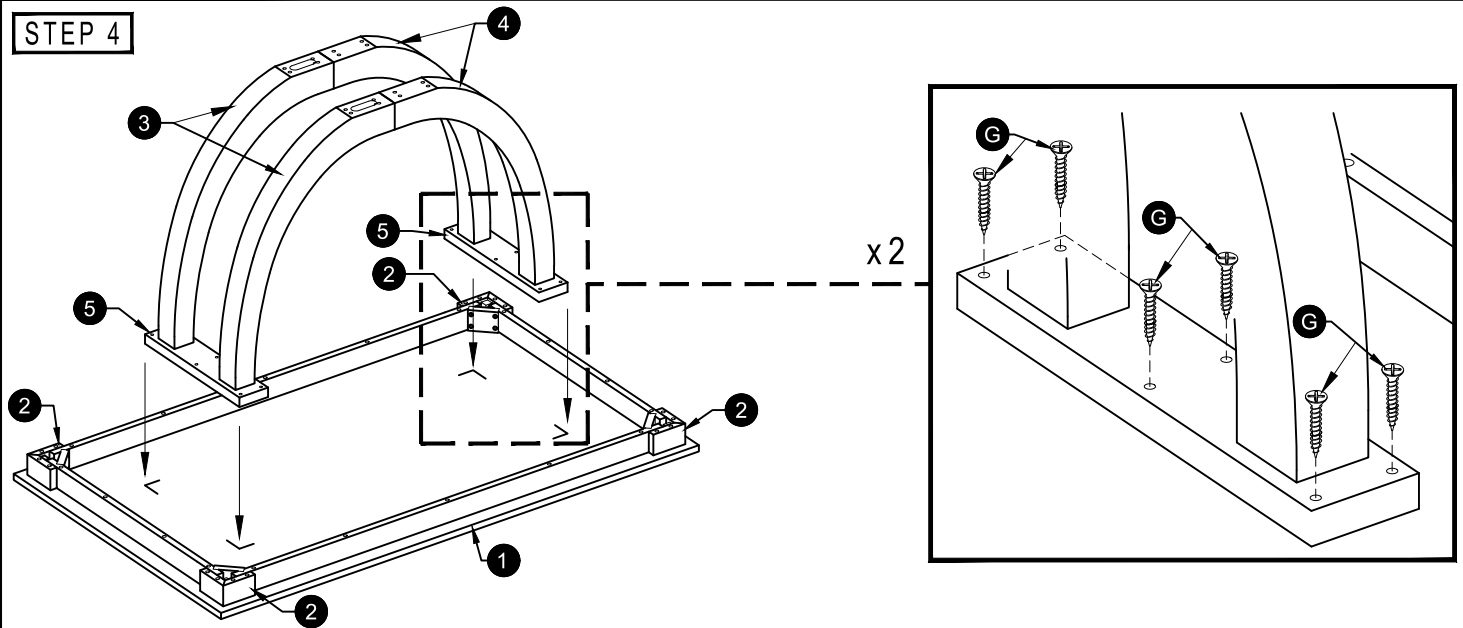


 STEP 5

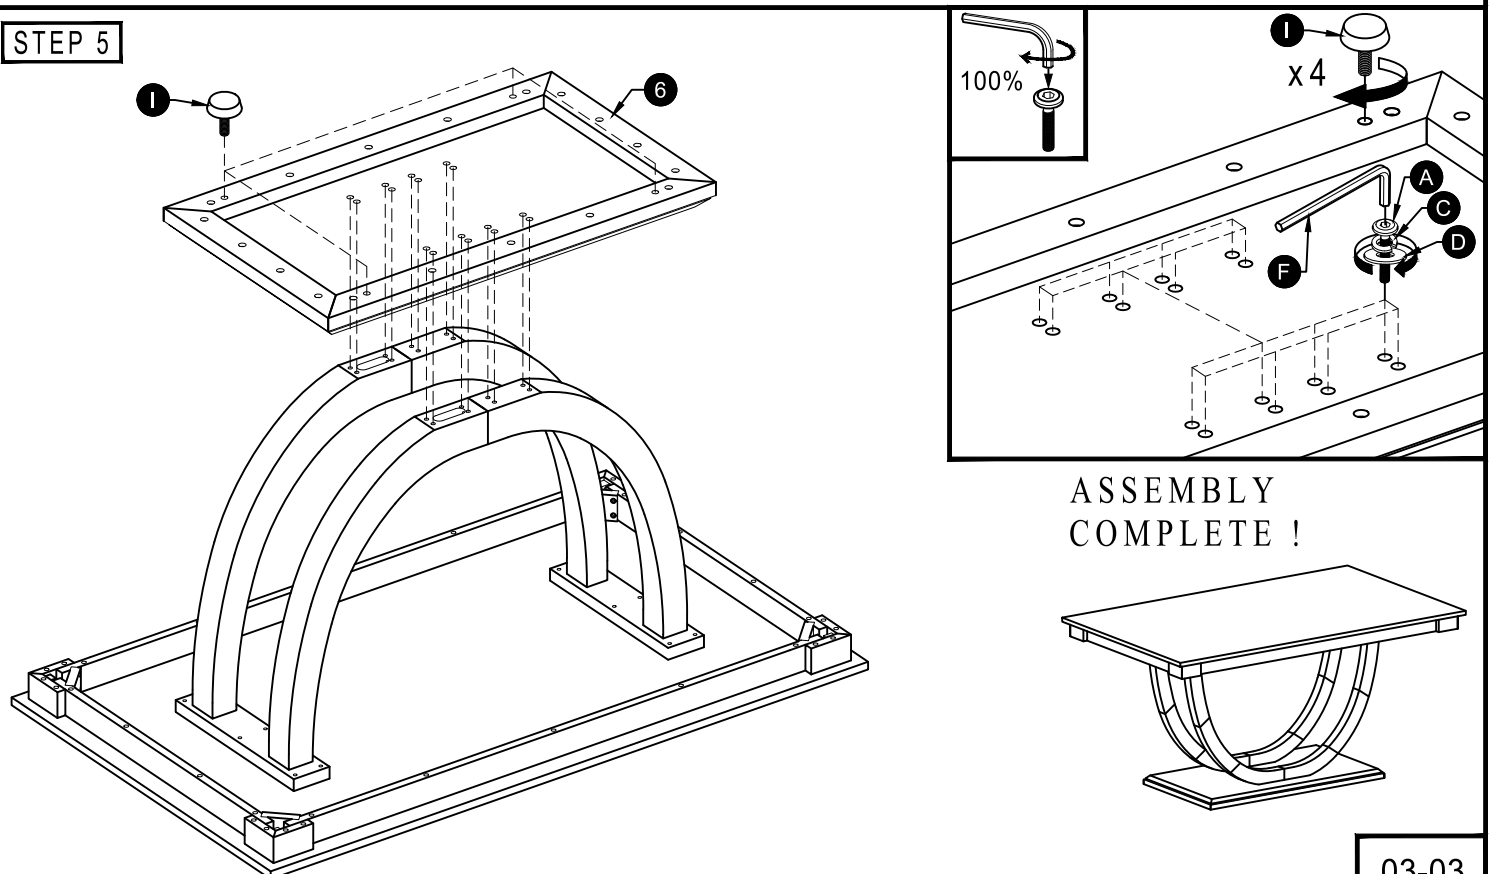

ASSEMBLY INSTRUCTIONS

 
DINING CHAIR

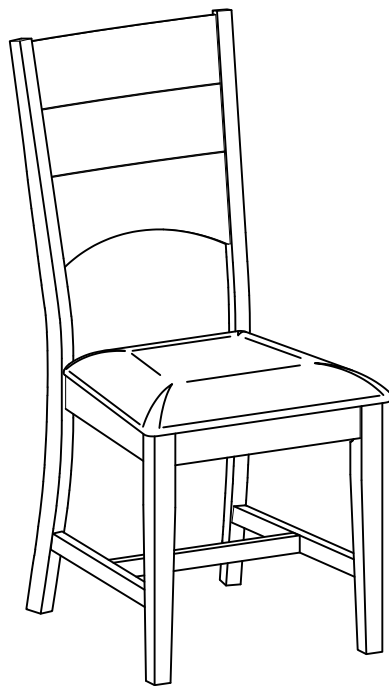

WF309856


IMPORTANT NOTE:

 - PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

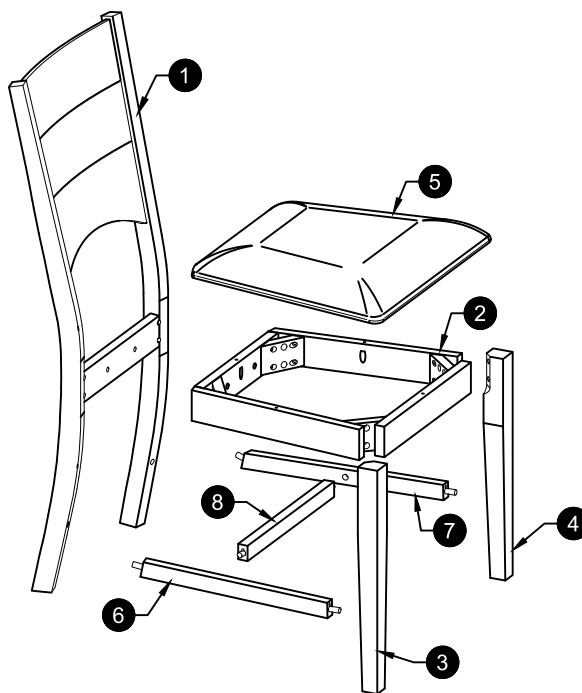


CARTON CONTENT:

 
WF309856 :




1 x 4

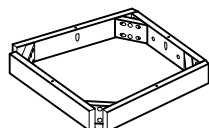 


2 x 4

 


3 x 4

 


4 x 4

 


5 x 4

 

6 x 4

 

7 x 4

 

8 x 4


CHAIR PART LISTS

NO.	DESCRIPTION	SKETCH	QTY
1	BACK LEG		4 PCS
2	BOX SEAT		4 PCS
3	FRONT LEG (L)		4 PCS
4	FRONT LEG (R)		4 PCS
5	SEAT		4 PCS
6	STRETCHER (L)		4 PCS
7	STRETCHER (R)		4 PCS
8	STRETCHER (M)		4 PCS


CHAIR HARDWARE LISTS

NO.	DESCRIPTION	SKETCH	QTY
A	JCBC BOLT M6 x 35mm		8 PCS
B	JCBC BOLT M6 x 60mm		16 PCS
C	JCBC BOLT M6 x 80mm		16 PCS
D	SPRING WASHER 1/4"		40 PCS
E	FLAT WASHER 1/4"		40 PCS
F	ALLEN KEY M4		1 PC
G	C/B SCREW M4 x 30mm		16 PCS
H	C/B SCREW M4 x 45mm		16 PCS
N	C/B SCREW M4 x 38mm		8 PCS

 
STEP 1

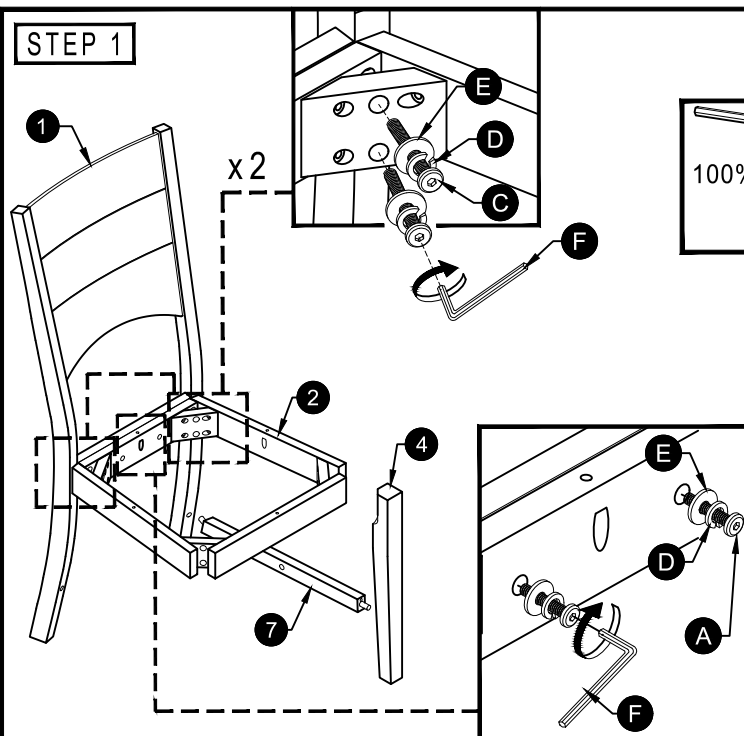

 
STEP 2

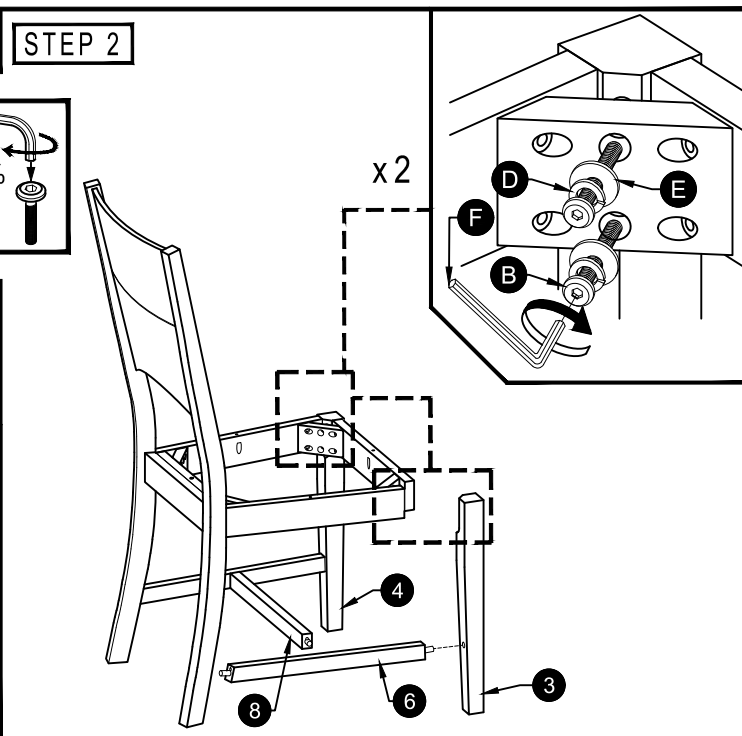

 
STEP 3

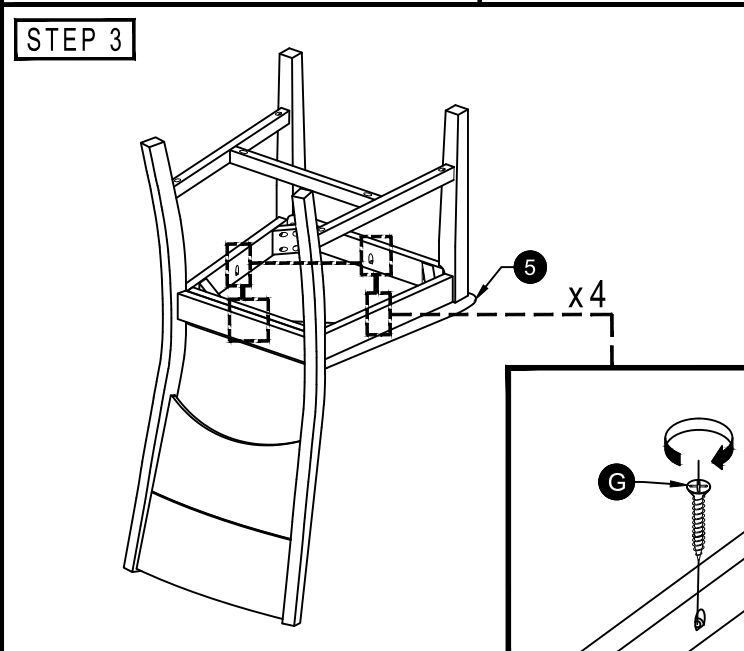

 
STEP 4

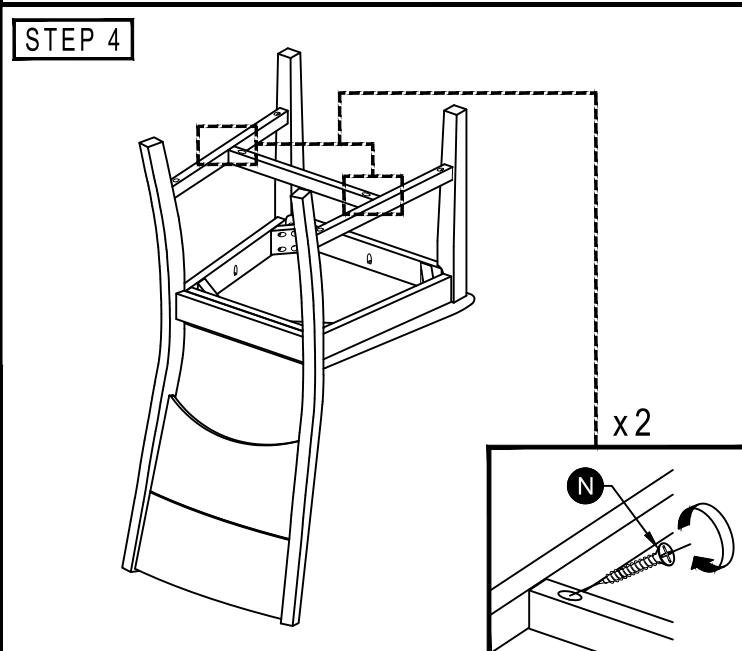

 STEP 5

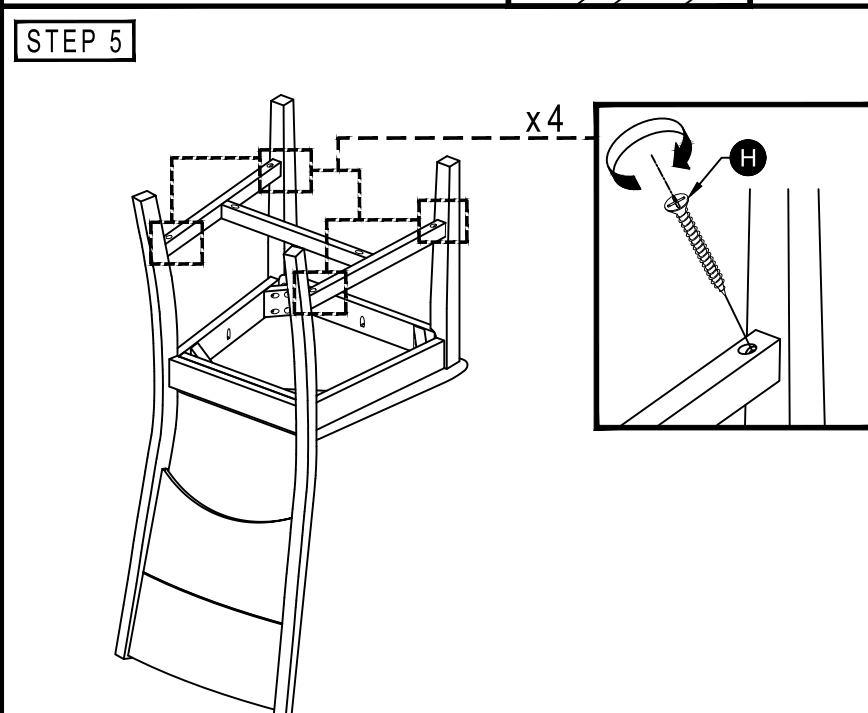


ASSEMBLY
COMPLETE !

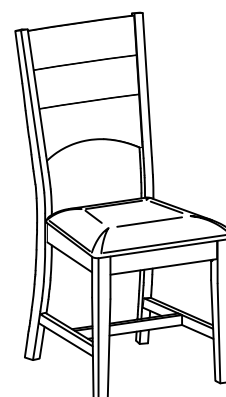 

ASSEMBLY INSTRUCTIONS

 
DINING BENCH

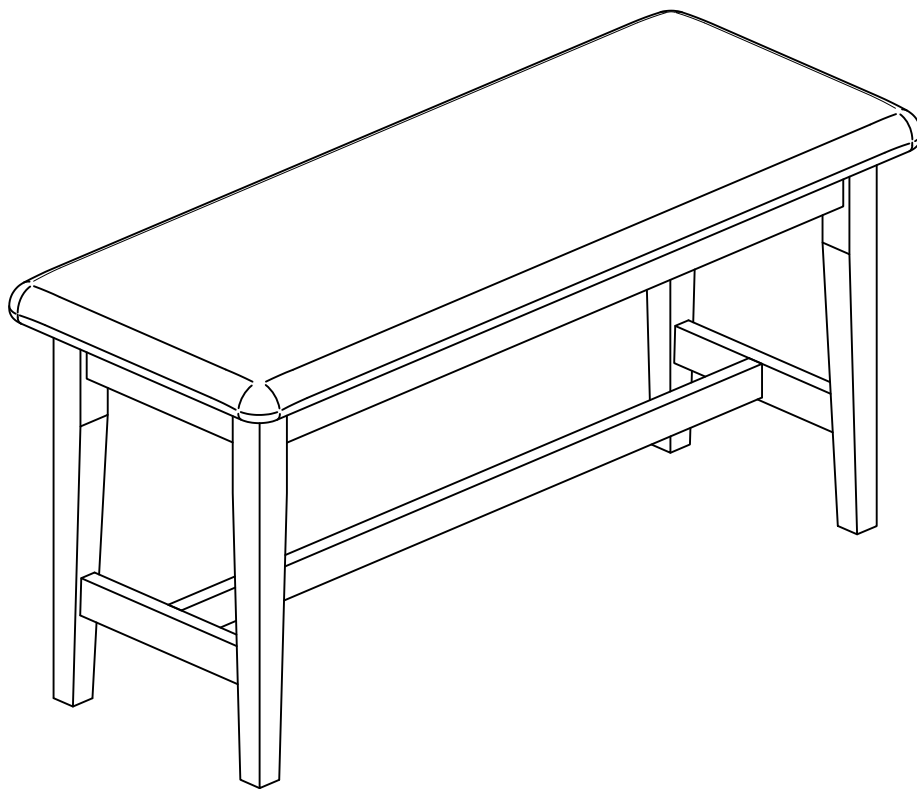

WF309856


IMPORTANT NOTE:

 - PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BENCH IS FULLY SET-UP.

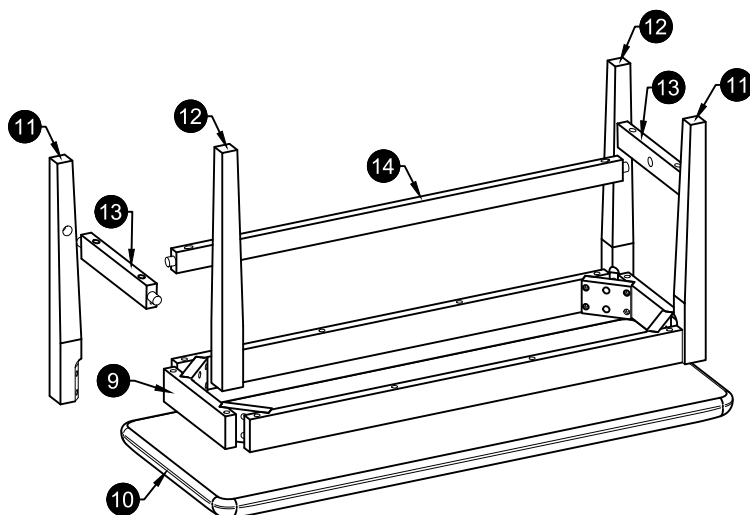


CARTON CONTENT:

 
WF309856 :

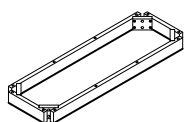


9 x 1

 


10 x 1

 


11 x 2

 

12 x 2

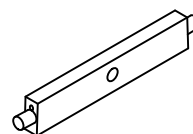 

13 x 2

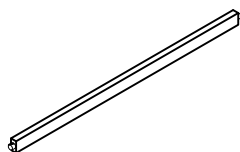 

14 x 1


BENCH PART LISTS

NO.	DESCRIPTION	SKETCH	QTY
9	BOX SEAT		1 PC
10	SEAT		1 PC
11	LEG (L)		2 PCS
12	LEG (R)		2 PCS
13	STRETCHER (S)		2 PCS
14	STRETCHER (L)		1 PC


BENCH HARDWARE LISTS

NO.	DESCRIPTION	SKETCH	QTY
I	C/B SCREW M4 x 45mm		18 PCS
J	JCBC BOLT M6 x 70mm		8 PCS
K	SPRING WASHER 1/4"		8 PCS
L	FLAT WASHER 1/4"		8 PCS
M	ALLEN KEY M4		1 PC

 STEP 1

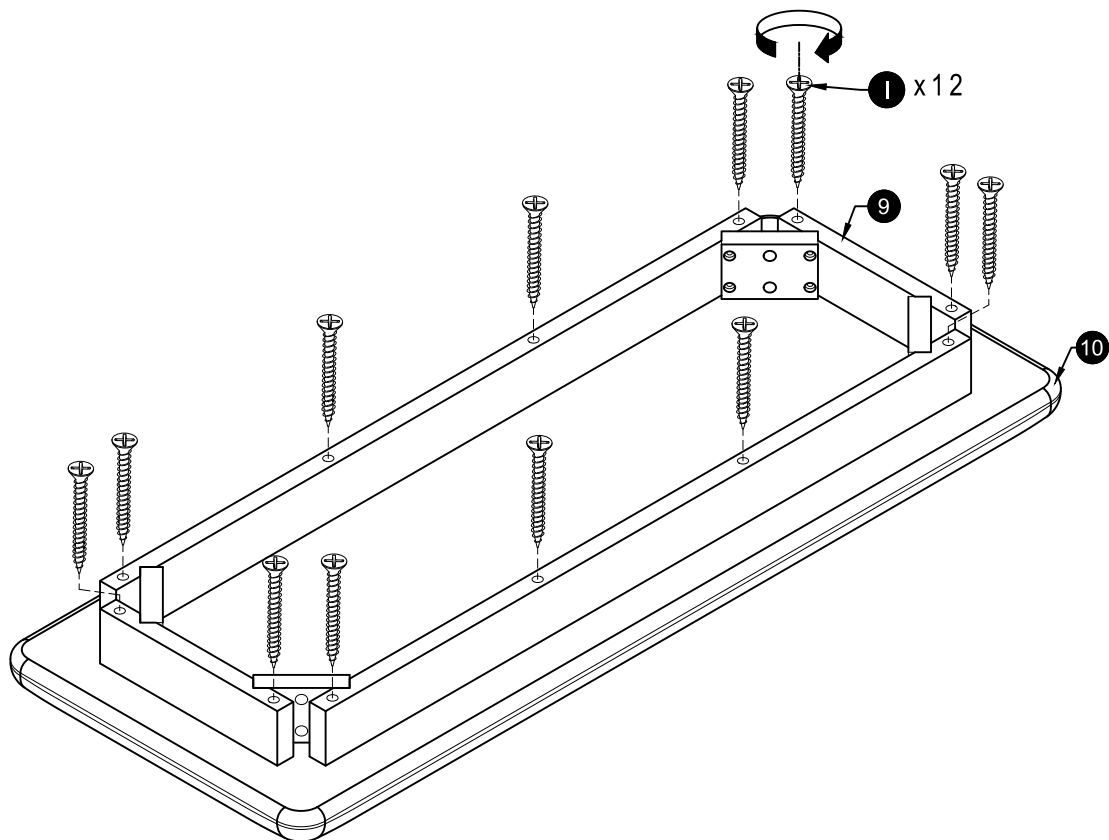

 STEP 2

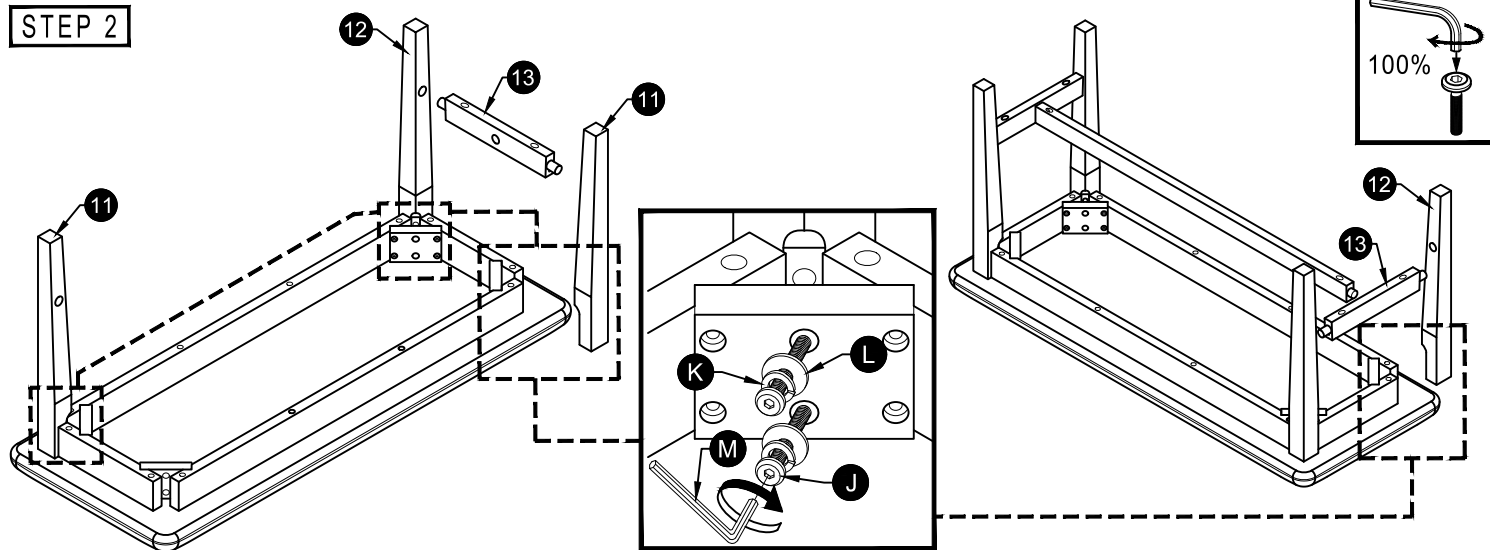

STEP 3

