




Pro 42in Outdoor Kitchen Cabinet Station XL

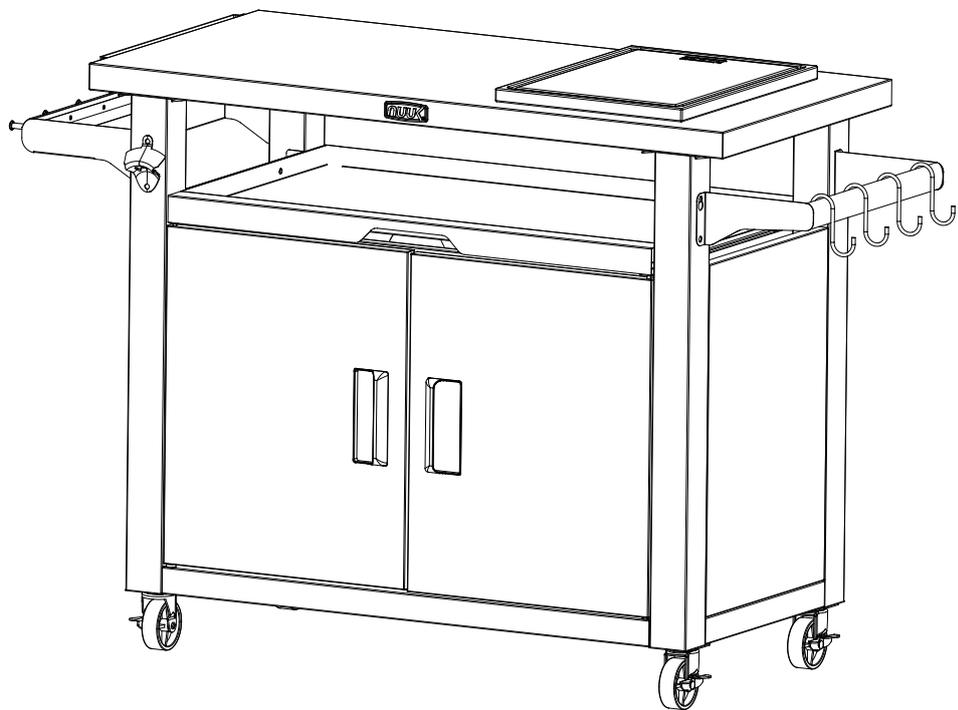

Model: MC810
SKU: 40013

NUUK USA
nuukusa.com



Table of Contents

It is the consumer's responsibility to see that the unit is properly assembled, installed, and maintained.

Table of Contents	- page 2
Safety Information	- page 3
Customer Support	- page 4
Care and Maintenance	
Exploded View	- page 5
Parts	- page 6 - 7
Assembly Instructions	- page 7 - 18
Warranty	- page 19



Safety Information

To ensure your safety, we kindly remind customers of the importance in carefully assembling, installing and maintaining the product. Following the instructions in the manual diligently is crucial to prevent any potential risks of bodily harm or property damage.

- Not for permanent installation
- Suitable for outdoor use (or indoor)
- Only used on horizontal surfaces
- Maximum top/bottom weight load of 300 LBS
- Maximum middle shelf weight load of 200 LBS
- Maximum cabinet bottom weight load of 200 LBS
- Before use, make sure the height of the wheels is adjusted so that the table does not wobble while in use.
- Lock the wheels before use.
- Be careful with all electric appliances, tools, extension cords and lights on and around table.
- Surface will become hot in direct sun or high temperatures. Please touch carefully to avoid burns.
- Do not allow children to climb the product.

CALIFORNIA PROPOSITION 65 WARNING

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov



Customer Support

**HAVE PROBLEM / QUESTION / CONCERN
NO WORRY!**

Our customer Service Staff is Here To Help You!

For questions regarding your NUUK products, installation, replacement parts or your warranty, please contact

NUUK customer service team.

Phone: 1-800-719-8199
Monday through Friday
9:00 am to 5:00 pm, Eastern Time Zone

Email: service@nuukusa.com

Care and Maintenance

CLEANING

Painted and Plastic Surface


Wash with mild detergent or non-abrasive cleaner and warm Water.

Stainless Steel Surface

Wash with mild detergent and warm soapy water or use stainless steel cleaner. Wipe dry with a soft cloth after each use.

Wash only in the direction of the stainless brushed finish to avoid damage.

Stainless steel can rust under certain conditions. This can be caused by acidic marinades, chlorine, saltwater, exposure to coastal climates, other natural elements, or improper cleaning tools such as wire or steel wool.

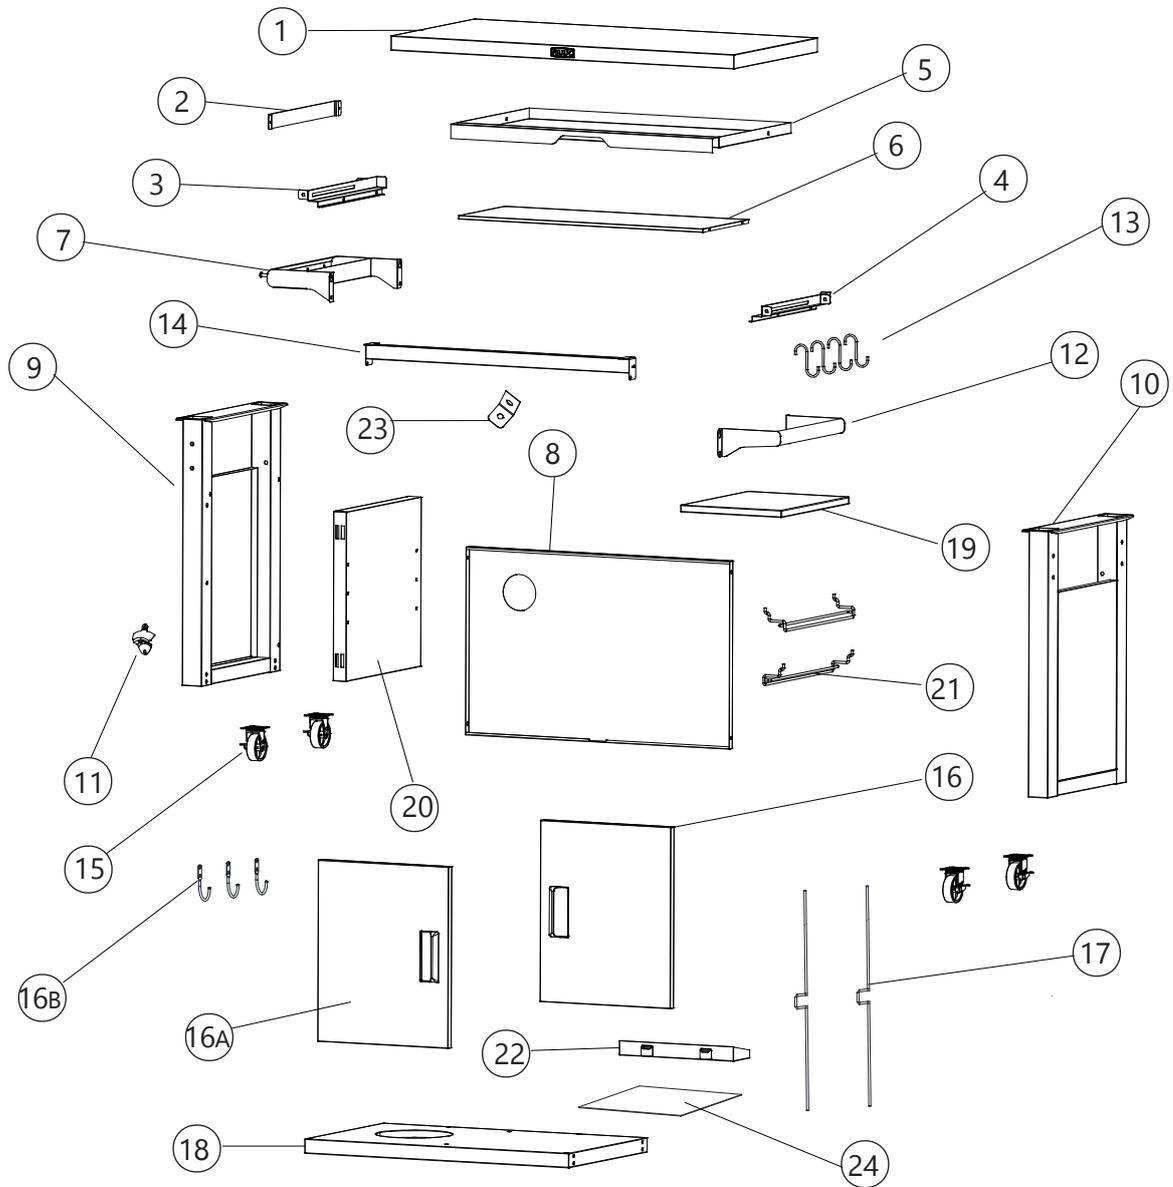

When assembling, partially thread one screw into its corresponding position on one side, securing it temporarily (be careful not to fully tighten).


Proceed to do the same for the other locations following a similar approach until all screws for this step are correctly aligned with their threads.





Once this step is completed, proceed to fully tighten all screws.

If you encounter misalignment with any screws, gently apply manual pressure to slightly adjust the hole to align it with the desired position before threading the screw into the thread.

Once the screw is in place, release the pressure.

Following these steps will allow you to continue with the tightening process

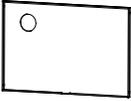PART		DESCRIPTION	QTY
①		Countertop	1
②		Tools Holder	1
③		Middle Shelf Rail-L	1
④		Middle Shelf Rail-R	1
⑤		Middle Shelf	1
⑥		Sealing Plate	1
⑦		Condiment Tray	1
⑧		Back Panel	1
⑨		Leg-L	1
⑩		Leg-R	1
⑪		Bottle Opener	1

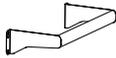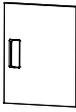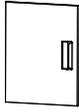 
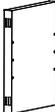 
PART		DESCRIPTION	QTY
⑫		Cart Handle	1
⑬		"S" Hook	4
⑭		Front Beam	1
⑮		Caster Wheel with Brakes	4
⑯		Front Door (R)	1
⑯A		Front Door (L)	1
⑯B		Tools Hook	3
⑰		Door Axle	2
⑱		Bottom Shelf	1
⑱		Wood Cutting Board	1
⑳		Middle Panel	1

PART		DESCRIPTION	QTY
21		Cutting Board Holder	2
22		Metal tray	1

PART		DESCRIPTION	QTY
23		Beam Connector	1
24		PVC Liner	1

Hardware and Assembly Instructions

Hardware

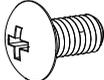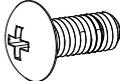
PART		DESCRIPTION	QTY
A		Bolt M6x12	63
C		Bolt M6x25	1
E		Axle Holder	2
G		Nut M5	2

PART		DESCRIPTION	QTY
B		Bolt M4x12	10
D		Washer	1
F		M5 Step Screw	2
H		Flat Washer	2

-  **A x 8**
-  **18 x 1**
-  **10 x 1**
-  **9 x 1**

STEP 1

Connect (9) and (10) to (18), using A x 8.

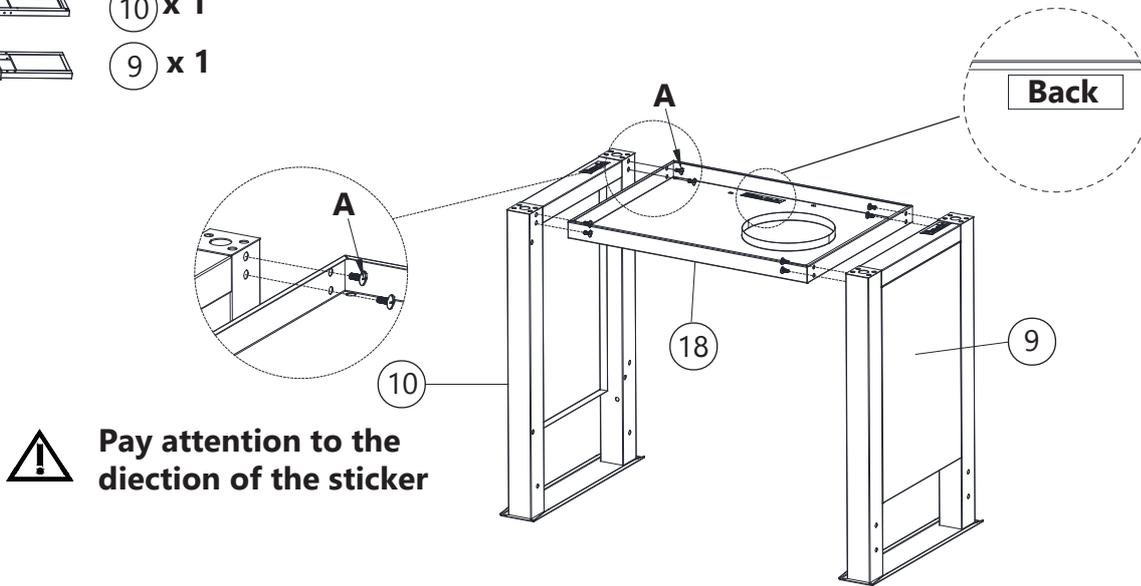



 **Pay attention to the direction of the sticker**

-  **A x 16**
-  **15 x 4**

STEP 2


 
Attach (15) x 4 onto (9) and (10), using A x 16.

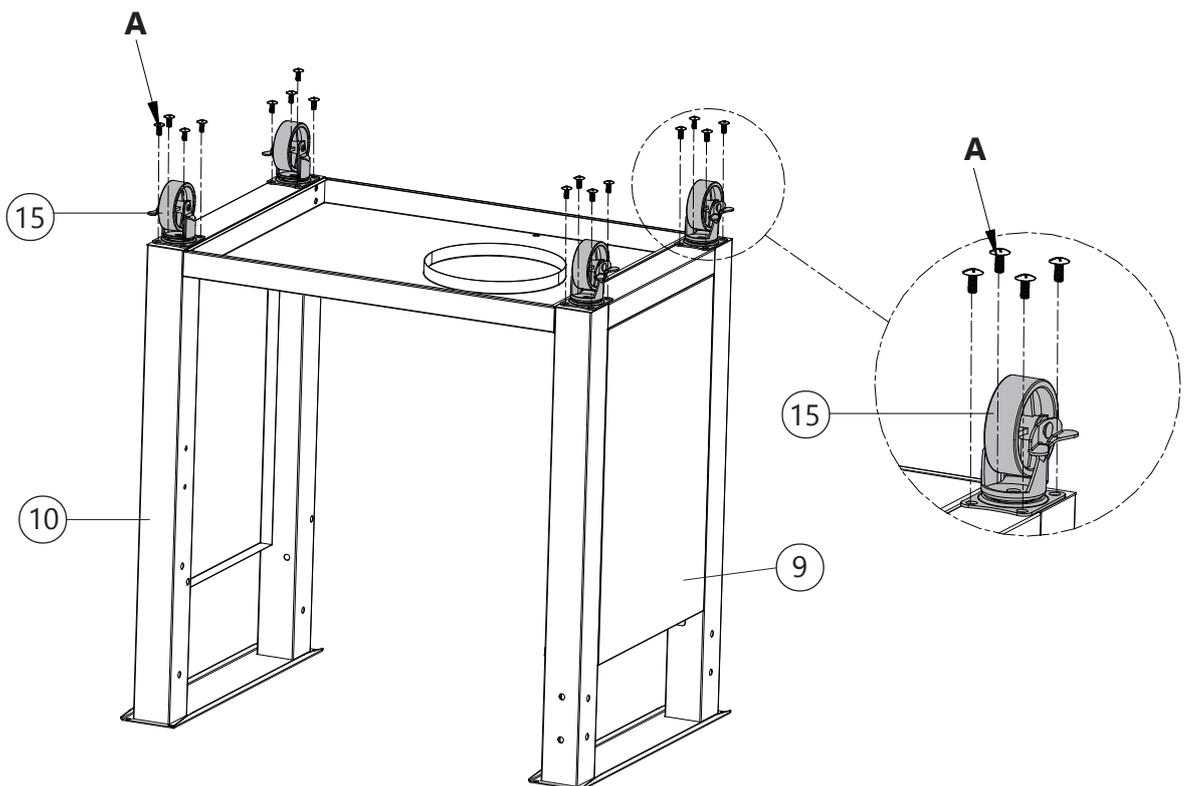



STEP 3


Install (8) onto (10) and (9), using A x 6.

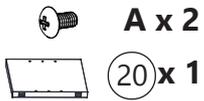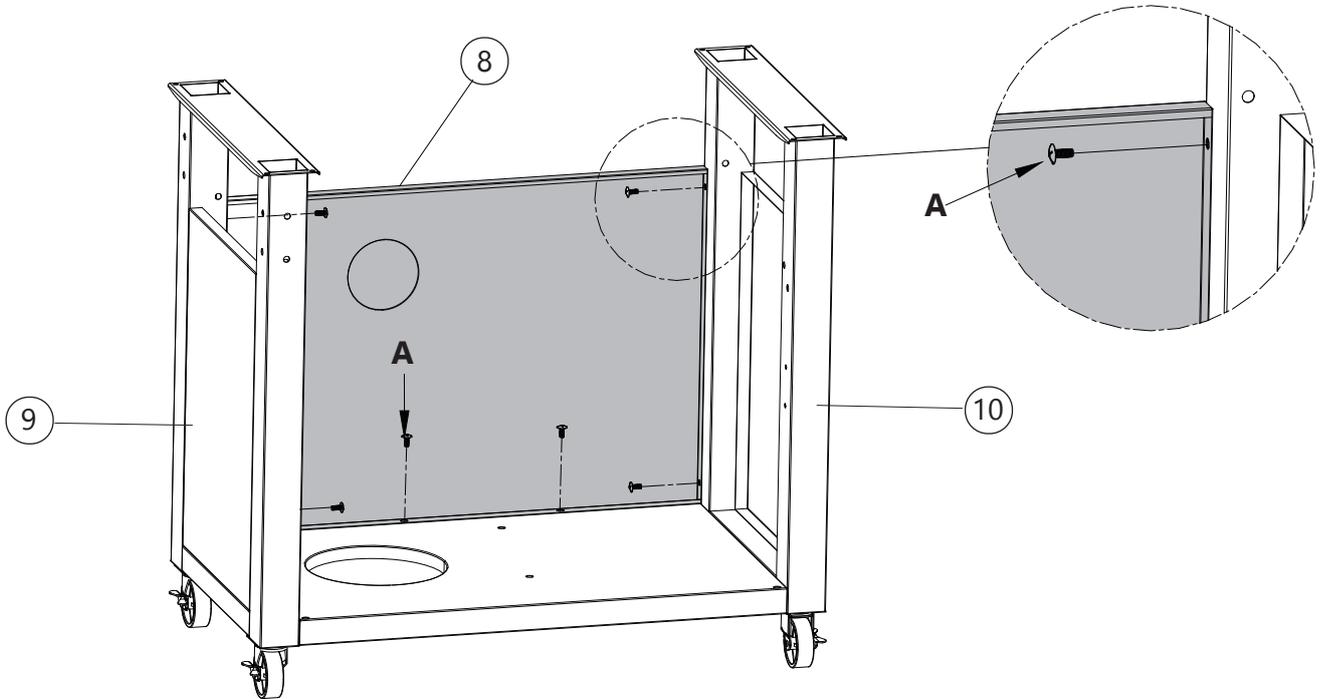


STEP 4

Install (20) onto (18), using A x 2.



NOTE: Flat side face to right side, or, magnet face to front side

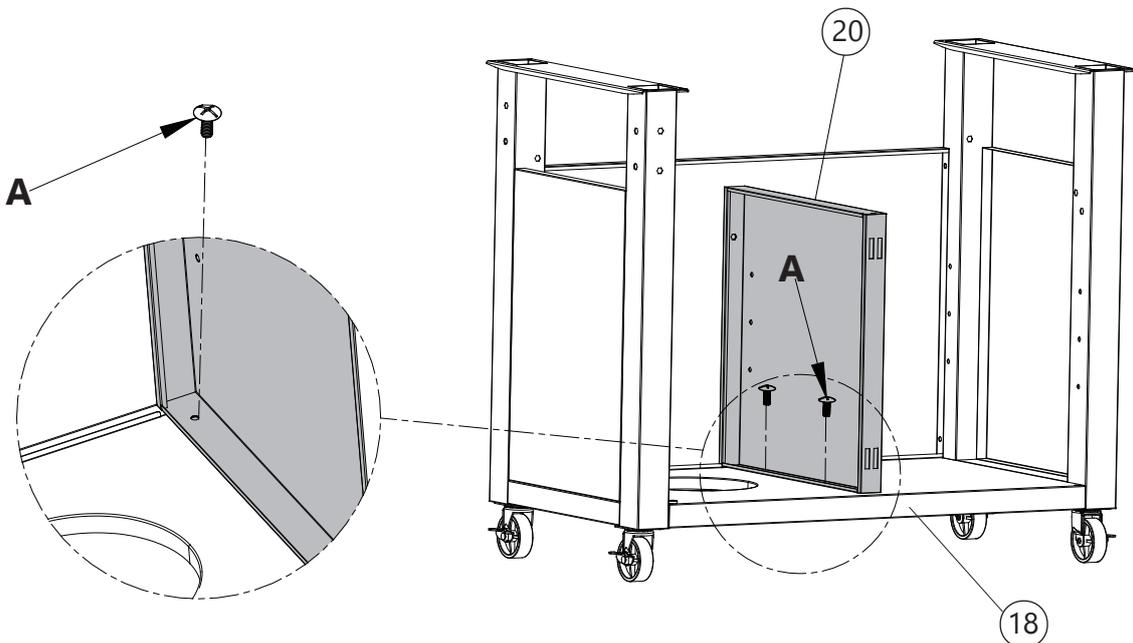

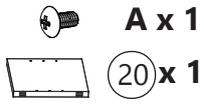


STEP 5

Connect (20) to (8), using A x 1.

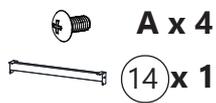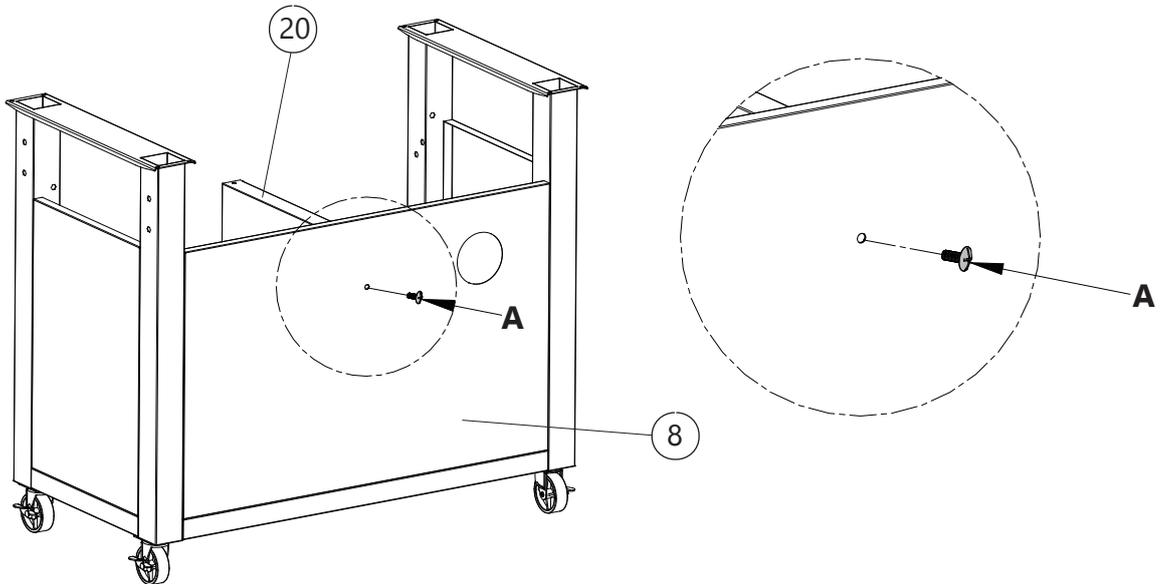

STEP 6


Install (14) onto (10) and (9), using A x 4.

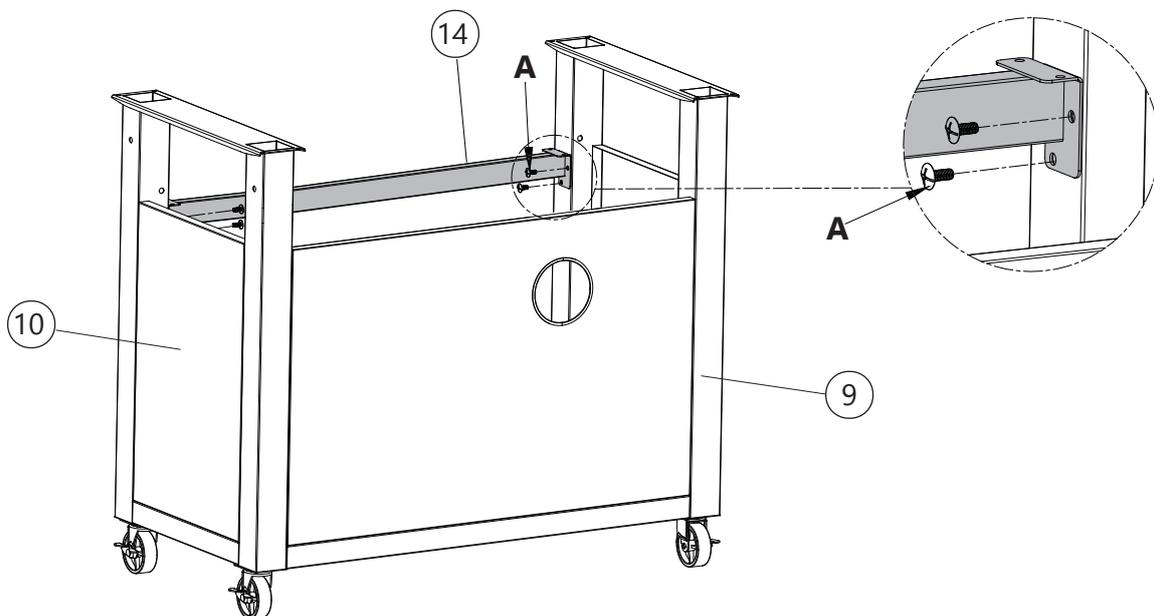

-  **A x 2**
-  **(23) x 1**

STEP 7

Install (23) to secure (20) and (14), using A x 2.

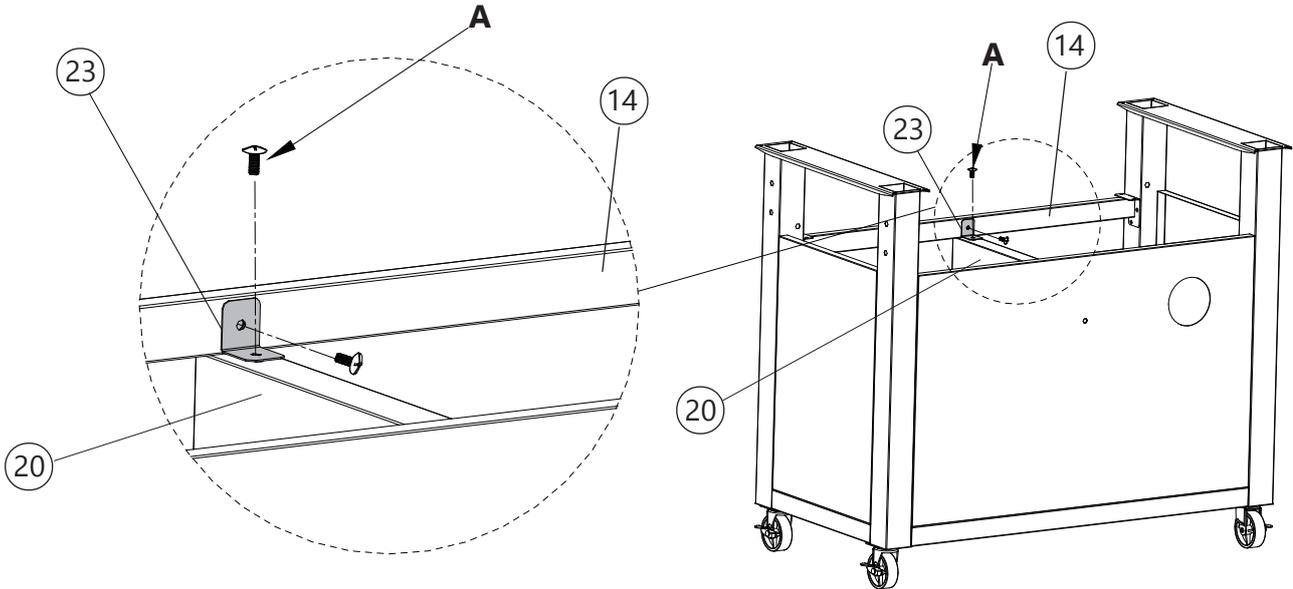


-  **A x 4**
-  **(3) x 1**
-  **(4) x 1**

STEP 8

Install (3) onto (9), using A x 2.

Install (4) onto (10), using A x 2.

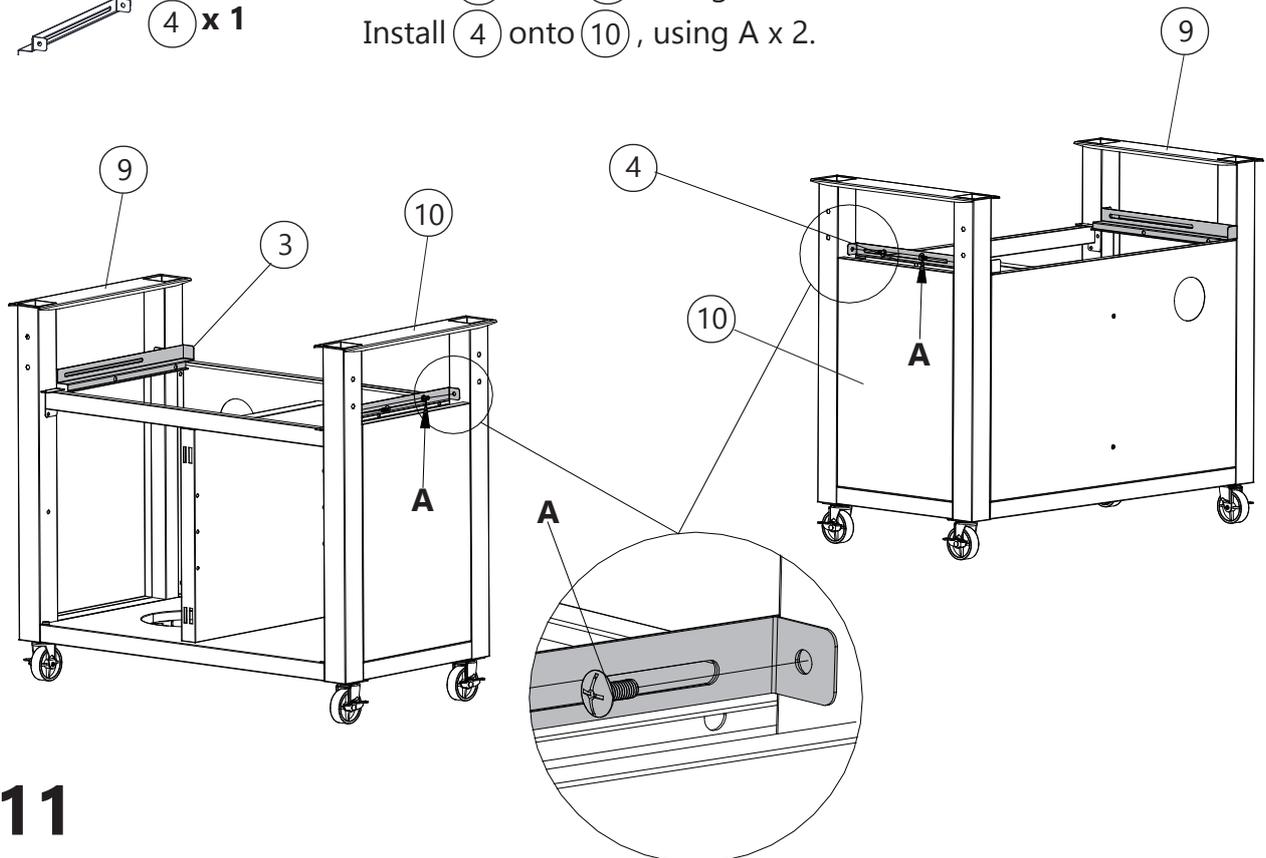




STEP 9

Install (6), using B x 4.

NOTE: Line up from back of cart.

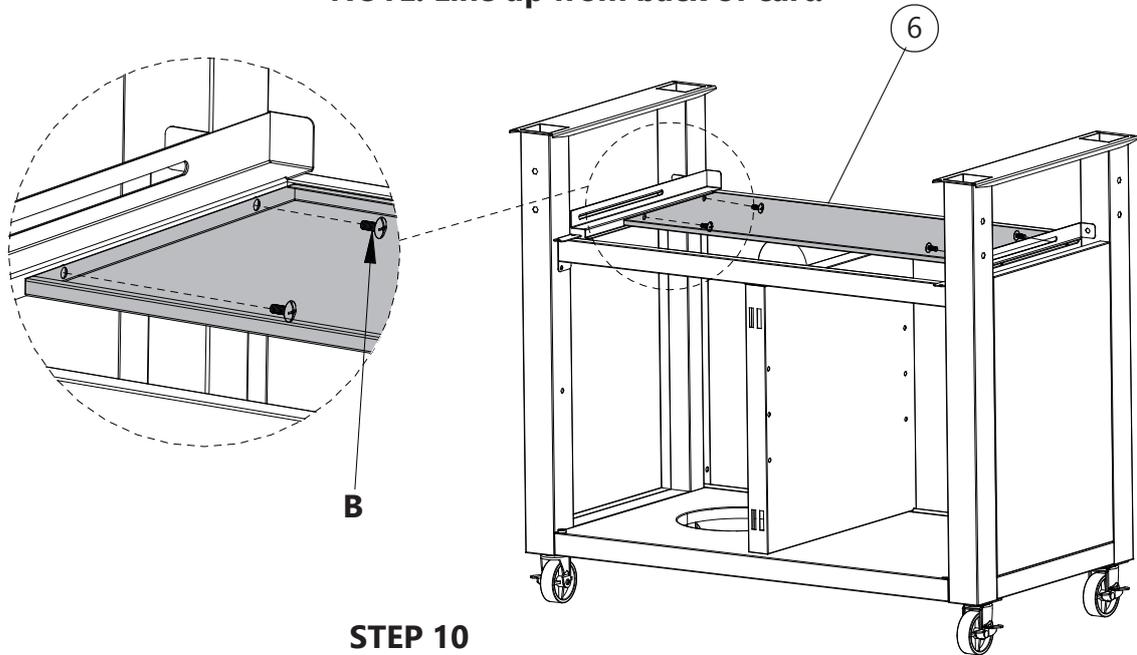

STEP 10

Following below step to install door

1. Insert E into the hole on (18) (front corner of (18))


2. Place (16) & (16A) into the position

3. Hold (17), insert from the top inside of door.


Make sure axle go through

-Hole on the (14)


-Hole on the bottom corner of door-hole in E

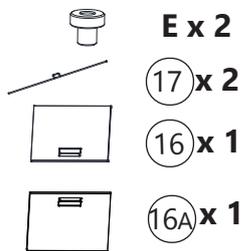


STEP 1

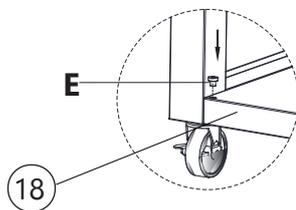



STEP 2

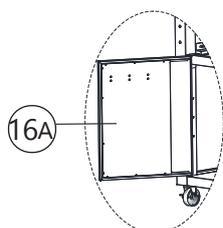


STEP 3A

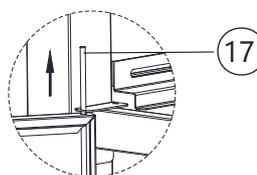



STEP 3B

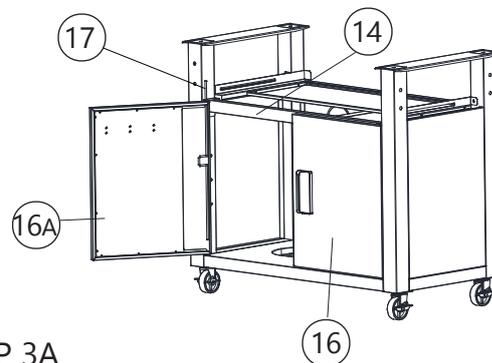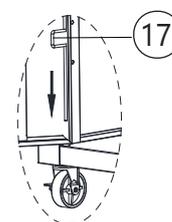

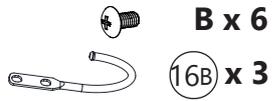


STEP 11


Install 16B onto 16A (inside), using B x 6.

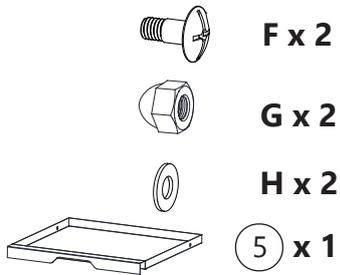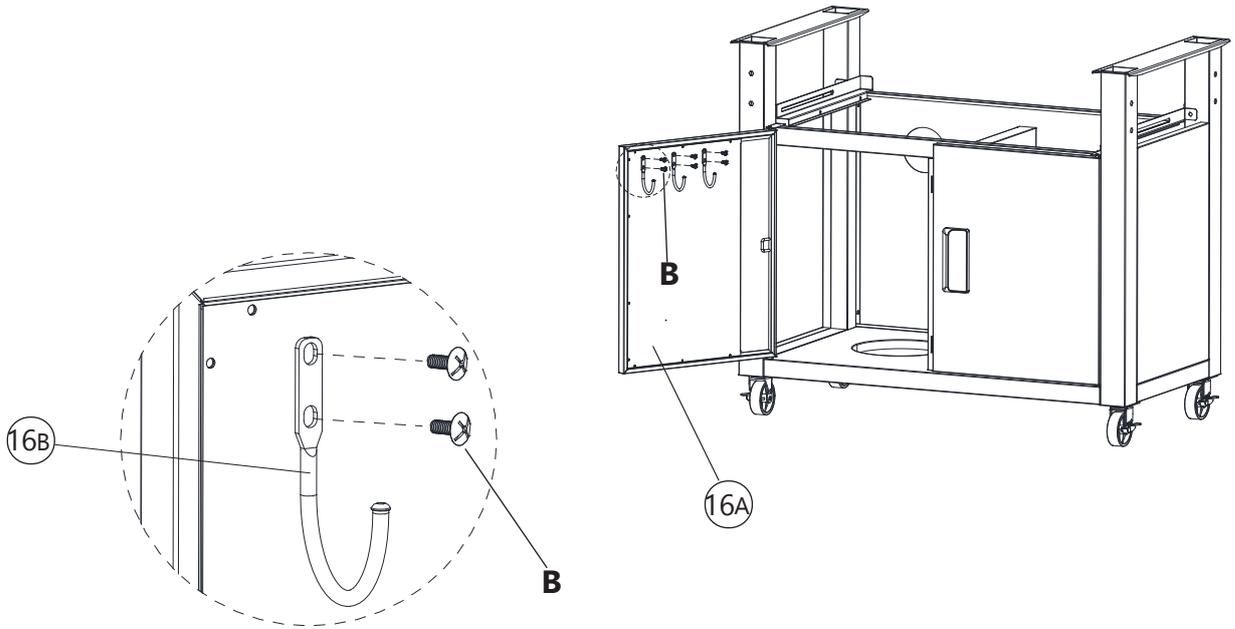

STEP 12

Slide in 5, using F & G & H to secure on the rail (1 pairs).

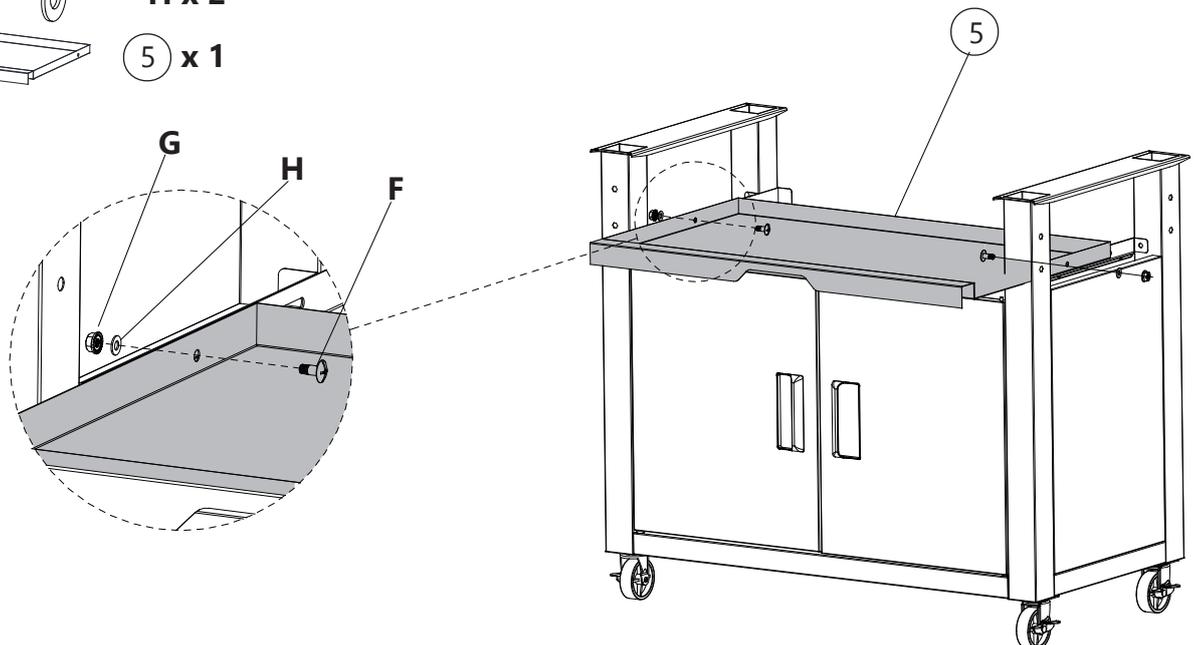


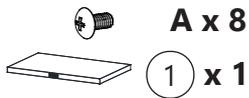

STEP 13

Install (1) onto the assembled cart, using A x 8.


NOTE: Logo face to front

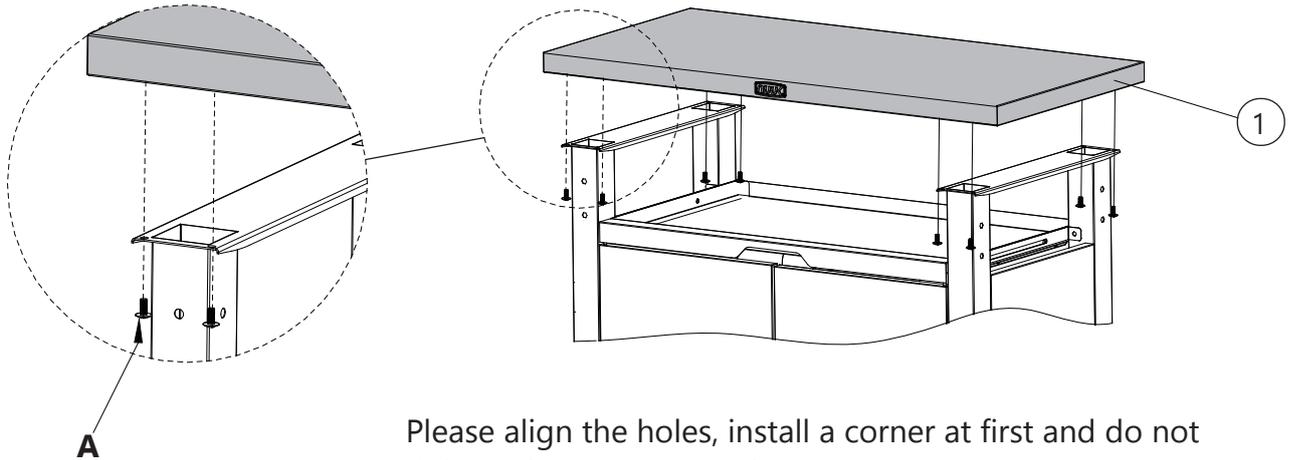

Please align the holes, install a corner at first and do not tighten the 8-screws at the 4-corners.


Special Reminder: when installing the 2nd to 4th corners, the holes may not be aligned.


Solution: one person can pull the top plate outward to align the holes.

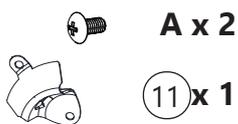

STEP 14

Attach (11) onto front of (9), using A x 2.

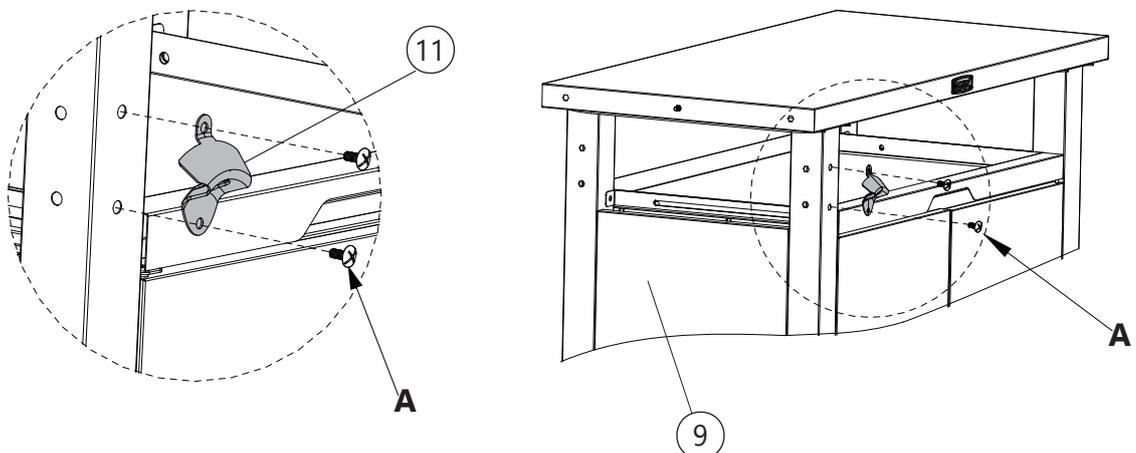

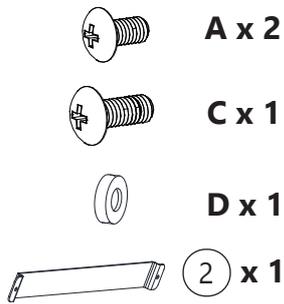






STEP 15


Attach tools holder (2) onto left side of counter top, using 2pcs Bolt M6 x 12(A)

NOTE: Please do not tighten the screw right now!

Insert washer (D) at the middle of holder, line the hole, using 1pcs Bolt M6 x 25 (C) to secure the washer.

PLEASE tighten all three bolts at this time

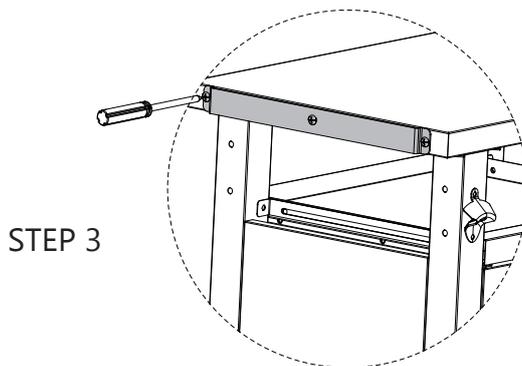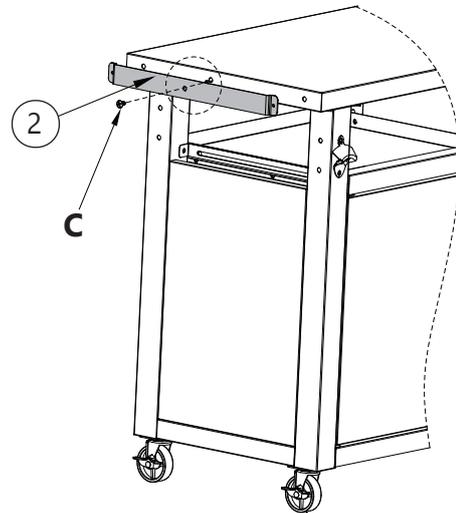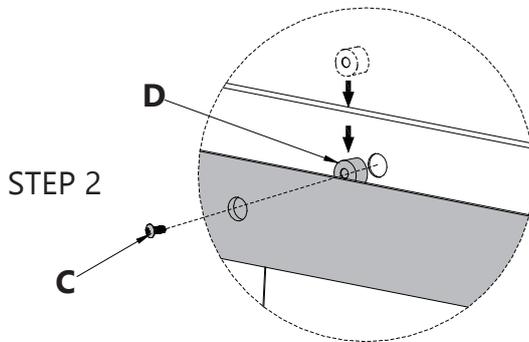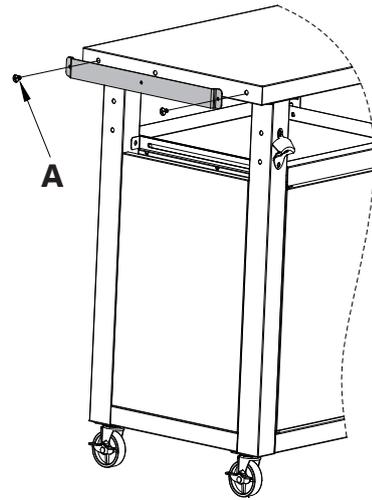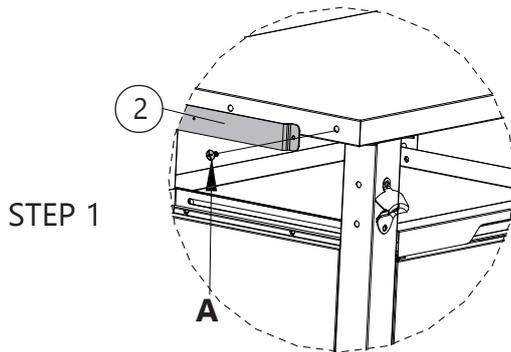

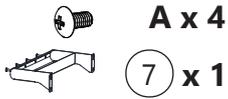



STEP 16

Pre-assemble bolt A x 2 onto (9).

DO NOT TIGHTEN THE BOLT

Hang (7) on those pre-assemble bolt, then secure the tray by another A x 2.

Finally, tighten all 4 bolts!

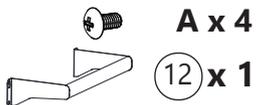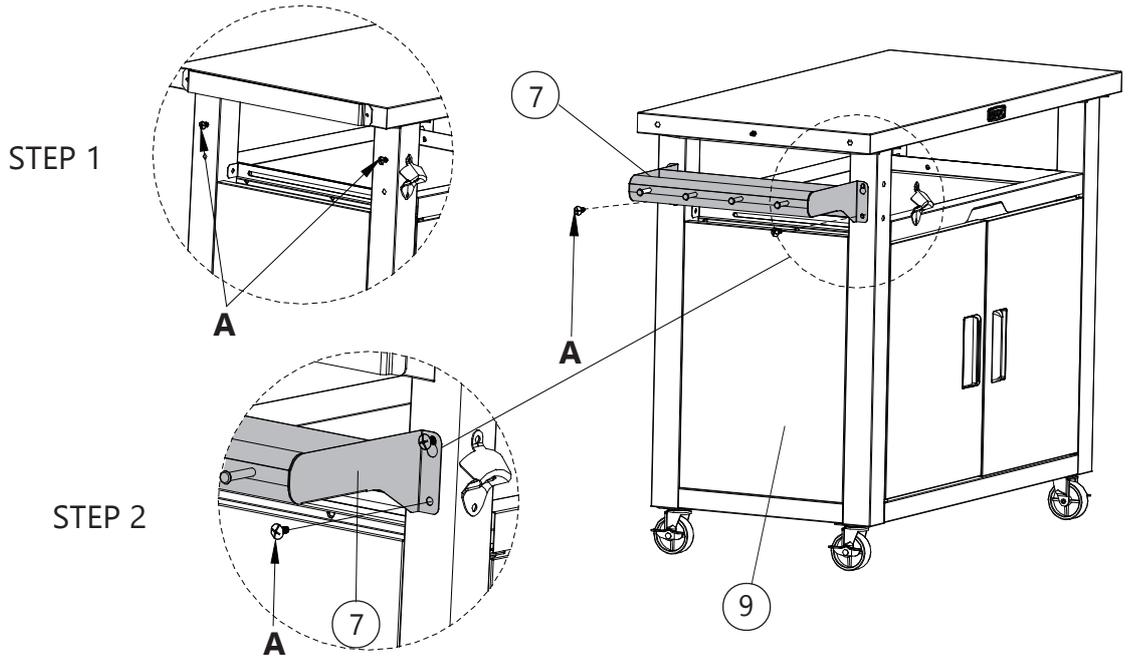


STEP 17

Pre-assemble bolt A x 2 onto (10).

DO NOT TIGHTEN THE BOLT

Hang (12) on those pre-assemble bolt, then secure the cart handle by another A x 2.

Finally, tighten all 4 bolts!

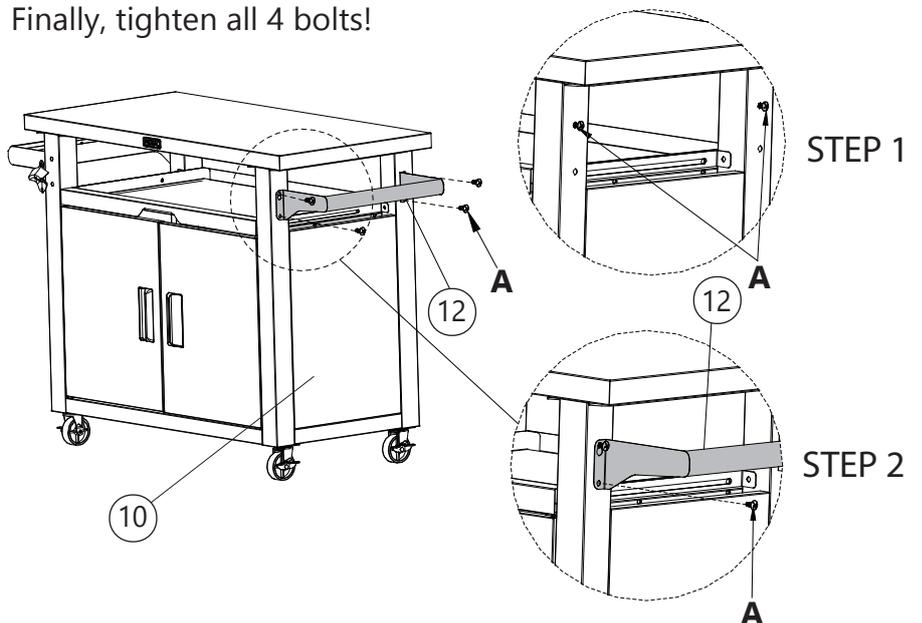




(21) x 2

STEP 18A

Install (21) x 2 onto (9) and (20).

Please install in a bright place or use lighting.

Suggest to use the middle position hole.

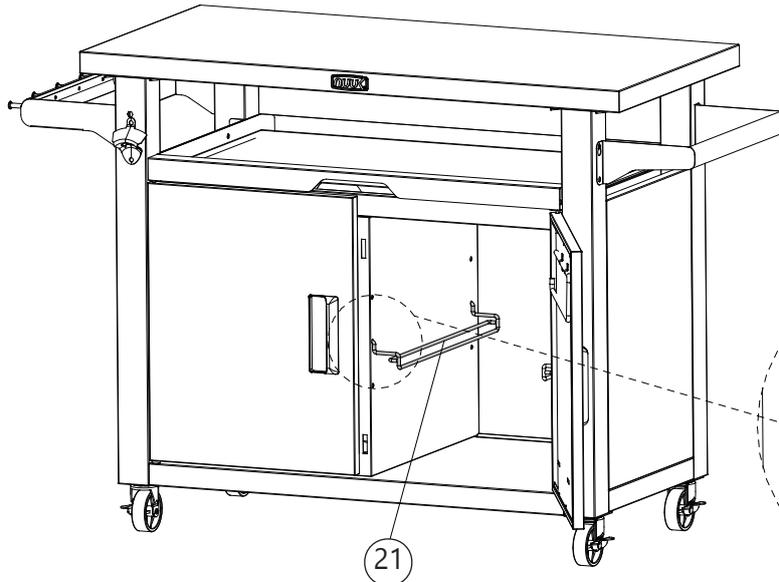

(19) x 1


STEP 18B

Put (19) on the (21) x 2.

NOTE:

-You can adjust the height of cutting board, there are total 3 difference position, please make sure you will adjust both holder together.

-Cutting board can use for shelf, also can be taken out to prepare food

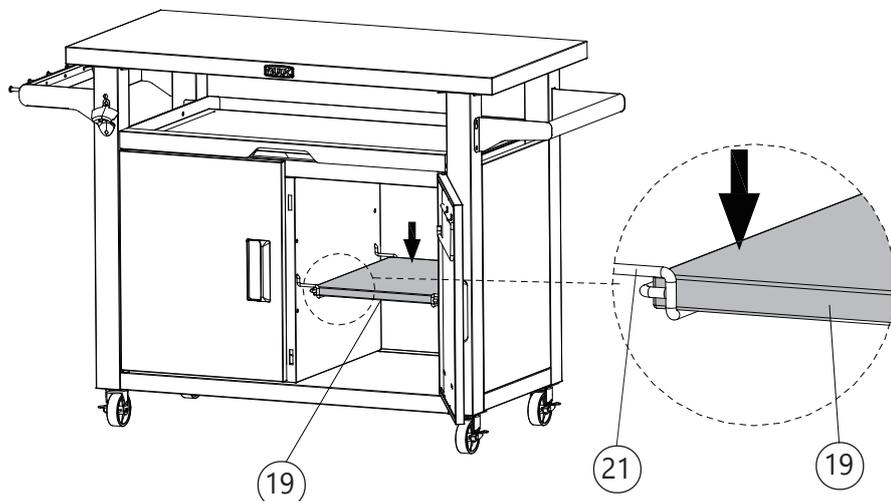


NUUK™ Assembly Instruction

STEP 19

 (22) x 1


Attach (22) on right side door, there a reset holder located inside of (16) .

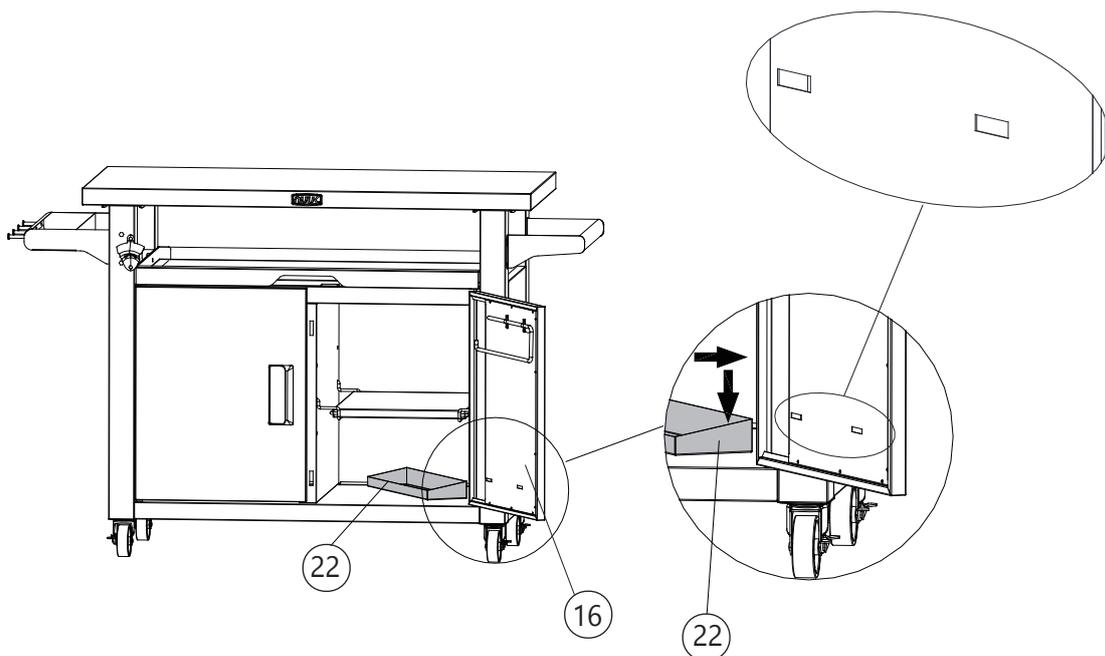

STEP 20

 (13) x 4


Put (13) x 4 on (12) .

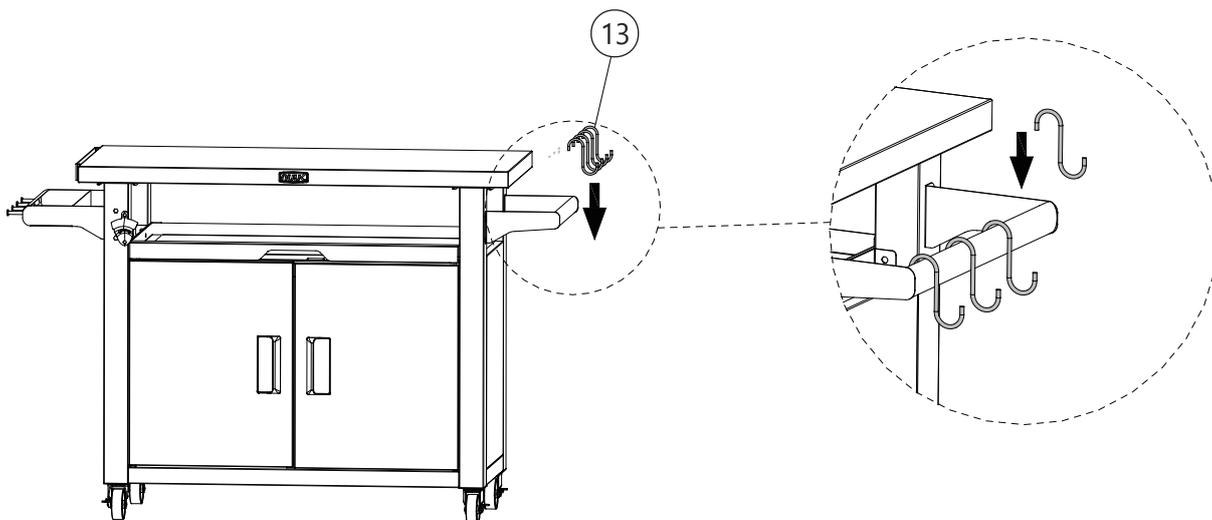




Assembly Instruction

Place the PVC board at the bottom as a storage cabinet, if you need.

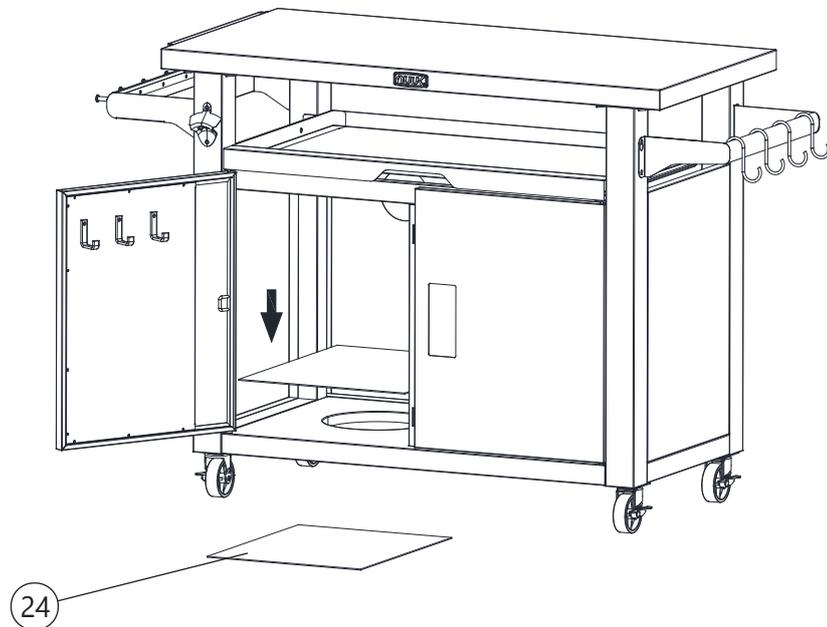

FINISH PRODUCTS

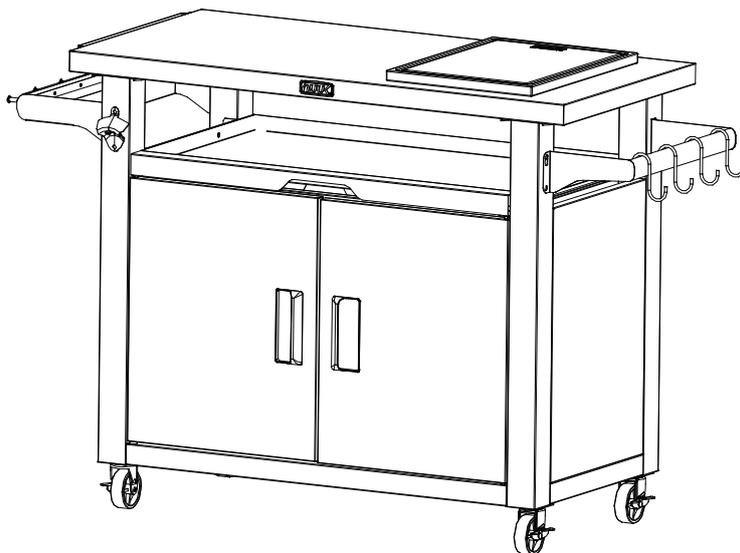

NOTE:
For Model: MC810 (SKU: 40013)

NUUKTM **Warranty**

NUUK LLC (NUUK USA) 1-YEAR WARRANTY

Proof of purchase is required to access this warranty program, which is in effect from the date of purchase.

NUUK USA warranty covers one year from the date of purchase. NUUK will assist you to get the replacement parts, replace the unit. ALL warranties are limited to the original purchase only. This warranty does not cover any liability for used good purchase. The purchaser must follow the usage instruction.

Warranty Provisions

- This warranty is non-transferable and does not cover failure due to misuse, improper installation or maintenance.
- This warranty is for replacement of defective parts only. We are not responsible for incidental or consequential damages or labor costs .
- This warranty does not cover damage caused by abrasive or chemical cleaners, or any damage to other components used in the installation or operation of the table.

- Paint is not warranted and may require touch-up.

NUUK customer service team

Phone: 1-800-719-8199
Monday through Friday
9:00 am to 5:00 pm, Eastern Time Zone

Email: service@nuukusa.com

NUUK USA
nuukusa.com