

Warranty

This fan comes with a 1-YEAR LIMITED COMPONENT WARRANTY. If your unit does not appear to be working properly, please contact our service center by calling 1-800-317-1688.

Prior to your call, we encourage you to visit our service-related website www.ilivingusa.com for troubleshooting tips and service instructions if needed

Warranty Information



Register your product at our website:
Or visit iLivingUSA.com/register-product

Feedback



Love it ? Help us make the product more for you.
Let us know with a customer review.
Please visit: <https://www.amazon.com/review/review-your-purchases#>

At iLiving USA, we are committed to bringing top quality products to our customers.

iLIVING USA
860 Mahler Road, Burlingame
CA 94010
Tel: 1-800-317-1688
Email: service@ilivingusa.com



Like us on Facebook: <https://www.facebook.com/ilivingusa/>



Follow us on Twitter: @iLIVINGUSA

 
Check out our website: www.ilivingusa.com

2024.07



OUTDOOR OSCILLATING WALL MOUNT FAN

MODELS:
ILG8EOSC18
ILG8EOSC20

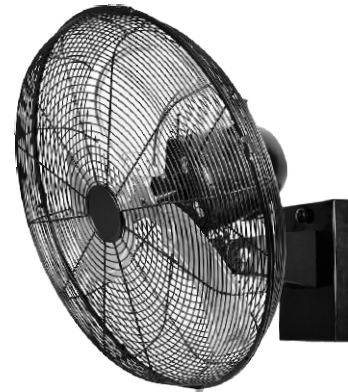

READ AND SAVE THESE INSTRUCTIONS

OWNER'S MANUAL

Please read the instructions carefully before use

READ AND SAVE THESE INSTRUCTIONS

VERY IMPORTANT SAFETY INFORMATION:

- This fan is suitable for outdoor use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not use an extension cord with this fan.
- To reduce the risk of injury to persons, install wall mounting fan at least 2.1m (7 feet) above the floor.

WARNING: To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).

CAUTION: To reduce the risk of electric shock, connect only to an outlet provided with a ground fault circuit interrupting device.

DANGER: Do not submerge motor in water or allow motor to be exposed to water. Personal injury and/or death could result.

Never handle the fan or motor with wet hands or when standing on wet or damp surface or in water. Fatal electrical shock could occur.

WARNING: Electric shock hazards—may cause severe personal injury or death. For your safety, turn off the electrical power supply before installing, moving, or servicing your fan to avoid any possible electrical shock hazards. Never make adjustments to the fan when in power is on.

WARNING:

Do not under any circumstances remove the power plug's ground prong or ground fault unit. For your personal safety, the fan must be grounded. The fan is equipped with a power supply with ground fault circuit interrupting device. Removal or tampering of power cord will void warranty.

 
Never use an extension cord to connect the fan to an outlet. All installations must be made into a grounded outlet.

UNPLUG THE FAN WHEN NOT IN USE.

WARNING: To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device. This appliance has a 3-prong plug. To reduce the risk of electrical shock, this plug is intended to fit in an outlet only one way. If this does not fit outlet, contact a qualified electrician. Do not attempt to bypass this procedure.

ASSEMBLY INSTRUCTIONS

CAUTION
BEFORE ASSEMBLING FAN TO MOUNTING BRACKET
MAKE CERTAIN THAT THE BRACKET SUPPORT WALL
CAN SUPPORT FAN.

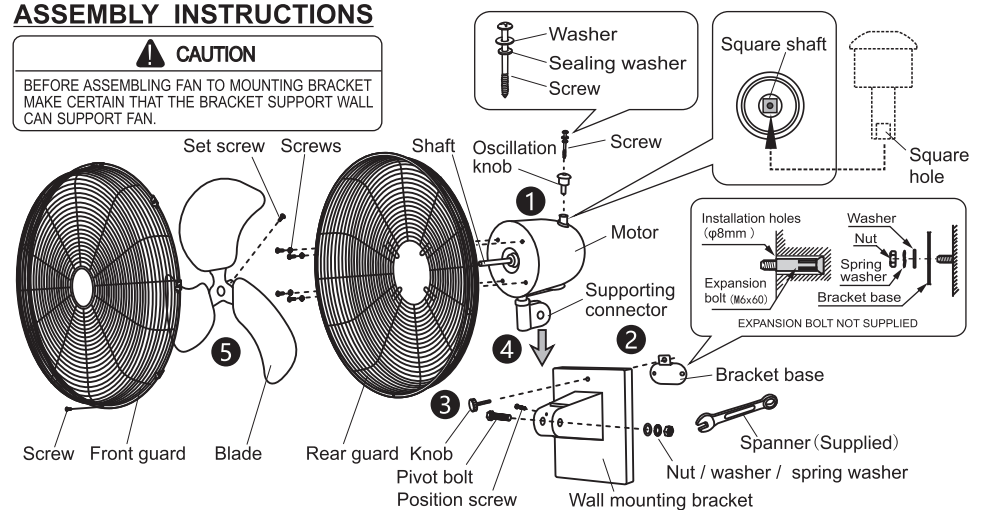

- Step 1: Attach the oscillating knob into the square shaft with screw, pay attention to the square hole of oscillating knob should be fully set into the square shaft.
- Step 2: Drill two 8mm diameter installation holes on the wall according to the installation dimensions on the bracket base. Attach the bracket base mounting to strong wall with expansion bolt.
- Step 3: Hang the Wall mounting bracket upward onto the bracket base. Assembling the knob to mounting bracket, tighten firmly.
- Step 4: Install supporting connector of the fan motor on the wall mounting bracket with position screw, pivot bolt, washer spring washer and nut, tighten firmly.
- Step 5: Then assembling the rear guard, blade, front guard to the fan motor.

 
OPERATING INSTRUCTIONS

SPEED CONTROL:

Select air speed by setting switch to either low(1) - medial(2) - high(3) - off(0) .

SETTING OSCILLATING MODE:

1. TO MAKE THE FAN OSCILLATE:
Press down the oscillation knob at the top of the fan head. (See Figure A.)
2. TO STOP THE FAN OSCILLATE:
Pull up the oscillation knob at the top of the fan head. (See Figure B.)

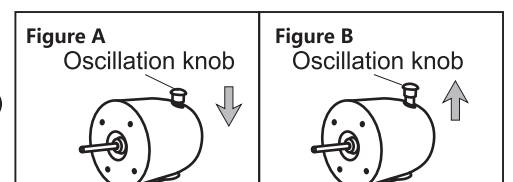

CLEANING

WARNING: Unplug from electrical supply source before cleaning.

1. Use soft damp cloth then wipe with dry cloth.
2. Do not use harmful cleaners to paints or plastics.
3. Do not bend the blades.

RATING:

ILG8EOSC18: 120V~ 60Hz, 1.0A, 115W
ILG8EOSC20: 120V~ 60Hz, 1.0A, 120W