



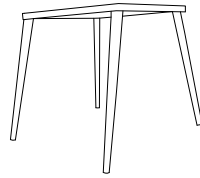

# PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS


ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D369-700 & DS-D369-700-1

DESCRIPTION / DESCRIPCIÓN : Accent Chair / Fauteuil décoratifs / Silla decorativa

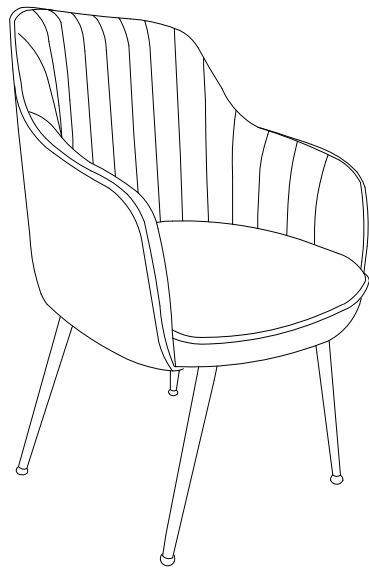

**A**

x1 Base  
x1 Tabouret  
x1 Asiento

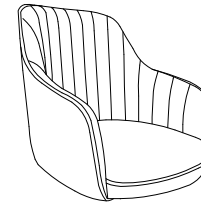

**B**

x1 Seat  
x1 Siège  
x1 Asiento



**C**

x4+1 Allen Bolt (L30MM) \*  
x4+1 Le Boulon Allen  
x4+1 Tornillo Allen



**D**

x4+1 Lock washer \*  
x4+1 Rondelle de blocage  
x4+1 Arandela de Seguridad



 
**E**

x4+1 Flat Washer \*  
x4+1 Rondelle plate  
x4+1 Arandela plana



**F**

x1 Allen Wrench \*  
x1 La Clé Allen  
x1 Llave Allen



**G**

x4+1 leveler \*  
x4+1 Patin réglable  
x4+1 nivelador

\* Replaceable Part




# ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE

ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D369-700 & DS-D369-700-1

DESCRIPTION / DESCRIPCIÓN : Accent Chair / Fauteuil décoratifs / Silla decorativa

Step 1  
Étape 1  
Paso 1


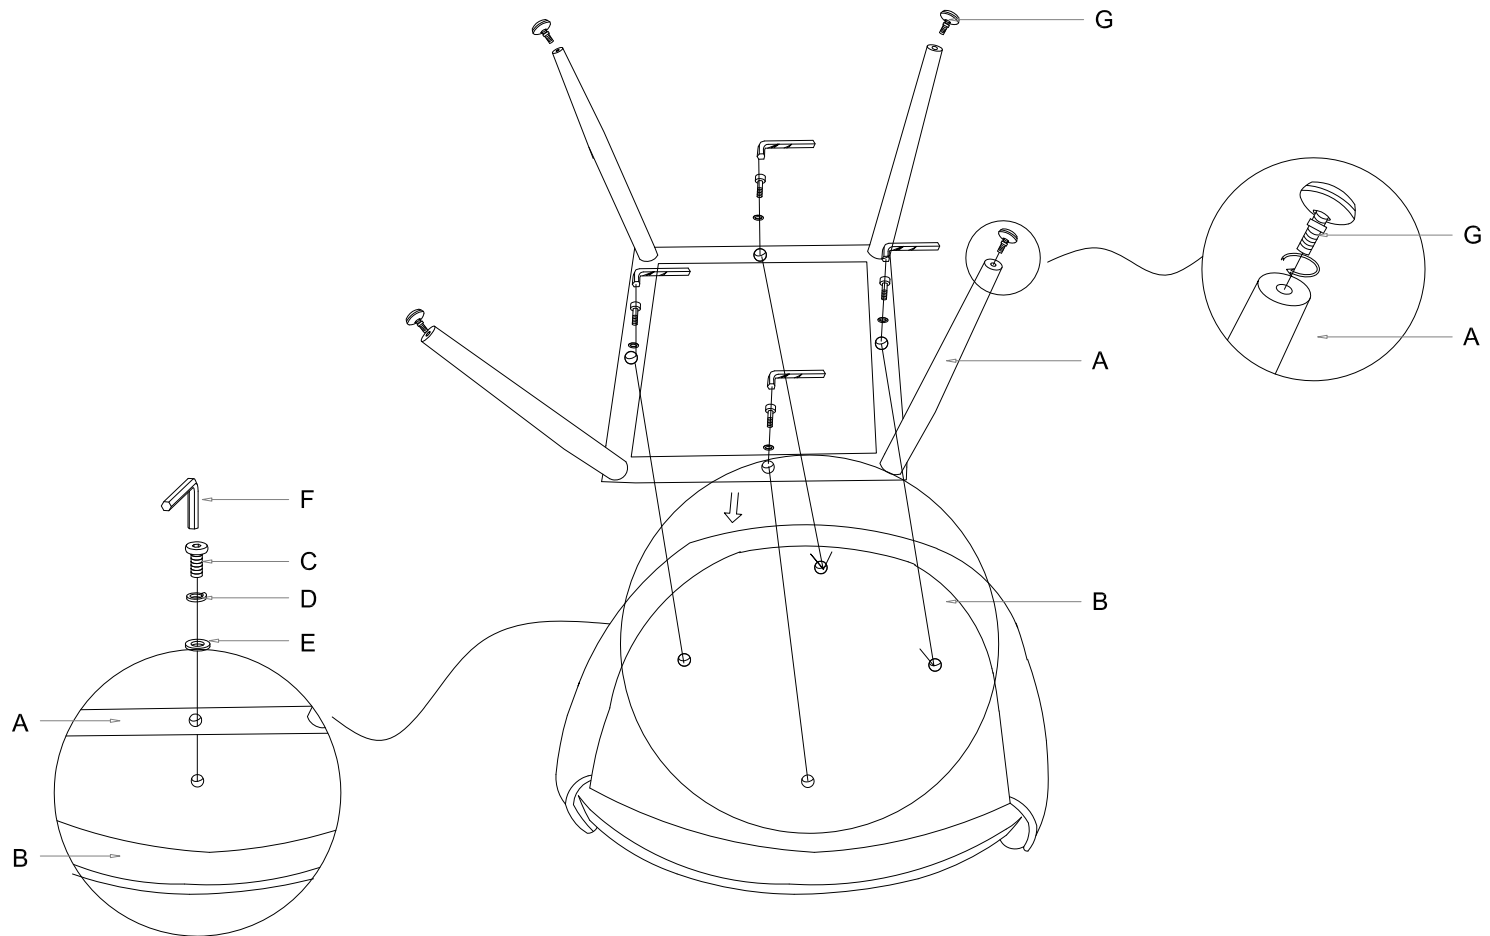




**REPLACEABLE PART / PARTIE REMPLAÇABLE / PARTE REEMPLAZABLE**

ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D369-700 & DS-D369-700-1

 DESCRIPTION / DESCRIPCIÓN : Accent Chair / Fauteuil décoratifs / Silla decorativa

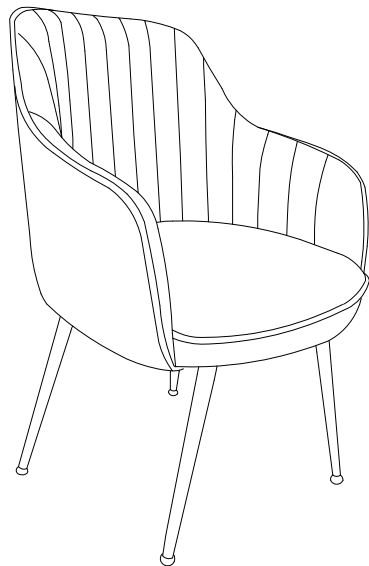

X4 RD369-700-leveler \*  
Patin réglable  
nivelador



x1 RD369-700-HWKIT - Hardware Kit \*