

Use and Care Manual

Wash with mild soap and water; rinse with clean water and let air dry. Always let the umbrella dry completely before storing. Store the umbrella out of extreme weather or high winds.

NOTE: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please read and understand this entire manual before attempting to assemble, operate or install the product.

Assemble on a soft surface, such as carpeting, to avoid scratching the pole finish or tearing the umbrella fabric.

Crank the umbrella to its closed position during windy conditions. Do not leave the umbrella open in high winds.

Use a heavy or weighted umbrella base to stabilize the umbrella.

This outdoor umbrella is designed and made for personal non-commercial use. It should not be used as a toy or a tool. Children under the age of 16 should not be engaged in the assembly, removal or disassembly. Children under age of 10 should be supervised by a competent adult while using this umbrella.