ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0347

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements. 2. READ AND SAVE THIS INSTRUCTION.



- then secure the middle rod onto the lower rod using the threaded pipe.
- c. Thread the fixture wires through the upper rod, then secure the upper rod onto the middle rod using the threaded pipe.
- d. Thread the fixture wire through coupling kit, canopy unit, then secure the rod assembly to the coupling kit. **Note: Length adjustable from 20" to 81".**

Use fewer rods if shorter length is desired.

- Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - ---Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
 - ---Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
 - ---Attach the fixture ground wire to the mounting plate unit (A) with the green ground screw, then connect it to the house ground wire with a wire connector (C). Carefully put the wires back into the outlet box.





- 4. Attach the canopy unit to the mounting plate unit (A) by inserting the fixture mounting screws, secure it with two bolt nuts (D).
- 5. Install 4 x 60W Max. candelabra base bulbs (not included). See relamping label at socket area or packaging for maximum wattage allowed.
- 6. Angled mounting recommended for a vaulted or angled ceiling. (See Fig.1)
- 7. Adjust the frame according to the picture on the package.

Turn on the power at fuse or circuit box



The following parts are available for re-order if damaged or missing.





