

KITCHEN STORAGE ACCESSORIES

INSTALLATION GUIDE




ATTENTION: Is your Storage Accessory damaged?

Need help or spare parts? For fastest service, contact NewAge Products at 1-877-306-8930; or support@newageproducts.com. Do not return to the retailer.

Index


Product Inspection	3
Tools Needed	3
Maintenance and Care	3
Installing the Pull out 50L bin	4
Installing the Magic Corner	6
Installing the Iron Board	8
Installing the 18", 24", 36" Pants Display Rack	10
Installing the 18" and 24" Closet Rod on Cabinet Walls	12
Installing the 18" and 24"Closet Rod on Cabinet Shelf	14
Installing the 18", 24", 36" Pull out Hamper Basket	16
Installing the Under Sink Organizer	19
Installing the 12" and 18" Double Pull-out Basket	22
Installing the 18", 24", 36" Pull-out Basket	24
Manufacturer One Year Limited Warranty	25

Product Inspection

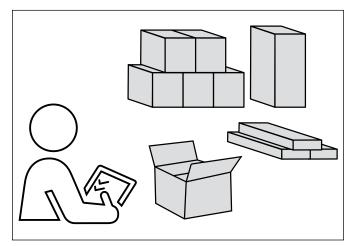

- Check to see all parts are received as per the order placed.
- Contact NewAge Products at 1-877-306-8930; for any missing parts.
- Inspect the products for any damages before starting the installation.
- Go through the installation instructions carefully before starting the installation.

Tools Needed

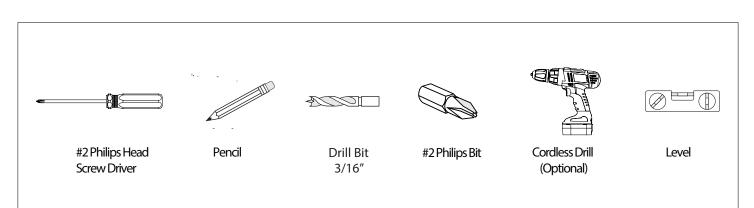

Maintenance and Care

- Wipe and clean the accessory with a soft cloth. Do not use the scourers, abrasives or chemical cleaners.
- Keep the slides out of water to protect the slides, thus make sure the smooth sliding.


Installing the Pull out 50L bin

```
0
```

Tools and parts needed.




Place the template on the bottom of the cabinet and align it to the front and side of the cabinet.

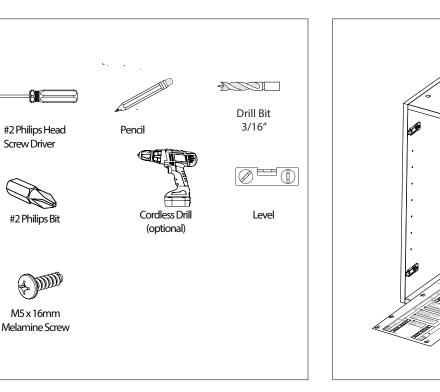


Mark the drill holes layed out on the template.




Drill holes at the marked locations using 3/16" mm drill bit.

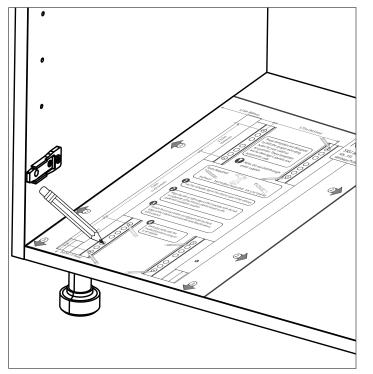

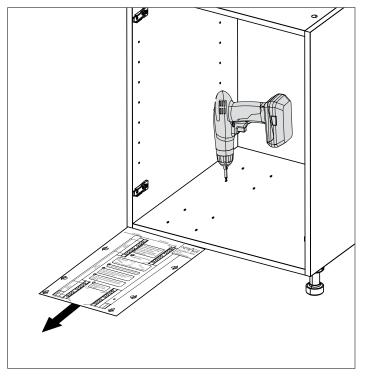


Installing the Pull out 50L bin

Insert the metal basket assembly and align the bracket holes to the drilled holes in the cabinet. Using a screwdriver or cordless drill fasten the basket assembly using eight M5x16mm screws included with the basket assembly. Make sure the cross posts are installed on the basket assembly as shown in the image (A).

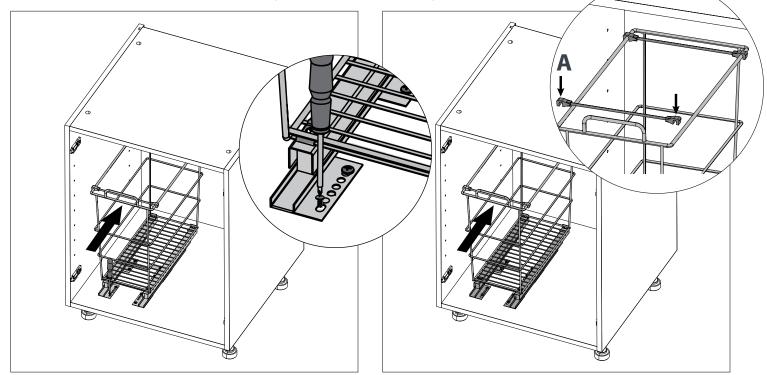

Slide the metal basket out and insert the bin. Adjust the cross posts to secure garbage bin.

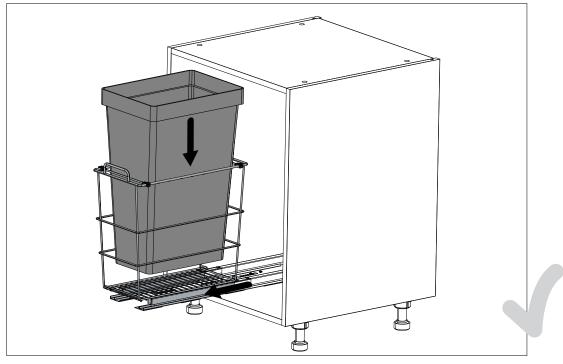


Installing the Magic Corner




Tools and parts needed.




Place the template on the bottom of the cabinet and align it to the front and side of the cabinet.

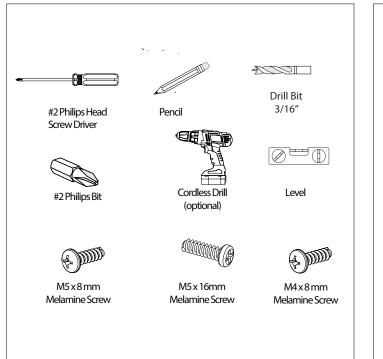

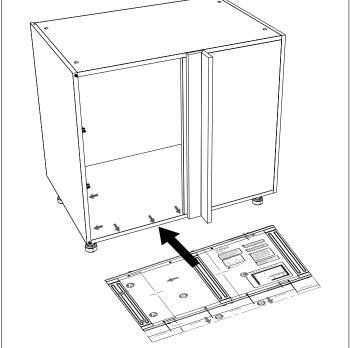


Mark the drill holes layed out on the template.

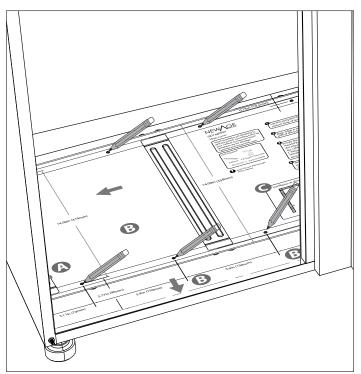




Drill holes at the marked locations using 3/16" mm drill bit.

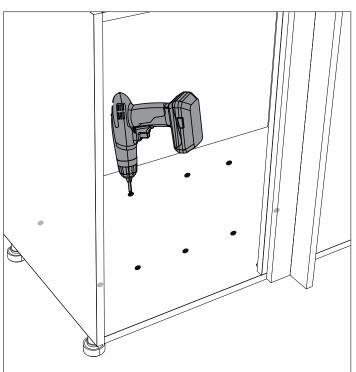


Installing the Magic Corner



Insert the sliding base and align the bracket holes to the drilled holes in the cabinet. Using a screwdriver or cordless drill fasten the basket assembly using the eight M5x16 screws included with the Magic corner.

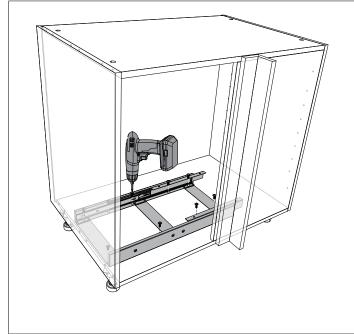


Insert the top frame assembly and align the bracket holes with the holes on the sliding base. Using a screwdriver or cordless drill fasten the top frame assembly using the eight M5x8 screws included with the assembly.

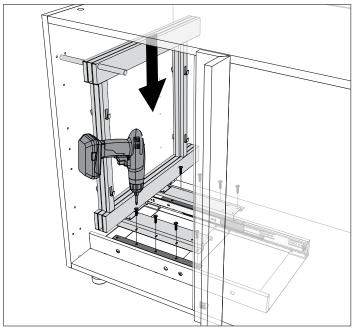




Slide the top frame and attach the handles using two M4x8mm screws. Attach bottom brackets (B) to the top frame using eight M5x8 screws included with the assembly and screw in the two handles on top.

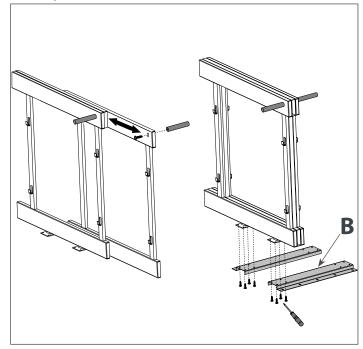



Slide the top frame assembly out and install the metal baskets.

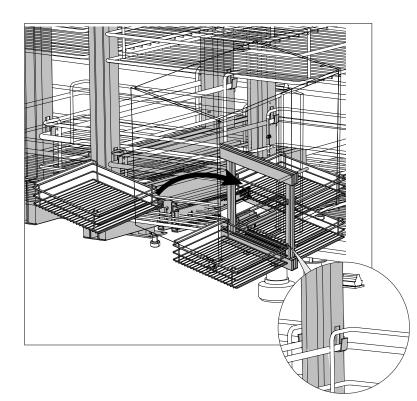


Installing the Iron Board



Tools and parts needed.





Place the Iron board at desired position on the cabinet shelf.

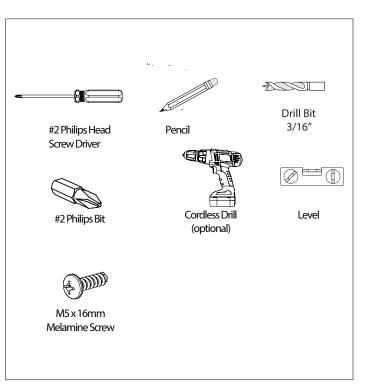




Slide the iron board out from the frame. (Note: Use two or more people to hold the iron board in position.) Mark the holes on the sliding frame base.

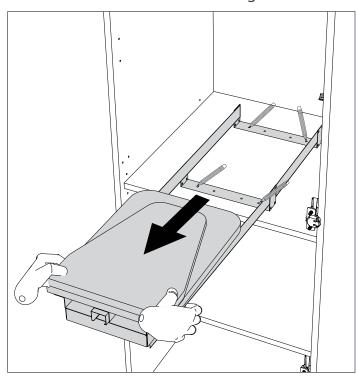

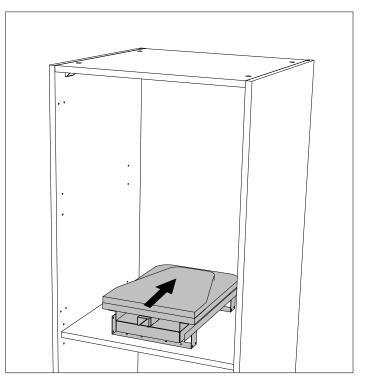




Drill holes at the marked locations using 3/16 mm drill bit.

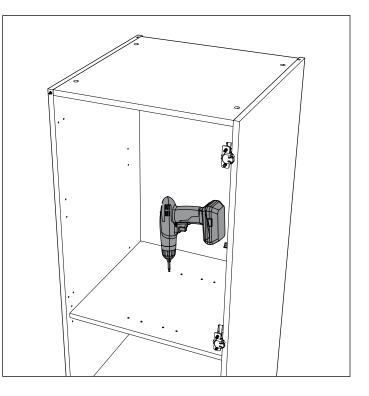

Installing the Iron Board




Place the iron board, slide out and fasten the iron board to shelf using eight M5x16mm screws included in the assembly.

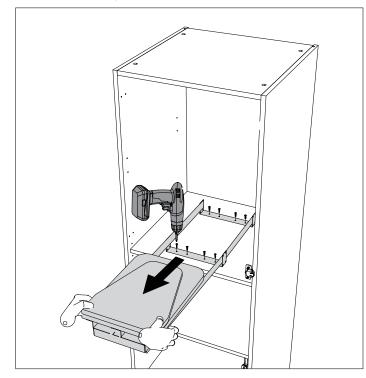



Slide the ironing board in to finish the installation.

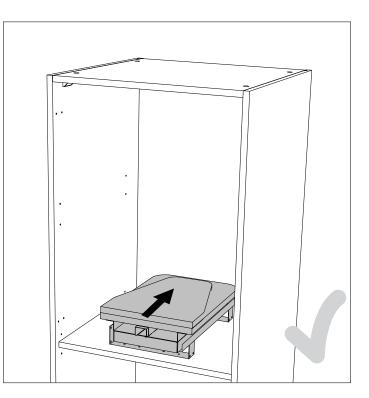


Installing the 18", 24", 36" Pants Display Rack




Tools and parts needed.



Draw a horizontal line on the cabinet walls at desired height (L).

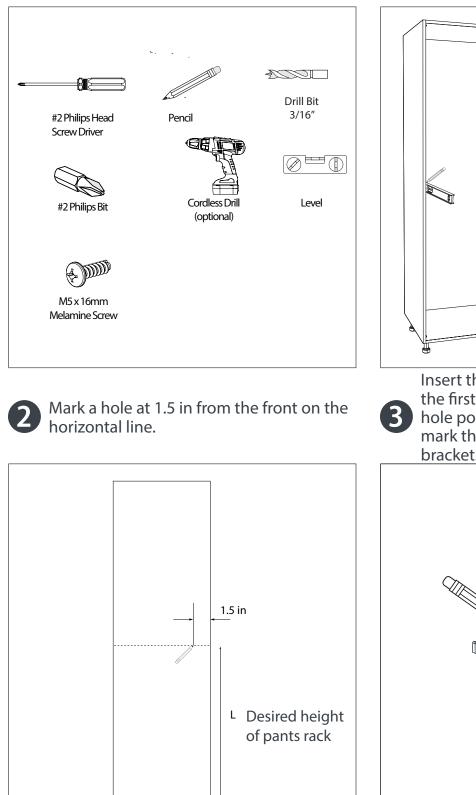

Insert the side mounted slide and align the first hole on the slide with the marked hole position. Use the slide as template, mark the outer holes on slide mounting bracket.

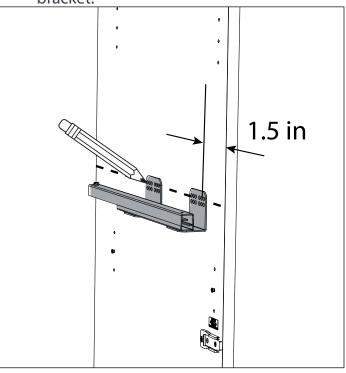

Side view of inside panel


Installing the 18", 24", 36" Pants Display Rack




Drill holes at the marked locations using 3/16 mm drill bit.




Insert the slide and align the holes with the drilled holes on the cabinet. Using a power drill or screw driver fasten the side mounting slide to the cabinet using four M5x16mm Screws.

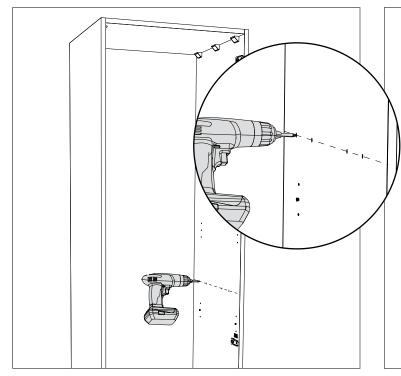

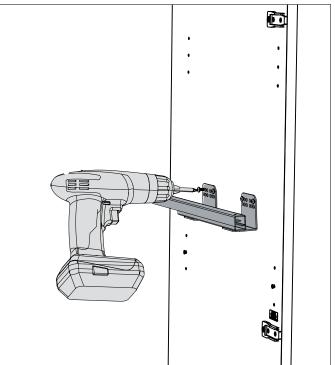



6 Insert the rack and clip it on the slides.

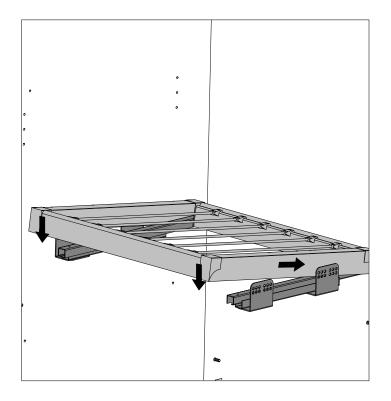


Installing the 18" and 24" Closet Rod on Cabinet Walls

0	

Tools and parts needed.




Draw a horizontal line on both walls of the cabinet at distance X from top and vertical line at distance Y from the back. Put the bracket on wall and mark holes.

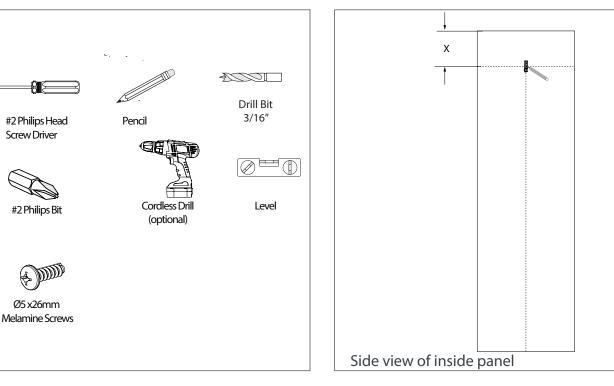


Drill holes at the marked locations on both walls using 3/16" drill bit.



Fasten one mounting bracket to one side of cabinet with 5x26mm screws.

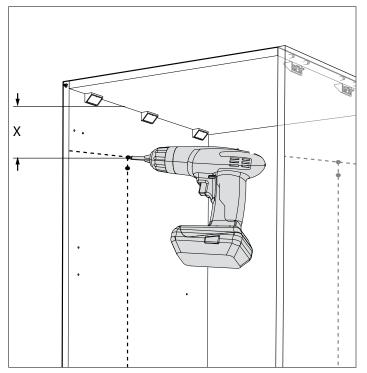

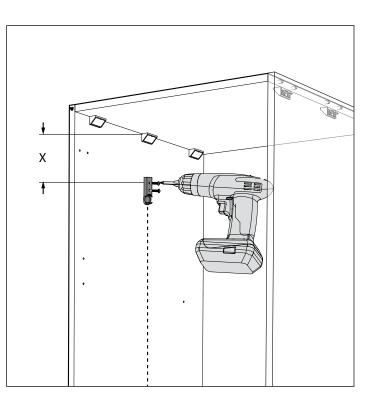


Installing the 18" and 24" Closet Rod on Cabinet Walls




Fix the other bracket to the closet rod.




Align the closet rod and bracket to the holes marked on the opposite cabinet wall.

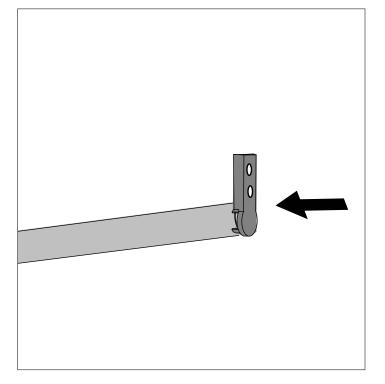


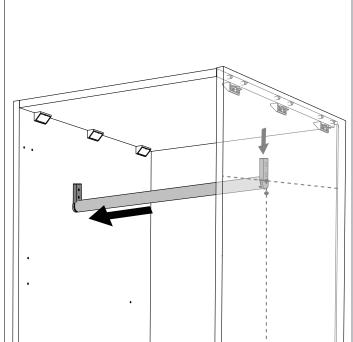

6

Fasten the bracket to cabinet wall using two 5x26mm screws.

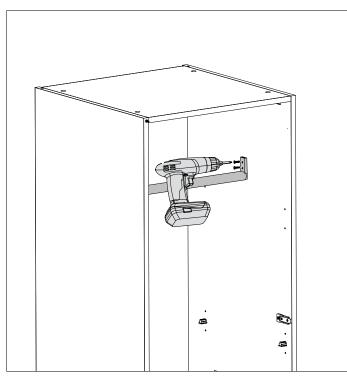

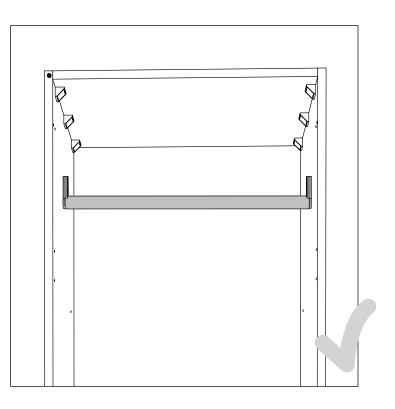


Installing the 18" and 24"Closet Rod on Cabinet Shelf

6

Tools and parts needed.




Draw a centre line on the shelf and mark two holes at a distance of 16.25 in for 18" closet rod and 22.25 in for 24" closet rod from the centre on both sides.

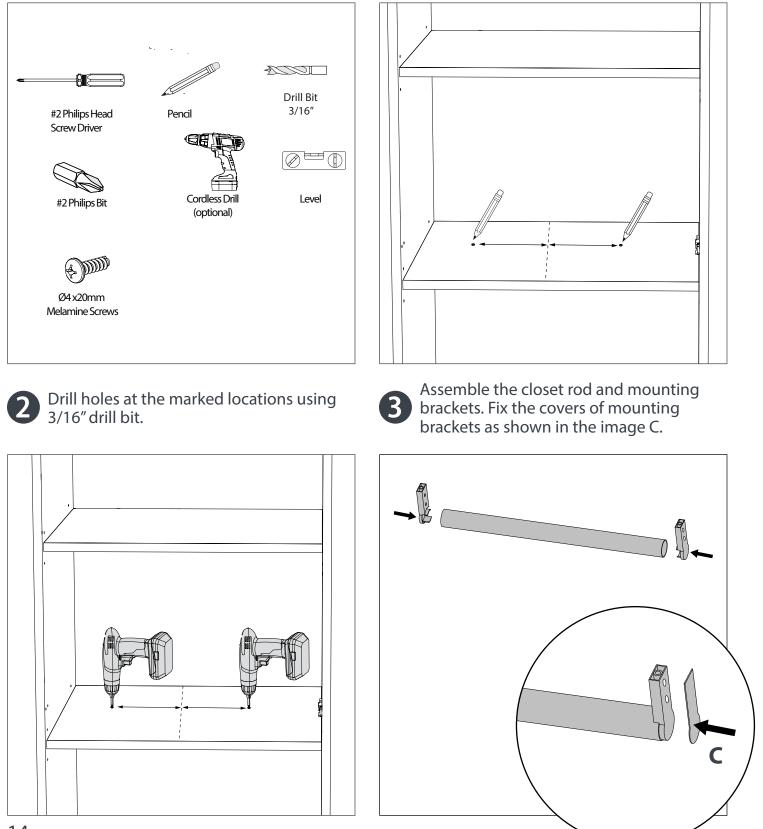


Installing the 18" and 24"Closet Rod on Cabinet Shelf



Insert the closet rod and align the top holes with the drilled holes on shelf. Fasten the closet rod to shelf using two 4x20mm screws.

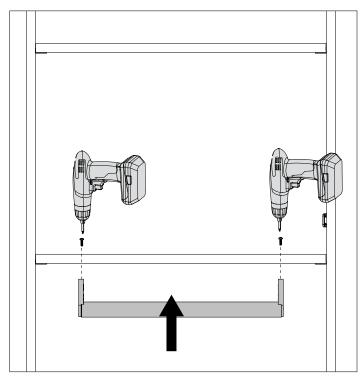

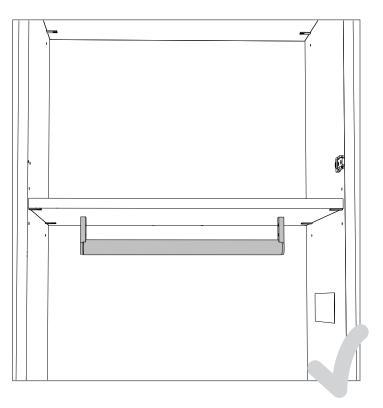


Installing the 18", 24", 36" Pull out Hamper Basket




Tools and parts needed.



Draw a horizontal line on the cabinet walls at desired height (L).

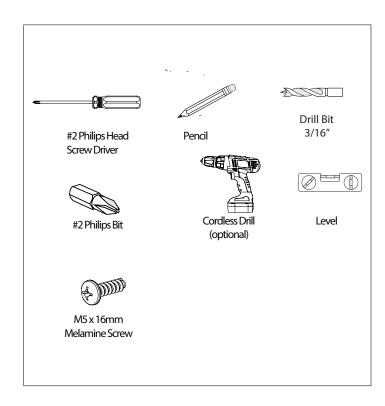



2 Mark a hole at 1.5 in from the front on the horizontal line.

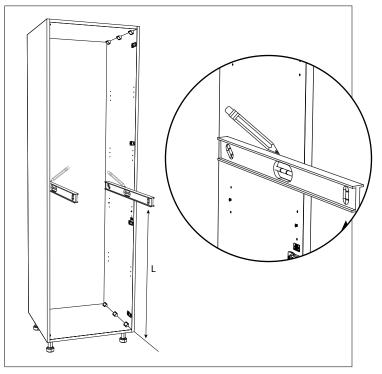



Insert the side mounted slide and align the first hole on the slide with the marked hole position. Use the slide as template mark the outer holes of the slide mounting bracket.

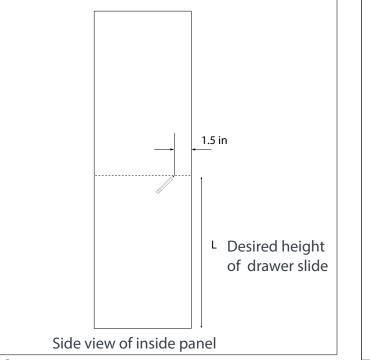


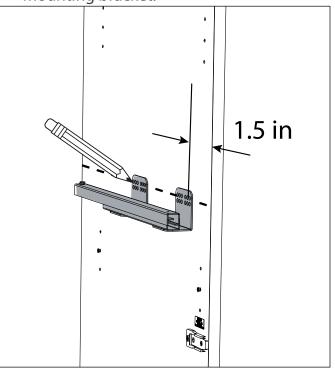


Installing the 18", 24", 36" Pull out Hamper Basket



Drill holes at the marked locations using 3/16 mm drill bit.

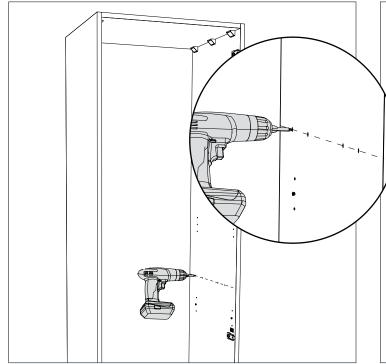


Take the support frame and adjust the frame length by adjusting the screws at the bottom according to the interior of the cabinet. Make sure to adjust the distance of the four sides of the frame consistent.

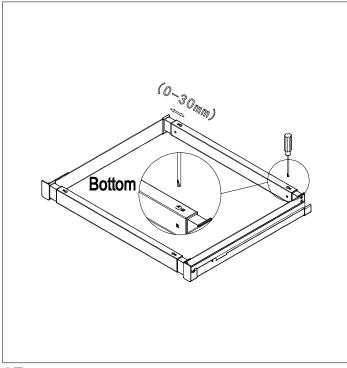


5

Insert the slide and align the holes with the drilled holes on the cabinet. Using a power drill or screw driver fasten the side mounting slide to the cabinet using four M5x16mm Screws.

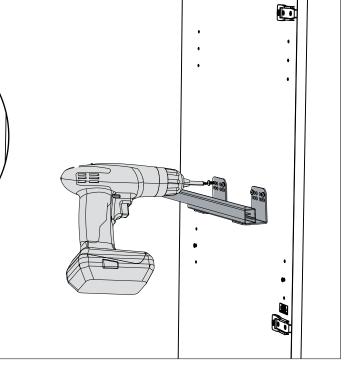

7

Install frame on the slides. After the frame is installed, test weather the frame is sliding smoothly. Lock the four screws at the bottom of the frame.

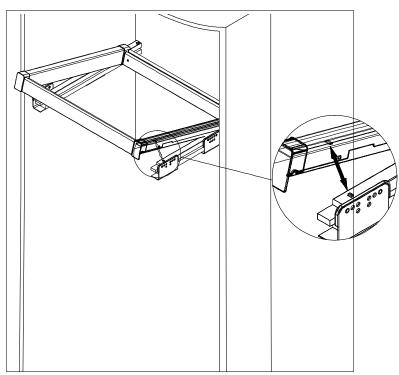


6

Installing the 18", 24", 36" Pull out Hamper Basket




Open the velcro of the clothing bag on four sides, install wire frame under the folds and fold back the velcro over the wire frame. Connect the plastic holders to with the wire frame as shown in the image.

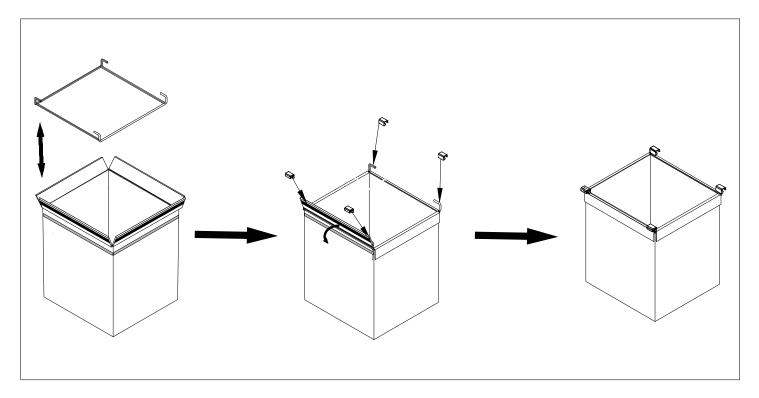



Clip the wireframe to the bottom the support frame.

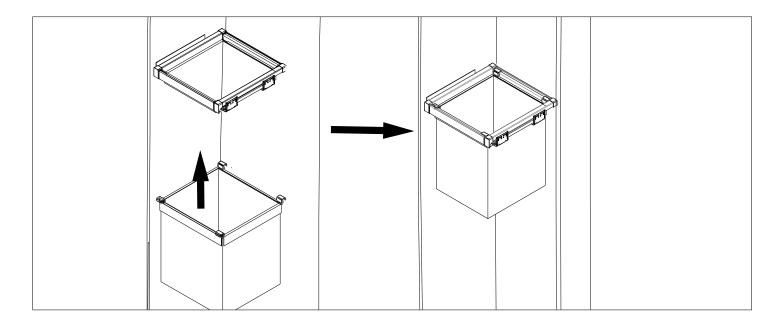


Installing the Under Sink Organizer



Tools and parts needed.




Place the template on the bottom panel of cabinet, aligning it to desired location using template arrows.

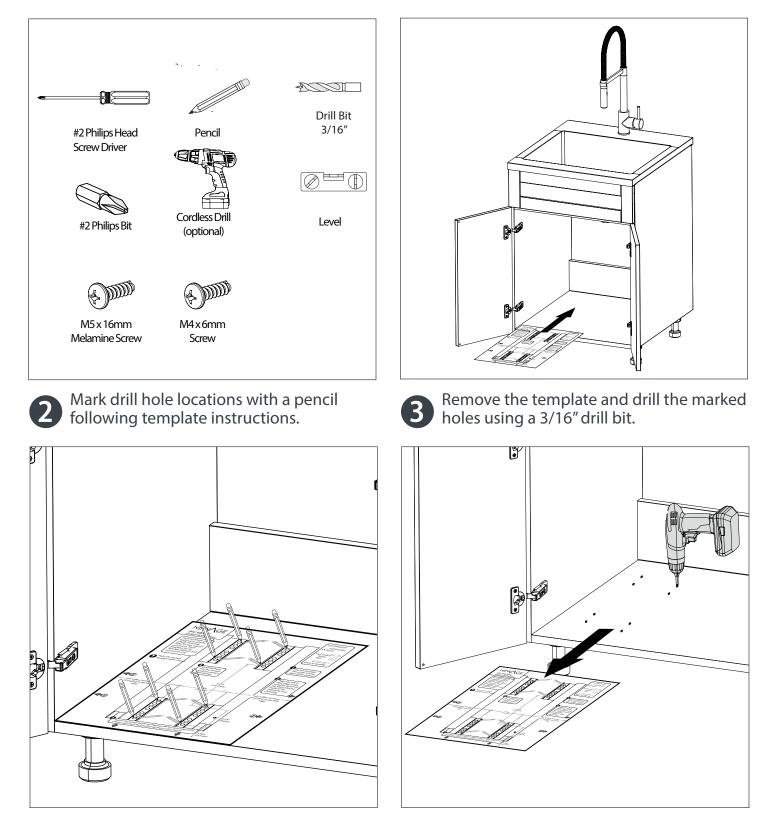


Installing the Under Sink Organizer





Install rails aligning with the pre marked holes using eight M5x16mm screws.

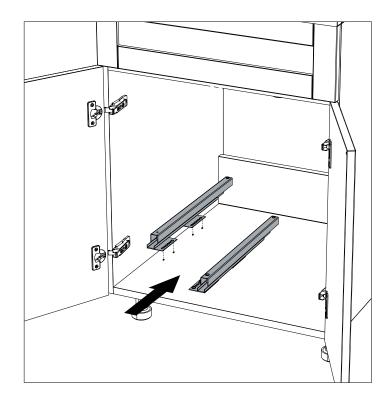

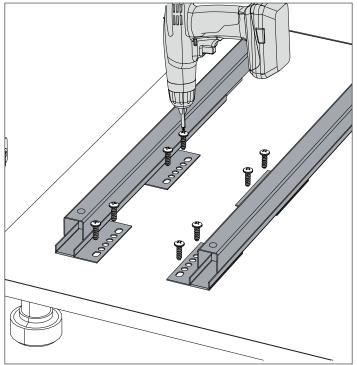

Slide the centre frame assembly onto the rails by pushing it under the clips at back of the slides as shown in (**A**). Secure front portion of the frame to the rails using two M4x6mm screws as shown in (**B**).

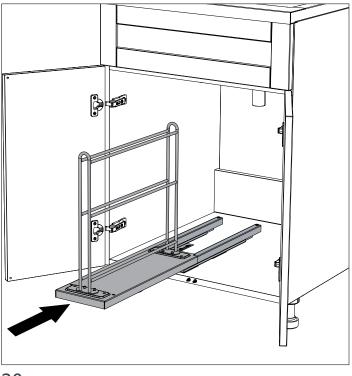


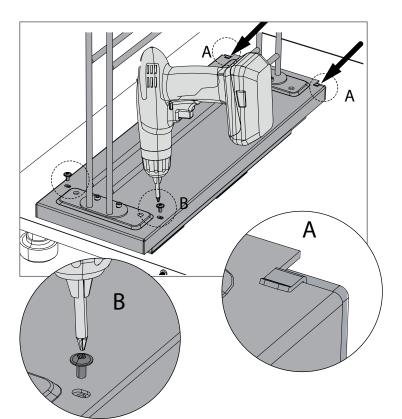


Installing the Under Sink Organizer



6 Install baskets using the locking clips as shown below.

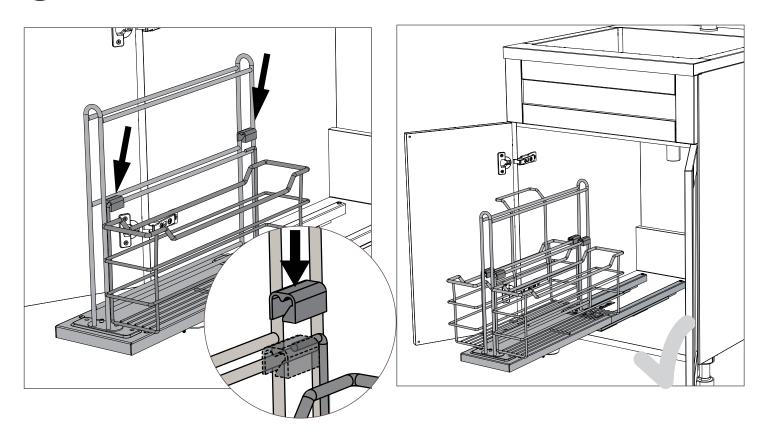


Installing the 12" and 18" Double Pull-out Basket

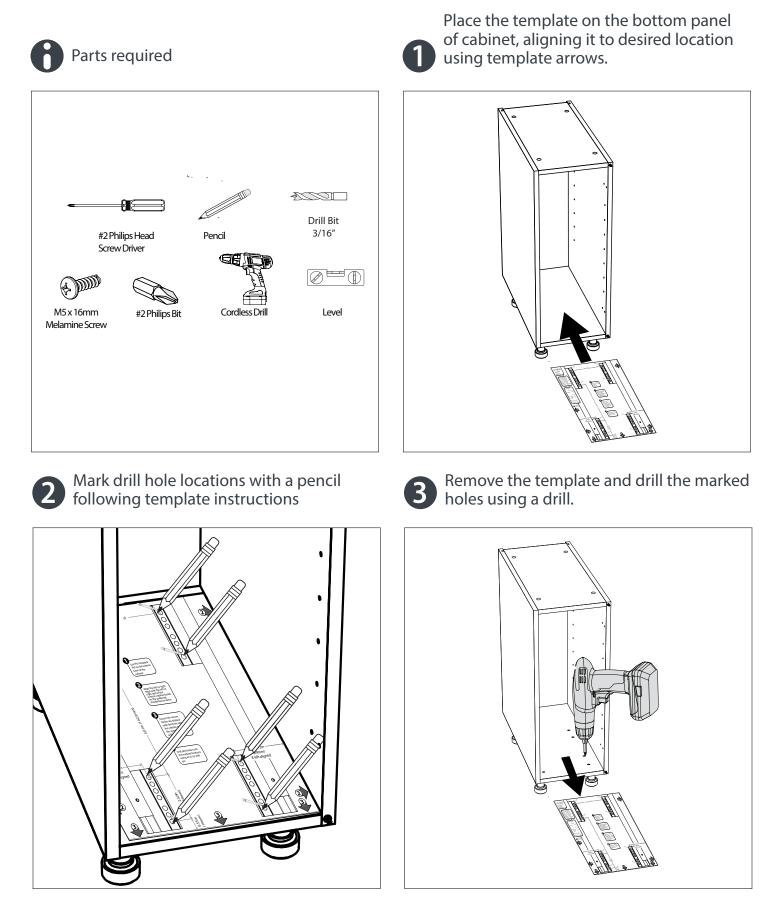

Installing the 12" and 18" Double Pull-out Basket




Insert the metal basket assembly and align the bracket holes to the drilled holes in the cabinet

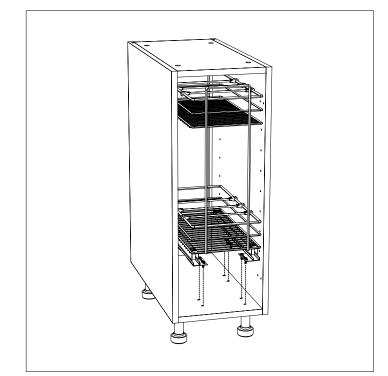




Using a screwdriver or cordless drill fasten the Basket assembly using the eight M5x16mm screws included with the basket assembly.

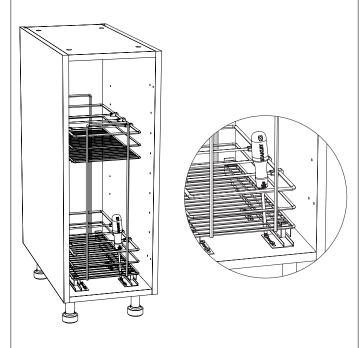

Installing the 18", 24", 36" Pull-out Basket



Parts and tools required

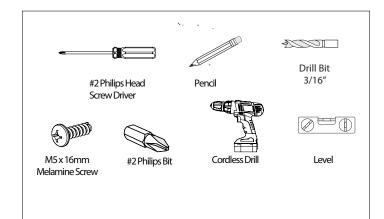


2

Mark drill hole locations with a pencil following template instructions.





Place the template on the side wall of the cabinet, aligning it to the top and front using template arrows.

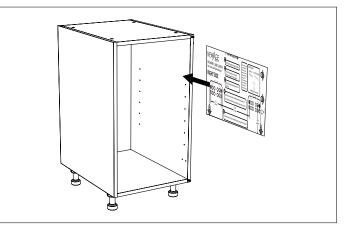





 Remove the template and drill the marked holes using a drill.

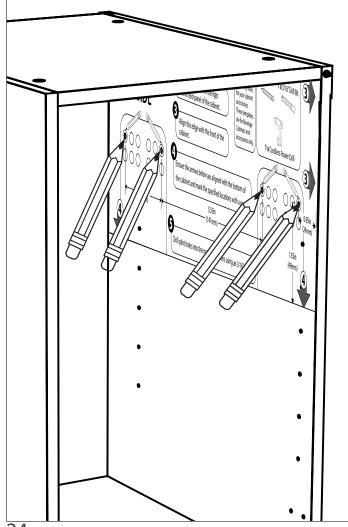

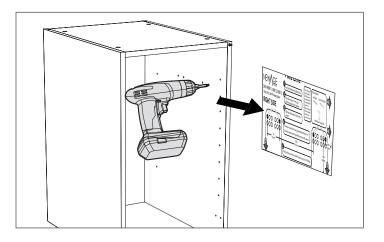



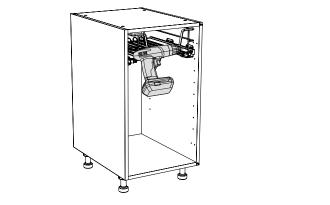

Manufacturer One Year Limited Warranty

When this product is installed, operated and maintained according to the instructions attached to or furnished with the product, NewAge Products Inc. will replace the defective product or parts if the part fails as a result of defective materials or workmanship for a period of One Year from the purchase date of the product.

NEWAGE PRODUCTS INC. WILL NOT PAY FOR:

- Service calls to correct the installation of any NewAge products or to instruct you how to use or install them.
- Damage resulting from products caused by accident, misuse, abuse, fire, flood, improper installation, acts of God, neglect, modification or mishandling.
- Repairs or replacement when your product is used in other than normal, residential use, such as a commercial environment, or handled in anyway inconsistent with the installation instructions included with the product.
- Surfaces damaged due to improper use of chemicals, and detergents.
- Replacement parts for NewAge products outside Canada and the United States.
- Loss due to theft, fire, flood, accident or acts of God.
- Shipping or freight fees to deliver replacement products or to return defective products.
- Any labor costs during the one year limited warranty period.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

IMPLIED WARRANTIES, INCLUDING TO THE EXTENT APPLICABLE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXCLUDED TO THE EXTENT LEGALLY PERMISSIBLE. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO ONE YEAR, OR THE SHORTEST PERIOD ALLOWED BY LAW.

Thank you for purchasing a NewAge Product!

Please give us a call or visit online if you have any questions. Call 1.877.306.8930; e-mail at info@newageproducts.com