

Pool Cleaner

Product ID. 7AJ7N



Scan for Support
support@garvee.com



Distributed by
GARVEE.com

V2604034JQS

INTRODUCTION AND SAFETY



Safety information

1. Please read the instructions for use very carefully and observe the information they contain. By referring to these instructions, familiarize yourself with the appliance, learn how to use it correctly, and note the safety precautions to be taken.
2. Take the appropriate steps to ensure that children have no access to the appliance.
3. The user of the appliance is responsible for any third parties in the work area.
4. Before using the appliance for the first time an electrician must check that the necessary electrical protection measures have been taken.



Caution!

1. The Pool Cleaner must not be used when people are in the water.
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. If the equipment is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Please contact your electrician!
5. Use the appliance only for the purposes specified in these instructions for use.
6. You are responsible for safety in the work area.
7. When charging make sure that appliance is plugged into a socket in a place where there is no risk of flooding and which is protected against moisture.
8. The operator is responsible for any local safety and installation regulations. (Ask your electrician for advice)
9. If the Pool Cleaner fails, any repair work necessary must be performed only by an electrician.
10. Never let the Pool Cleaner run dry and never operate it with fully

INTRODUCTION AND SAFETY

closed intake power. The manufacturer's warranty shall lapse if the pump is damaged due to it being allowed to run dry.

11. Applicable water temperature: 5 °C (41°F) to 50 °C (122°F).

12. Power off the cleaner before charging it.

13. Keep your hair, body parts, and clothing away from the suction inlet during operation, as the suction nozzle generates strong suction force that may cause injury.

14. Do not disassemble the cleaner without authorization.

15. Charge using the original charger only.

16. Charge the cleaner in a well-ventilated, clean, and dry indoor location.

17. Stop use if the charger is damaged in any form.

18. If the power cord is damaged, it must be replaced by the manufacturer or its authorized service personnel to avoid hazards.

19. Make sure both the cleaner and charger are dry before charging.


20. This cleaner is designed for underwater use only and is not suitable as an all-purpose vacuum cleaner.

21. Avoid cleaning sharp objects with this product, as they may damage the cleaner and filter.

OPERATION

Description

PCT406T

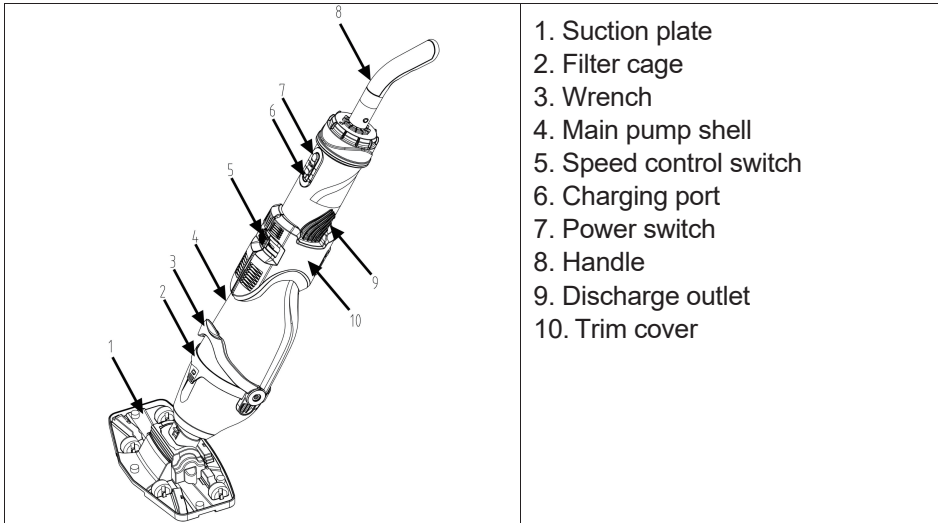

Remark: The image shown here is indicative only. If there is inconsistency between the image and the actual product, the actual product shall govern.

Durability


- The maximum temperature of the medium to be pumped in continuous operation should not exceed +35°C.
- This pool cleaner is not to be used to clean combustible, gaseous or explosive fluids..

Applications


- **Suitable Applications:**
Small swimming pools, fish ponds, bathing pools, and ornamental ponds.
- **Suitable Water Types:**
Swimming pool water, clean fresh water, and rainwater.

OPERATING INSTRUCTIONS

- Assemble the handle and suction plate onto the pump body in sequence as illustrated to complete the unit.

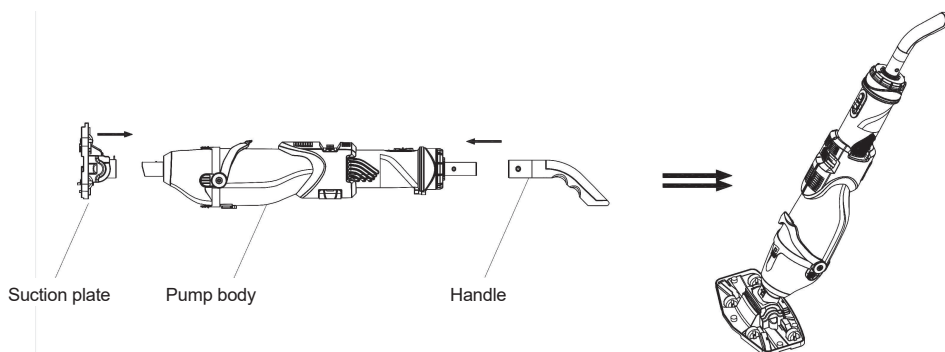


- Rotate the motor base into the pump body following the steps and direction shown in the figure below.

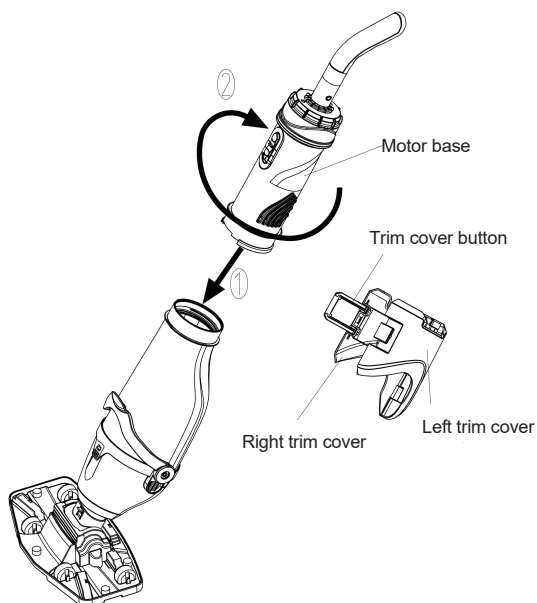


OPERATING INSTRUCTIONS

- Install the left trim cover, right trim cover, and trim cover button according to the steps in the figure below.

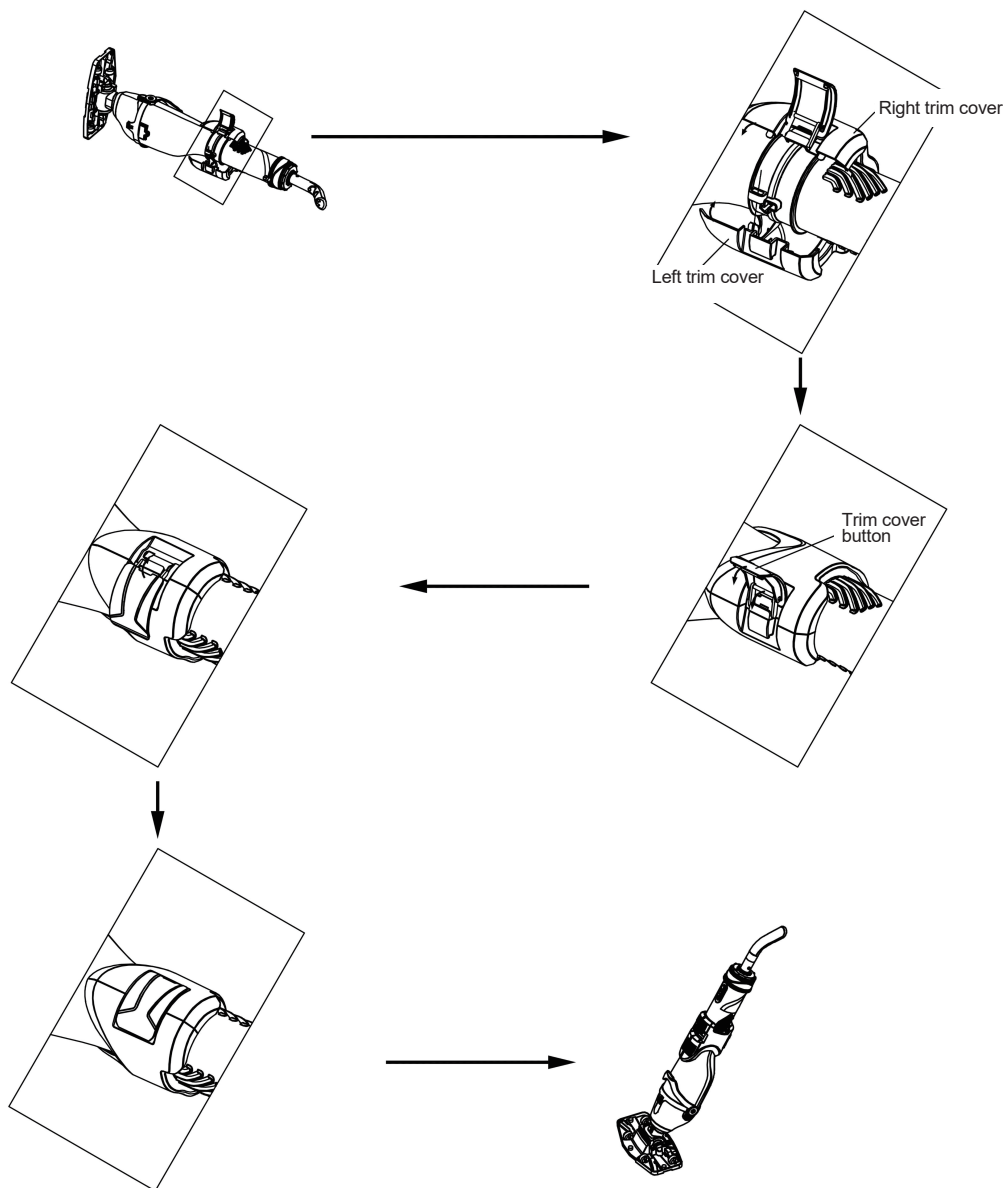


OPERATING INSTRUCTIONS

- Push the power switch downward to activate the cleaner. Minimum operating water depth: 40cm.

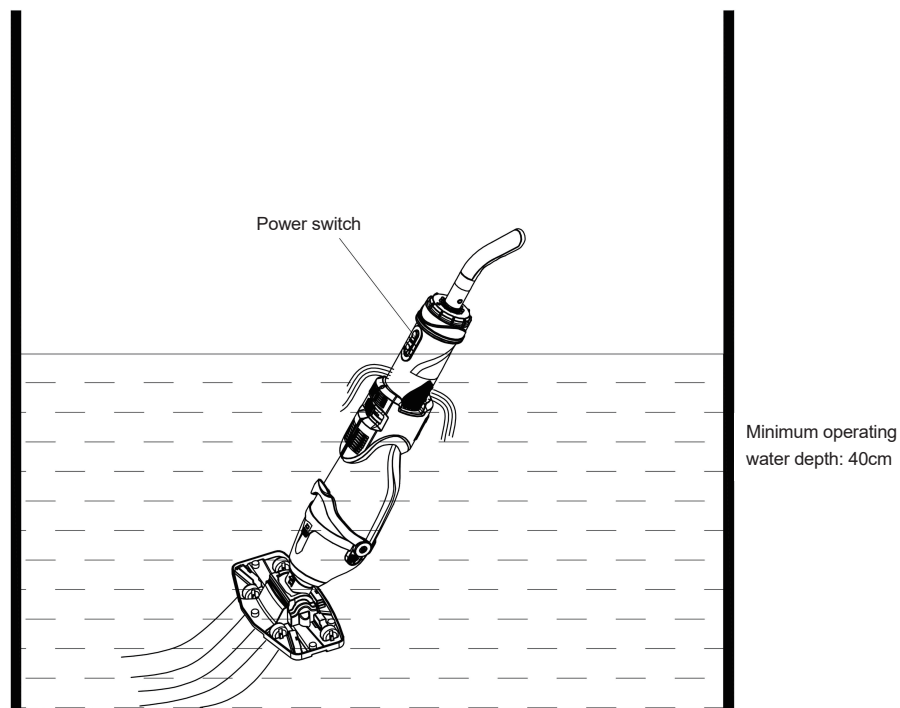


- To clean the filter screen: Release the wrench as shown in the figure, unclip both upper and lower latches of the filter cage, remove debris from the filter mesh and rinse the filter mesh with clean water.

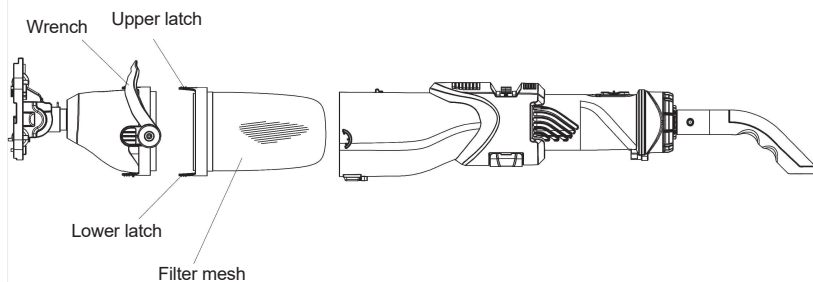

OPERATING INSTRUCTIONS

- Connect the charger as illustrated. Input: 100-240V, 50/60Hz, 0.8A; Output: 21V, 1.5A. Solid red light during the charging indicates: Charging is in progress; solid green light: Battery is fully charged. Before first use, fully charge the cleaner for 1.5 hours. A fully charged cleaner can run for 50-60 minutes.

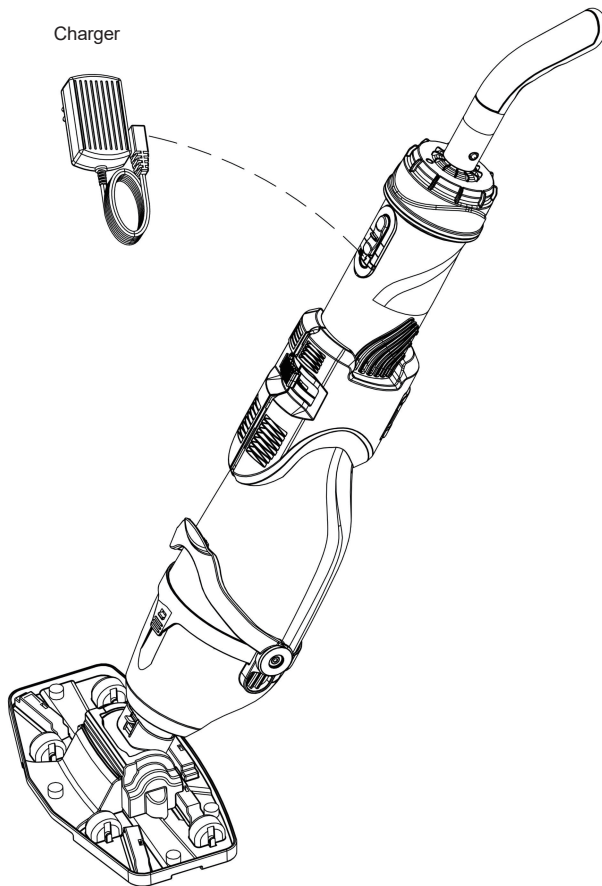

TROUBLESHOOTING

- Warning: To avoid hazards, all parts involved in the maintenance and replacement shall only be installed by the authorized customer service personnel.

Turn off the cleaner and unplug the power cord before performing any operation on the cleaner.

Fault	Cause	Troubleshooting
Fails to clean debris	Battery depleted	Recharge the cleaner. A full charge provides 50-60 minutes of runtime.
	Impeller damaged	Contact authorized dealer for repair/replacement.
	Impeller clogged	Power off the cleaner. Inspect the impeller and have professionals remove clogs using specialized tools.
	Filter bag full	Empty the filter bag.
Debris leaking from front components	Check valve damaged	Replace the check valveC.
Debris leaking through filter mesh	Filter mesh damaged	Replace the filter mesh.
Fails to connect the handle/telescop	V-clip on connector damaged	Replace the V-clip.
Fails to charge	Battery damaged	Contact authorized dealer for replacement. Warning! Use only the original lithium batteries for replacement to prevent damage to the cleaner.
	Charger damaged	Contact authorized dealer for replacement. Warning! Use only the original charger to avoid battery damage and cleaner malfunction.

MAINTENANCE INSTRUCTIONS

- The pool cleaner is basically maintenance free. To ensure a long service life, however, we recommend regular checks and care.
- Warning! Before every servicing, switch off the pool cleaner .
- If the pool cleaner is not going to be used for a long time or has to be removed for the winter months, rinse it out with water, empty it completely and allow it to dry.
- If there is a risk of frost, the pool cleaner must be emptied completely.
- After long stoppages, make sure the rotor turns correctly by briefly switching the pool cleaner on and off.

- Disposal



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TECHNICAL DATA

Model	PCT406T	
Power rating	36W	45W
Nominal voltage	DC18V	
Battery capacity	2AH	2.5AH
Work mode	High flow mode	High suction mode
Max.delivery rate	4400l/h	2300l/h
Max.delivery pressure	0.025MPa	0.048MPa
Particulate matter	<25mm	
Max.water temperature	50 °C	
Moisture protection	IPX8	
Battery charging time	90min	120min
Battery life	60min	70min



GARVEE

support@garvee.com