

ATTENTION

If your garage door opener has a Serial Number sticker which looks like this, in which the first two numbers are 10 or higher, your opener is equipped with INTELLICODE®2.



Follow the instructions on this page.

Otherwise, follow the instructions on back.

OPERATING INSTRUCTIONS (KEEP FOR FUTURE REFERENCE)

A Moving Door can cause serious injury or death. 1 Keep people dear of opening while Door is moving.

- Wall Control should be mounted within sight of door, at least 5 feet above floor and clear of moving parts.
- During programming, the Door Opener could begin to run, so stay away from the moving Door and its parts. To keep the Door from moving, close the Door and disconnect it from the Opener by pulling the Emergency Release Cord.

FEATURES:

- Ability to Control up to three Genie® INTELLICODE®1 or 2 Openers
- Simple to Program and Install PIN Codes can be up to 8 Characters

- Low Battery Power Indicator
 Stays Programmed During
 Battery Change
 Temporary PIN for Special
 Purpose Access
 TOOLS NEEDED:

- · Drill with 1/16* Drill Bit Phillips Screwdover
- Mounting Screws INCLUDED

37256501192 Filtp-up Cover available in 3 optional Class Colors to match exterior decor Backlt Keypad for Ease of Use GREENLED at Night Indicates Pre Battery to Intelligades Compartment 2 AAA Rotterle

AWARNING

- Do Not allow children to play with Wireless Keypad.

- If Safety Reverse does not work properly:
 - Close Door and disconnect the opener using Emergency Release Cord.
 - 2 Do not use Door Opener, Remote, or Wireless Keypad.
 - 3 Refer to Door and Door Opener Owner's Manuals before attempting

NTELLICODE® 2 MODE OF TRANSMISSION

This page is for Intellicode® 2 Only:

If you have an Intellicode® 1 opener or openers, go to the reverse side of this instruction.

SECTION

BASIC PROGRAMMING FOR ONE DOOR INTELLICODE® OPENERS


FOR CONVENIENCE

Program Keypad BEFORE mounting.

STEP 1: CREATING YOUR WIRELESS KEYPAD PIN

- Press in order s s 7
- · Press Process
- . Enter your PIN (3 to 8 characters).
- · Press Promis
- Close keypad cover and wait 30 seconds.

STEP 2: PROGRAMMING SINGLE DOOR OPENER Press and hold until both LEDs turn BLUE.

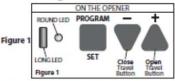

- · Release button. Only round LED will be BLUE.
- , release again. Long LED should blink PURPLE.
- On the Wireless Keypad—enter your PIN.
- Press _____. LEDs will stay on solid. Press again. LEDs will turn off.
- Press again. Door opener should run.
- Press any key to stop opener. (It will automatically stop at the fully open or fully closed position.)

Wait until Keypad Backlight turns off (approximately 30 seconds).

STEP 3: OPERATING ONE DOOR OPENER

- To open or close the Garage Door.
 - · Enter your PIN.
 - Press -

NOTE

- If the Door does not move, check the LED on Keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
- Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
- Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.

For answers to questions, call 1-800-35-GENE, or visit www.geniecompany.com The Genie Company, 22790 Lake Park Blvd., Alliance, Ohio 44601

Additional Genie® products can be ordered through your local Genie® Professional Dealer. To locate a dealer near you, call 1-800-OK-GENIE.

GMI Holdings, Inc. D.R.A.The Genie Company

SECTION PROGRAMMING FOR MULTIPLE DOOR INTELLICODE® OPENERS

FOR CONVENIENCE

Program Keypad BEFORE mounting.

STEP 1: CREATING YOUR WIRELESS KEYPAD PIN

- Press In order 3 5 7.
- Press Peaces
- Enter your PIN (3 to 8 characters).
- Press Process
- Close keypad cover and wait 30 seconds.

STEP 2: PROGRAMMING MULTIPLE DOOR OPENERS

All Door Openers will use the same PIN.

- On your keypad: Enter your PIN and press
- Press room again.
- · Press the number of Doors (total) you wish to control (2 or 3).
- · Press Process
- On your opener's power head: Select first opener and press and hold both LEDs turn BLUE.
- Release button. Only round LED will be BLUE.
- and release again. LEDs should blink PURPLE.

Decide which Door will be Door #1, #2 and #3. On your Wireless Keypad:

- Enter PIN and press
- Press the number that you have picked for this door 1 2 or 3.
- Press 3tlmes opener will run.
- Repeat procedure below dotted line for remaining openers.

Walt until Keypad Backlight turns off (approximately 30 seconds).

STEP 3: OPERATING MULTIPLE DOOR OPENERS

Following programming-On your Wireless Keypad:

- Entervour PIN
- Press .
- Press the number of the door you wish to operate 1 2 or 3
- Press any key to operate the door.

NOTE

- If the Door does not move, check the LED on Keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
- Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
- Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.

FCC and IC CERTIFIED

with the results of a result of a result of the second of or indexion expector in a garactical instancianal from equipment observable calls or control member or indexistan exception, which may be determined by turning the equipment OFE and OFE, the case raigned to try to control. The intentificience by one or motive of the following measures: ordered or reflectable the excellent artifectors.

SECTION

Mounting Instructions

The Keypad must be mounted in sight of the Door(s), at least 5 feet above the ground and clear of any moving Door parts.

- A Mount Keypad. (Mounting screws located inside Battery Compartment.)
 - · Remove Battery Cover and batteries. (See Figure 3).
 - Drill a 1/16" pilot hole for the top mounting screw. Install a screw into the drilled hole, leaving a 1/8" gap between the screw head
 - and the wall. (See Floure 2.) Hook the Keypad over the screw.
 - Mark and drill pilot hole and fasten bottom screw.
 - Install Batteries and Cover



SECTION 4

ADDITIONAL OPERATIONS

CHANGING YOUR PIN

- Enter your current PIN and press
- Enter your NEW PIN and press

Using a Temporary PIN

A temporary PIN allows temporary access to your home by repair persons, meter readers, etc. if you so desire.

- Enter your current PIN and press rooms 3 times.
- Enter your TEMPORARY PIN and press Process.

NOTE

DO NOT reprogram the Door Opener (s)

· Temporary PIN remains active only until the next time your normal PIN is entered.

FORGOT YOUR PIN (RESETTING WIRELESS KEYPAD)

If you have forgotten your PIN or you fear it may have fallen into unauthorized hands, you must erase the old programming.

- Press and hold Pross
- Wile holding press and hold for 5 seconds.
- Release both buttons. You must now satart from the beginning and reprogram your Wireless Keypad.

- · If the Keypad backlight does not come on, this indicates the need to replace the batteries.
- · Press in on the front of the battery cover and slide it down off of the Keypad.
- · Remove used batteries and replace with "AAA." Make sure the batteries are inserted properly using the polarity marking
- No programming is lost during replacement of batteries.



- Gray P/N 372265