








 





 

 



CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when it is not in use. Dust regularly with small brush or vacuum. Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

Please make sure that you have all parts indicated before you begin assembly of this item.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Leg chair		4x	L	Table top		1x
B	Right seat		1x	M	Table leg		4x
C	Right back		1x	H1	Allen bolt M6x70mm		8x
D	Right side		1x	H2	Allen screw M6x65 mm		8x
E	Left seat		1x	H3	Allen screw M6x45mm		4x
F	Left back		1x	H4	Extra bolt M6x50mm		1x
G	Left side		1x	H5	Lock		4x
I	Seat chair		1x	H6	Allen key		1x
J	Back chair		1x	H7	Wrench		1x
K	Corner		2x				

 **SAFAVIEH**
OUTDOOR LIVING

MODEL# PAT6713

Corner chair dimension: 27.09"W x 27.09"D x 26.77"H


Chair dimension : 25.59"W x 27.09"D x 26.77"H

Table dimension : 25.59"W x 25.59"D x 11.02"H

Weight capacity : 300 lbs

Warning : Do not stand on the chair

Warning : Do not torque bolts / screws

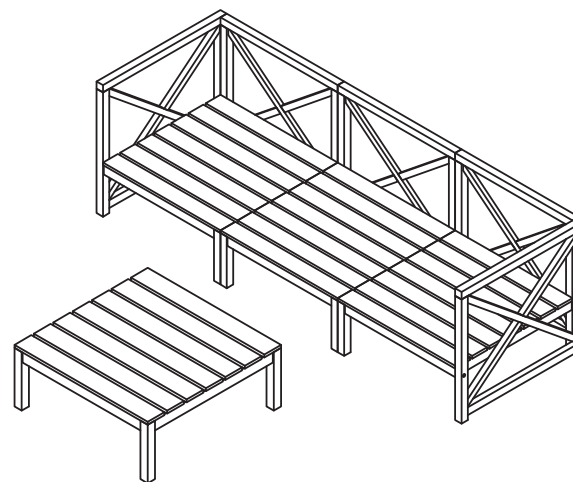



PREPARATION

Before beginning the assembly of the product, make sure all parts are present.


Compare the parts with the package contents list and hardware contents list.

If any parts are missing or damaged, do not attempt to assemble the product.

Tool required for assembly (included): Allen Key and Wrench.

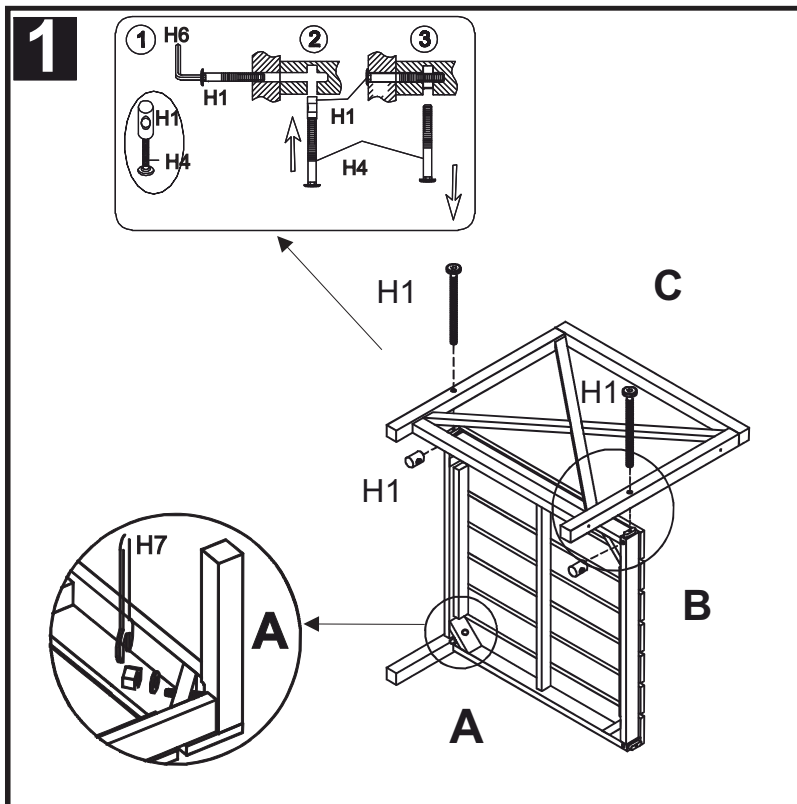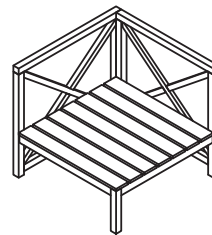

Step 1: attach the leg (A) and the Right back (C) to the Right seat (B) as shown on the picture. Use the Allen Bolt (H1) and tighten it with the Allen key (H6) and Extra bolt (H4) as shown on the picture. Then tighten the leg (A) to the Right seat (B) by using the Wrench (H7) as shown on the picture.

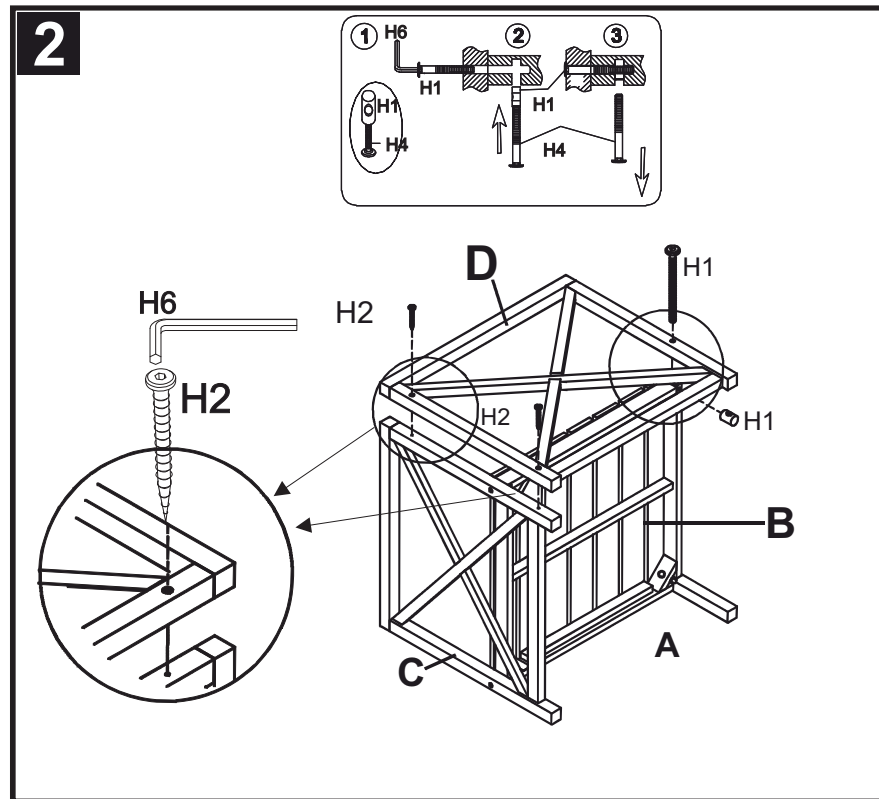

Step 2: attach the Right side (D) to the chair by using the the Allen screw (H2) and the Allen Bolt (H1). Tighten the Allen bolt (H1) with the Allen key (H6) and Extra bolt (H4) as shown on the the picture. Then tighten the Allen screws (H2) by the Allen key (H6).



PREPARATION

Before beginning the assembly of the product, make sure all parts are present.


Compare the parts with the package contents list and hardware contents list.

If any parts are missing or damaged, do not attempt to assemble the product.

Tool required for assembly (included): Allen Key and Wrench.

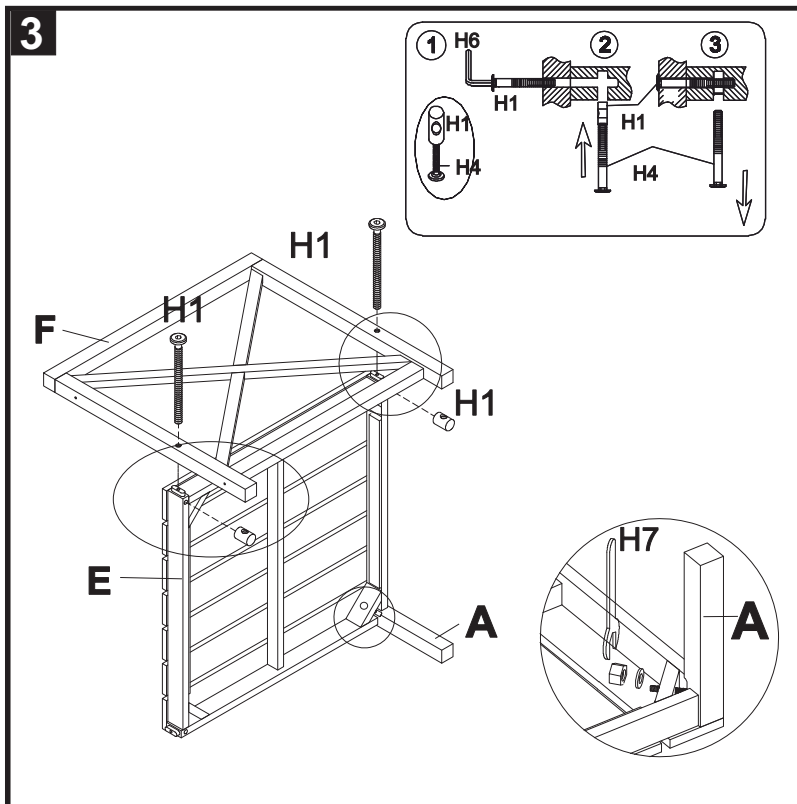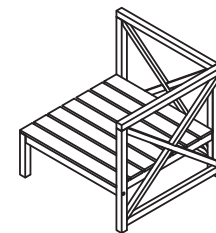



Step 3: attach the leg (A) and the Left back (F) to the Left seat (E) as shown on the picture. Use the Allen Bolt (H1) and tighten it with the Allen key (H6) and Extra bolt (H4) as shown on the picture. Then tighten the leg (A) to the Left seat (E) by using the Wrench (H7) as shown on the picture.

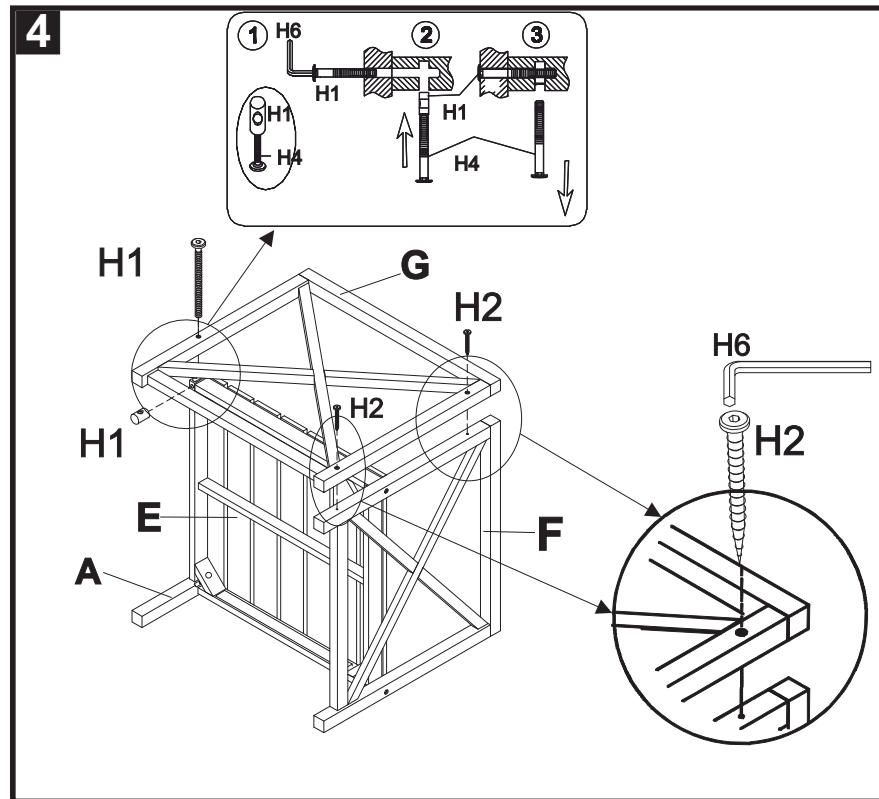


Step 4: attach the Left side (G) to the chair by using the the Allen screw (H2) and the Allen Bolt (H1). Tighten the Allen bolt (H1) with the Allen key (H6) and Extra bolt (H4) as shown on the the picture. Then tighten the Allen screws (H2) by the Allen key (H6).

PREPARATION

Before beginning the assembly of the product, make sure all parts are present.
Compare the parts with the package contents list and hardware contents list.
If any parts are missing or damaged, do not attempt to assemble the product.
Tool required for assembly (included): Allen Key and Wrench.

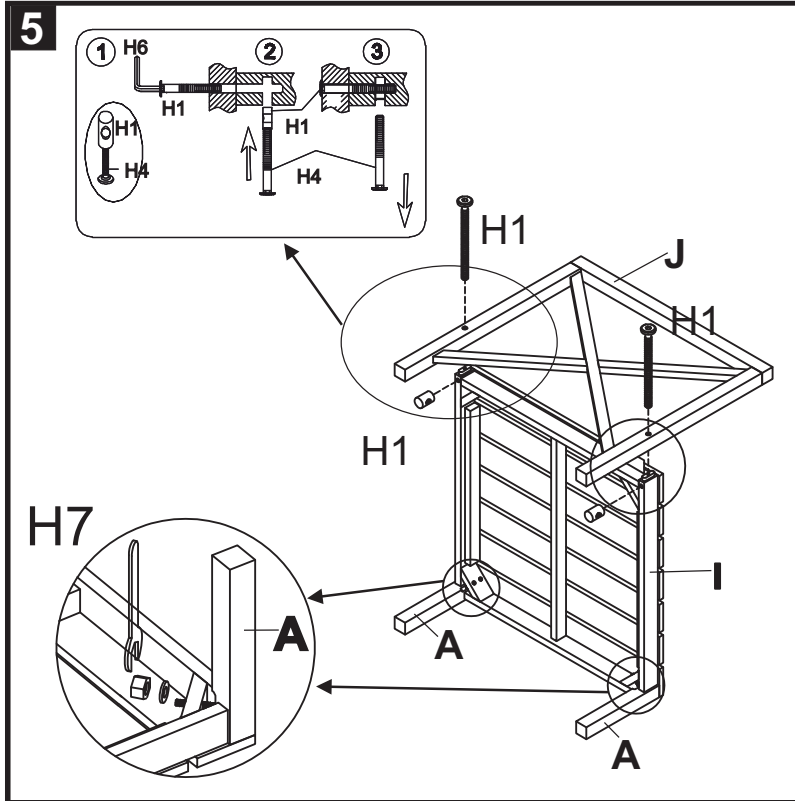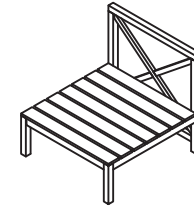



Step 5: attach the legs (A) and the Back (J) to the Seat (I) as shown on the picture. Use the Allen Bolt (H1) and tighten it with the Allen key (H6) and Extra bolt (H4) as shown on the picture. Then tighten 2 legs (A) to the Seat (I) by using the Wrench (H7) as shown on the picture.

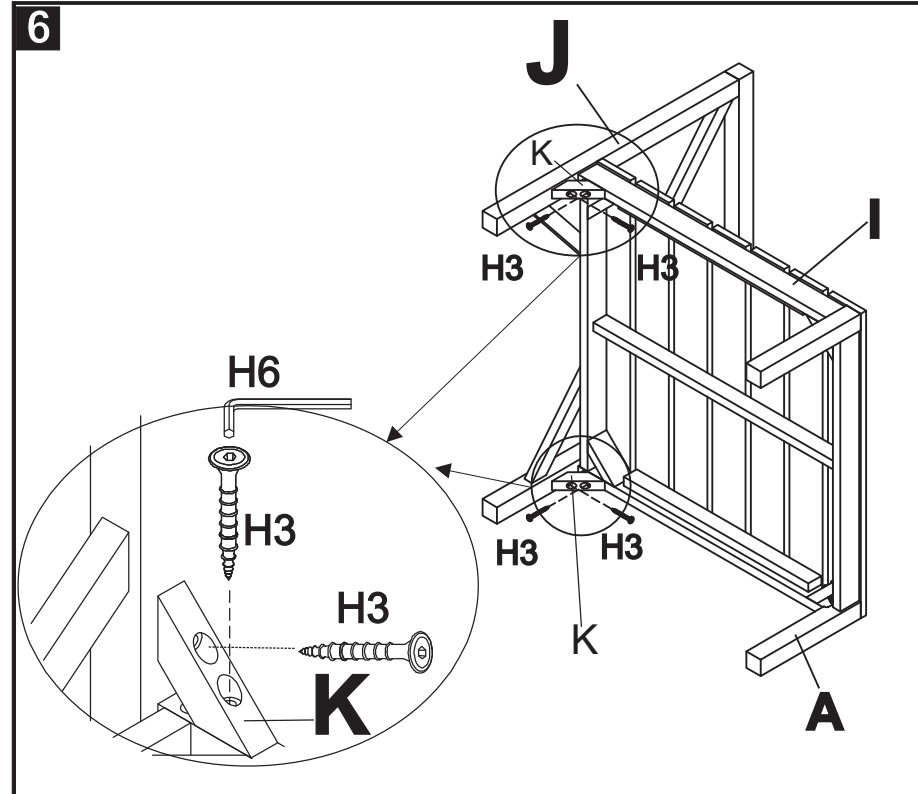


Step 6: attach the Corners(K) to the chair by using the Allen screw (H3). Tighten with the Allen key (H6) as shown on the picture.

PREPARATION

Before beginning the assembly of the product, make sure all parts are present. Compare the parts with the package contents list and hardware contents list. If any parts are missing or damaged, do not attempt to assemble the product. Tool required for assembly (included): Allen Key and Wrench.

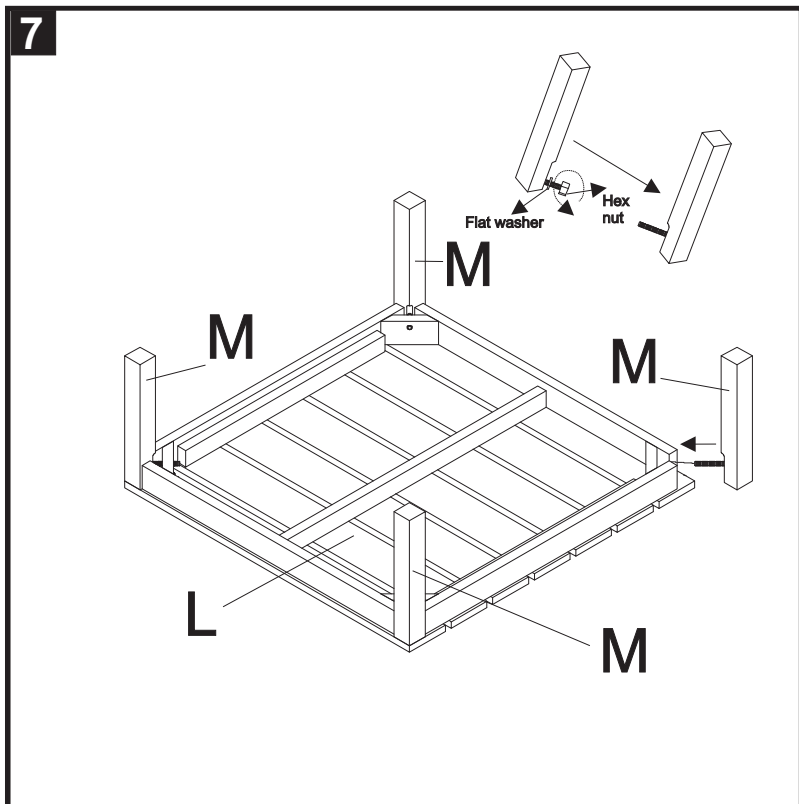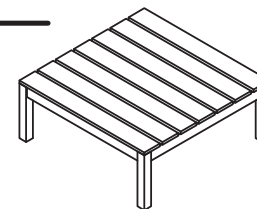

Step 7: turn the table top (L) and attach 4 legs (M) by remove Hex and flat washer as on the picture.

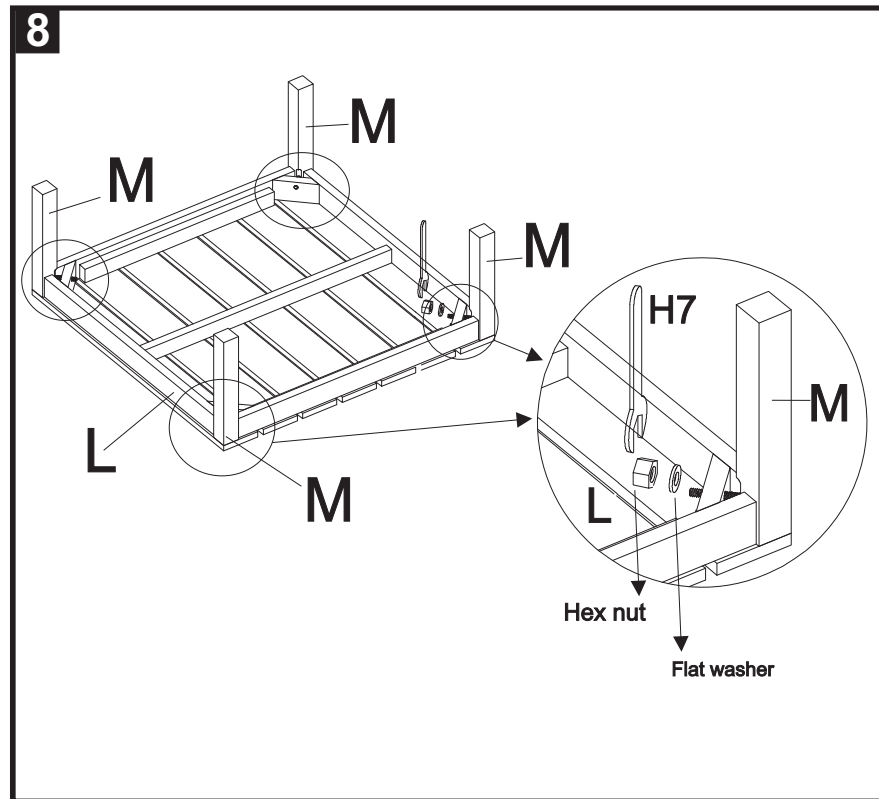

Step 8: use the Wrench (H7) to tighten all legs as shown on the picture.

CARE AND MAINTENANCE


Store outdoor furniture indoors or cover well when it is not in use. Dust regularly with small brush or vacuum. Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

Please make sure that you have all parts indicated before you begin assembly of this item.

 **SAFAVIEH**
OUTDOOR LIVING

MODEL# PAT6713

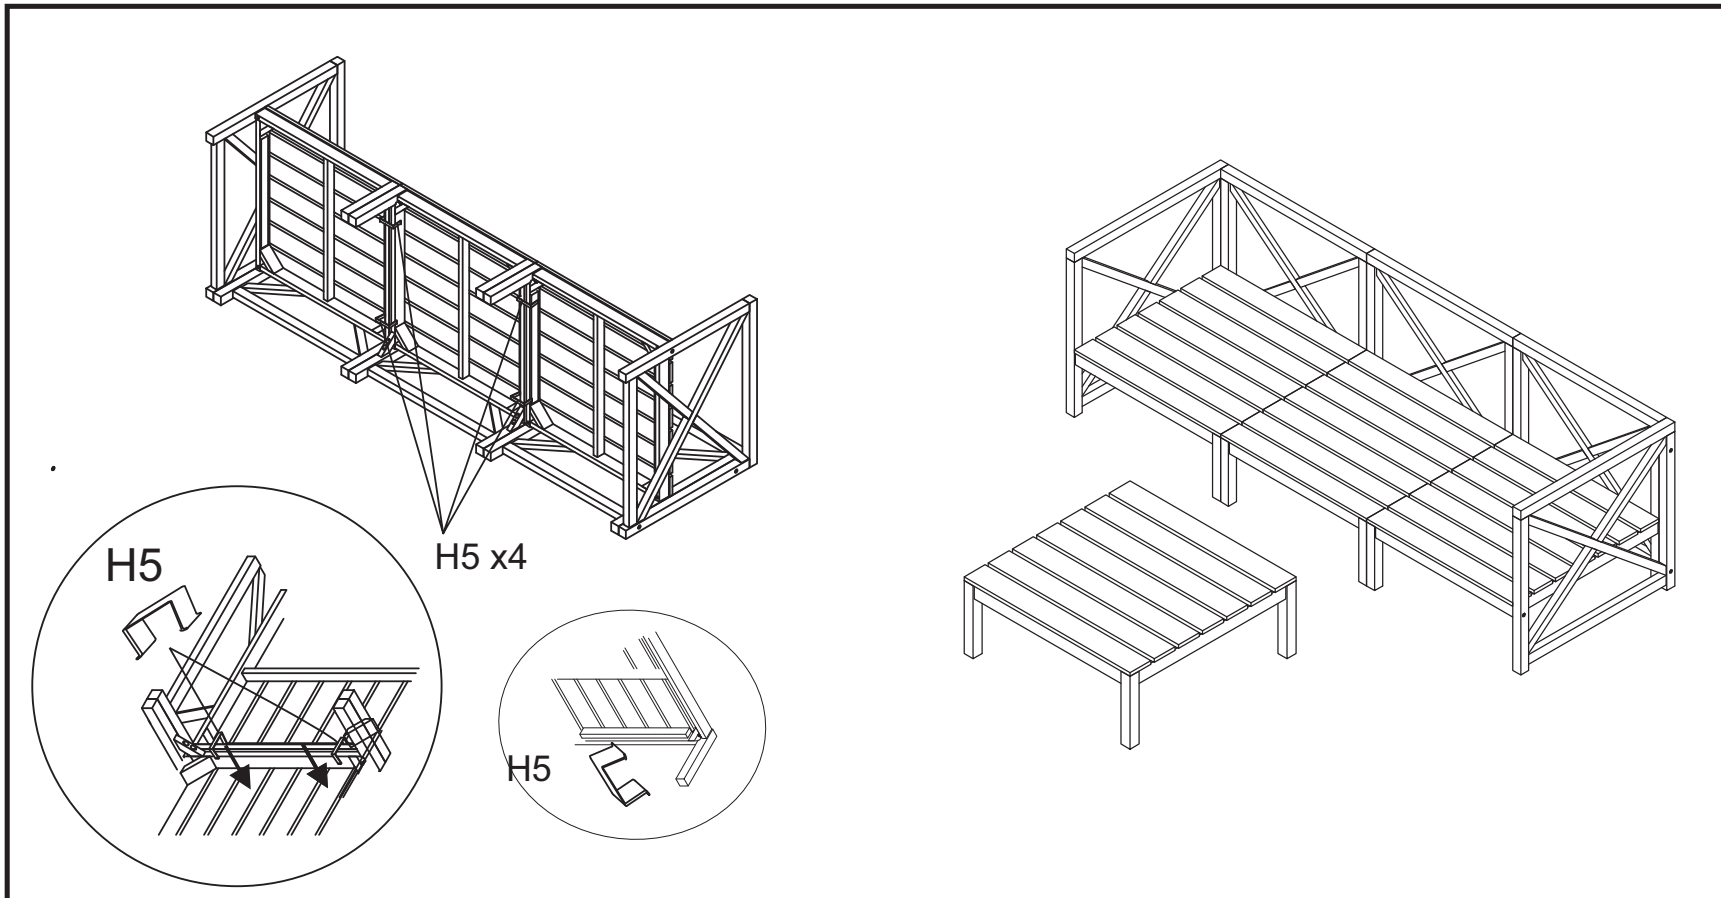

Lock there chairs together as shown on the picture.