 


Ava Portable Speaker Lantern

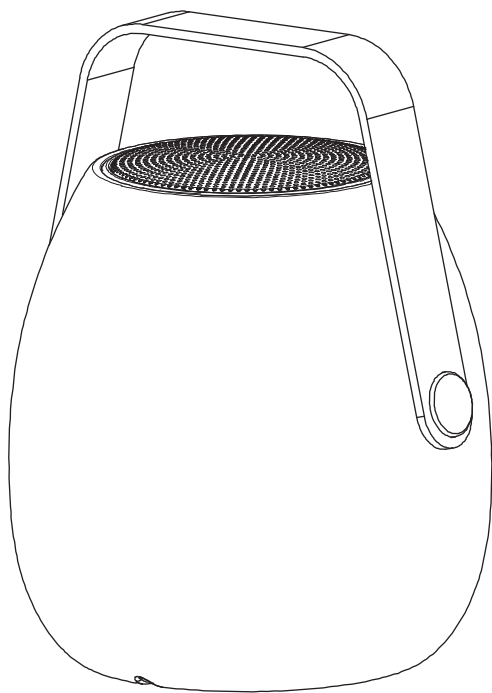

Please read these instructions carefully before using and keep for future reference.

Imported By: Forward Industries, 33401. U.S.A

Issue 1-24/07/20

Technical Specification

Ambient temperature for operation:	-14° C to 35° C
LEDs:	3pcs RGB+3pcs White, 7 Colours
LEDs Rated Watt:	0.2W max per piece
Battery:	3.7V Lithium 1500mAh
Remote control battery:	CR2025 (3V)
Remote control effective distance:	3.15~3.94 inches
Charging time:	around 3 hours
Operation time:	Light only up to 10hrs, 60% volume + Light around 5hrs
Charger - USB Cable	Input: 5V
Speakers:	5W
IP protection:	Speaker: IP44 USB cable: IP20
Classification of radiation:	EN 55032, EN55035, EN61000-3-2, EN61000-3-3

Contents


- | | |
|--------------------------------|----------------------|
| 1. Speaker Lantern x1 | 3. Remote control x1 |
| 2. USB cable charging cable x1 | 4. User manual x1 |

Battery Charging

1. Please charge the battery fully before first use.
2. Connect your USB adapter (Use Output 5V ONLY!) to the speaker using the charge port on the underside of the light. During battery charging the indicator will be red.
3. Charge the speaker until the indicator light is green. Cover the charge port after it is fully charged.
4. After the battery has been charged, turn on the speaker using the ON/OFF button on the underside. The indicator should be blue. Then follow Bluetooth function instructions.

NOTE:

 1. The built-in battery is not replaceable. Please do not remove or replace it in the trash. If you must dispose of this speaker, bring it to your local recycling center.
2. Disconnect the external adapter from the charge port when not in use or when the speaker is fully charged.

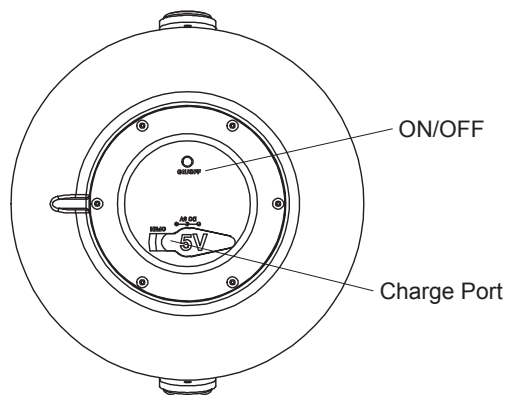

Bluetooth Function

1. Make sure the battery is fully charged before attempting to connect the first time.
2. For stereo sound, it is possible to connect and pair up to 2 speakers to your device at the same time.
3. To connect the 1st speaker, press the ON/OFF button on the bottom of the speaker. There will be an audible activation beep and the blue indicator light will flash.
4. On your phone/smart device, turn Bluetooth to ON and select "KBPB Speaker Lantern" from the device list. Once your device is connected, you will hear a second audible beep from the speaker and the indicator light will be blue.

PAIRING Max. 2pcs:

- 1) To connect with the 2nd speaker, press and hold the ON/OFF button on both speakers. You will hear a beep sound from the speakers. The one on which the Bluetooth indicator light flashes rapidly, will be the main unit. The other one will flash slowly, to become the secondary unit.
- 2) Now repeat Point 4 above to connect the Bluetooth on your phone. Once connected, the Bluetooth indicator light of the main speaker will stay blue. Both indicator lights will turn off automatically when music is playing.
- 3) To cancel the pairing, press and hold the ON/OFF button until a beep is heard.
- 4) To turn off the Bluetooth function, press the ON/OFF button.

TROUBLESHOOTING

1. Under Pairing mode, short press the ON/OFF button on the main unit. The secondary unit's music will be off but the light is on; Turn off the secondary unit, the main unit's music and light will keep working individually and out of the pairing mode in 10 seconds.
2. To switch the Main unit setting, disconnect the Bluetooth in your device list firstly and then long press the ON/OFF on the new unit that you want to be the main unit.
3. If your Bluetooth device is more than 30ft away from the main speaker, they will disconnect. If you move the main speaker within 30ft, then they can be paired automatically and resume playing music. If you move the secondary speaker more than 30ft(10 m) away from Bluetooth device and within 19ft of the main speaker, the secondary can still play music. If you move secondary more than 19ft away from the main unit, it can not play music. They can pair automatically and play music again when you move it back within 19ft.
4. This LED BT Speaker Light has a memory storage function (if the batteries are not fully exhausted), when you turn on speaker, the light and speaker will maintain the same settings and pairing as the last time used. If the battery is exhausted there will be no memory storage function and you will need to pair the speakers.

SETTING TIMER


The Timer function allows the product to automatically turn off after a set amount of time. In order to set the timer, press the TIME Button (located on the Remote Control) once to change color, each color indicates a different Timer Duration. The Speaker will stay lit the LED Color that is chosen for the entire Timer Duration. Follow the Guide Below:

LED Color	Timer Duration
Red	30 min.
Green	60 min
Blue	90 min
Yellow	120 min.
Light Blue	150 min.
Pink	180 min.

Note: To deactivate the Timer, Press the ON/OFF Button

Remote control

Before using the remote control remove the small plastic sheet from the battery cover.

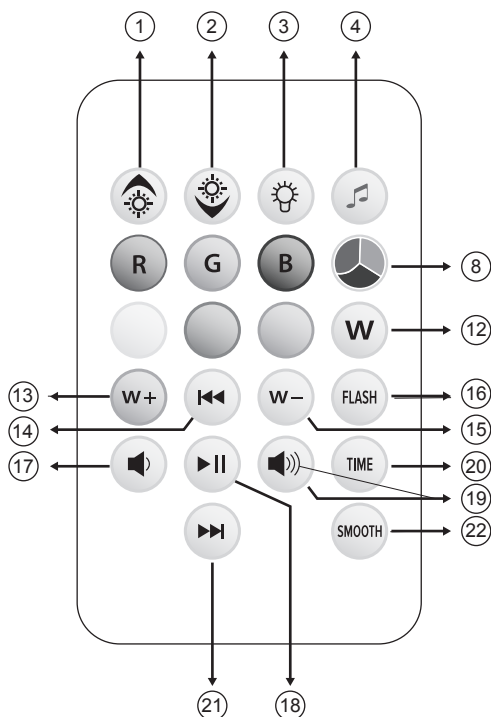

- 1 Brightness Up
- 2 Brightness Down
- 3 LED ON/OFF
- 4 Bluetooth-See CONNECTING VIA BLUETOOTH
- 5 Red LED
- 6 Green LED
- 7 Blue LED
- 8 Manually Switch LED Color
- 9 Yellow LED
- 10 Light Blue LED
- 11 Pink LED
- 12 Warm White LED
- 13 Warm LED-Increase White
- 14 Previous Track
- 15 Warm LED-Decrease White
- 16 Flash-Dancing LED Colors along with Music
- 17 Volume Down
- 18 Play/Pause
- 19 Volume Up
- 20 Time-See SETTING TIMER
- 21 Next Track
- 22 Smooth-Automatic Smooth Transition of LED Colors
- 23 Remote control effective distance: 8-10 meters

REPLACING REMOTE CONTROL BATTERIES

- Removing the old battery by pressing the tab on the side of the battery cover and then sliding off the cover from the remote control.
- Take notice of the positive (+) and negative(–) direction of the battery. Make sure that the new battery (CR2025) is inserted the right way.
- Dispose of the old battery responsibly.

Warnings and Cautions

These products and their packaging are not toys; please keep out of reach of children.

- The remote control and USB Cable/charger are not waterproof and must be kept in a dry location at all time.
- Never charge the product in a pool, water or rain; charge in a dry, indoor location.
- Disconnect the power adapter from main power outlet when not in use.
- Do not stand or jump on this product.
- Do not sit on this product if it is cracked or damaged.
- Keep the product away from chemicals and heat.
- Do not attempt to disassemble the product.

Outdoor Use:

- The external adapter should not be used outdoor, not exposed to rain, humidity, any liquid, or heat.
- The remote control should not be exposed to rain, humidity, any liquid, or heat.
- Do not use these products outdoors if they are cracked or damaged;
- Never charge this product outdoor.
- Floating Pool speaker has a waterproof level of protection, but should NOT be fully submerged as it may damage the speaker/light.

General Care:

It is recommended that after use the products are turned off, rinsed using clean water and dried using a soft cloth. Store these products out of reach of children and direct sunlight when not in use.

Care of the environment



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Warranty Information

- 1 year for electronic part
- 2 year for housing

After Sales Support / Product Returns

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at customerservice@forwardindustries.com, or 561-465-0030, Option 0.

Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401

