 


# OWNER'S MANUAL

## storage Cabinet

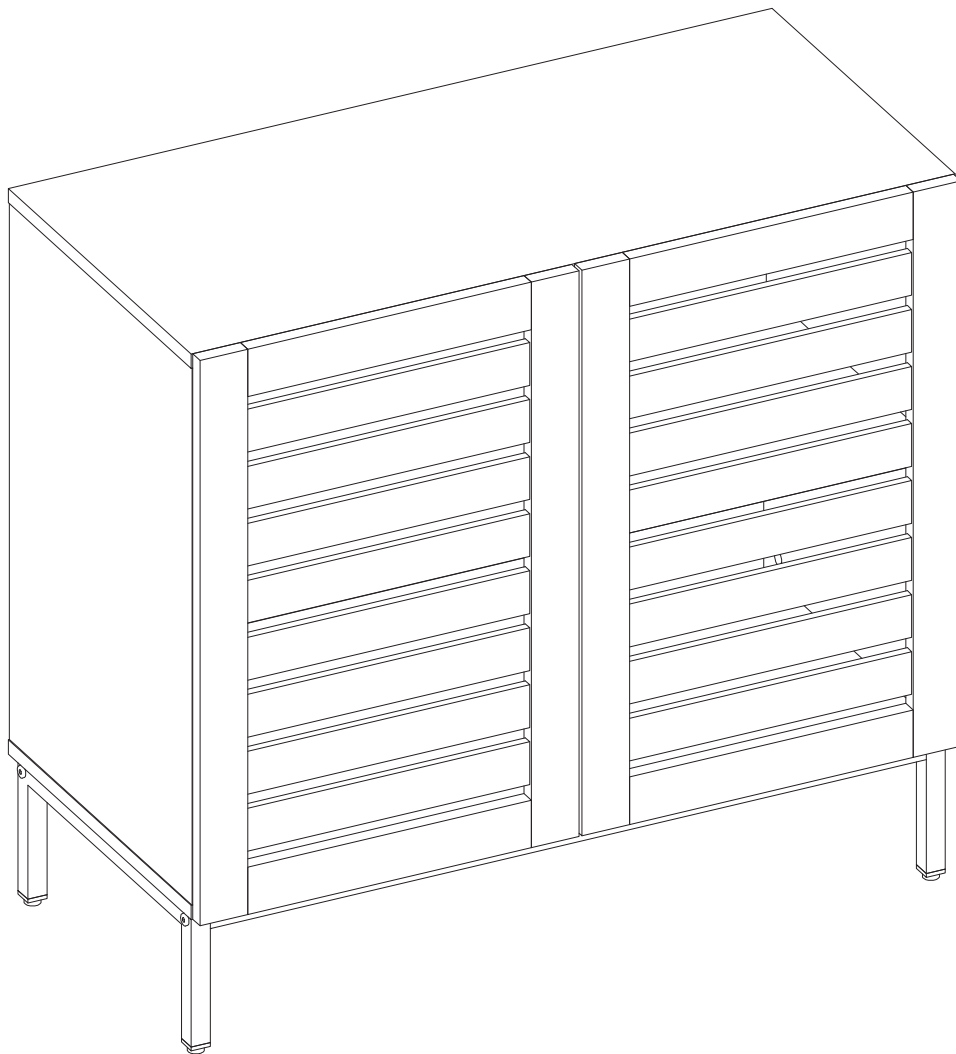 


**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.  
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

**TEL: (855) 208-0668** (MON-FRI 9:00am-5:00pm Eastern Time)  
**Email:** [help@EverythingSupport.com](mailto:help@EverythingSupport.com)

---


# Parts List

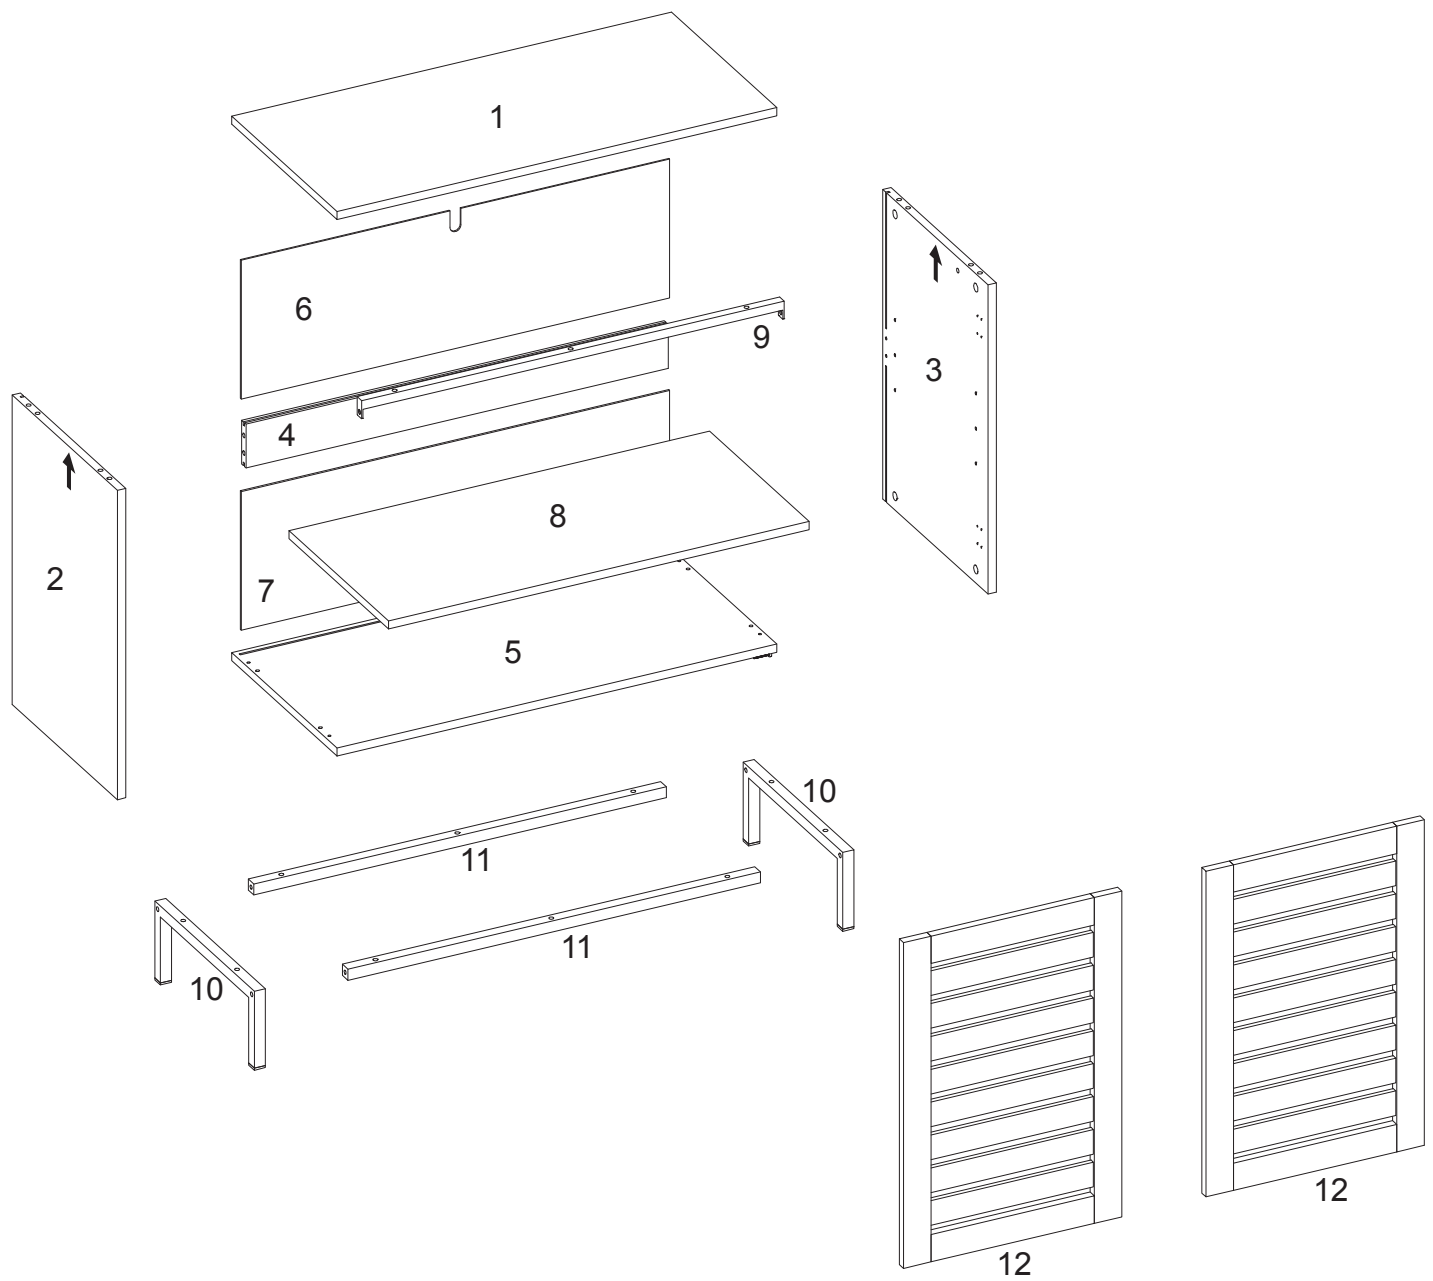

# Hardware Usage Guide



## HOWTO USE A CAM LOCK & CAM BOLT OR CAM DOWEL

 ! NOTE: CAM BOLT or a CAM LOCK may be used.




Cam bolt

  
Turn the CAM BOLT until the shoulder is against the surface of the part.

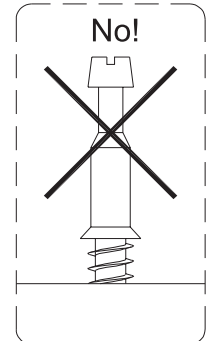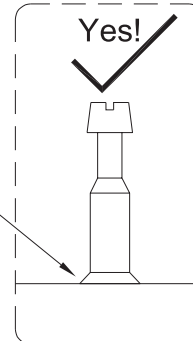

"!



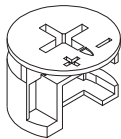 


Cam lock


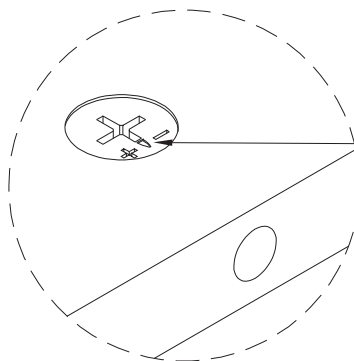 


Push a CAM LOCK into the part. The arrow in the CAM LOCK must point toward the hole in the edge of the board.


#! Insert the CAM BOLT into the CAM LOCK. Tighten the CAM LOCK.

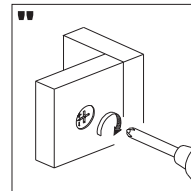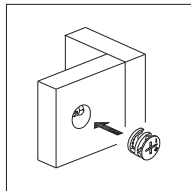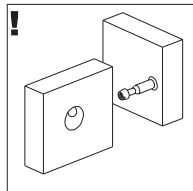   

   \$! The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

 
 
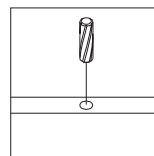 
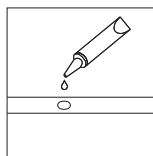 

 
 
 
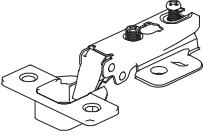 


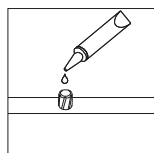


In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

 

 
 





# Hardware List

- Carefully remove all the parts from the carton and place them individually on a softcloth to prevent scratches or other damage.
- Carefully and strictly follow these assembly&installation instructions to ensure acompleted product as designed.
- Do not tighten all the screws until each part is properly assembled.

Number	Parts	Quantity	Number	Parts	Quantity
A	 Cam bolt 6X33.5mm	12 PCS+2	G	 Screw M6x30mm	14 PCS+2
B	 Cam lock 15x11mm	12 PCS+2	H	 Screw M6x27mm	3 PCS+1
C	 Wooden dowel 8x30mm	8 PCS+1	I	 Screw M6x12mm	2 PCS+1
D	 Shelf support pin	4 PCS+1	J	 	10 PCS+2
E	 Hinge Ø35mm	4 PCS	K	 Screw 3x16mm	10 PCS+2
F	 Screw 4x14mm	24 PCS+2	L	 Hex Key M4	1 PC


# Hardware List

 Number	Parts	Quantity
M	 adjustable feet 6x15mm	4 PCS
N	 Sticker 30mm	12 PCS+2
O	 L shaped iron piece 76*15*30mm	1 PCS
P	 Nut	1 PCS



Number	Parts	Quantity
Q	 Screw 4x14mm	1 PCS
R	 Screw 4x38mm	1 PCS
S	 Glue tube	1 PC

"+" means spare parts


# Step 1

 



A x4

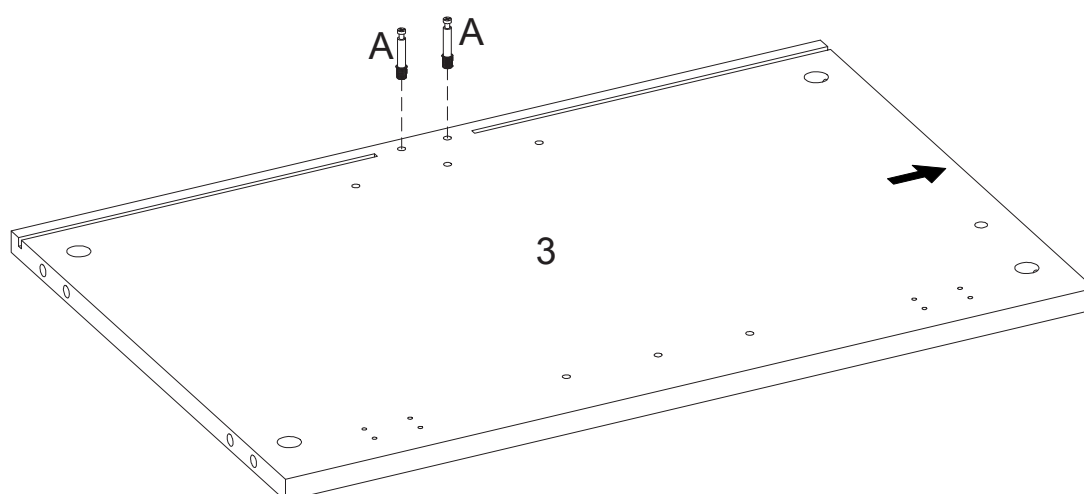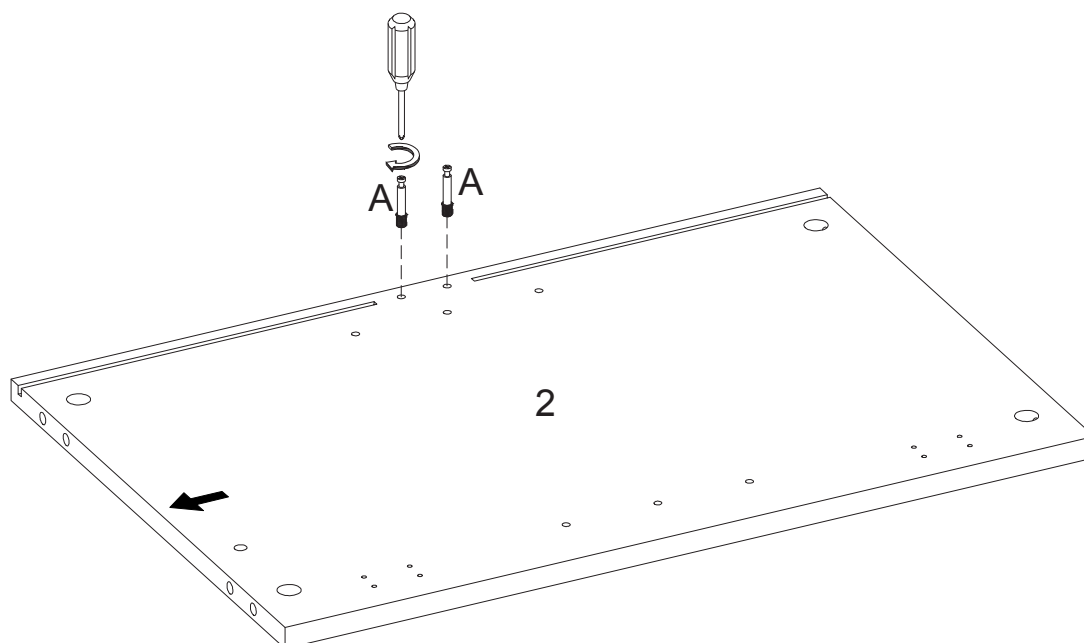  


## Step 2

 



B x2

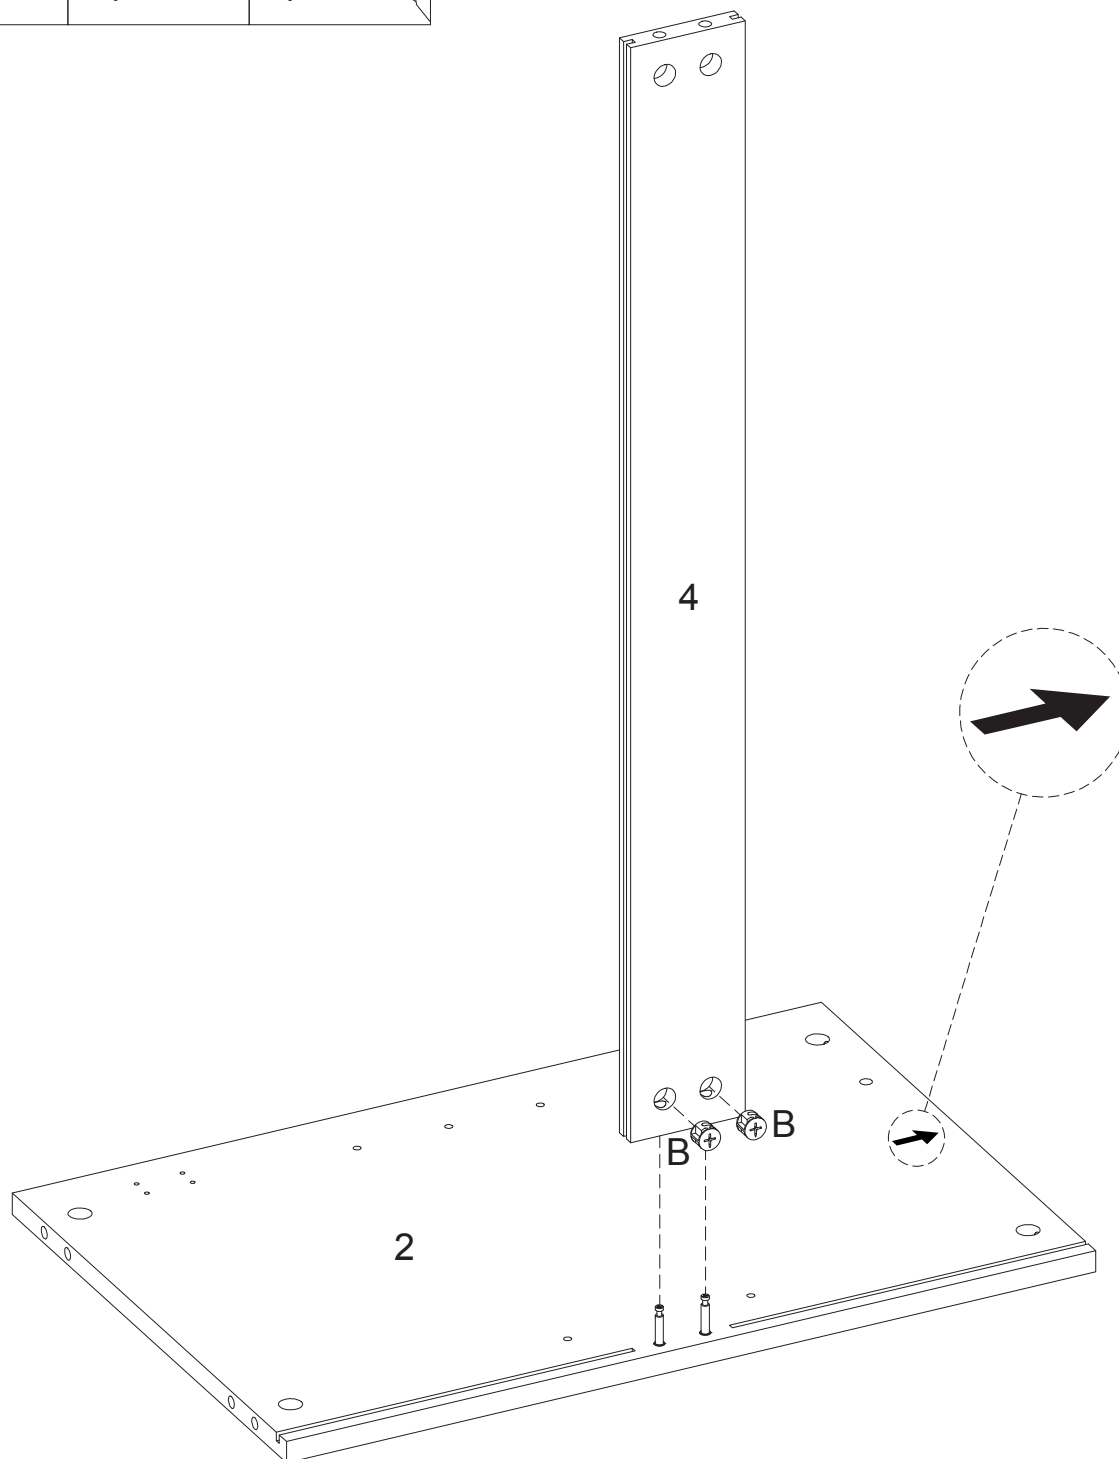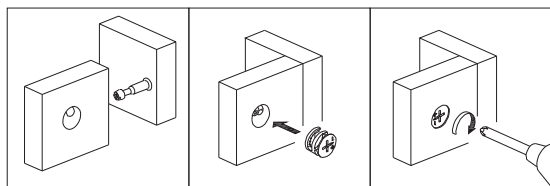  

## Step 3

 


B x2

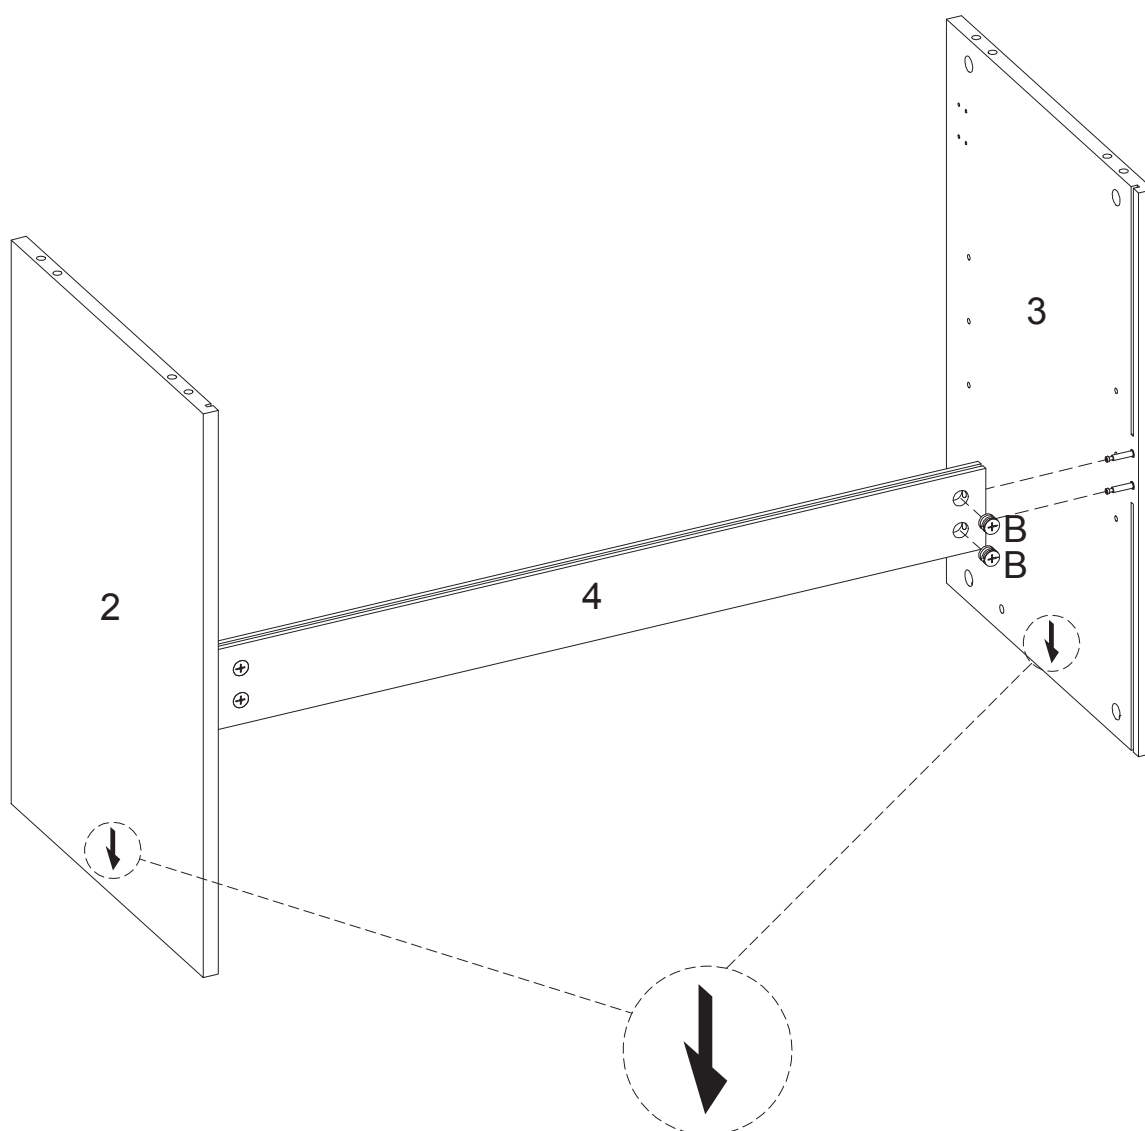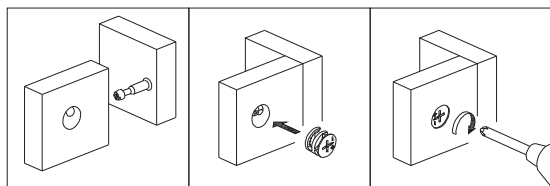  




## Step 4

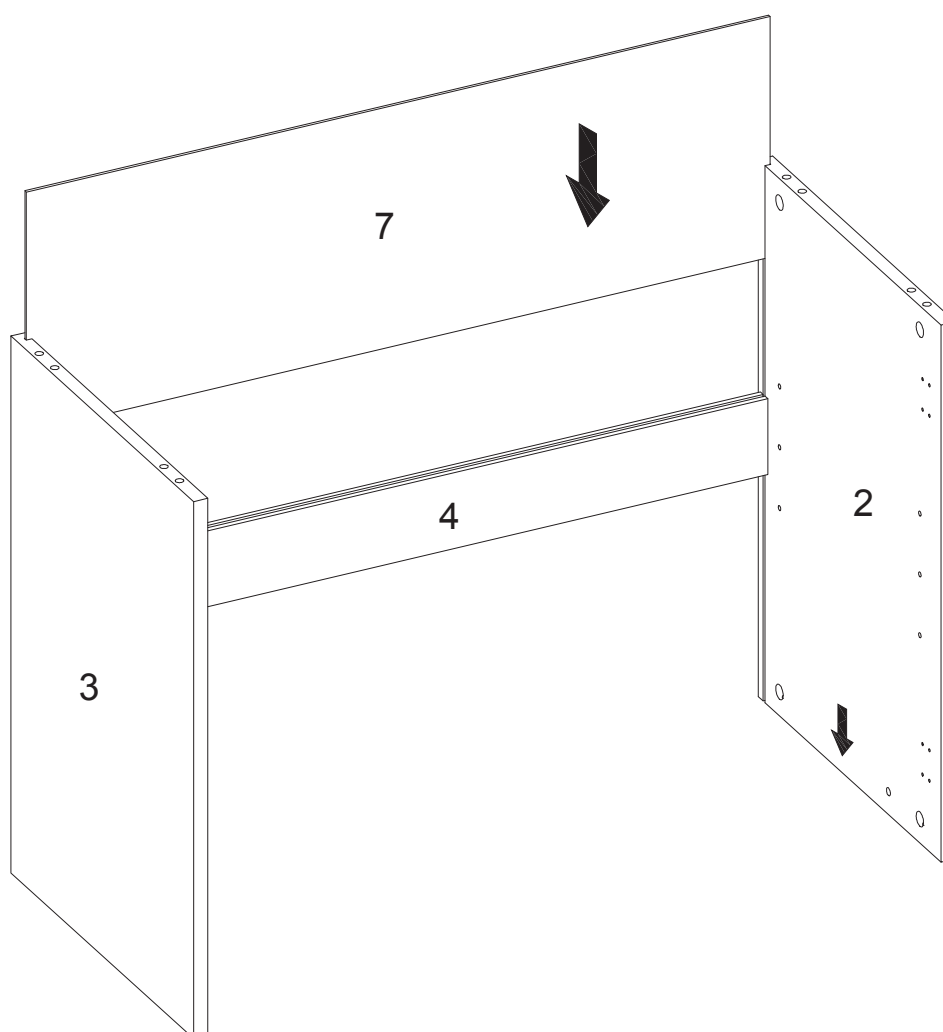 

## Step 5




 
A x8





O x1



  Q x1

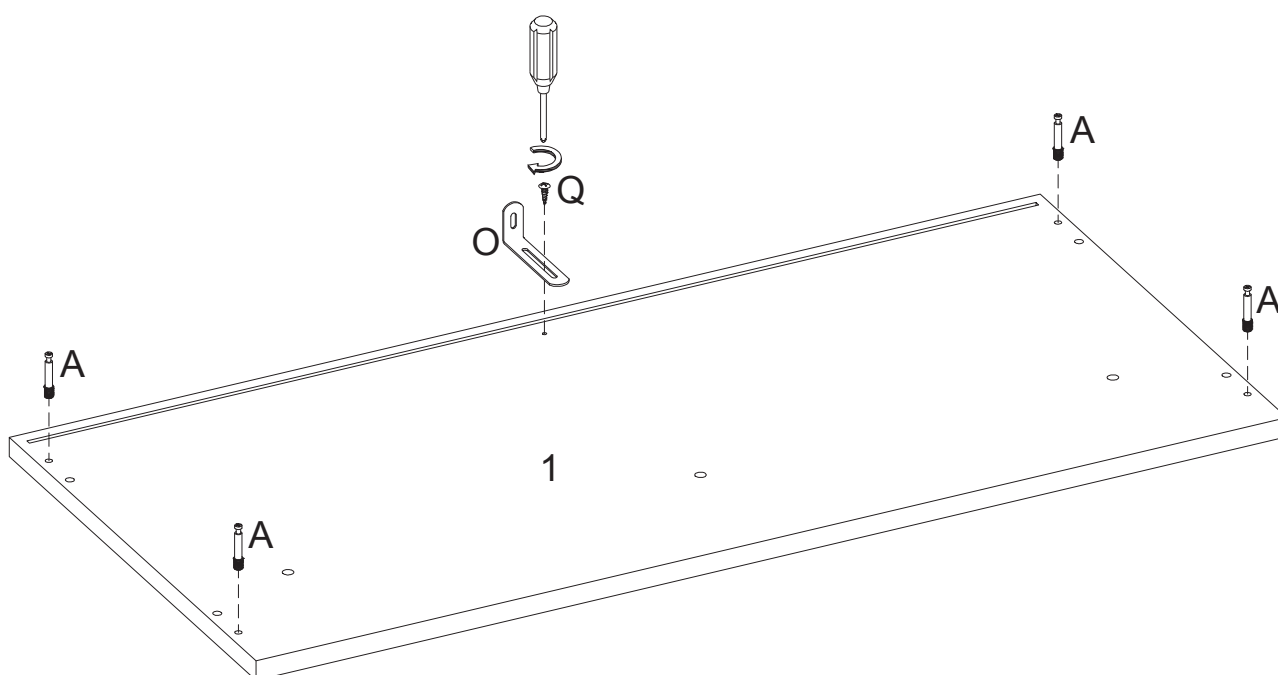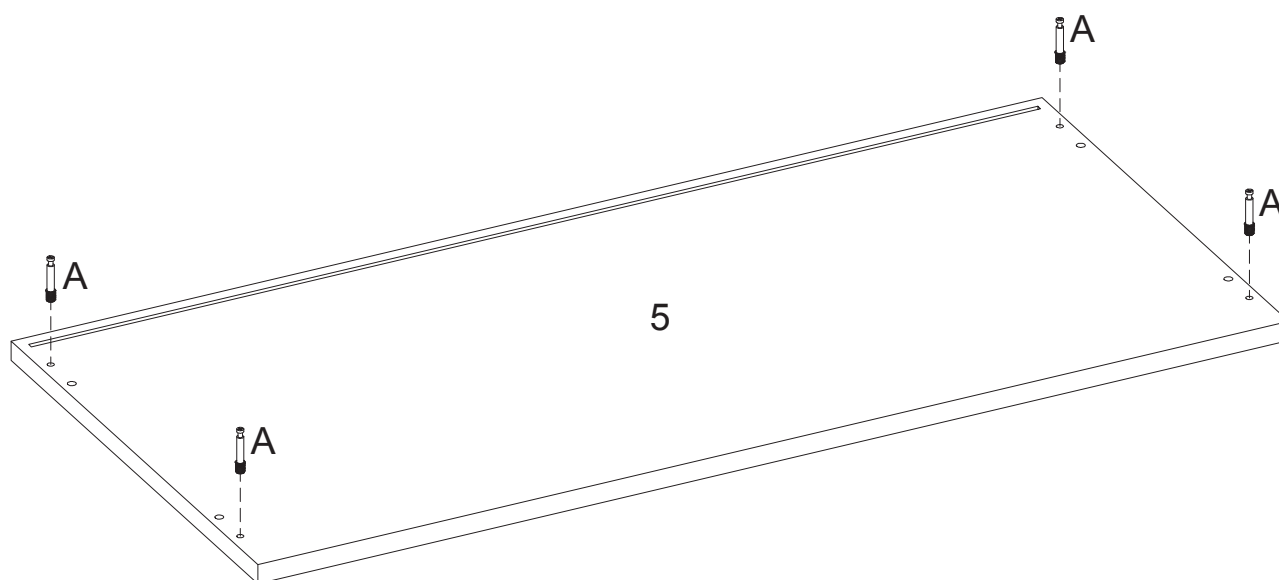


## Step 6

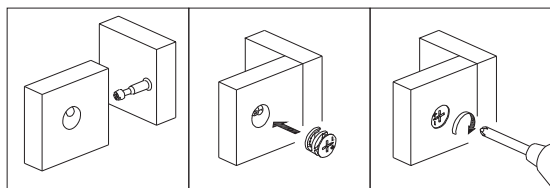  


B x4



 C x4

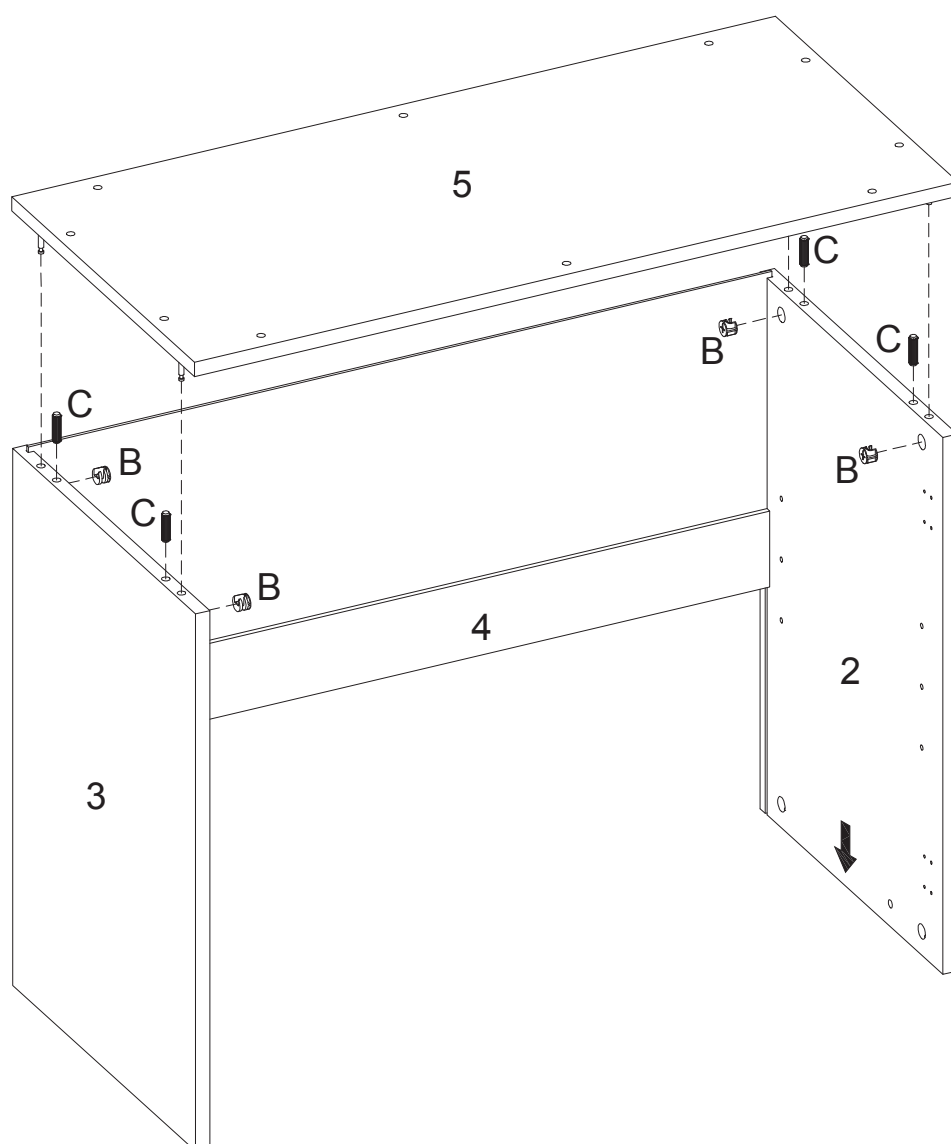



## Step 7

 



G x14



  
L x1

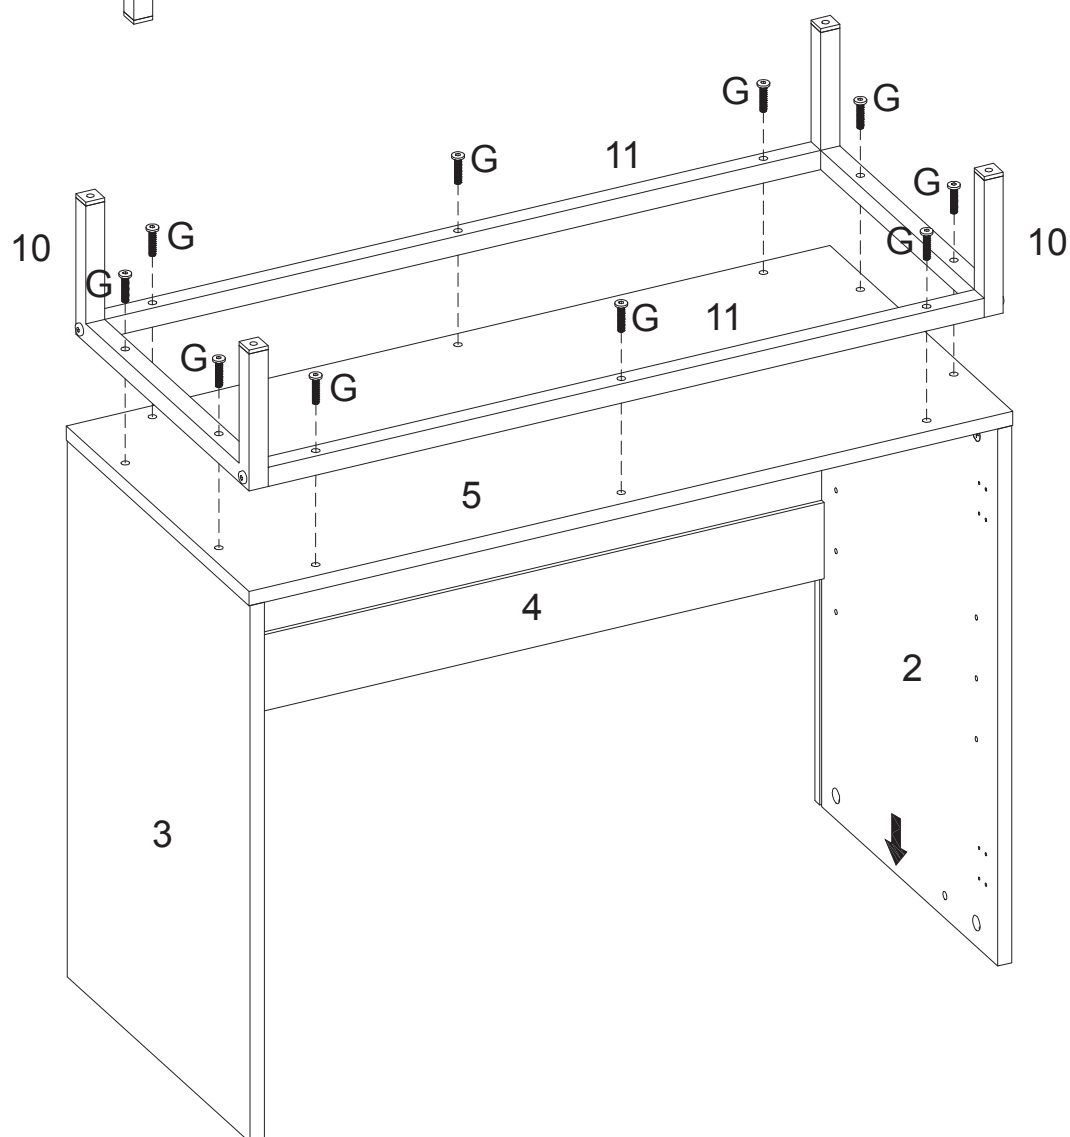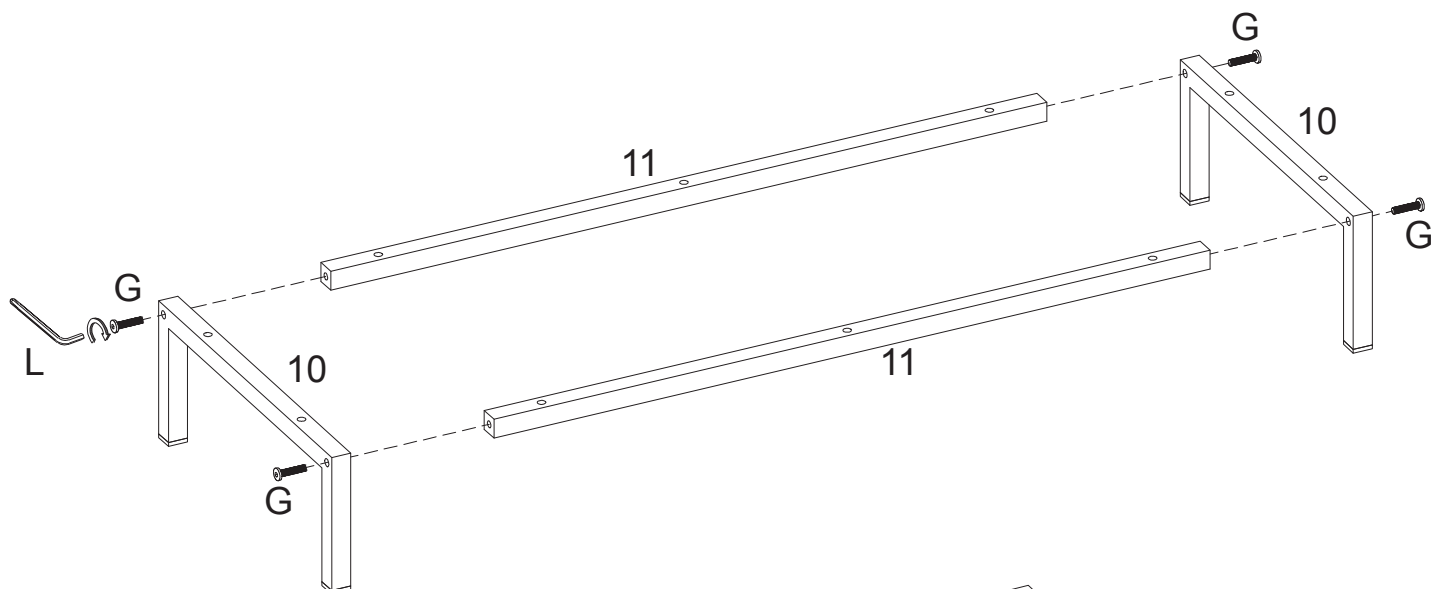


## Step 8

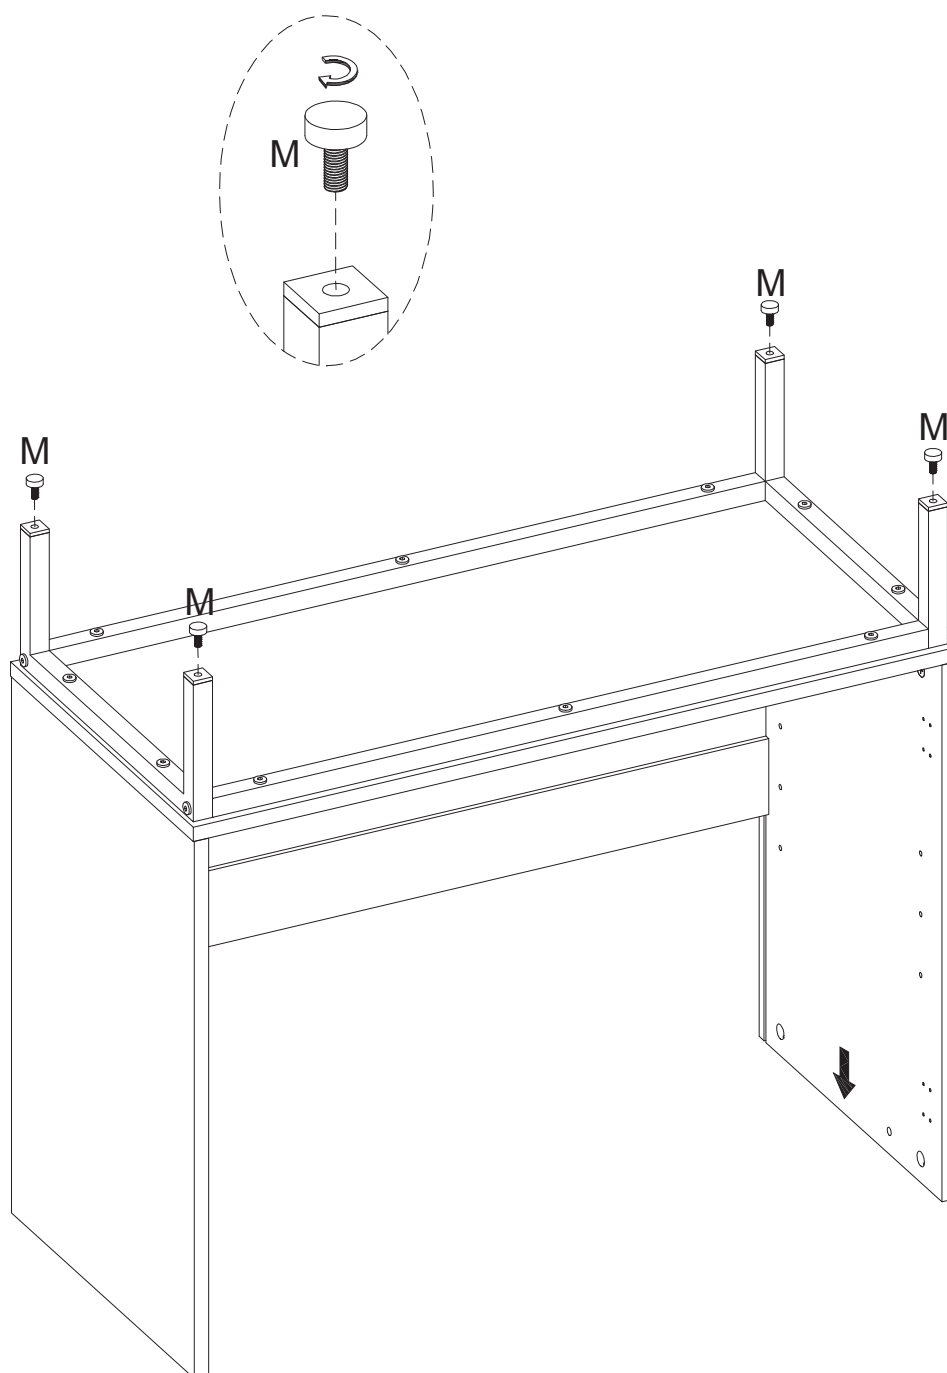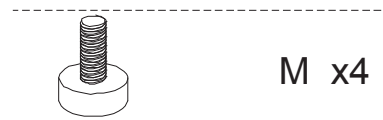  



## Step 9

 



I x2

 

L x1

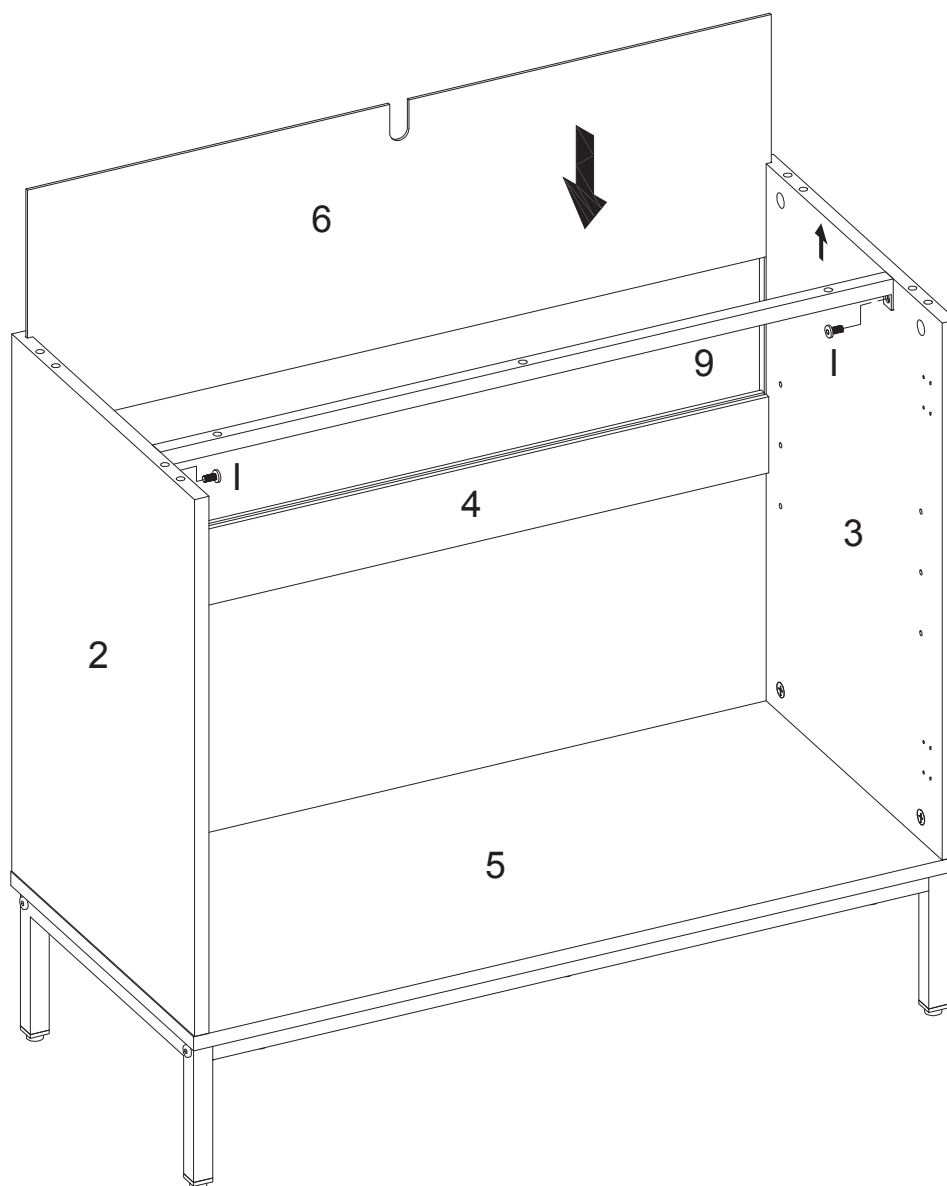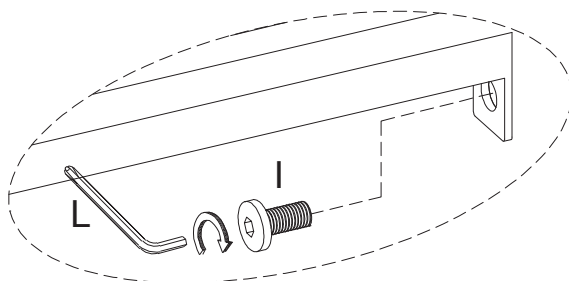  


# Step 10

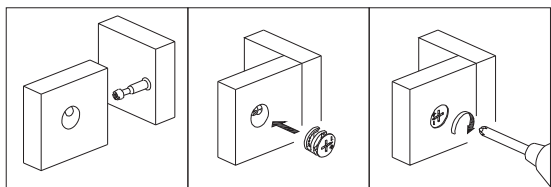  

B x4




 
C x4




H x3



  L x1

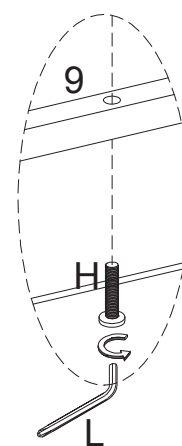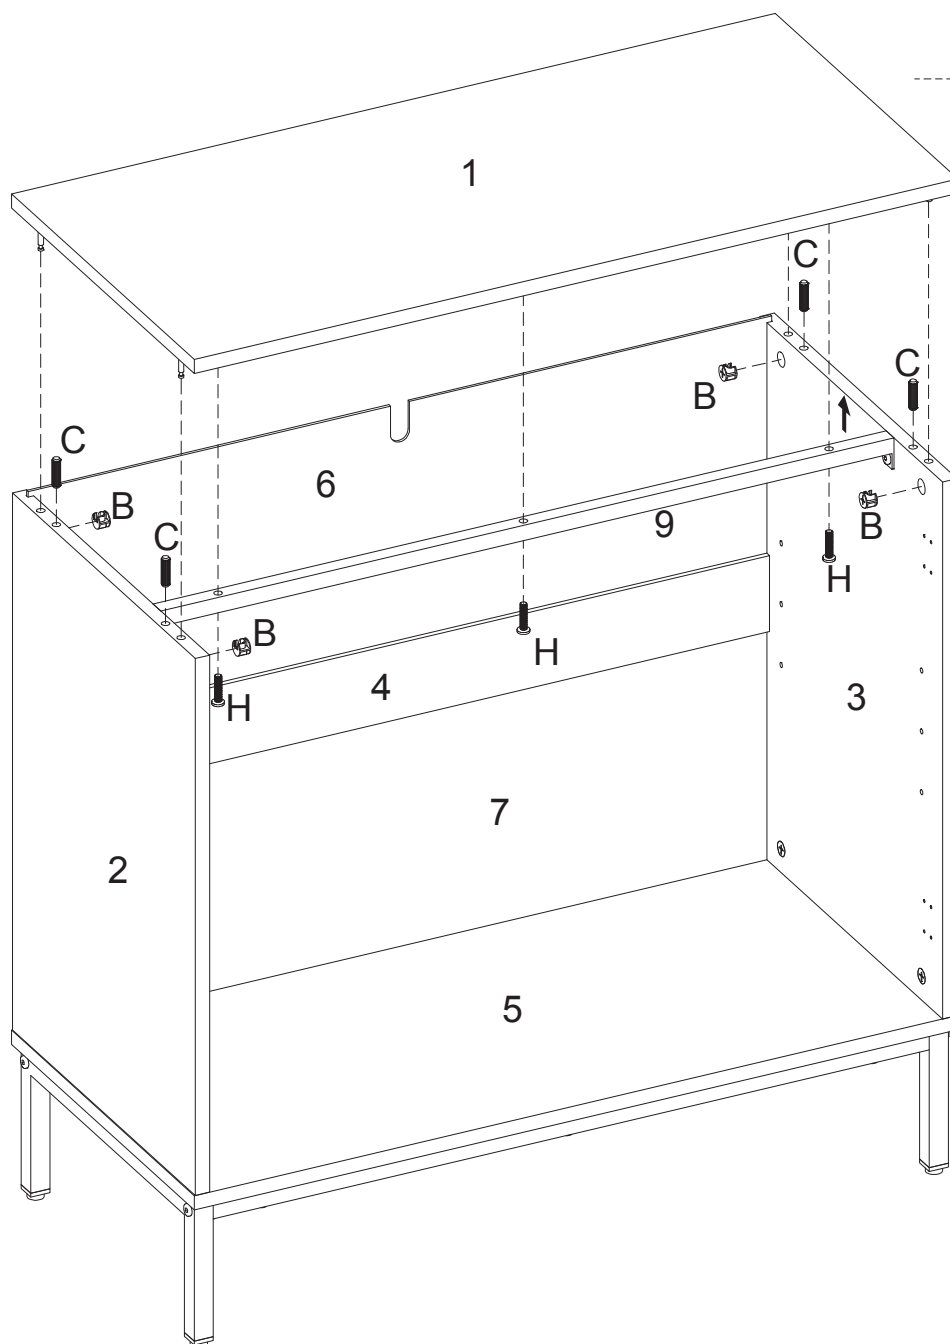




# Step 11

 

J x10




   K x10

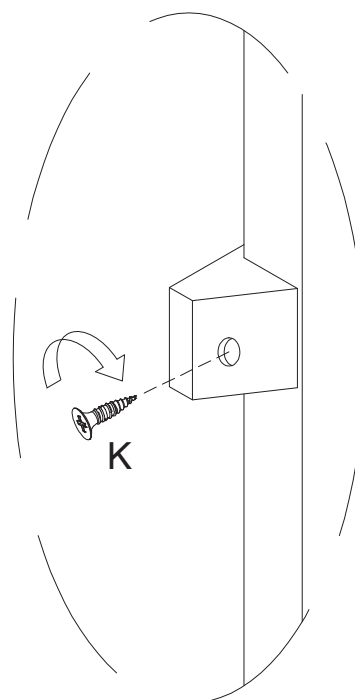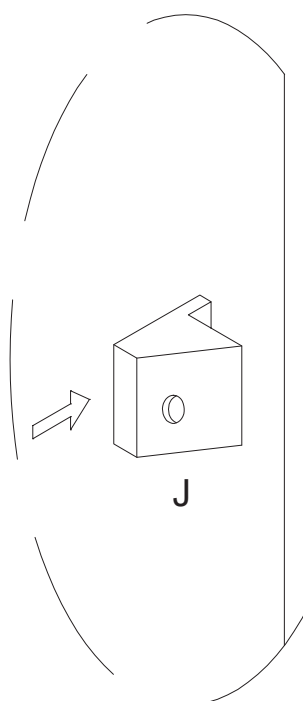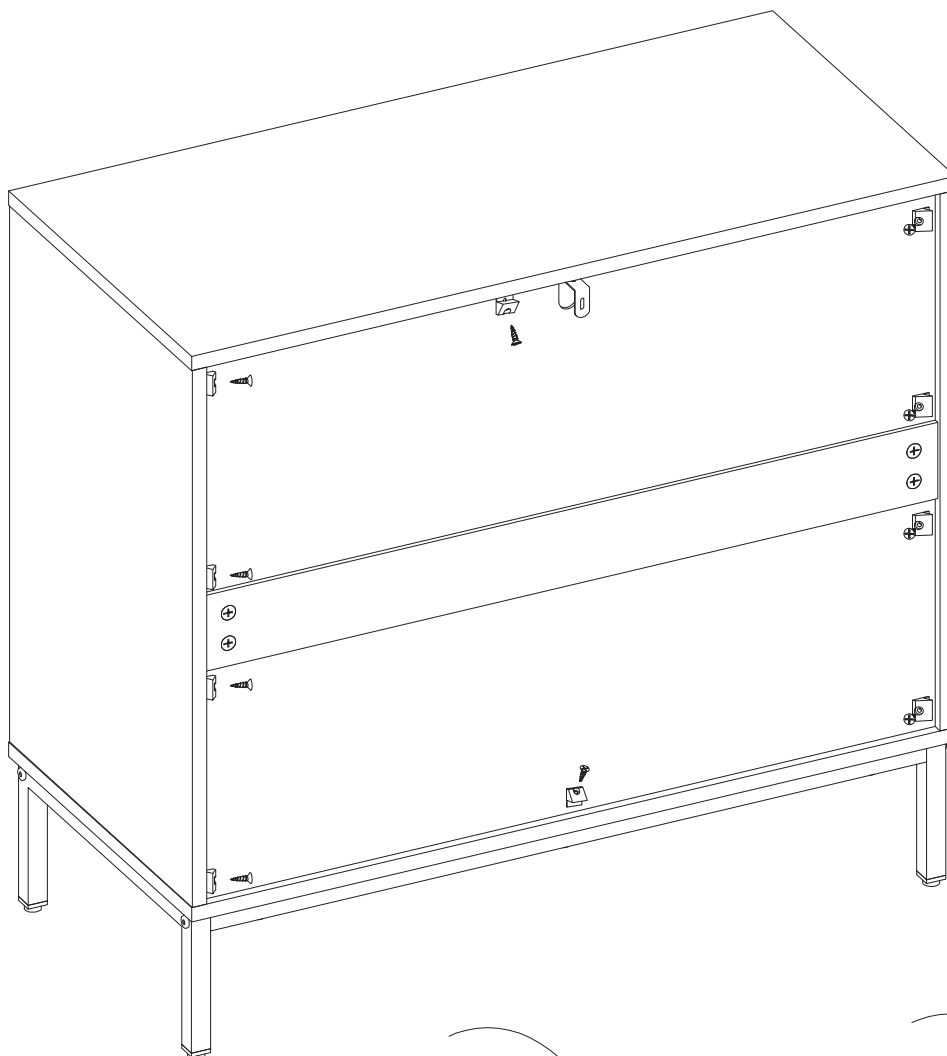







## Step 12

 


D x4



    N x12

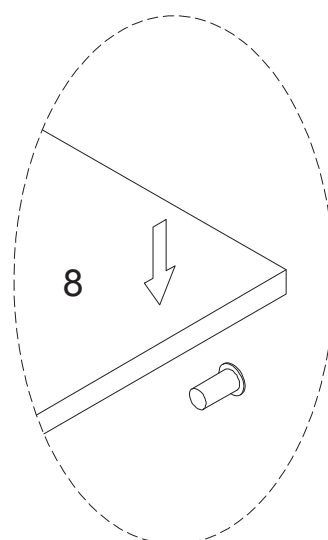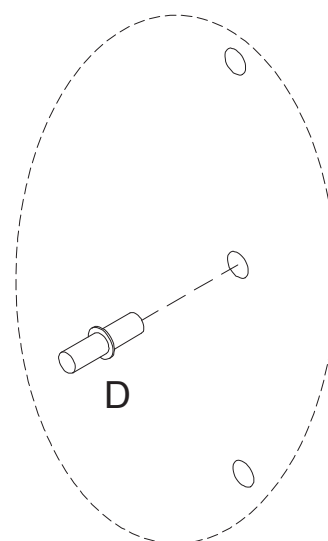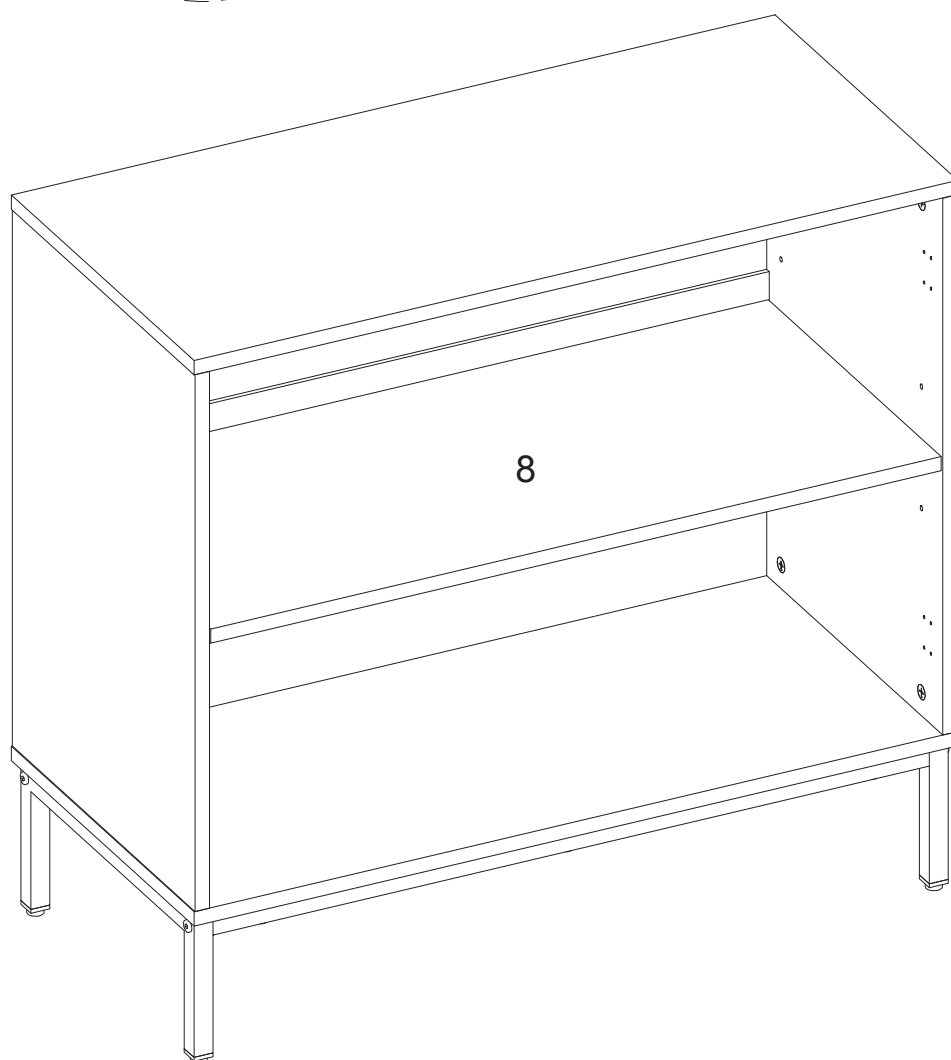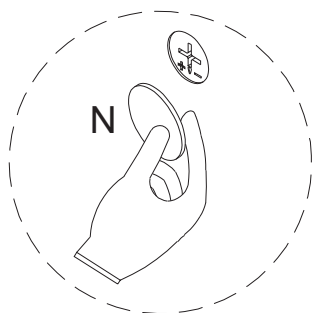



## Step 13

 

E x4



 
 
F x8

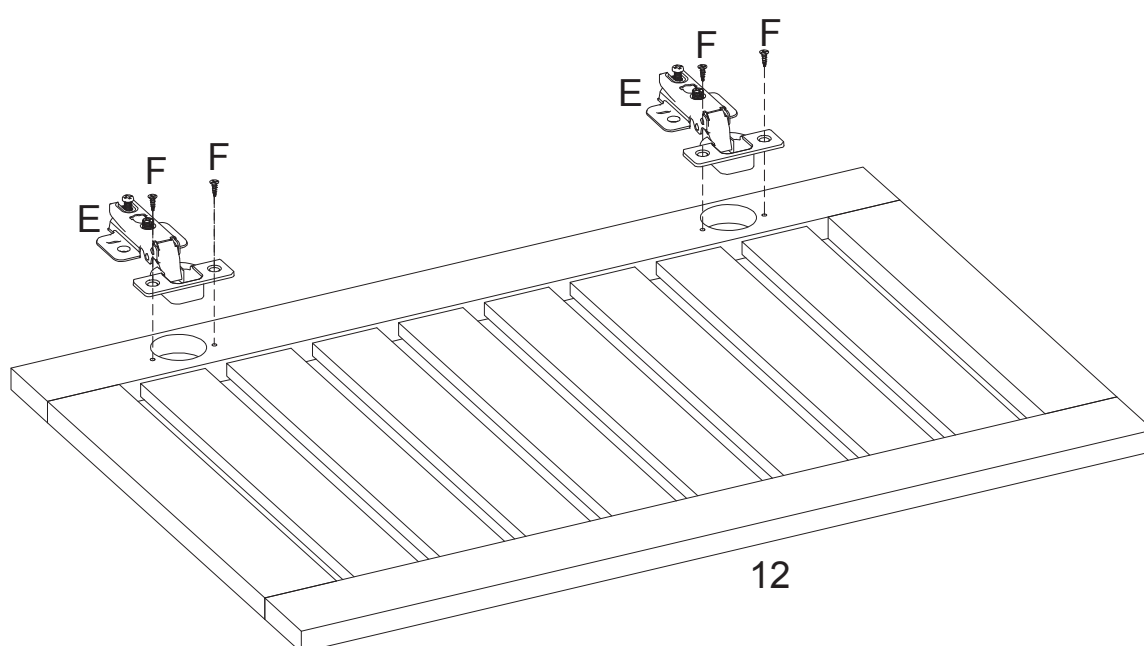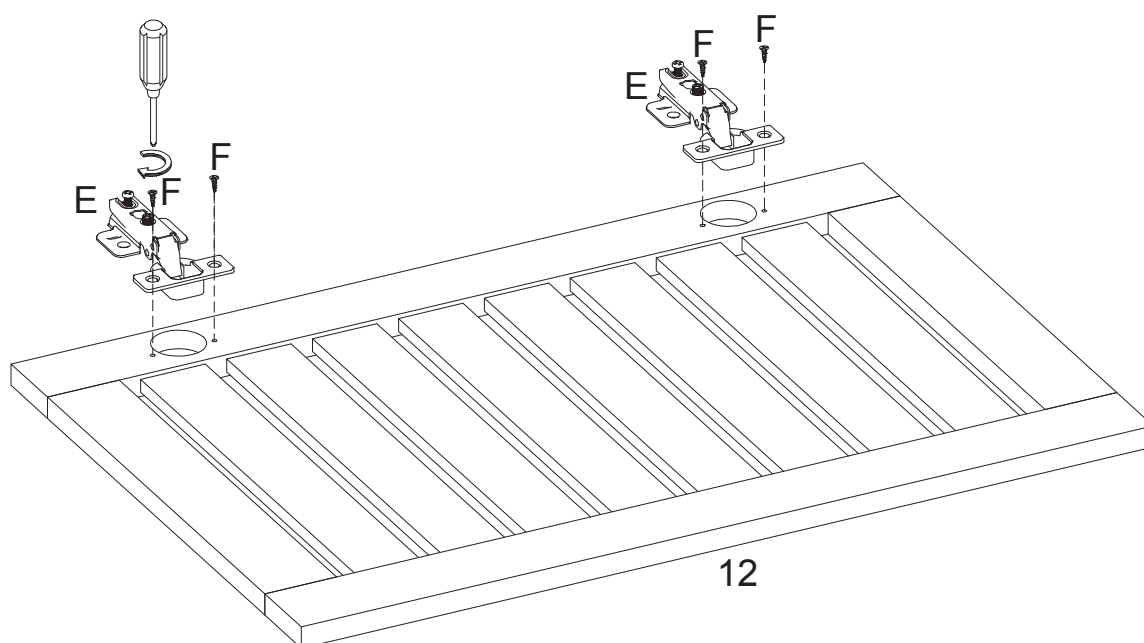



## Step 14



  F x16

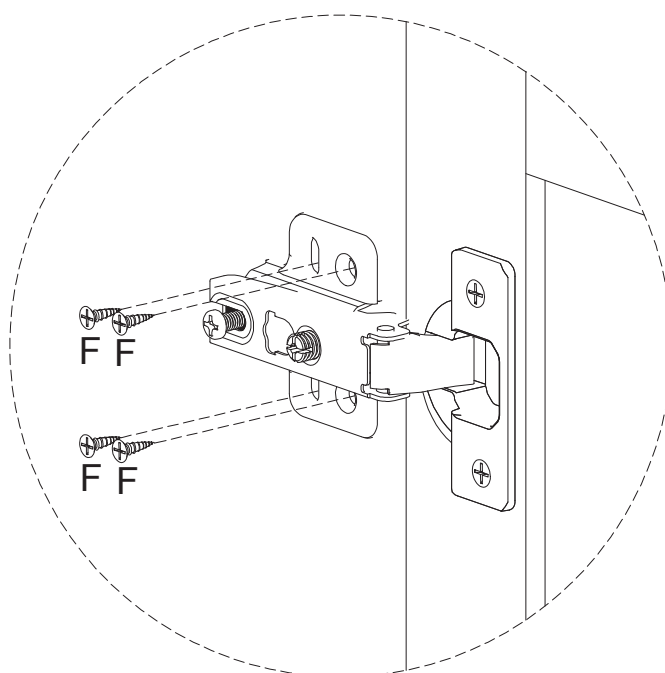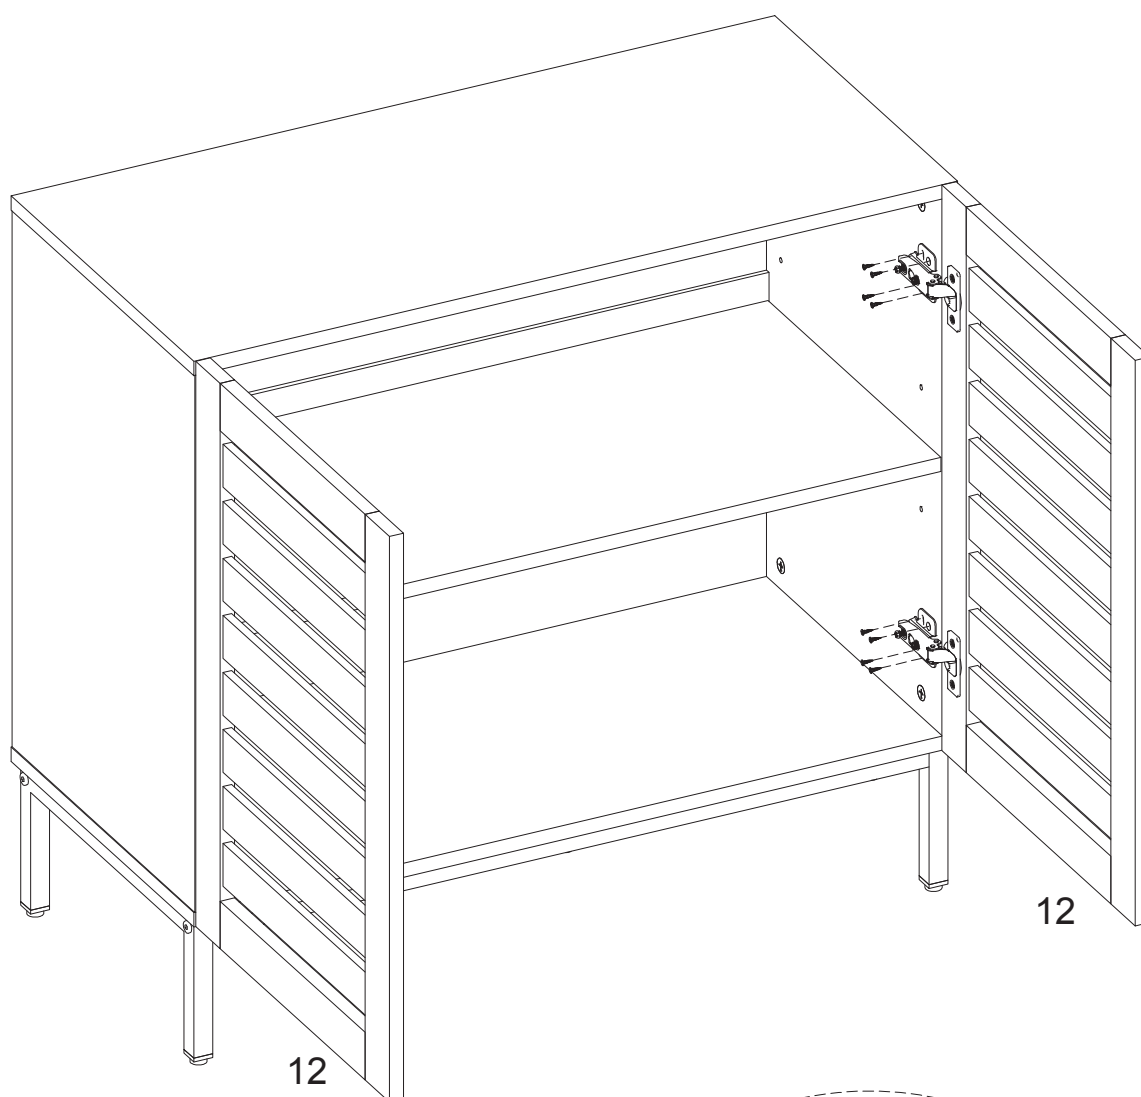


## Step 15

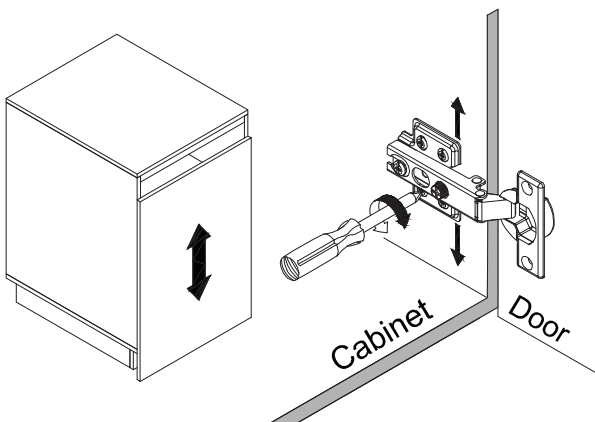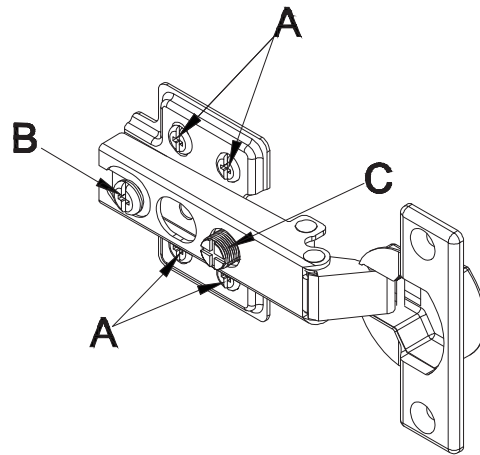  


### To adjust the vertical height.

 Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

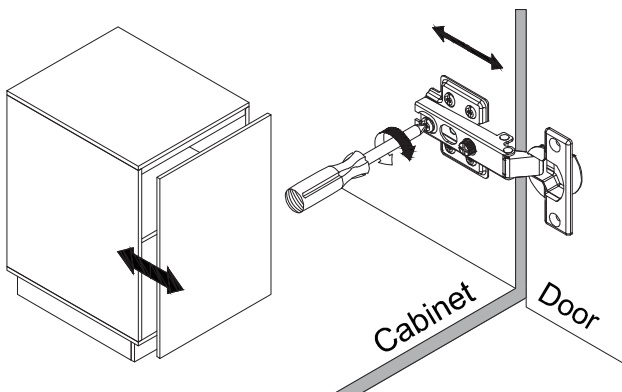

### To adjust depth.


 
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

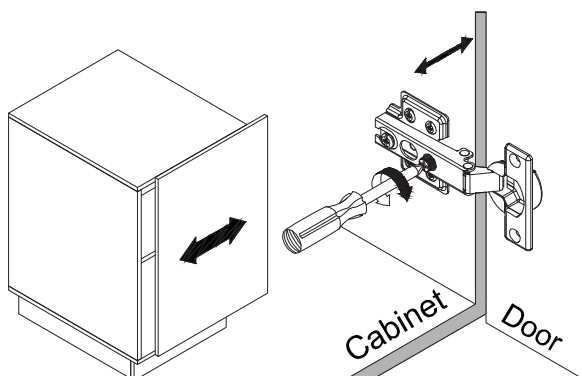

### To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.
  
## Step 16

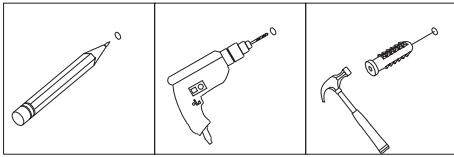


P x1




R x1

 **WARNING:** Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

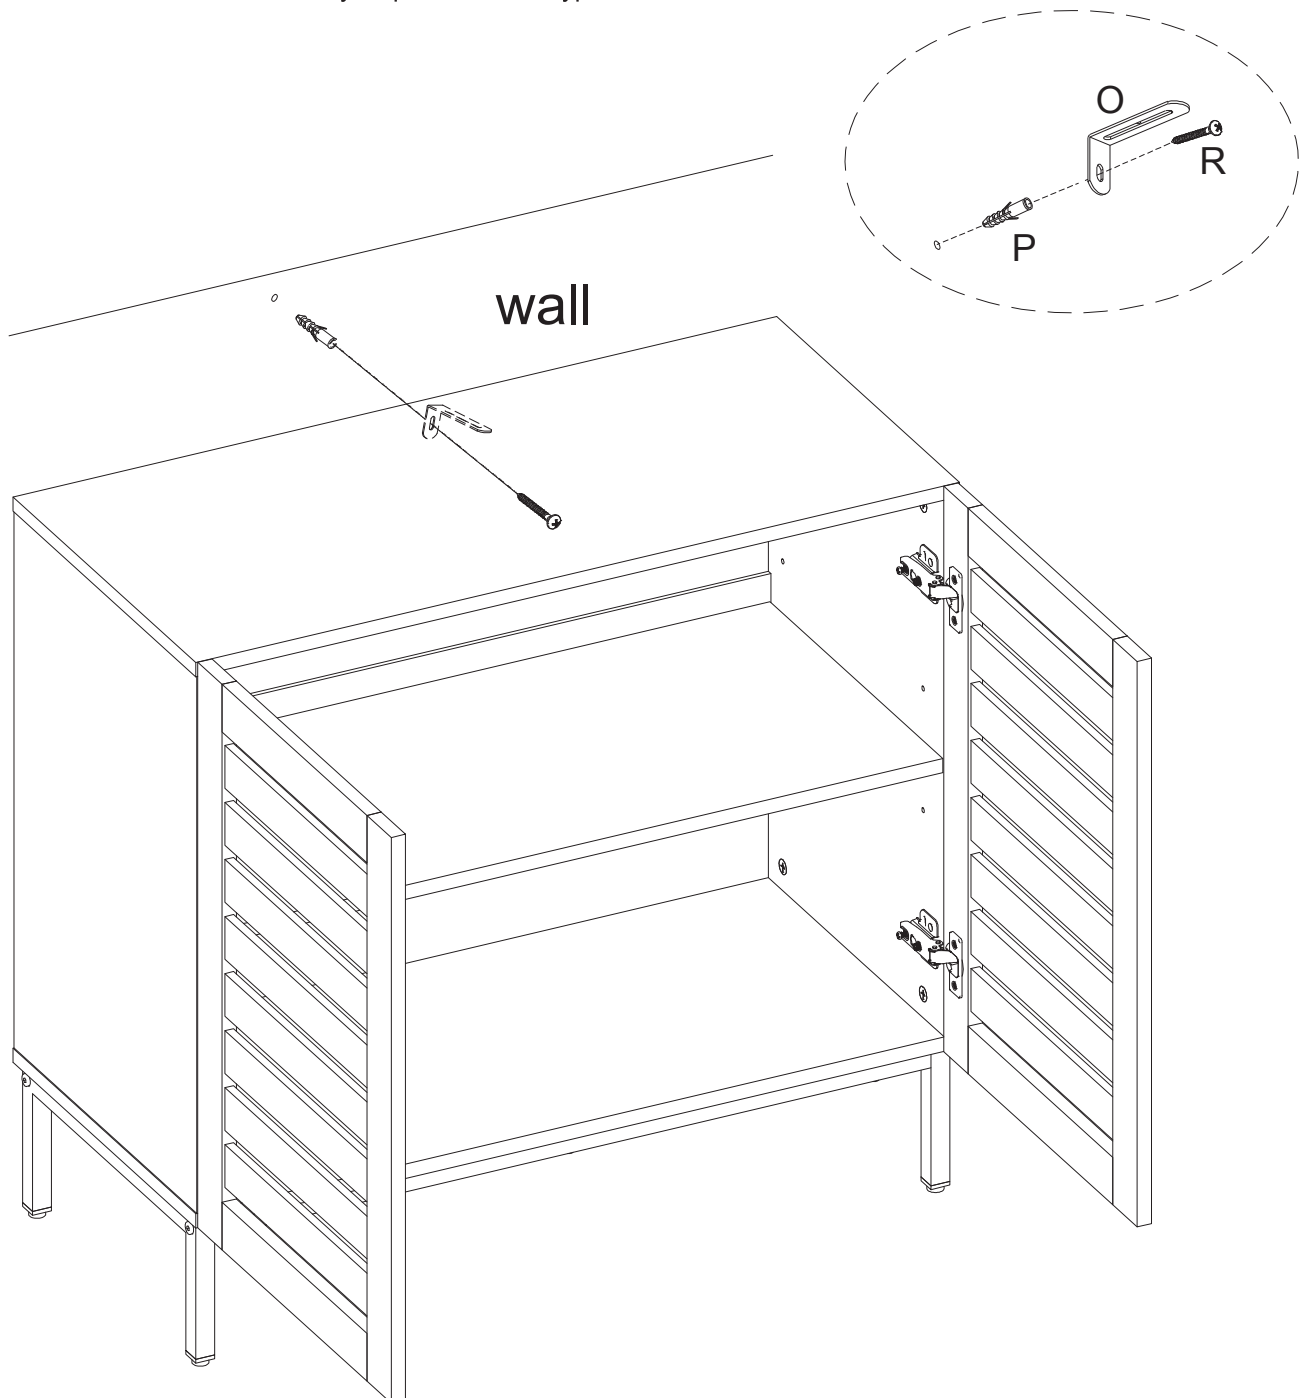

## Step 17

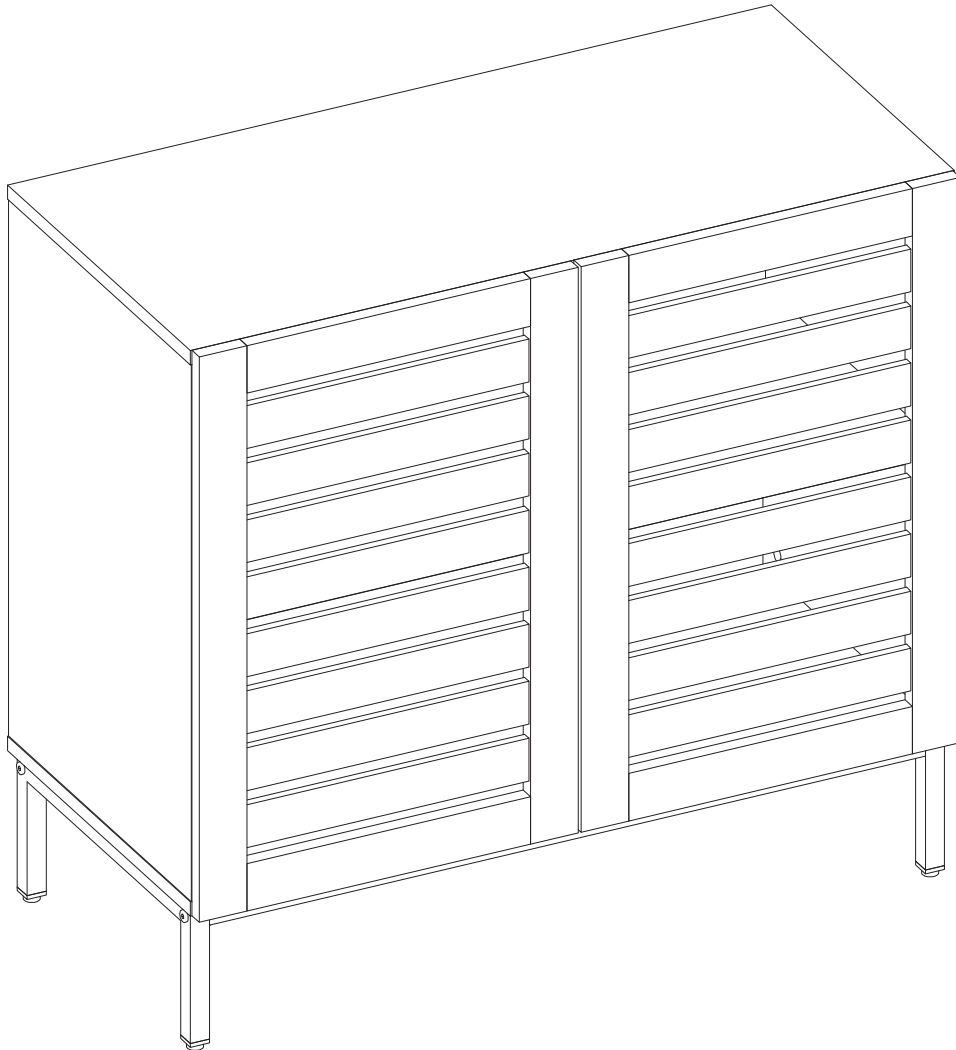 

# Final Assembly

# AFTER-SALES SERVICE CARD

We sincerely thank you for trusting our service and our products, and may this product add enrichment to your home. We guarantee that the product has undergone strict quality inspection and meticulous packaging. If you encounter any issue regarding either shipping or the product, please feel free to contact us at any time. We'd be more than happy to serve you wholeheartedly.

Yours Sincerely

- Please avoid harsh, corrosive and abrasive cleaners.



***Customer Service:(855)208-0668(MON-FRI 9:00am-5:00pm  
Eastern Time) or contact [help@EverythingSupport.com](mailto:help@EverythingSupport.com)***

---

If you have any questions or concerns please feel free to contact us. We're committed to providing our customers with the quality service.