



LED Low Voltage Light Instruction

Model No.: FCB-VI-XM-3D-PG0196

Item No: 82093LO

Power Rating: 120V AC 60 Hz, 108W

DC Adapter: 24V DC, 36W

USER SERVICING INSTRUCTIONS

CAUTION:

- The maximum wattage of power adaptor is 108 watts
- For indoor and outdoor use.
- Use only UL Listed Class 2 24V DC Power Supply.
- To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify string.
- Always unplug this product before installing.
- To reduce the risk of fire and electric shock: Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal.
- To reduce the risk of fire and electrical shock: Do not mount or support strings in a manner that can cut or damage wire insulation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

A) READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- b) Do not use light products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c) This seasonal use product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f) Do not let lamps rest on the supply cord or on any wire.
- g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other objects from cord, wire, or light string.
- k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- l) Do not cover the product with cloth, paper or any material not part of the product when in use.
- m) This product is equipped with non-replaceable lamps. Do not twist lamps. And if non-replaceable lamps burn out or damaged, do not try to repair or replace it, it shall be discarded.
- n) Read and follow all instructions that are on the product or provided with the product.

O) SAVE THESE INSTRUCTIONS

- p) DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.
- q) Caution for ingestion (small batteries only).
- r) Non-rechargeable batteries are not to be recharged.

USE AND CARE INSTRUCTIONS

- a) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- b) When storing the product, carefully remove the product from whenever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- c) When not in use, store neatly in a cool, dry location protected from sunlight.

For questions and/or assistance, call customer service at 1-877-398-7337 or visit us on the web at www.geholidaylighting.com

PRINTED IN VIET NAM

NV 0422

MADE IN VIET NAM

Nicolas Holiday Ltd. 246 Spring Hill Road, Unit B, Trumbull CT 06611

©2022 Nicolas Holiday Ltd., 9F., No. 37, Guangfu N. Rd. Taipei, Taiwan 10560. All rights reserved.