Display Cabinet




Version:05/13/2023 1/22

ASSEMBLED BY 2 ADULTS



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

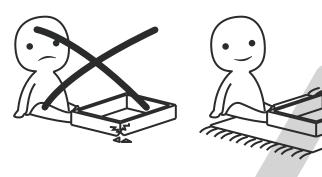


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY!

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

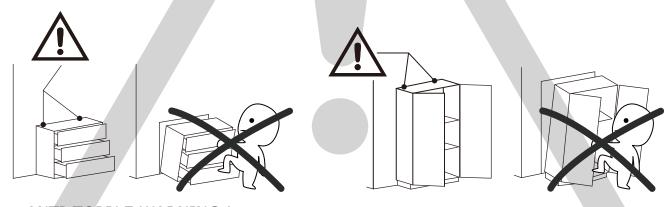

ANTI-TOPPLE WARNING!


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT!

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

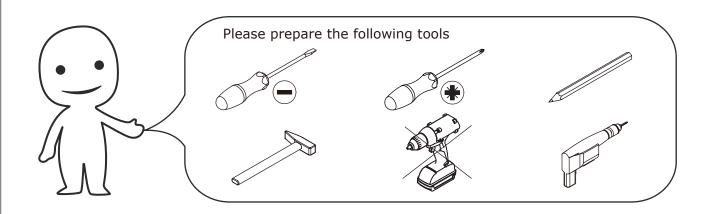






When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

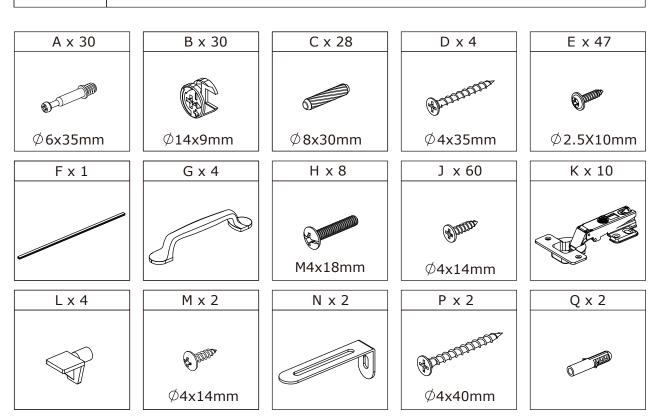


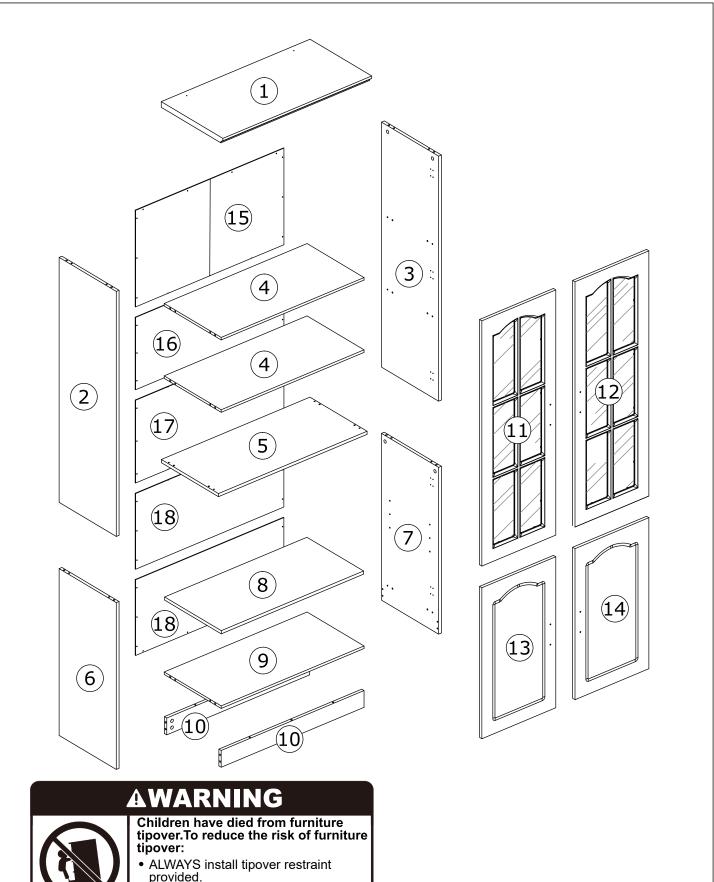



- provided.
- NEVER put a TV on this product.NEVER allow children to stand,climb or hang on drawers,doors,or shelves. NEVER open more than one drawer
- at a time.
- Place heaviest items in the lowest drawers.


This is a permanent label. Do not remove!

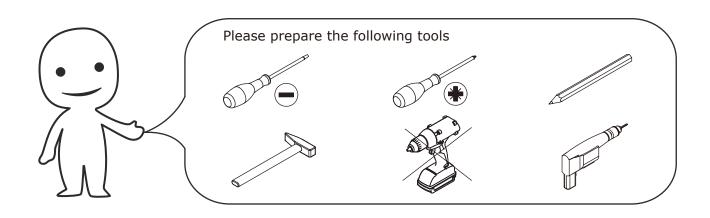








When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

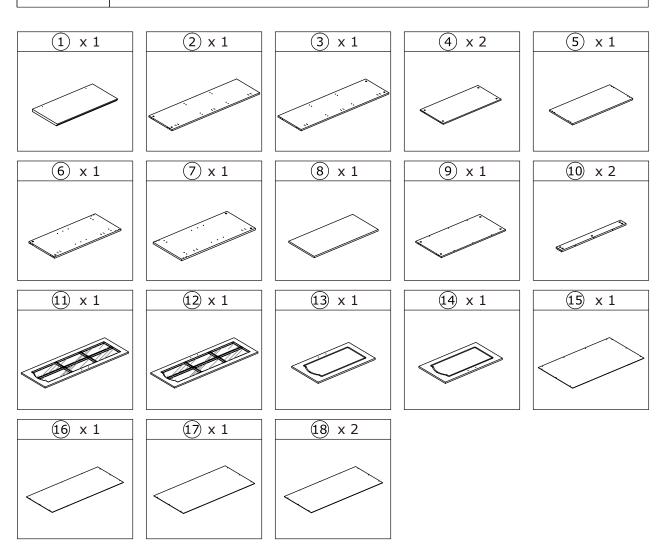

 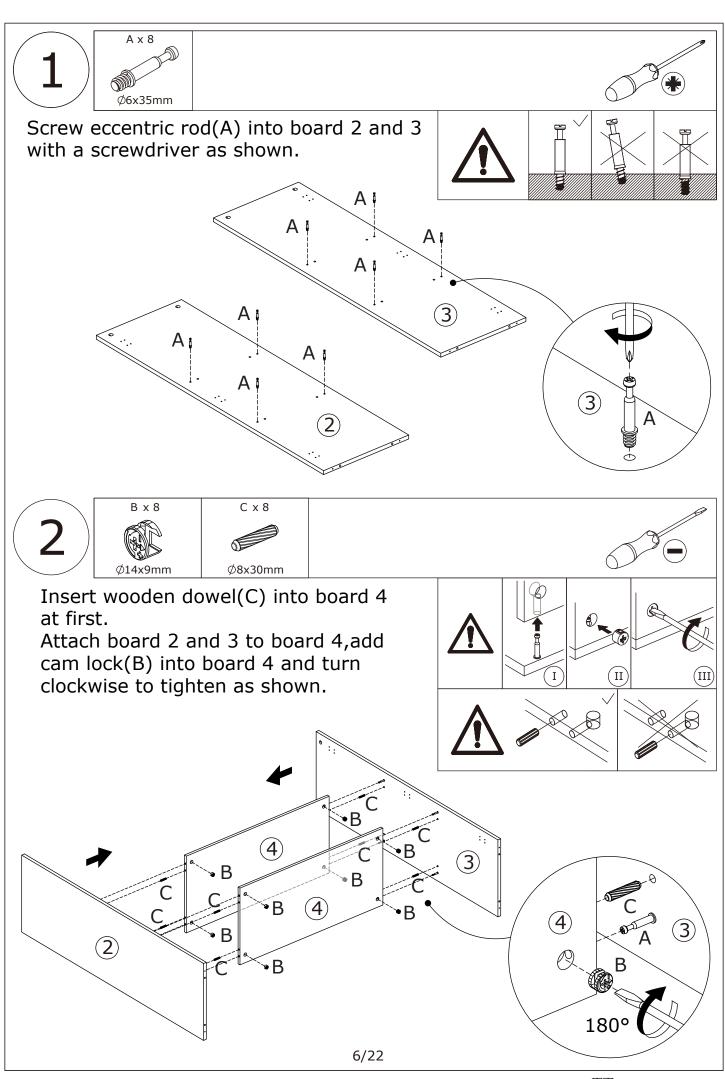


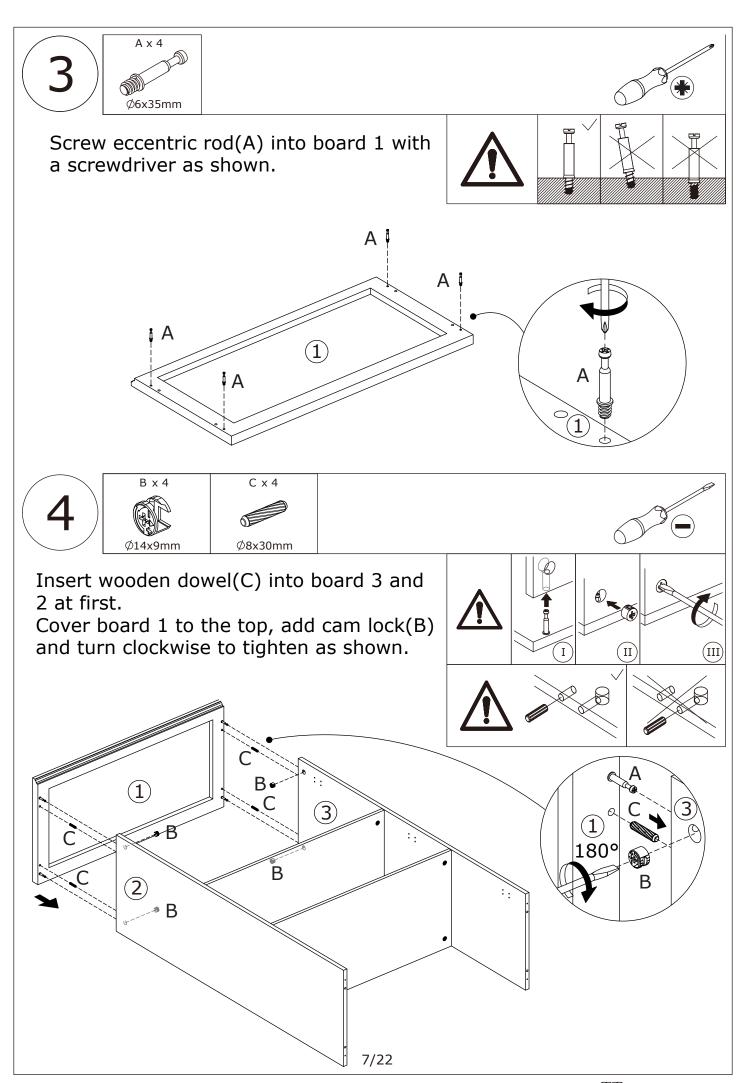

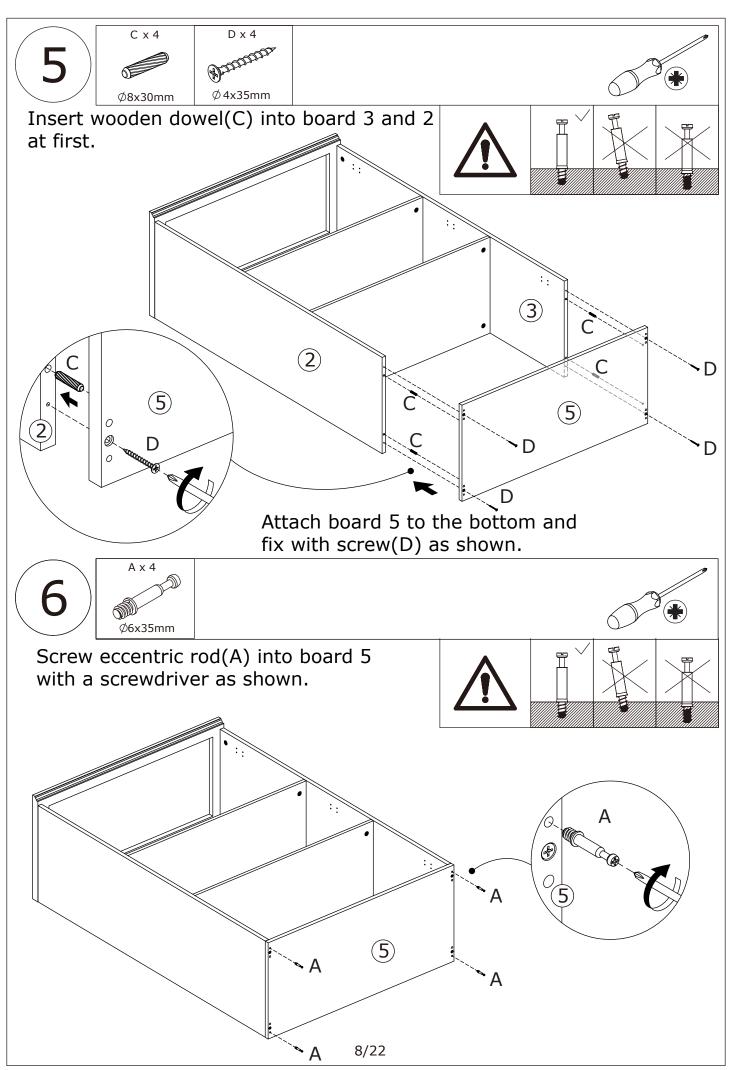









 Screw eccentric rod(A) into board 9 with a screwdriver as shown.



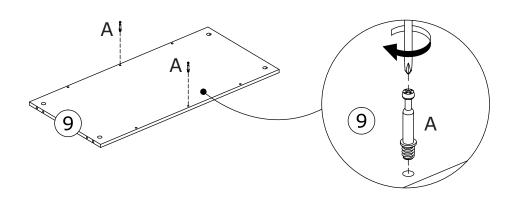




at first.









Attach board 10 to board 9,add cam lock(B) into board 10 and turn clockwise to tighten as shown.

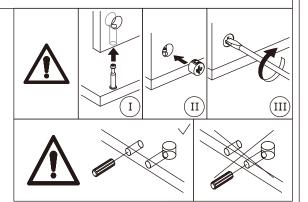

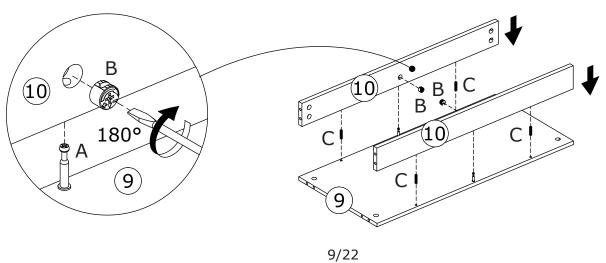

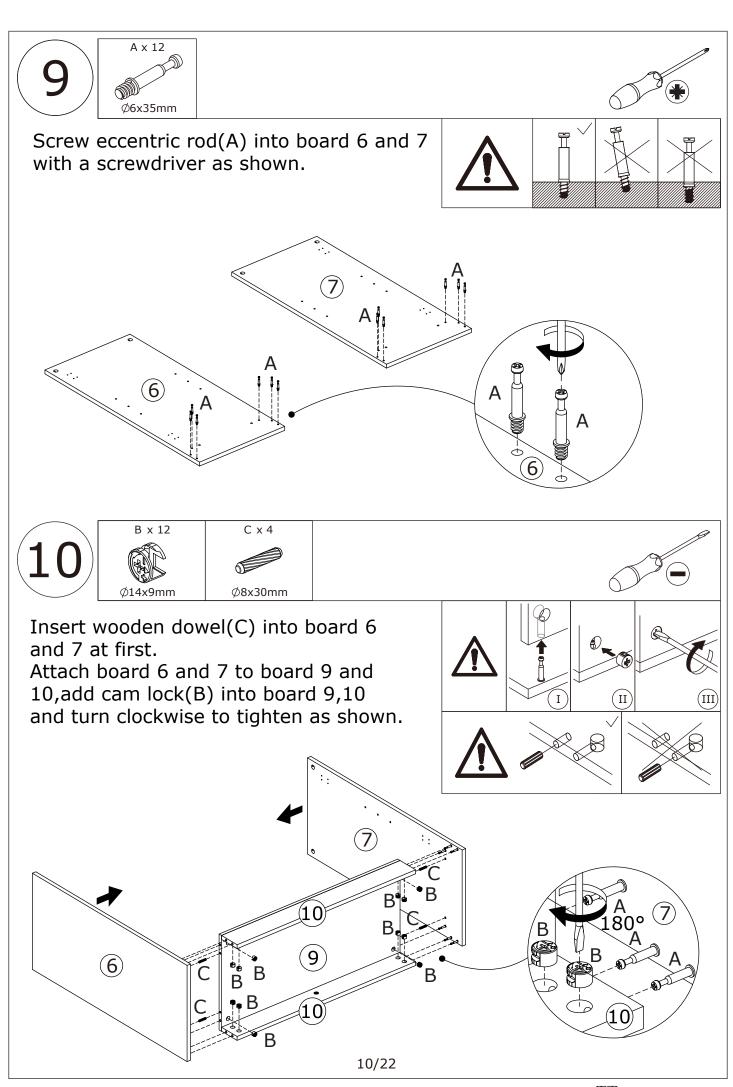









Insert wooden dowel(C) into board 6 and 7 at first.

Connect the two assembled components, add cam lock(B) into board 6,7 and turn clockwise to tighten as shown.

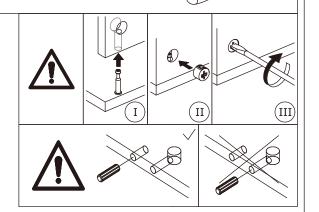


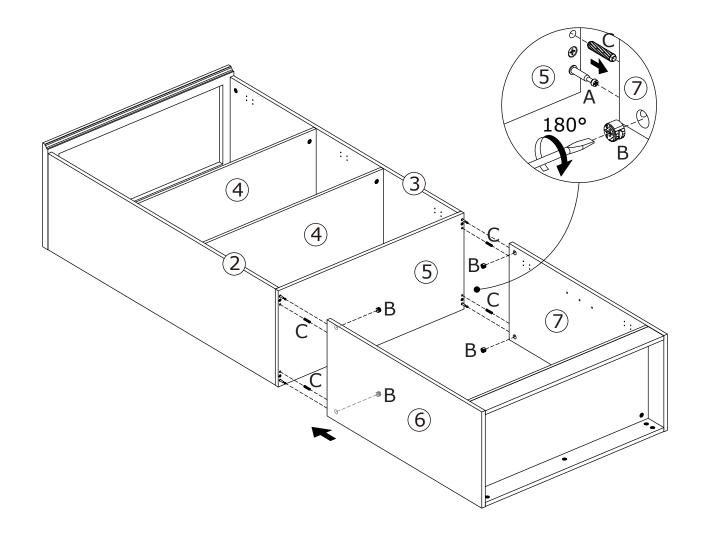






Flip the cabinet to the back Fix back board 15, 16, 17 and 18 to cabinet

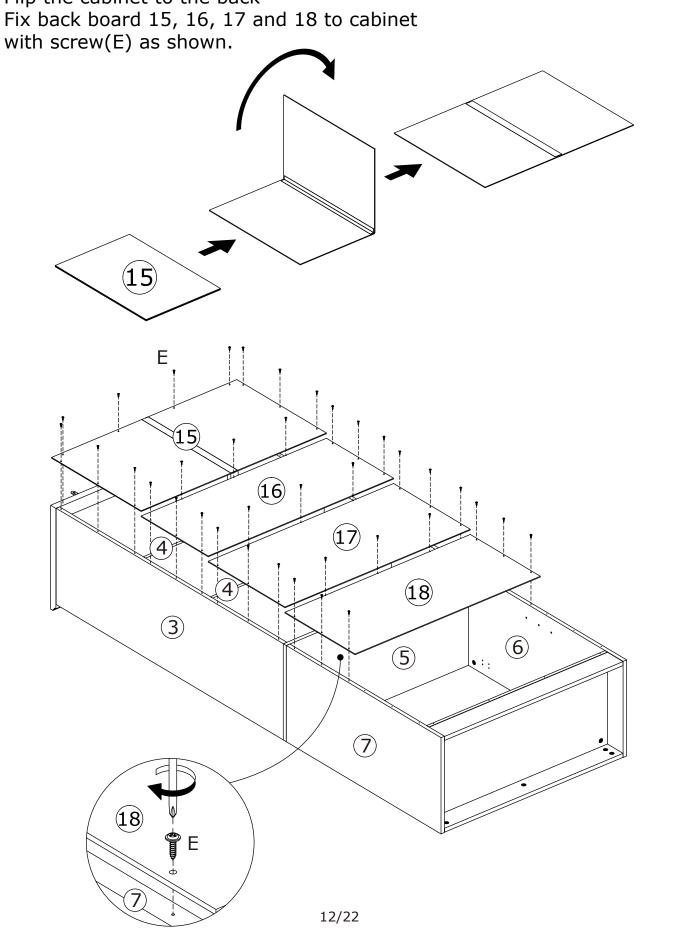


 Insert backboard strip(F) at first, then insert back board 18 as shown.

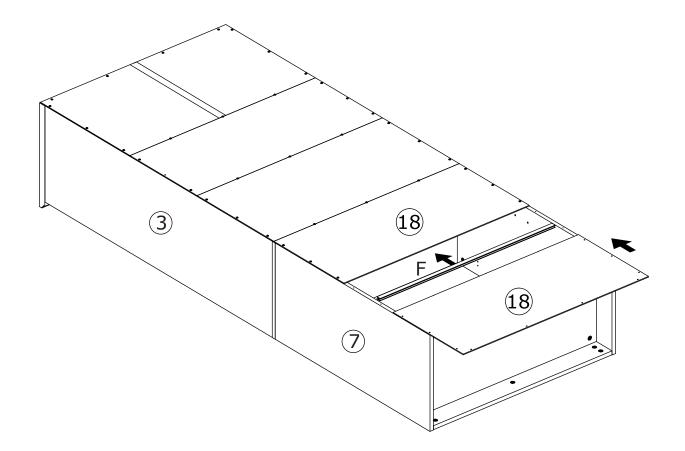










 
Fix back board 18 with screw(E) as shown.

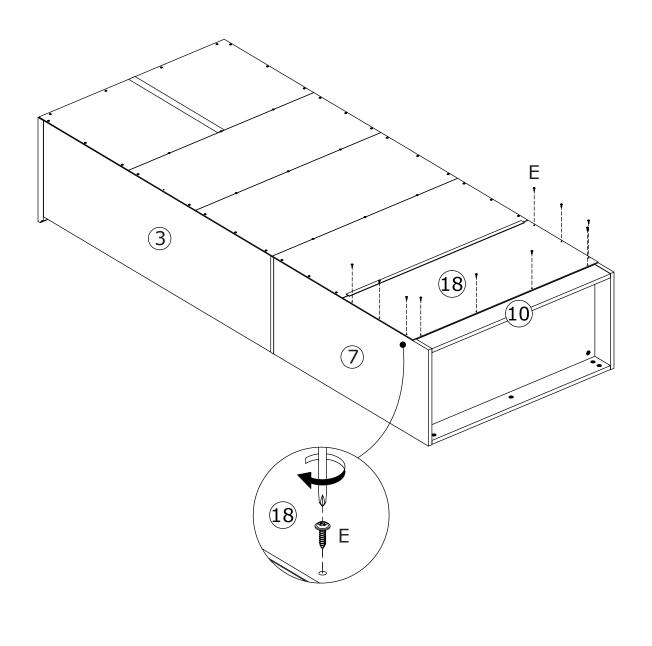




 Fix hinge(K) to board 11 and 12 with screw(J) as shown. Fix handle(G) to board 11 and 12 with screw(H) as shown.

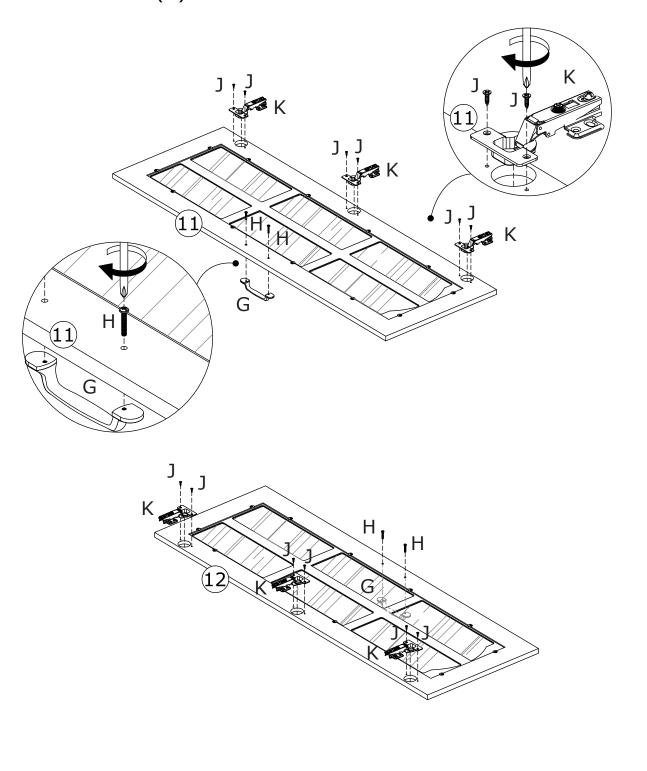




 Fix hinge(K) to board 13 and 14 with screw(J) as shown. Fix handle(G) to board 13 and 14 with screw(H) as shown.

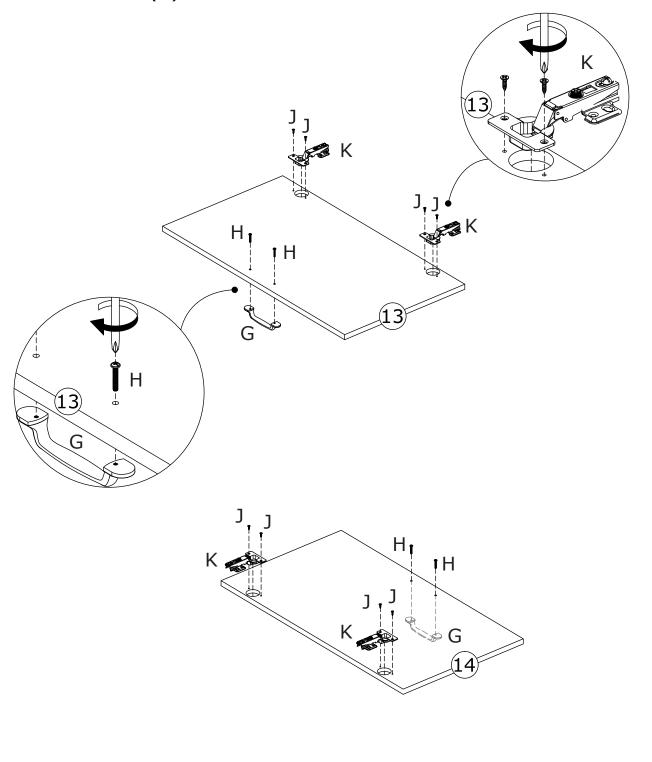









Assemble door 11 and 12 to unpper cabinet by fixing hinge with screw(J) as shown.

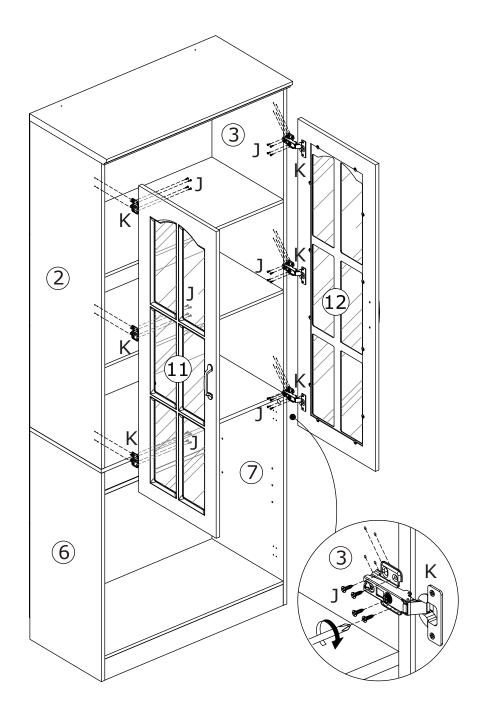


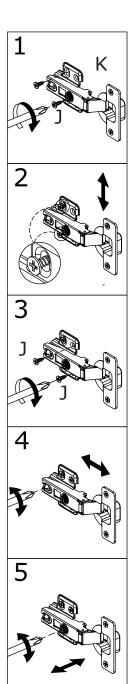






 Insert layer pin(L) into board 6 and 7, then place shelf board 8 in as shown.

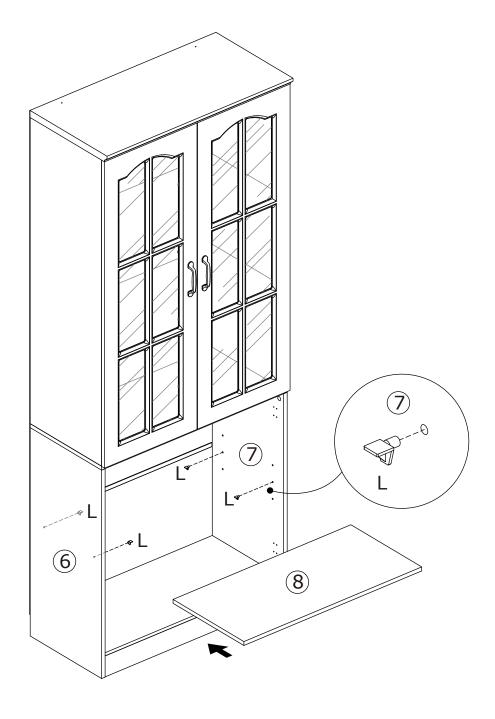









 
Assemble door 13 and 14 to lower cabinet by fixing hinge with screw(J) as shown.

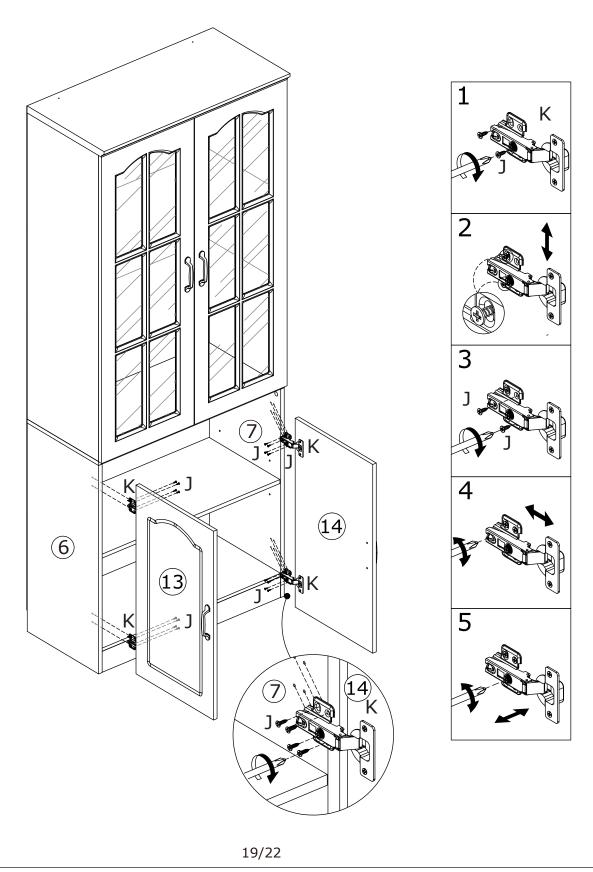







 Fix part(N) to board 1 with screw(M) as shown.

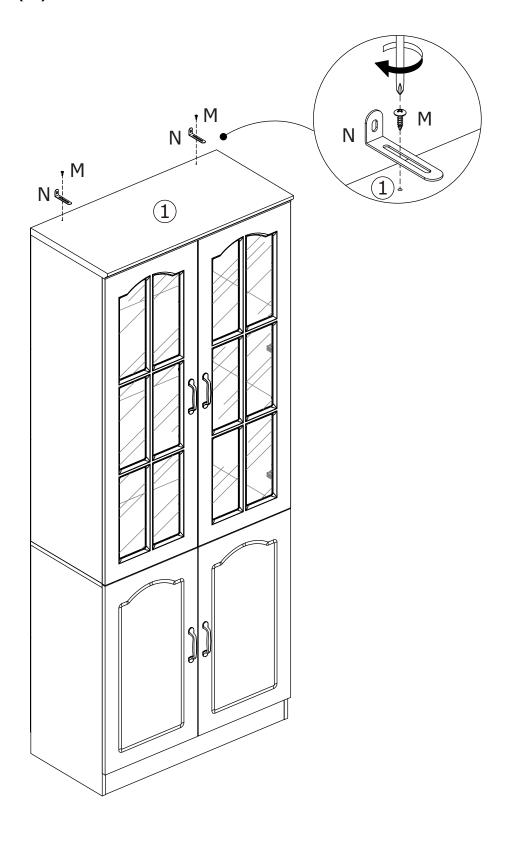


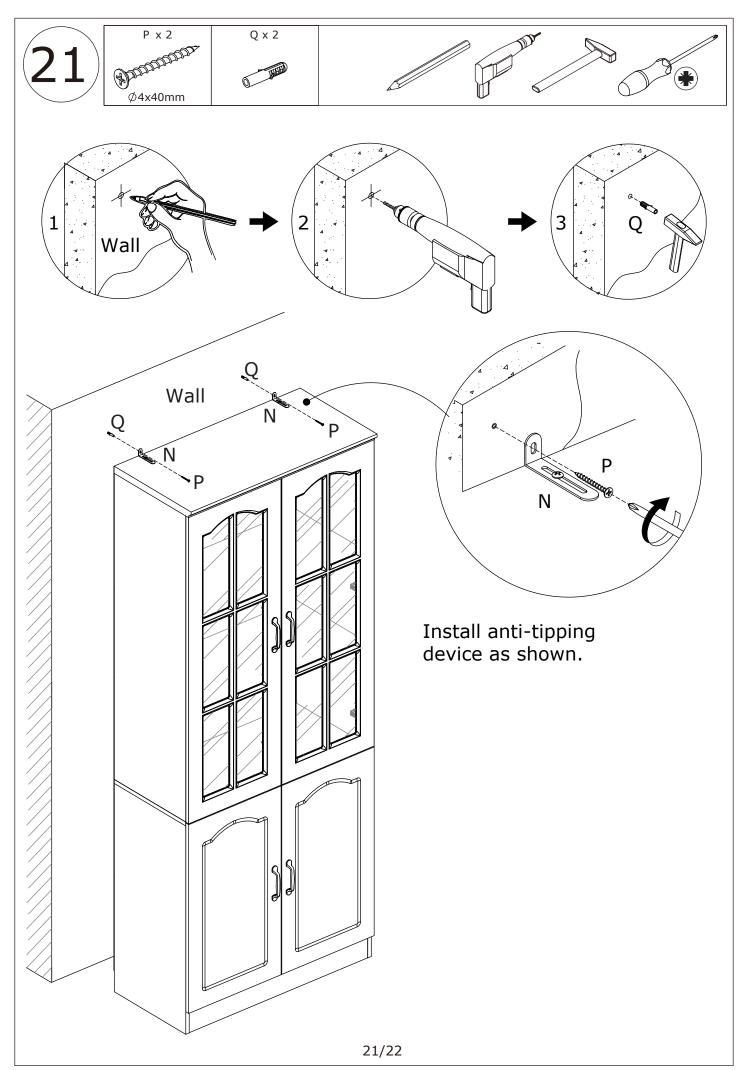



More detailed hinge adjustment mode:

- 1) Rotate out the screws connected with the cabinet counterclockwise, adjust the gap between the overall door frame and the upper and lower, and then rotate the screws clockwise after adjusting;
- 2) Rotate the screws at the end of the hinge counterclockwise to adjust the gap between the whole door frame and the cabinet before and after the adjustment, and then rotate the screws clockwise (rotate out to the movable door frame, do not need to over-rotate out);
- 3) Counterclockwise rotation of the screws in the middle of the hinge will offset the corresponding part of the rear door frame to the left, and clockwise rotation of the screws in the middle of the hinge will offset the corresponding part of the rear door frame to the right

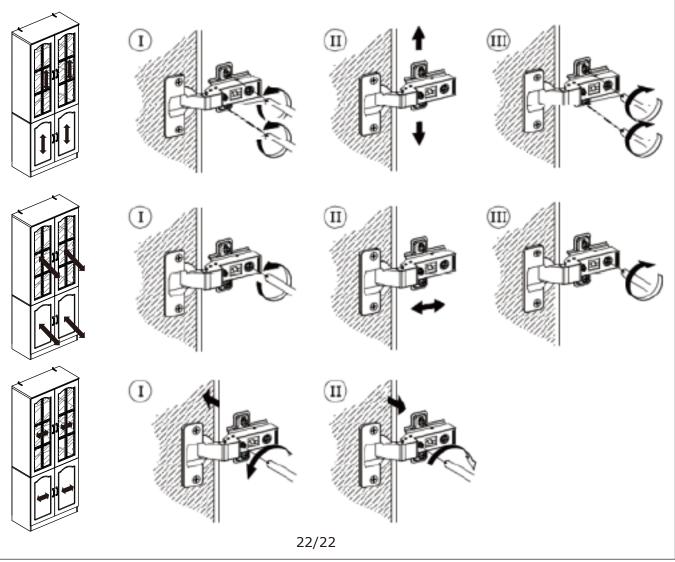

WARRANTY

WARRANTY CLAIMS

- •There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- •Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- •The product must be used in accordance with the instructions provided. For health reasons.
- •For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- •Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- •Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- •After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- •Sheet parts: 1 month from the date of purchase.
- •Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

•If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS


•If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

•If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

Display Cabinet

Version:05/30/2023

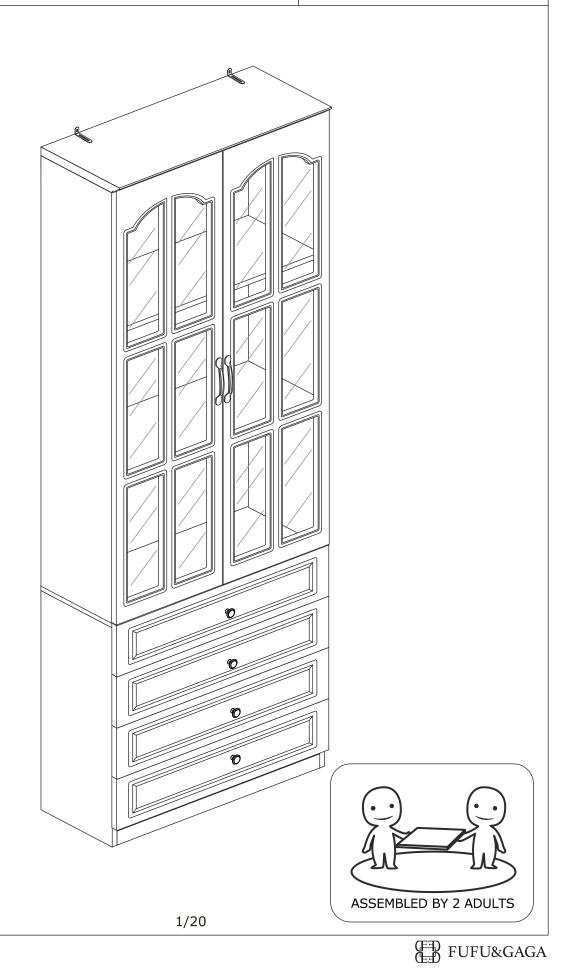



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.




AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY!

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

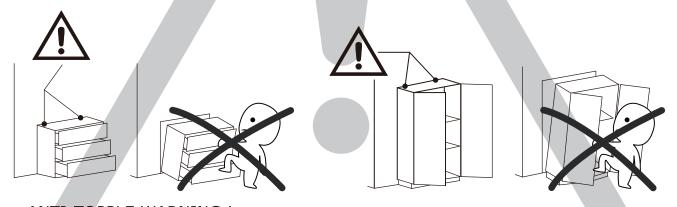

ANTI-TOPPLE WARNING!


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT!

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

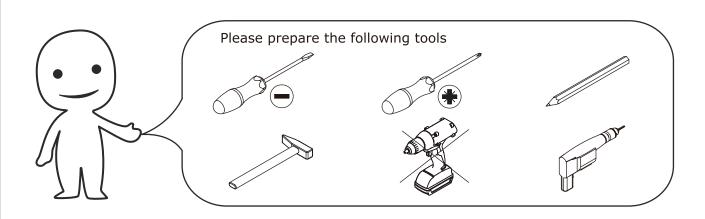









When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

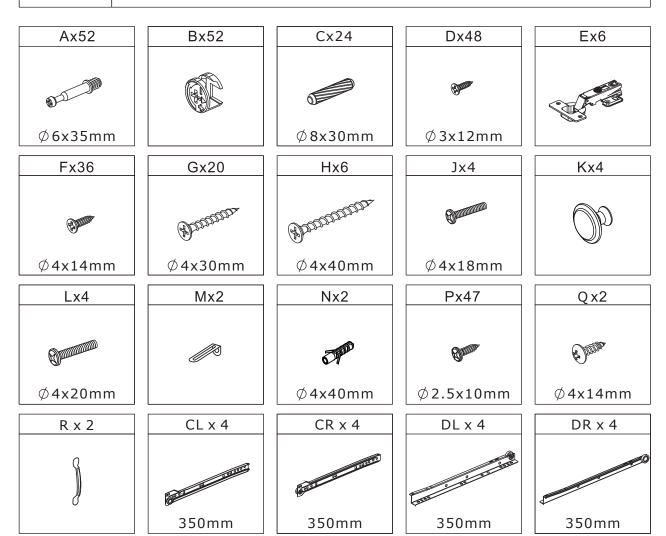


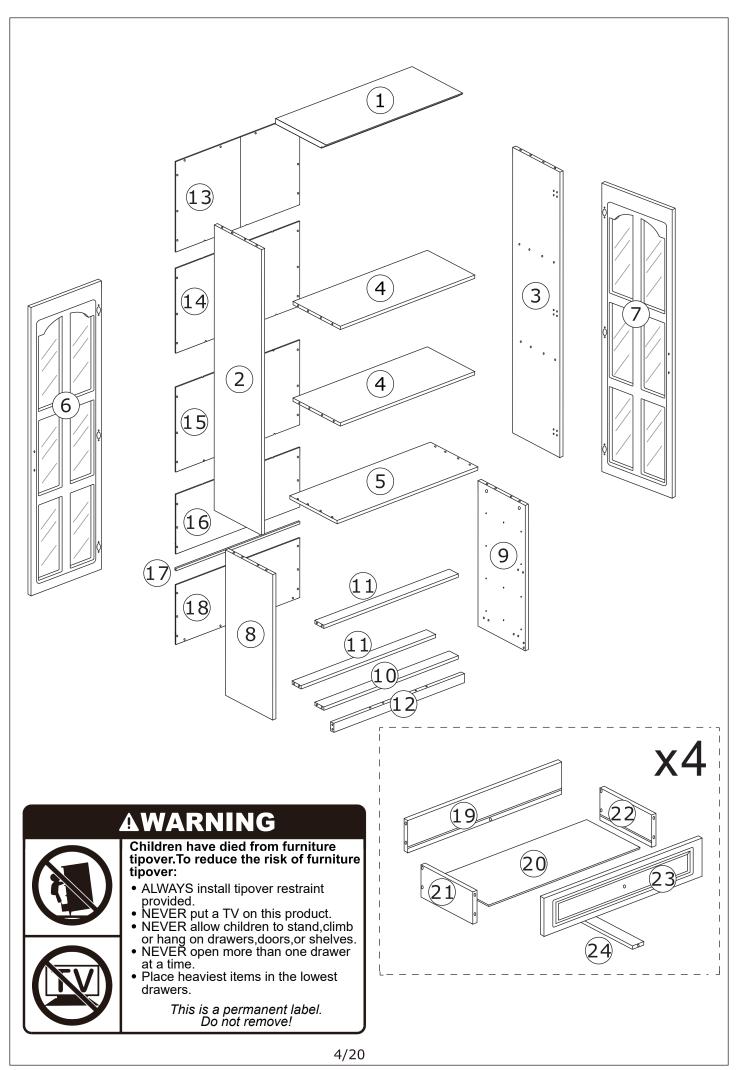


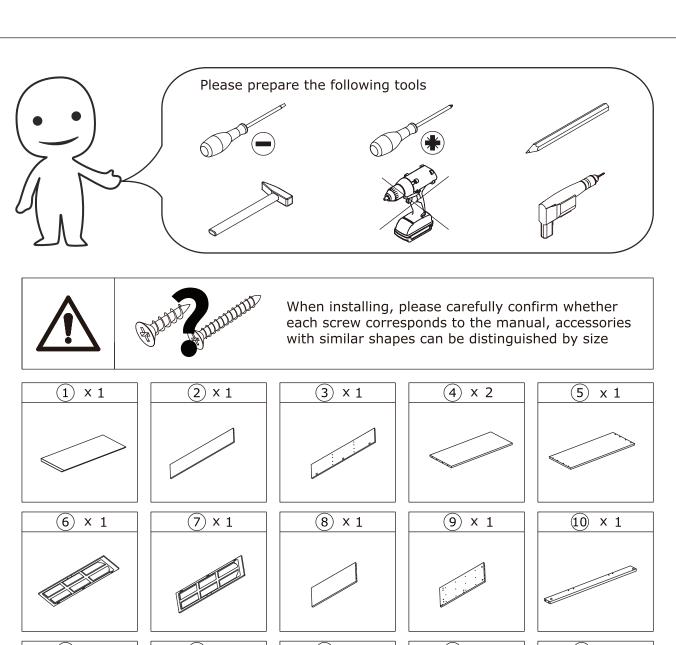

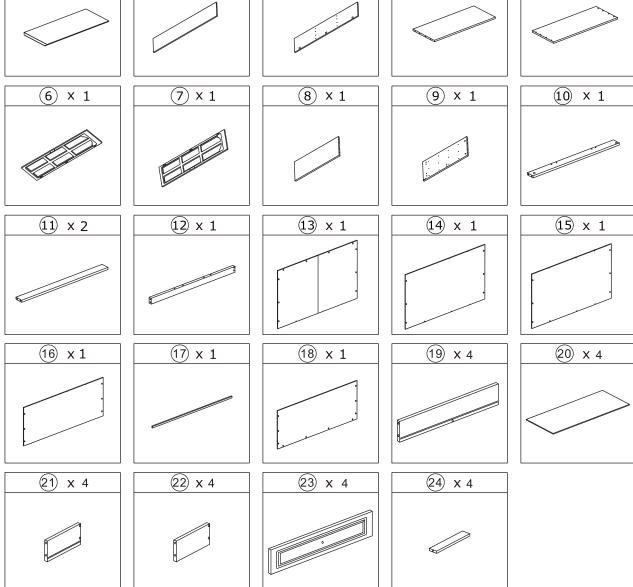

 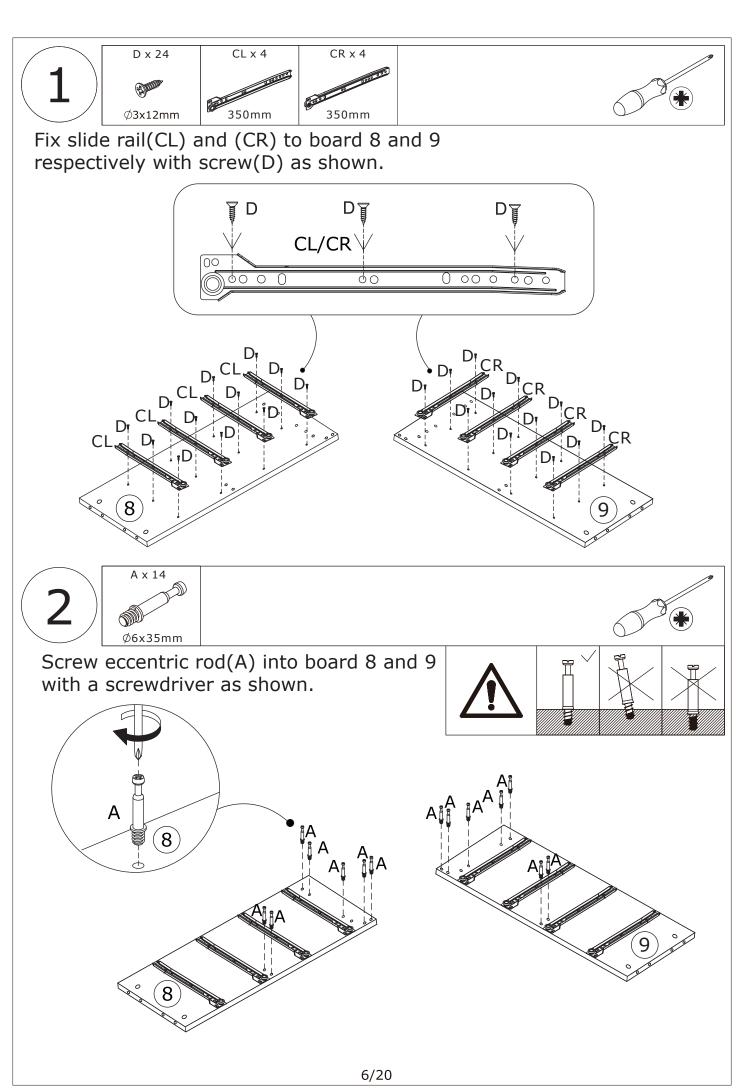


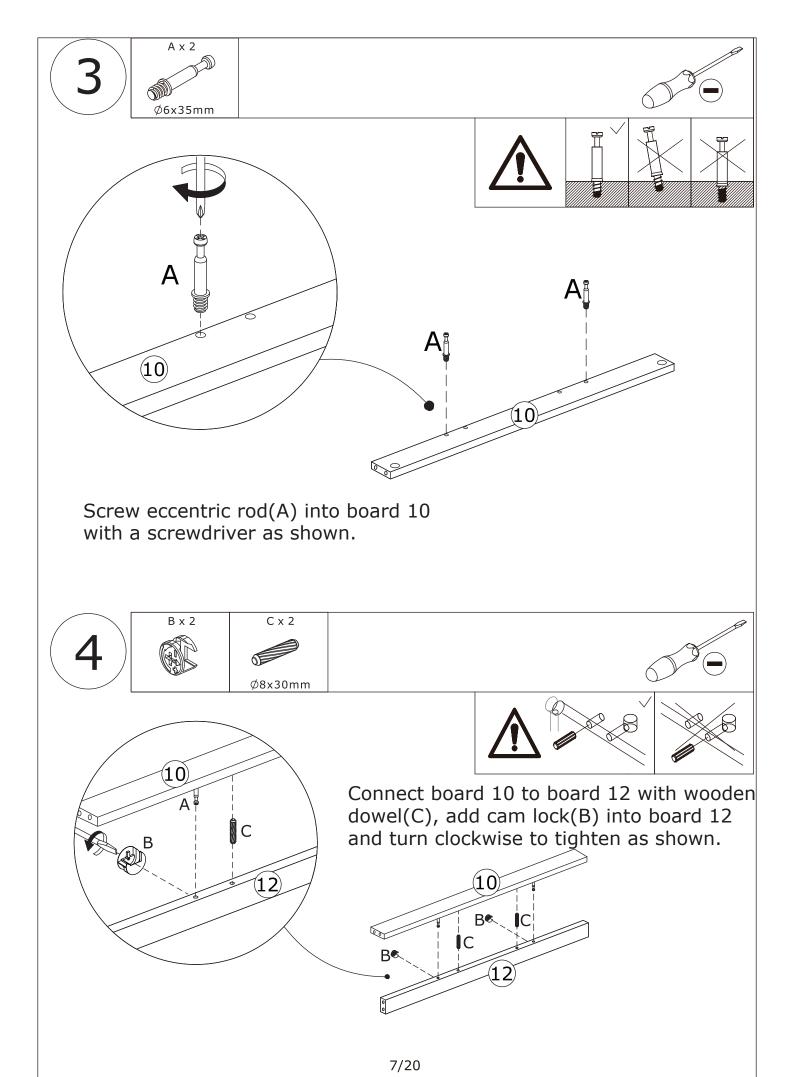

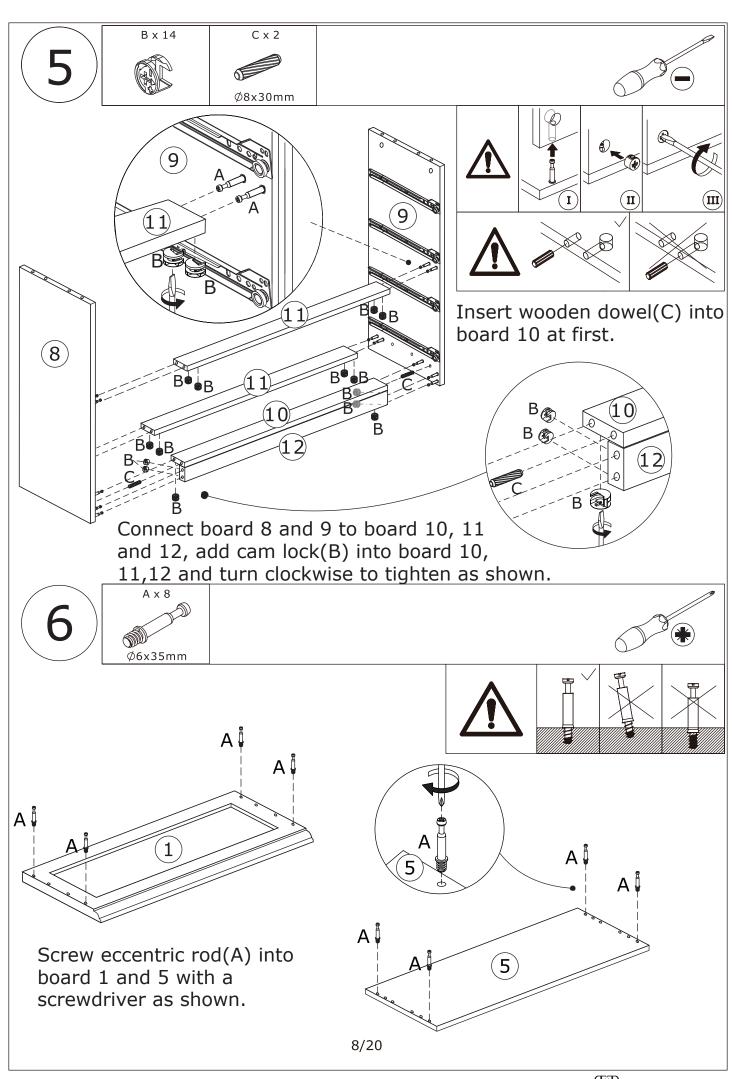










 
Screw eccentric rod(A) into board 2 and 3 with a screwdriver as shown.







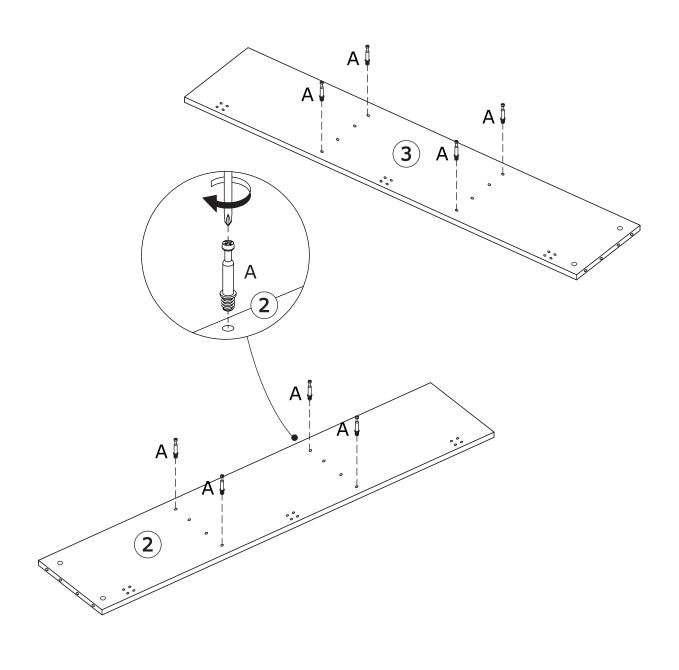


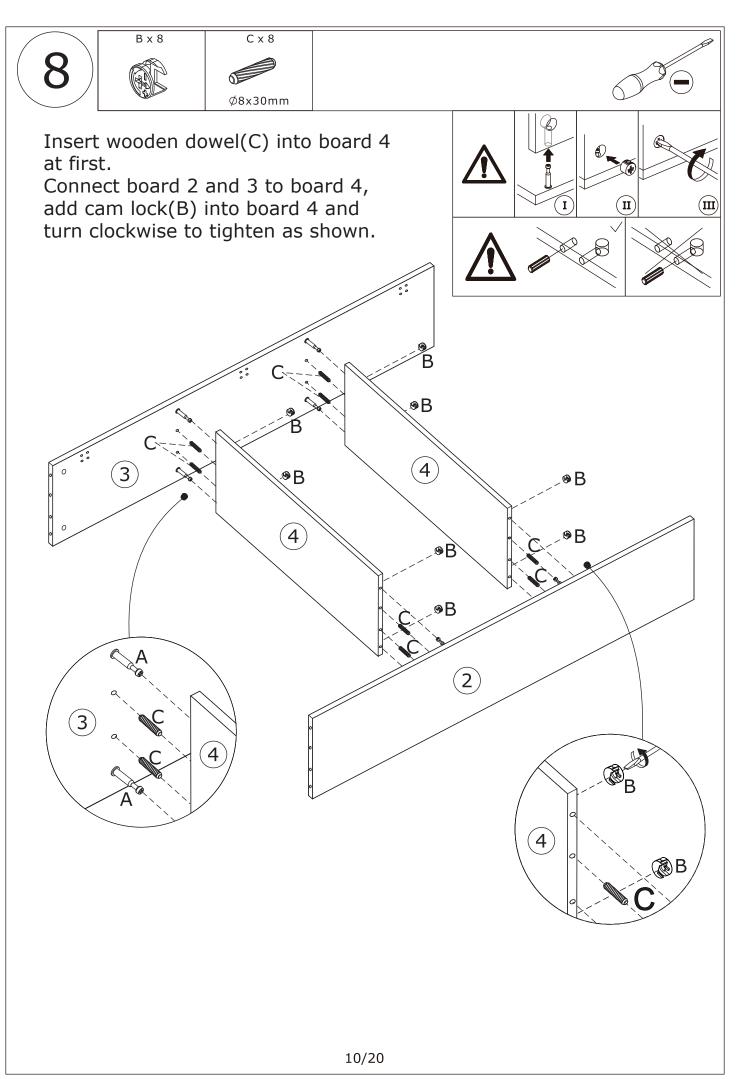


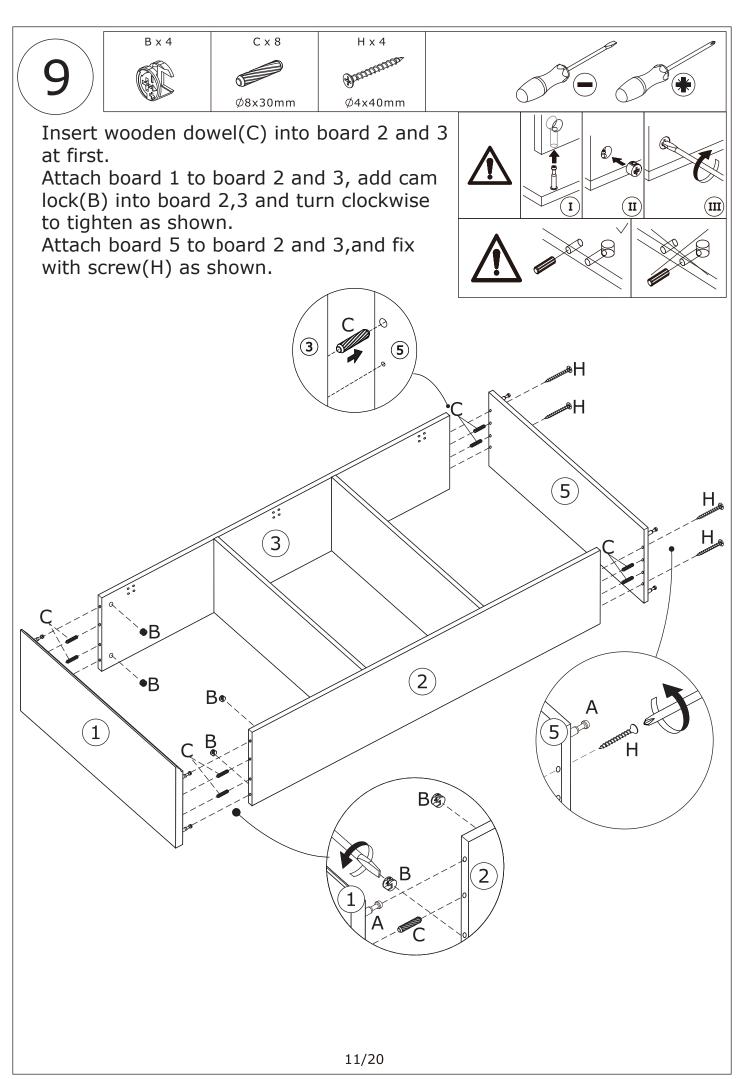


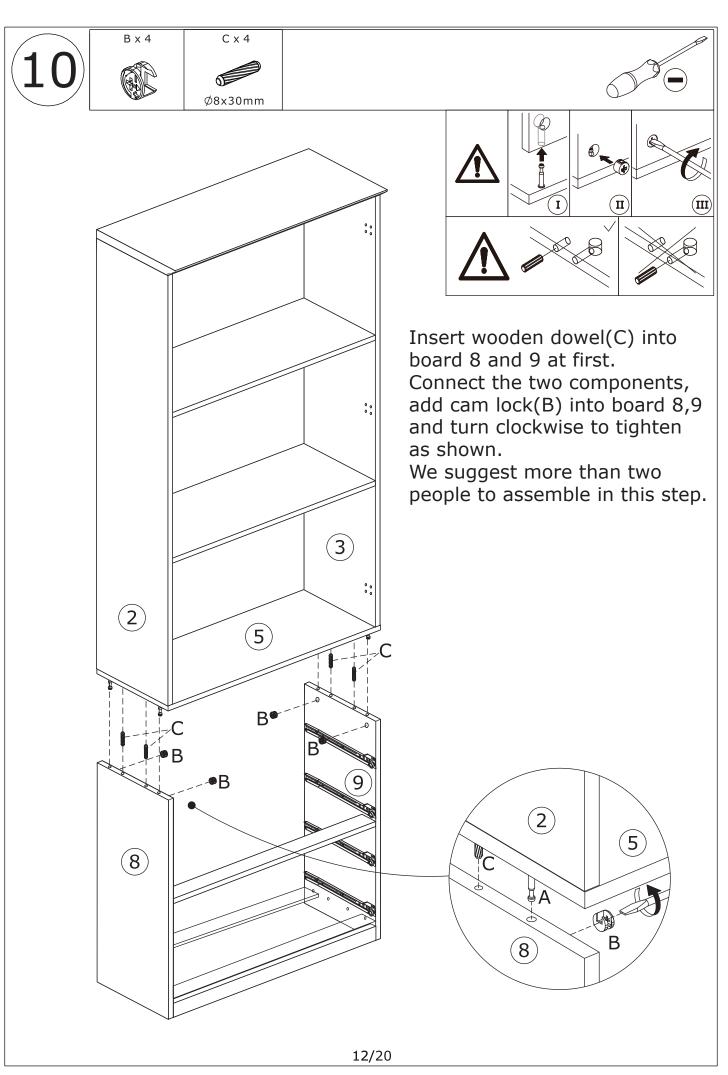


 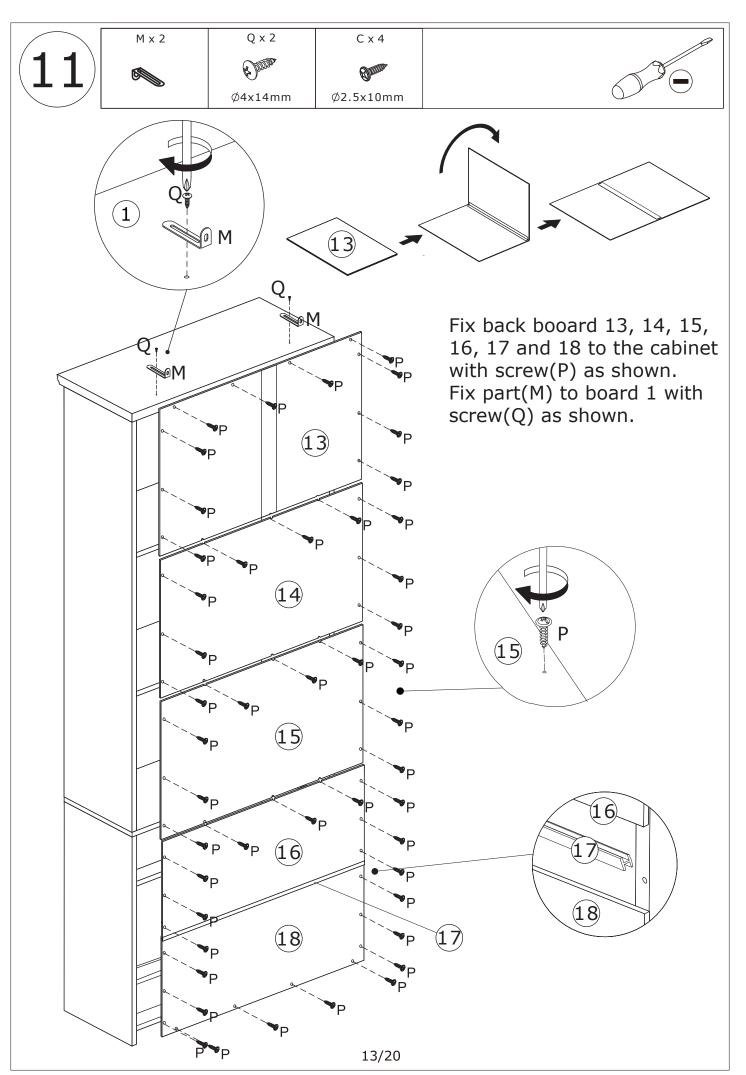


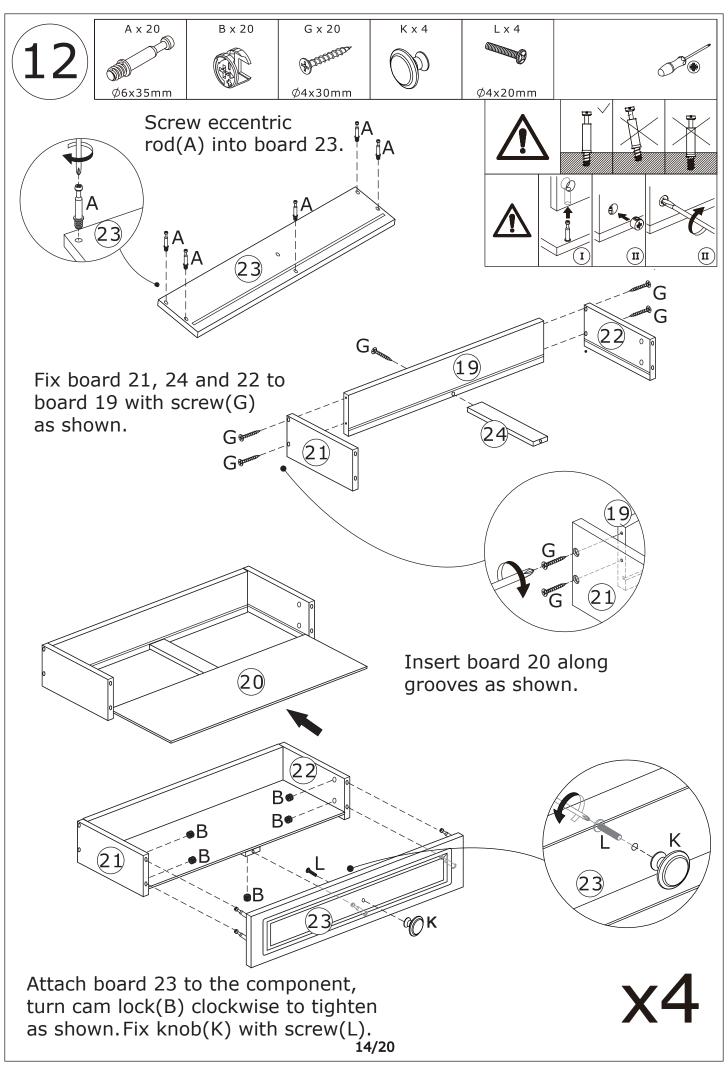

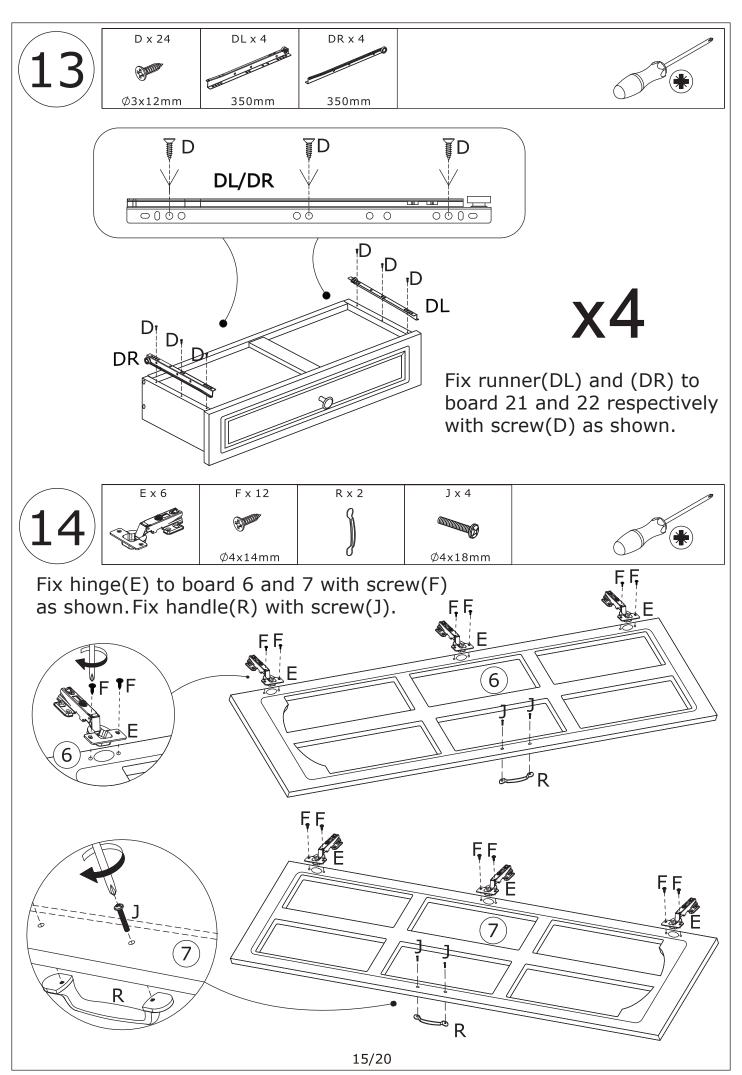

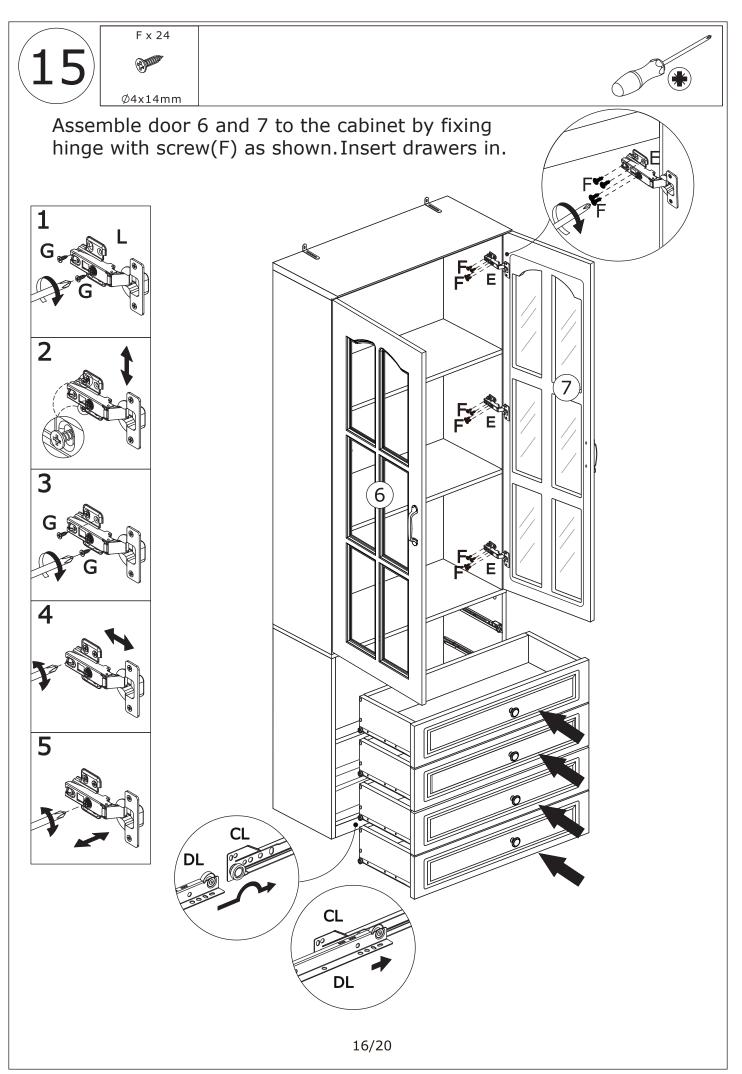


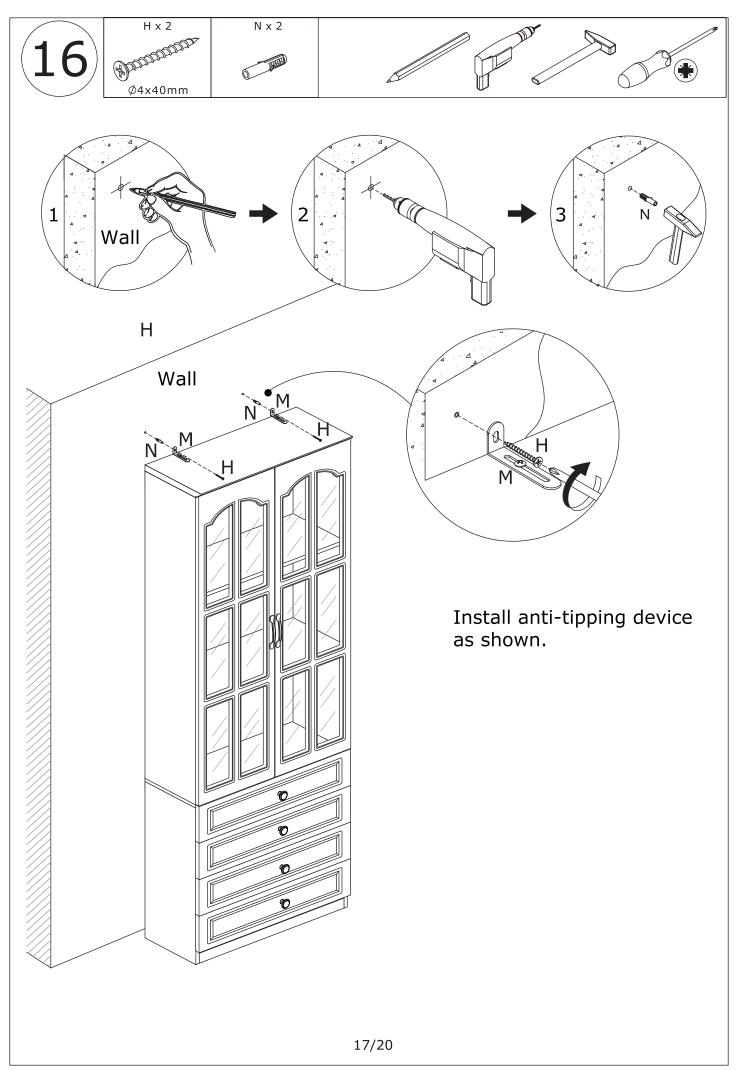



More detailed hinge adjustment mode:

- 1) Rotate out the screws connected with the cabinet counterclockwise, adjust the gap between the overall door frame and the upper and lower, and then rotate the screws clockwise after adjusting;
- 2) Rotate the screws at the end of the hinge counterclockwise to adjust the gap between the whole door frame and the cabinet before and after the adjustment, and then rotate the screws clockwise (rotate out to the movable door frame, do not need to over-rotate out);
- 3) Counterclockwise rotation of the screws in the middle of the hinge will offset the corresponding part of the rear door frame to the left, and clockwise rotation of the screws in the middle of the hinge will offset the corresponding part of the rear door frame to the right

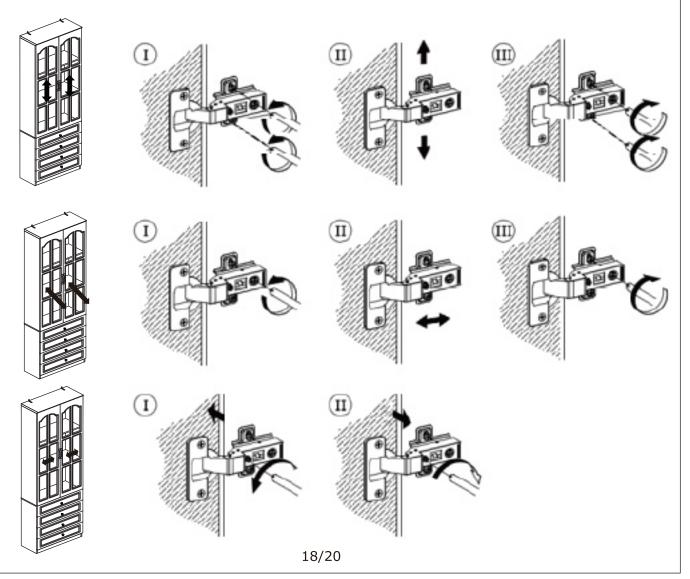

WARRANTY

WARRANTY CLAIMS

- •There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- •Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- •The product must be used in accordance with the instructions provided. For health reasons.
- •For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- •Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- •Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- •After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- •Sheet parts: 1 month from the date of purchase.
- •Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

•If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.


DEFECTIVE ITEMS

•If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

•If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.


Cabinet

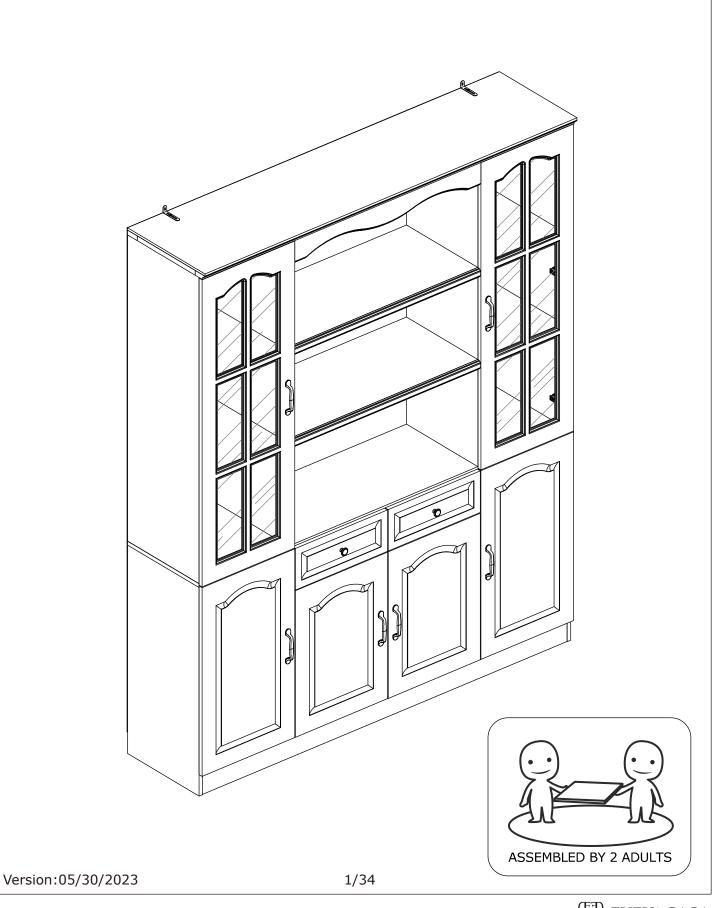




IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

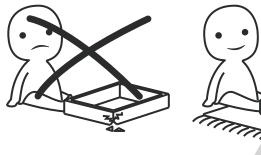

AVOID SCRATCHES!

 




IMPROVE EFFICIENCY!

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



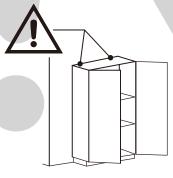



ANTI-TOPPLE WARNING!


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT!

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

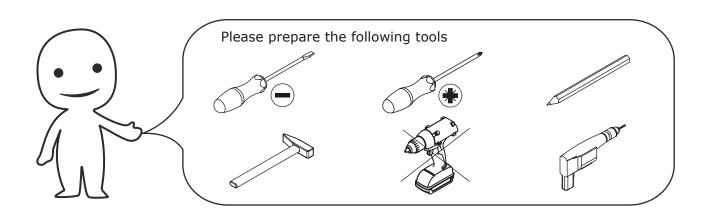








When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size


Ø4x14mm

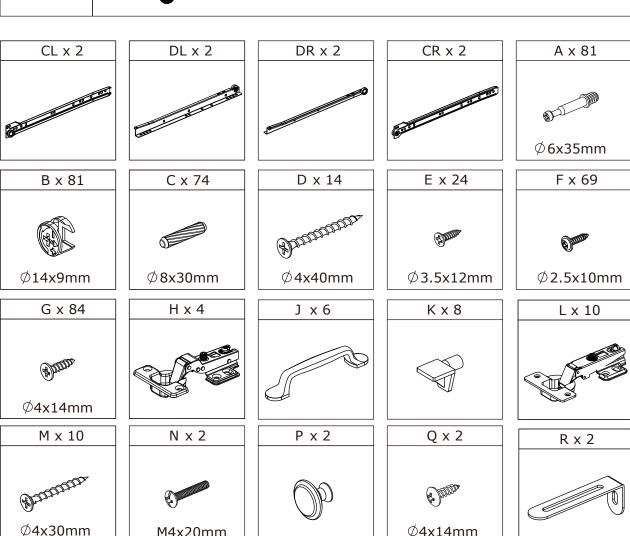


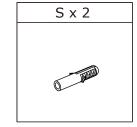


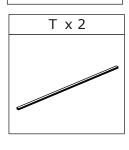



M4x20mm

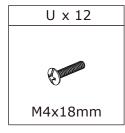

 


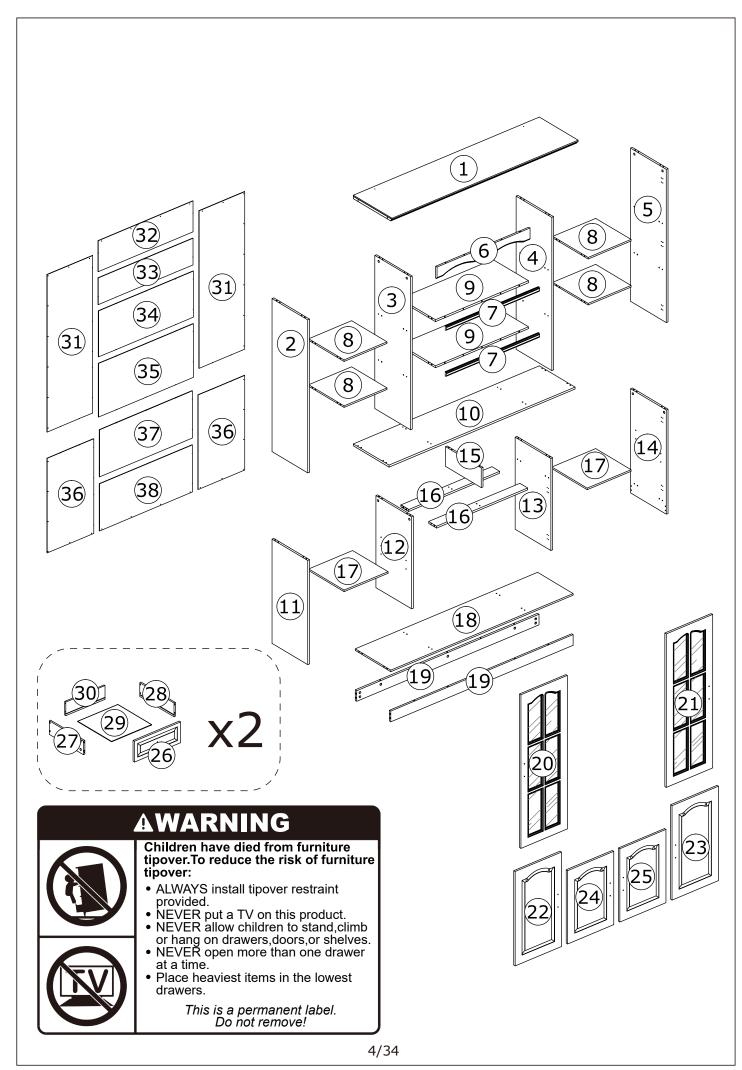

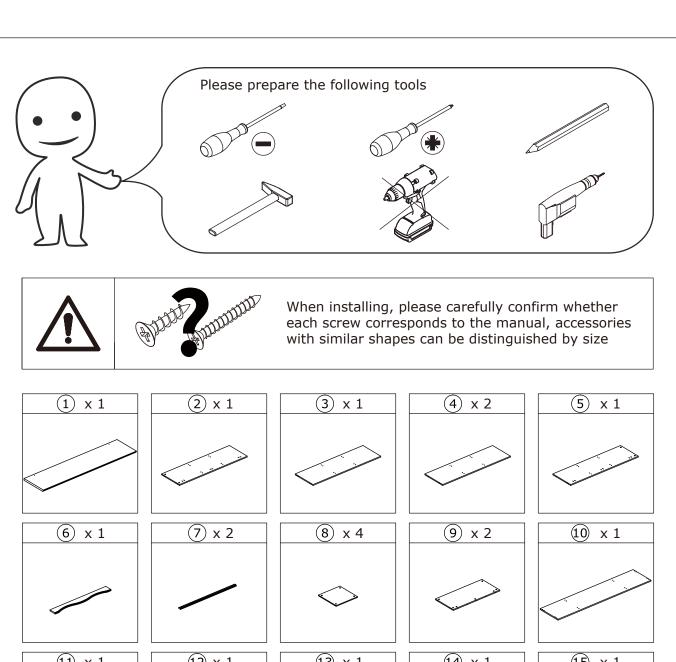

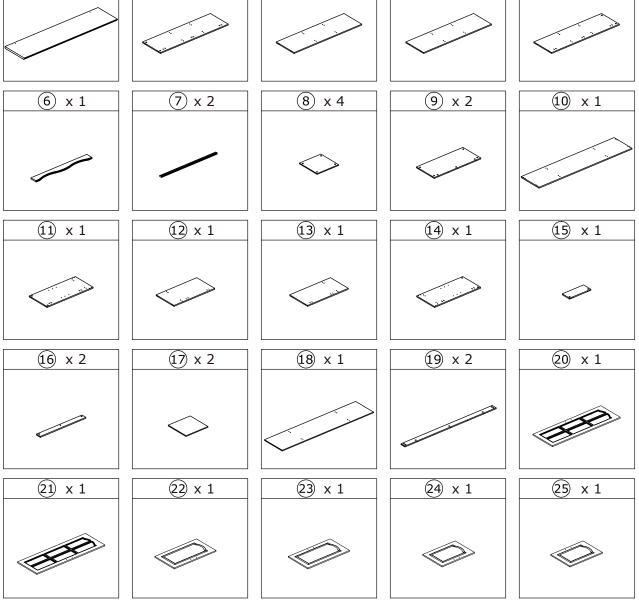


5/34

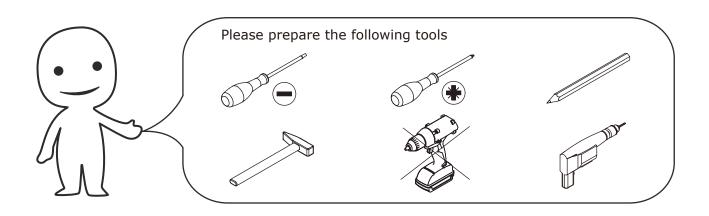









When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

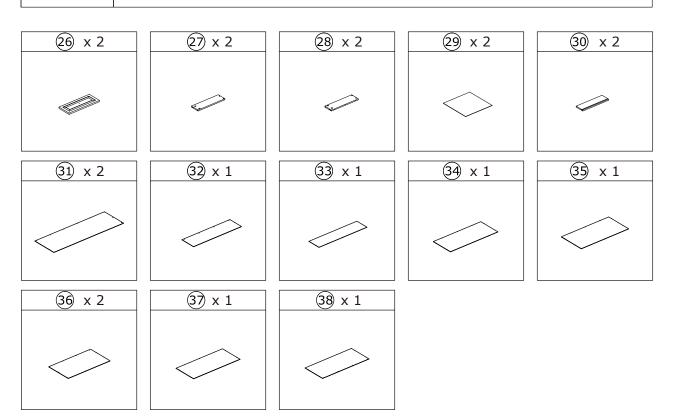


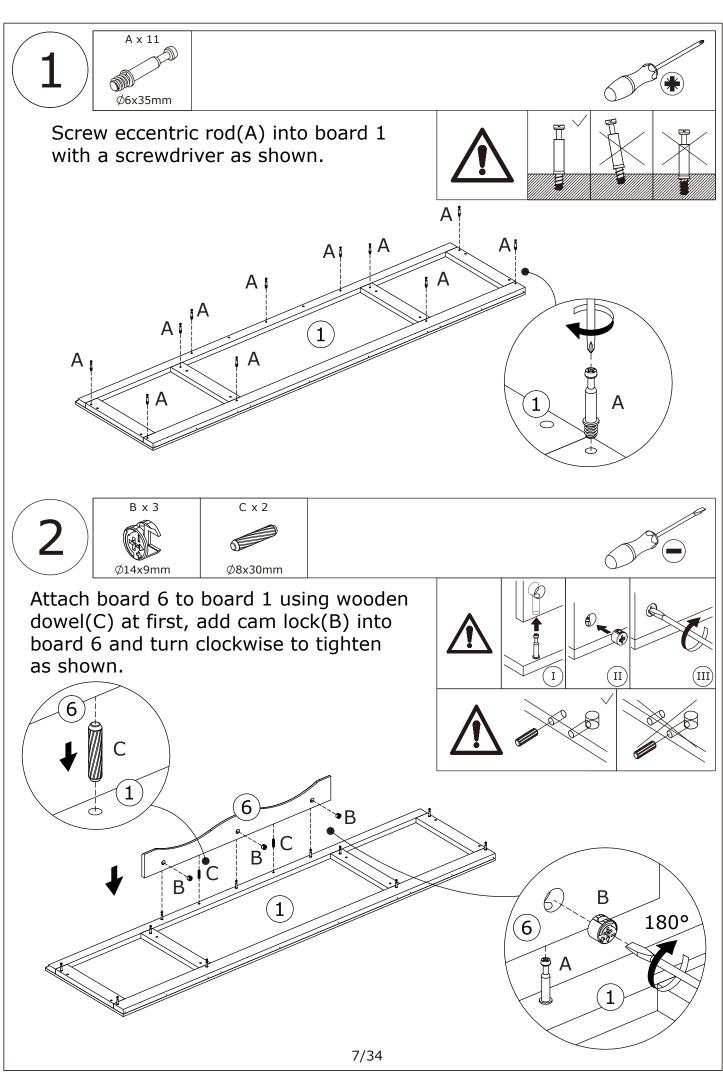


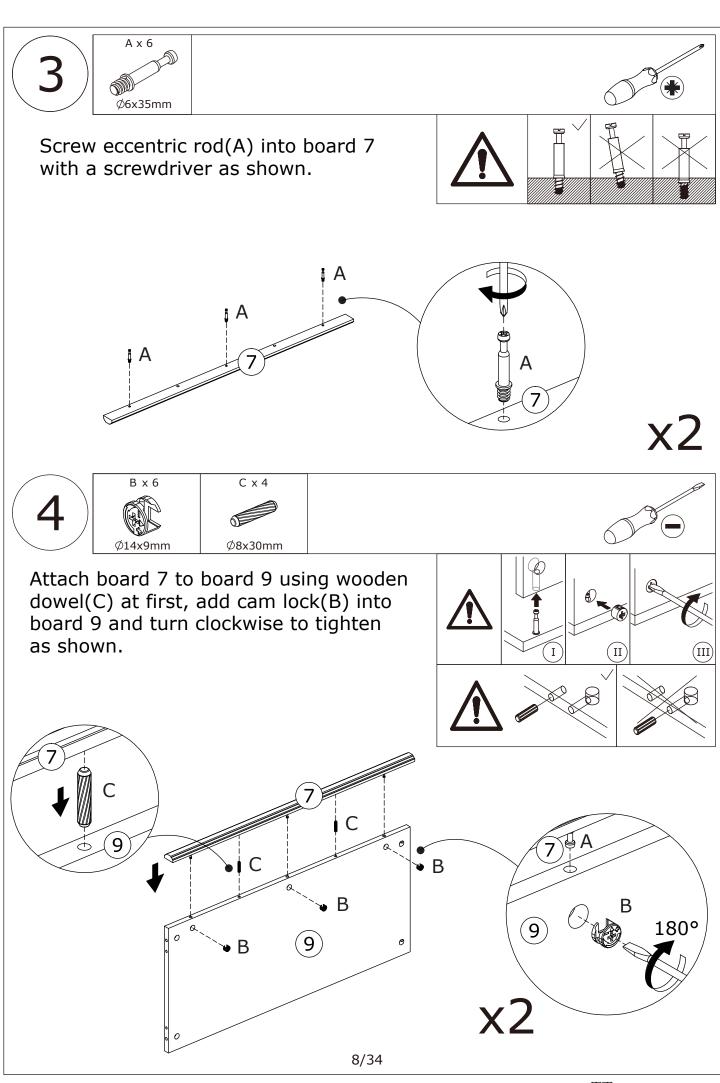

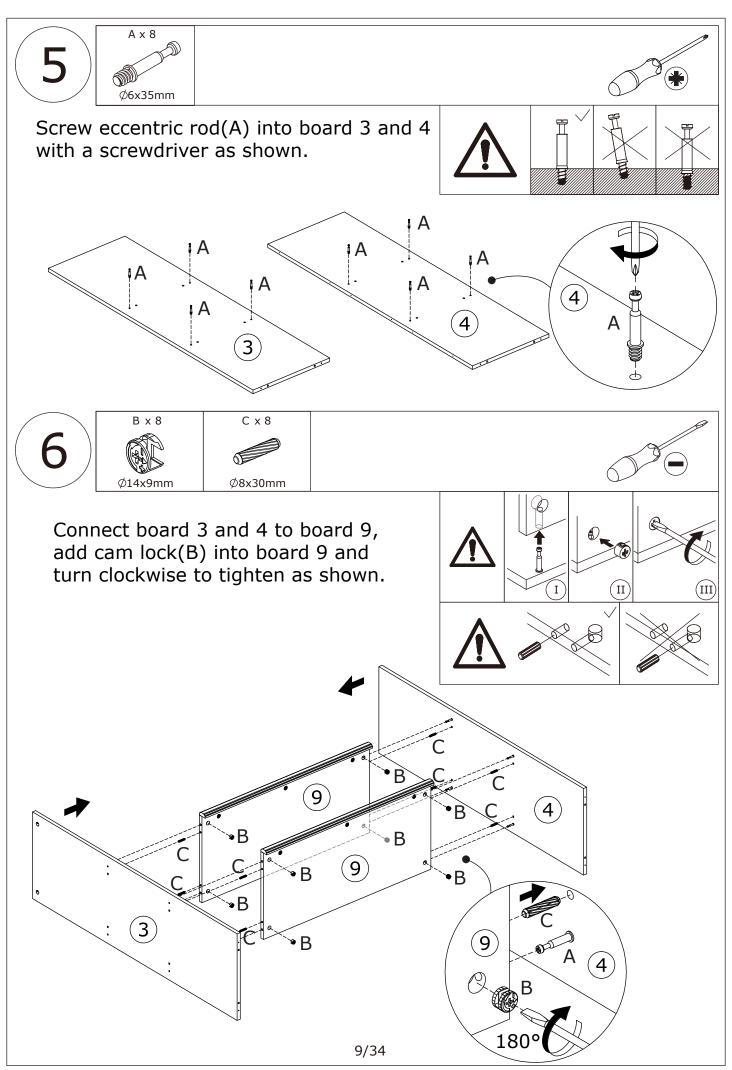

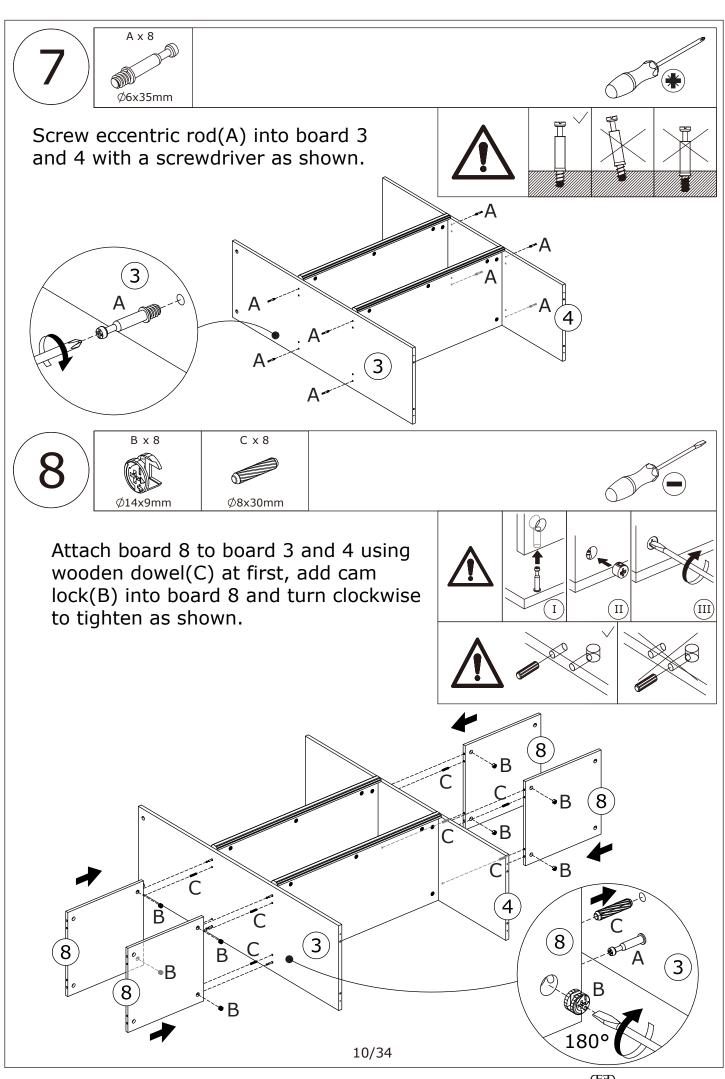

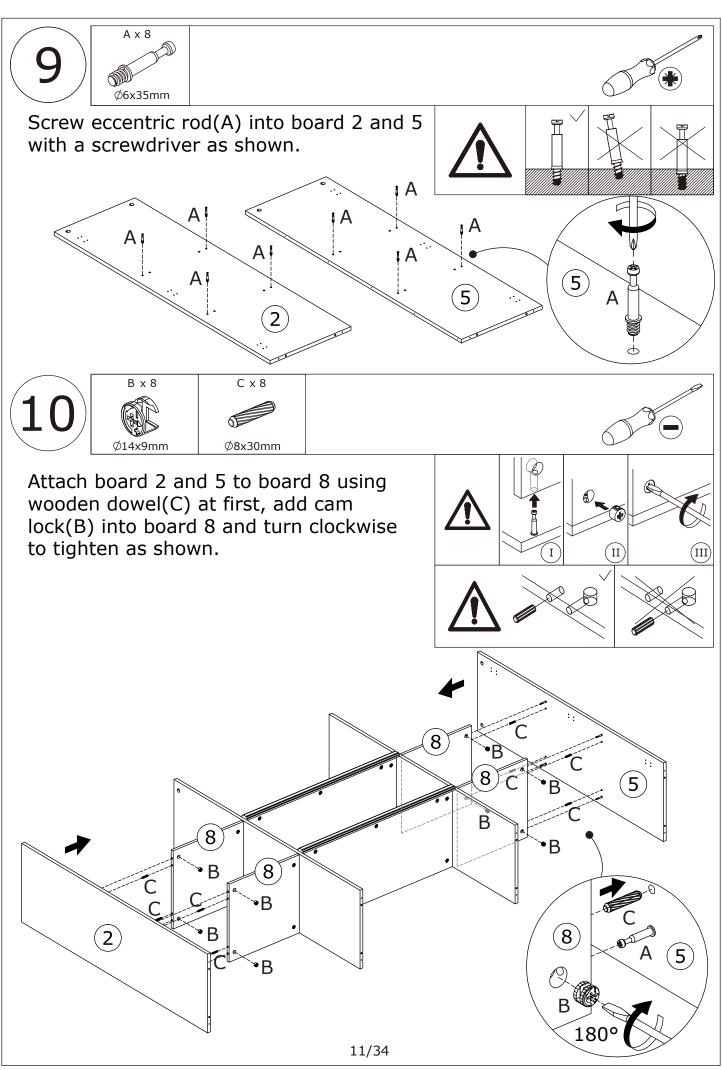

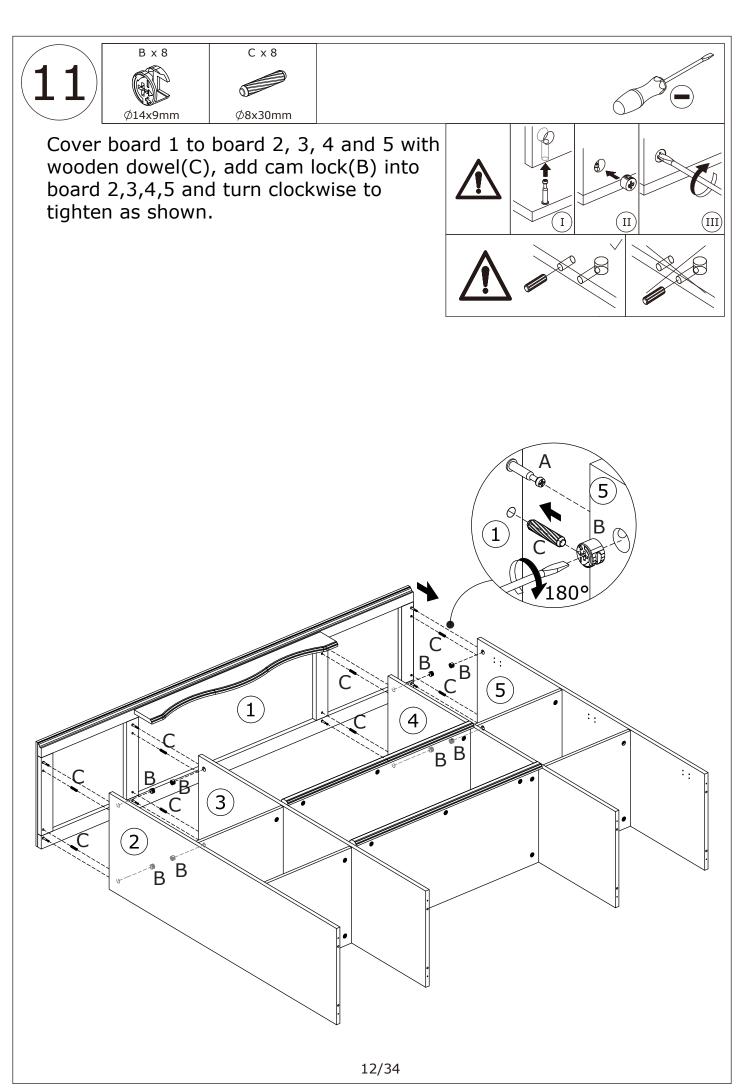










Attach board 10 to board 2,3,4 and 5 using wooden dowel(C) at first, and fix with screw(D) as shown.

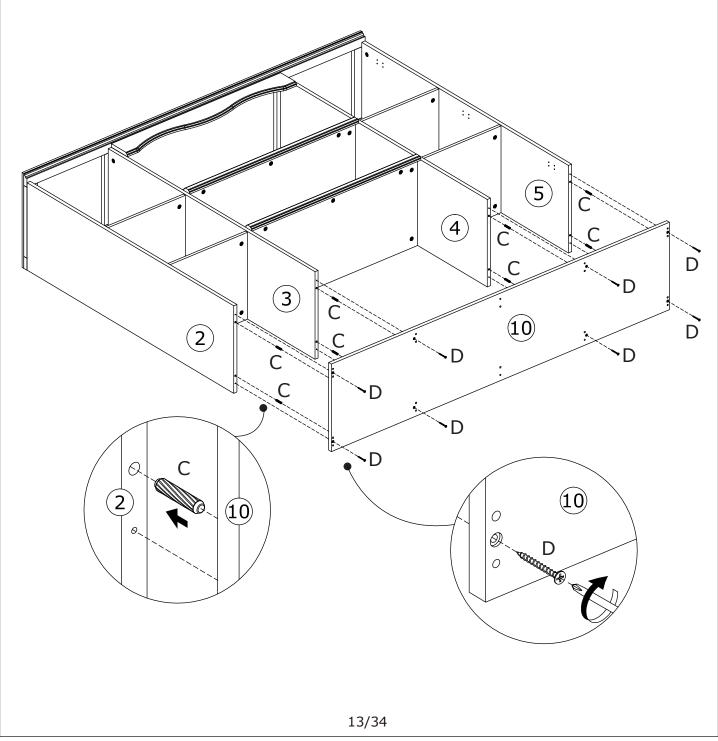











 
Screw eccentric rod(A) into board 10 with a screwdriver as shown.




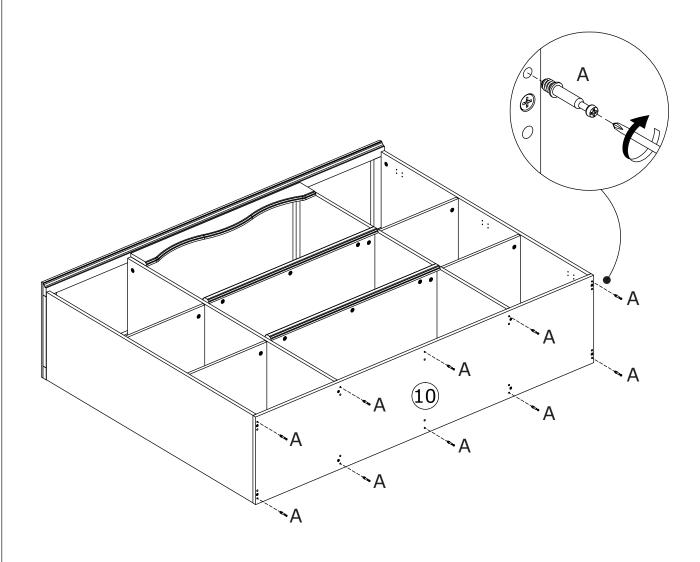


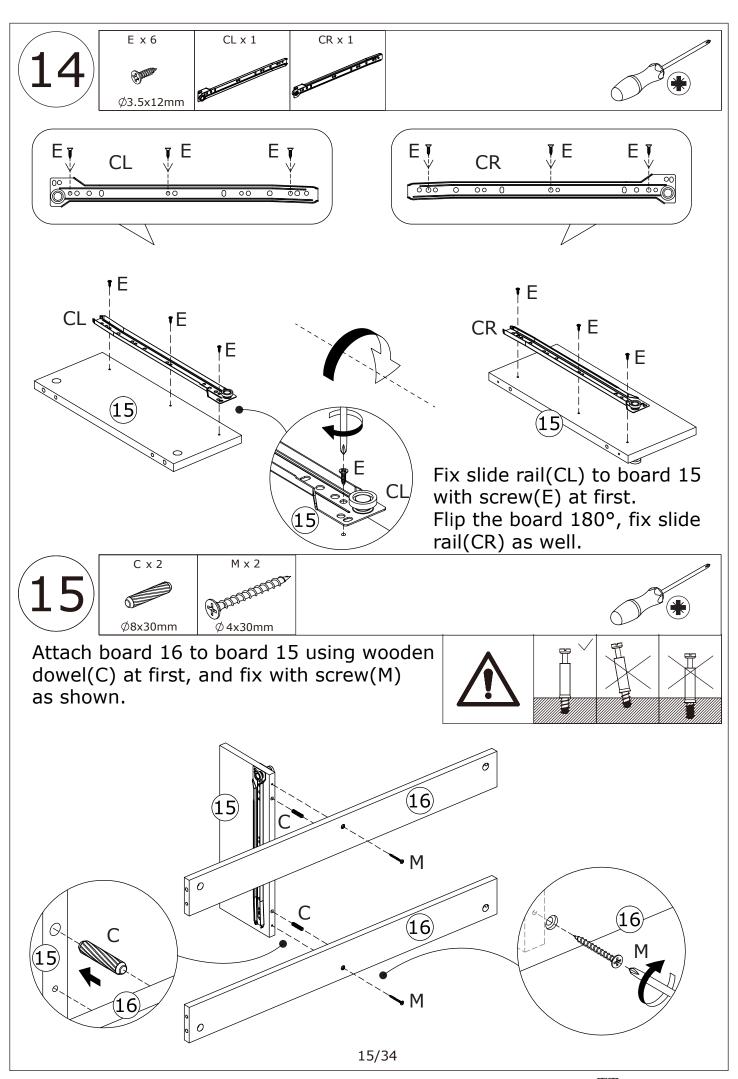


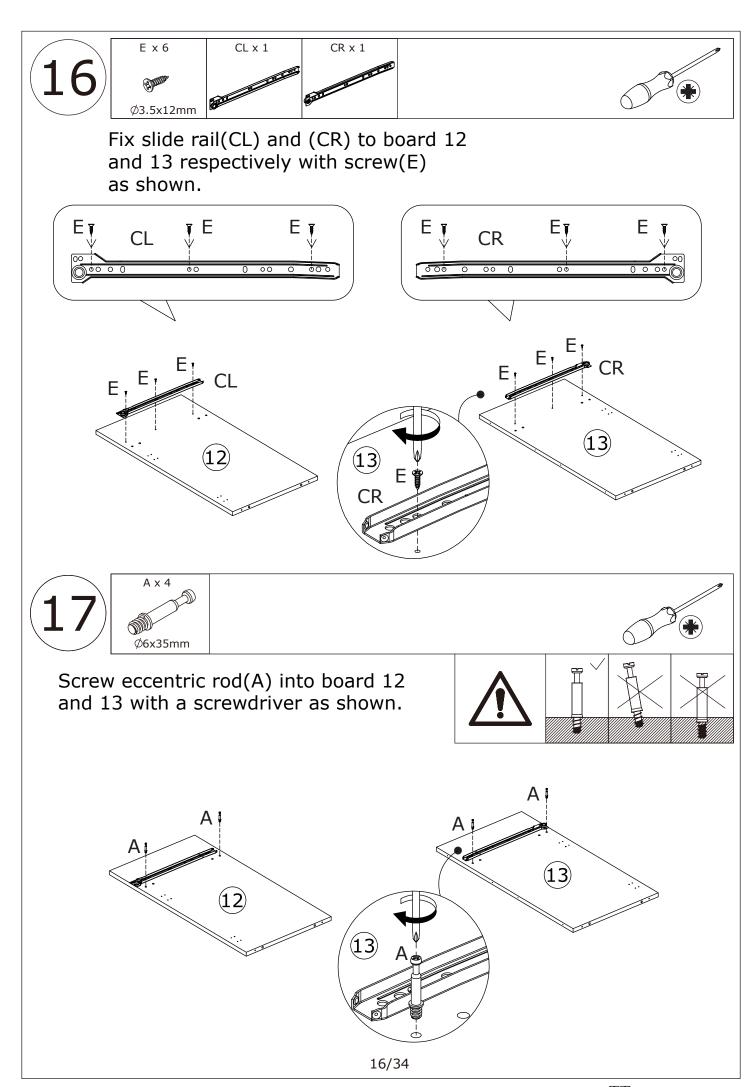


 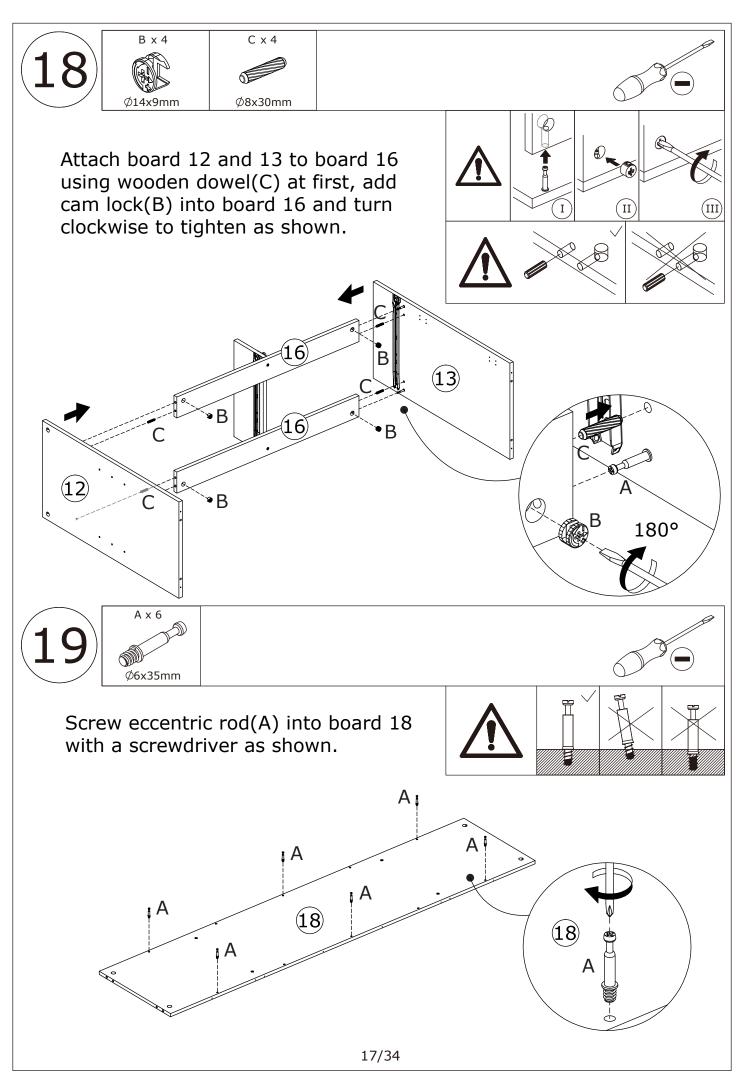


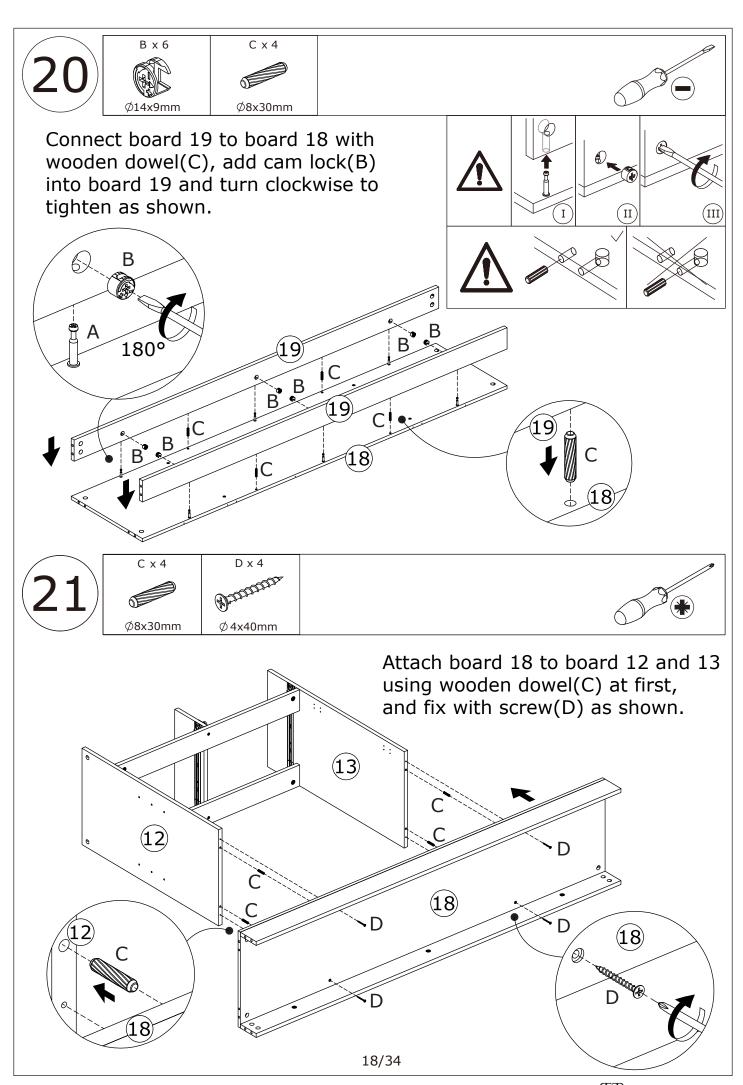

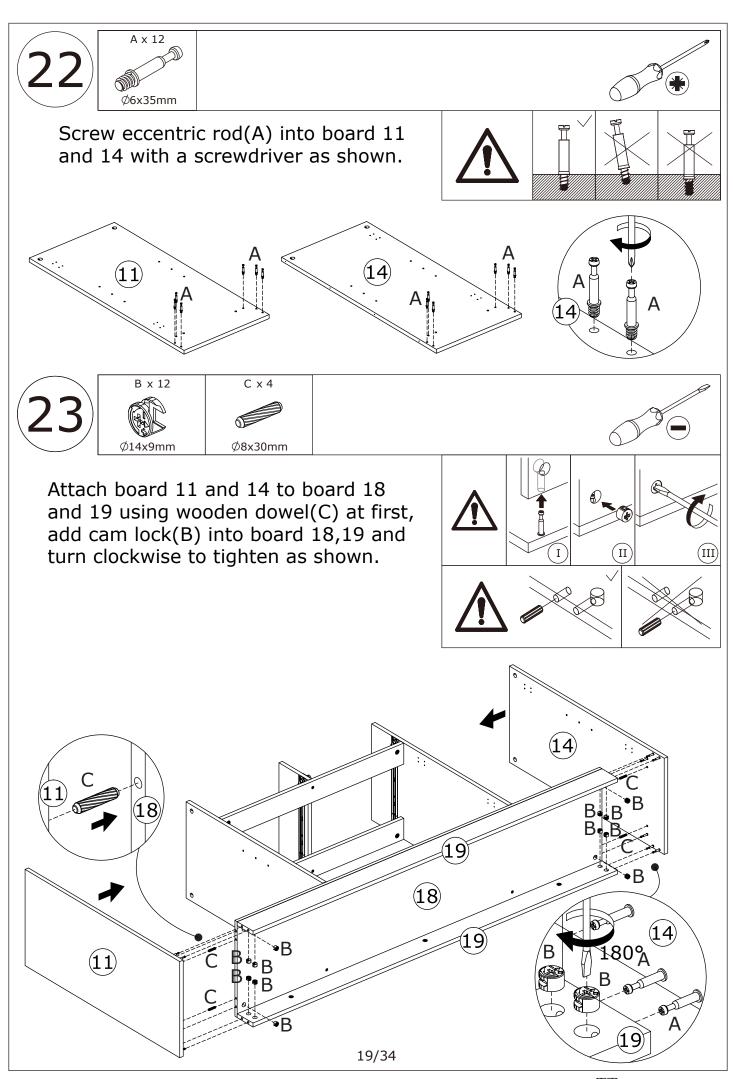


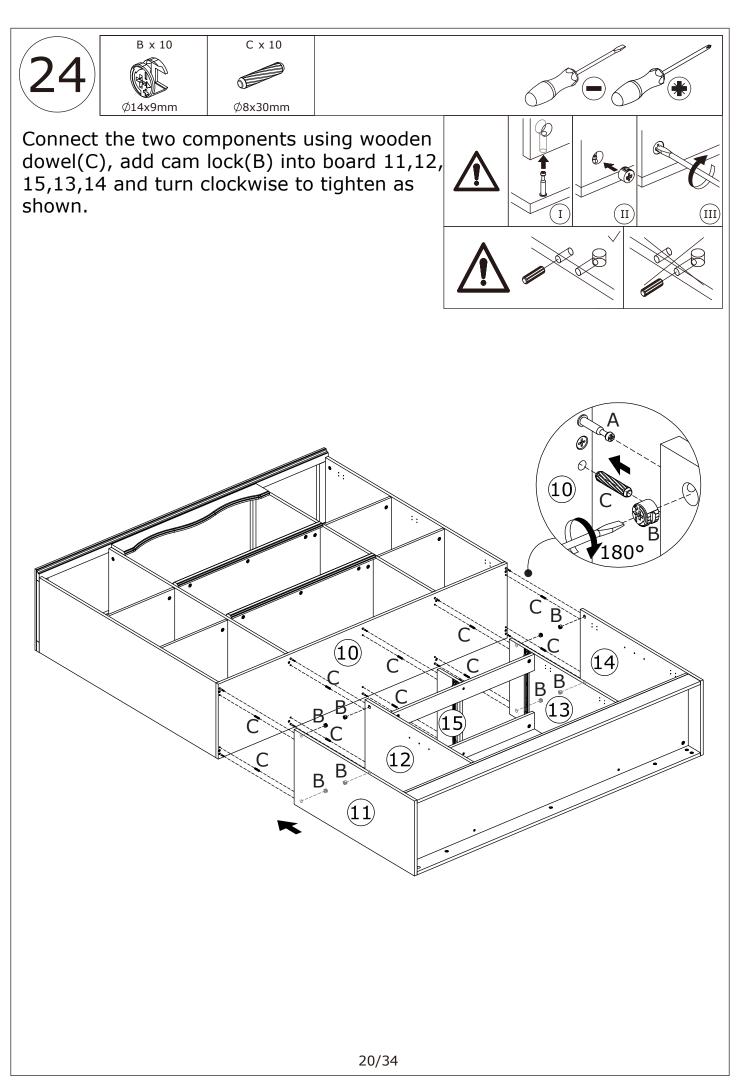

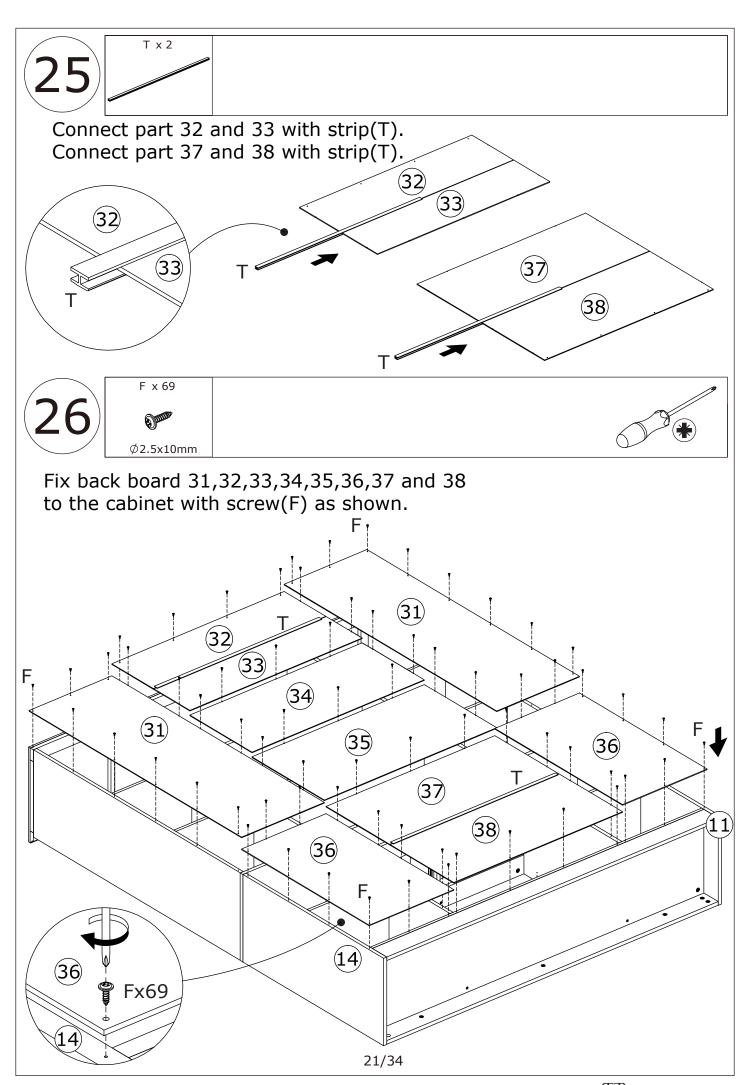





Fix hinge(H) to board 25 and 24 with screw(G) as shown. Fix handle(J) with screw(U).

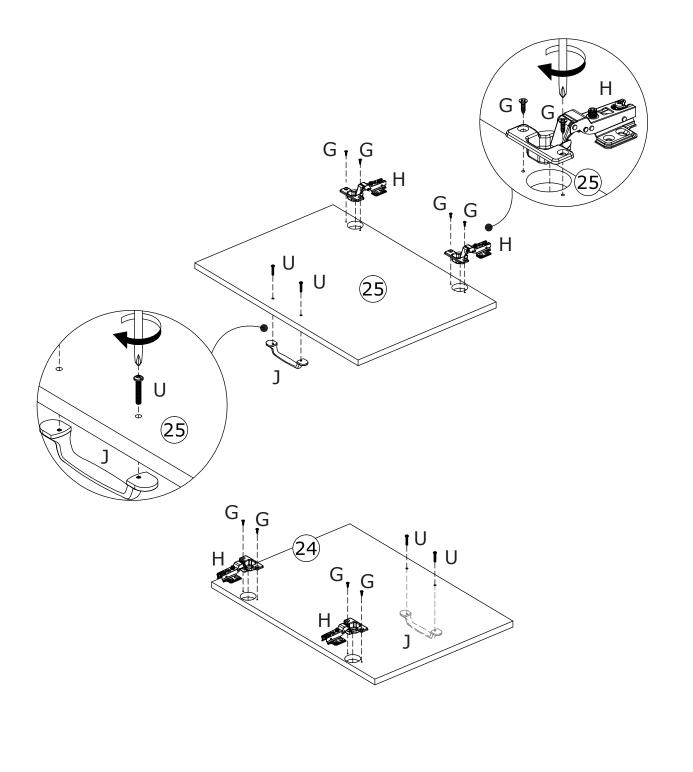


22/34

 


Assemble door 24 and 25 to board 12 and 13 by fixing hinge with screw(G) as shown.

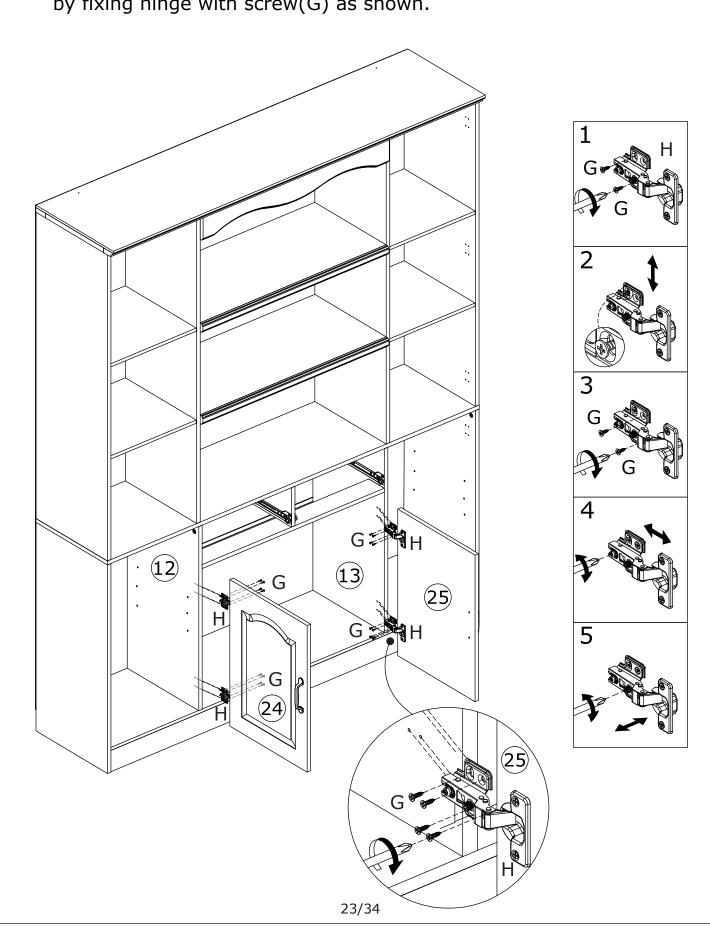


 
Insert layer pin(K) into side boards, place shelf 17 in as shown.

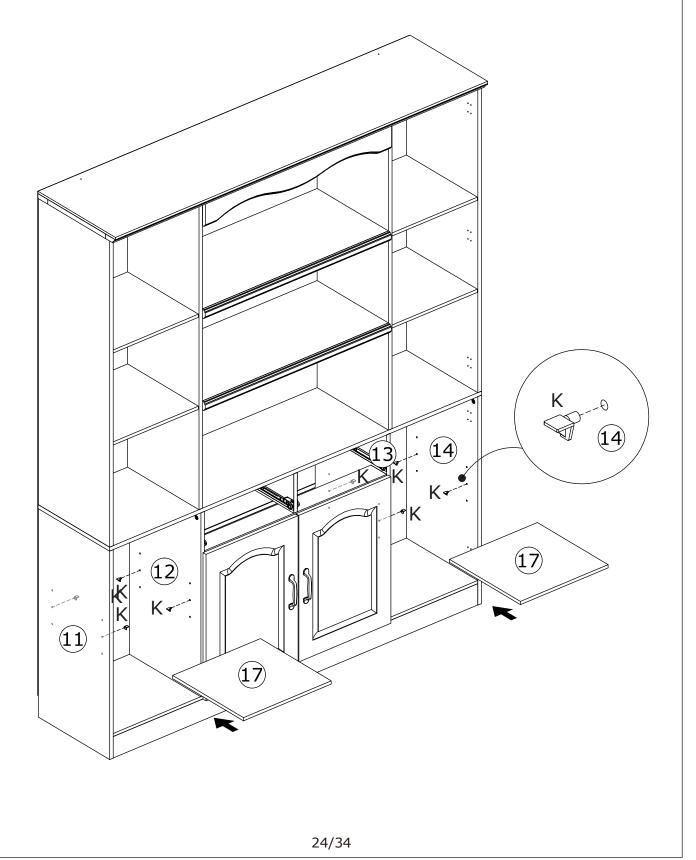




 
Fix hinge(L) to board 23 and 22 with screw(G) as shown.

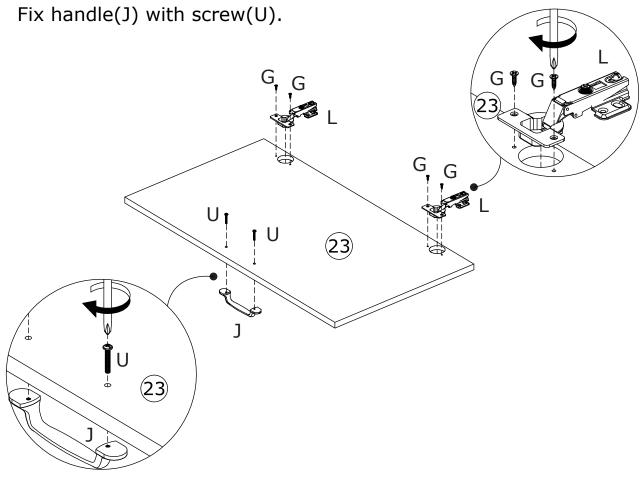


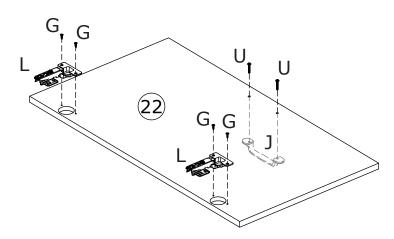




 Assemble door 22 and 23 to board 11 and 14 by fixing hinge with screw(G) as shown.

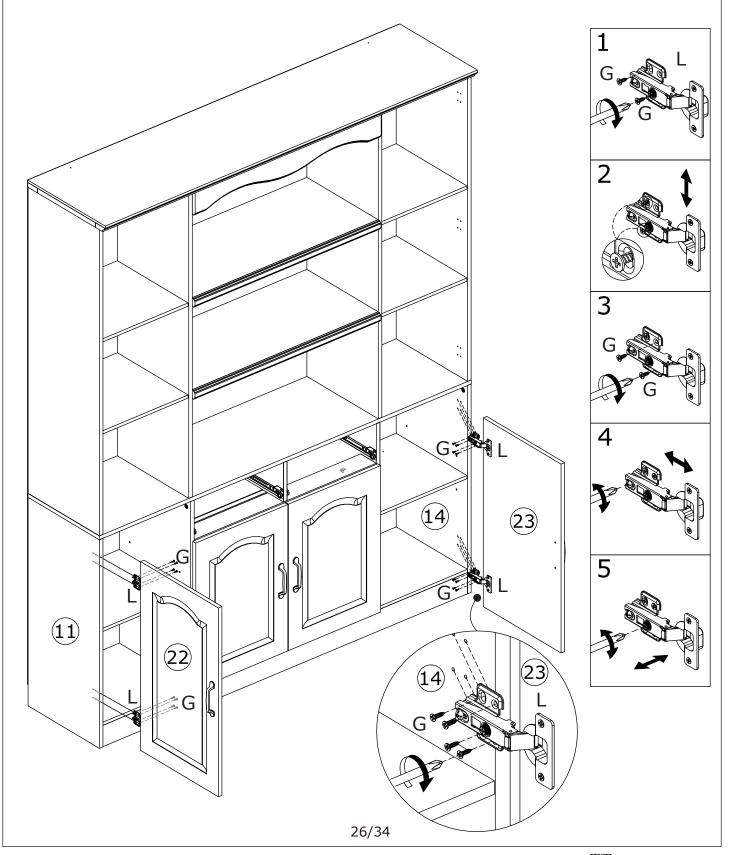





Fix hinge(L) to board 21 and 20 with screw(G) as shown. Fix handle(J) with screw(U).

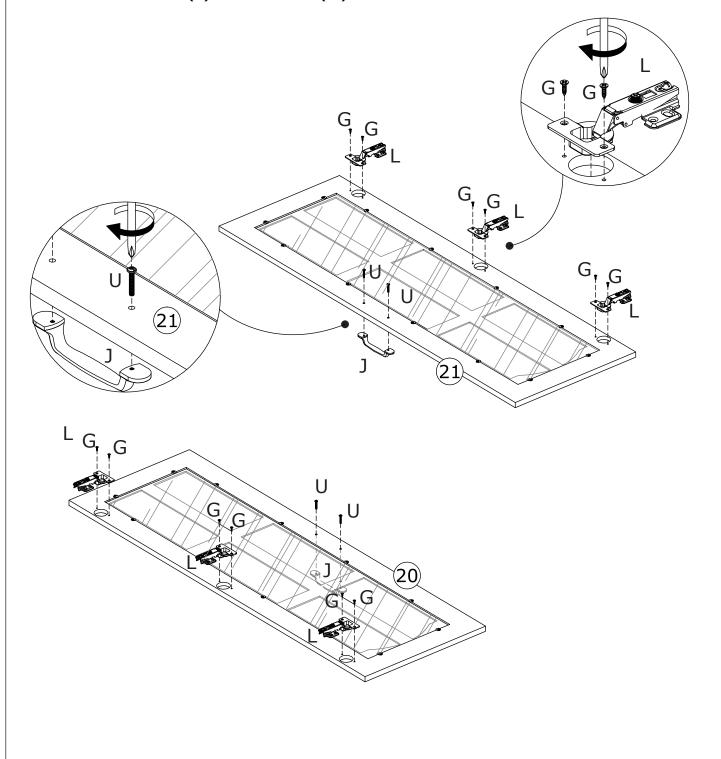



27/34

 


Assemble door 20 and 21 to board 2 and 5 by fixing hinge with screw(G) as shown.

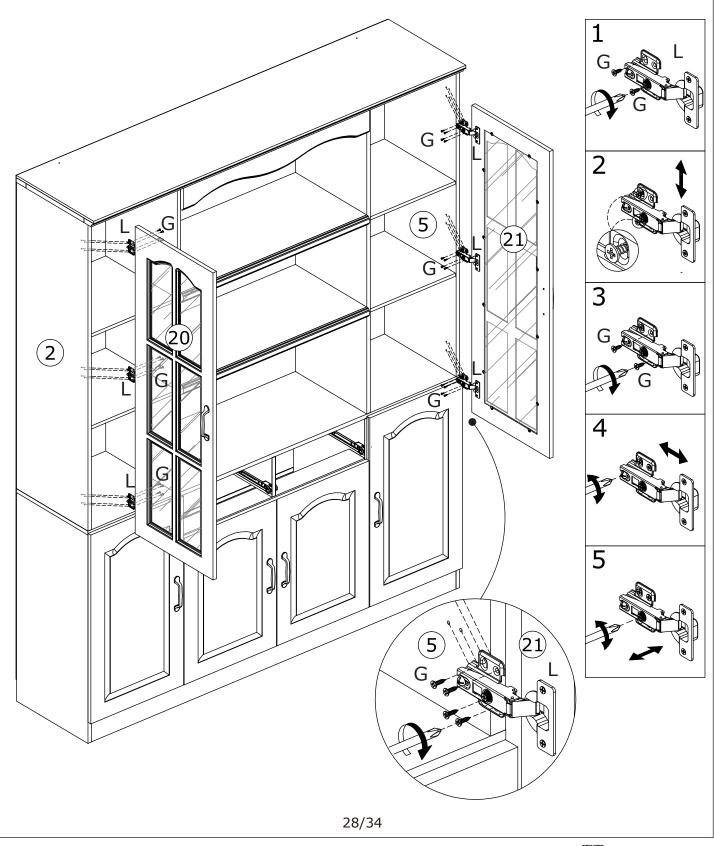


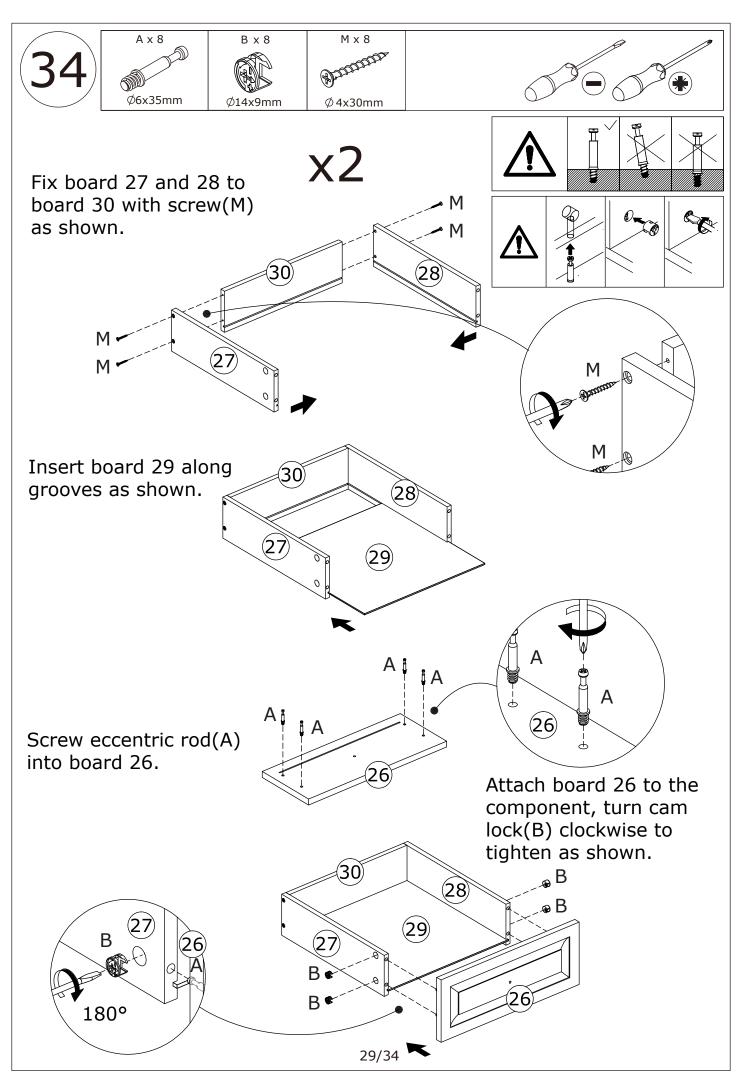


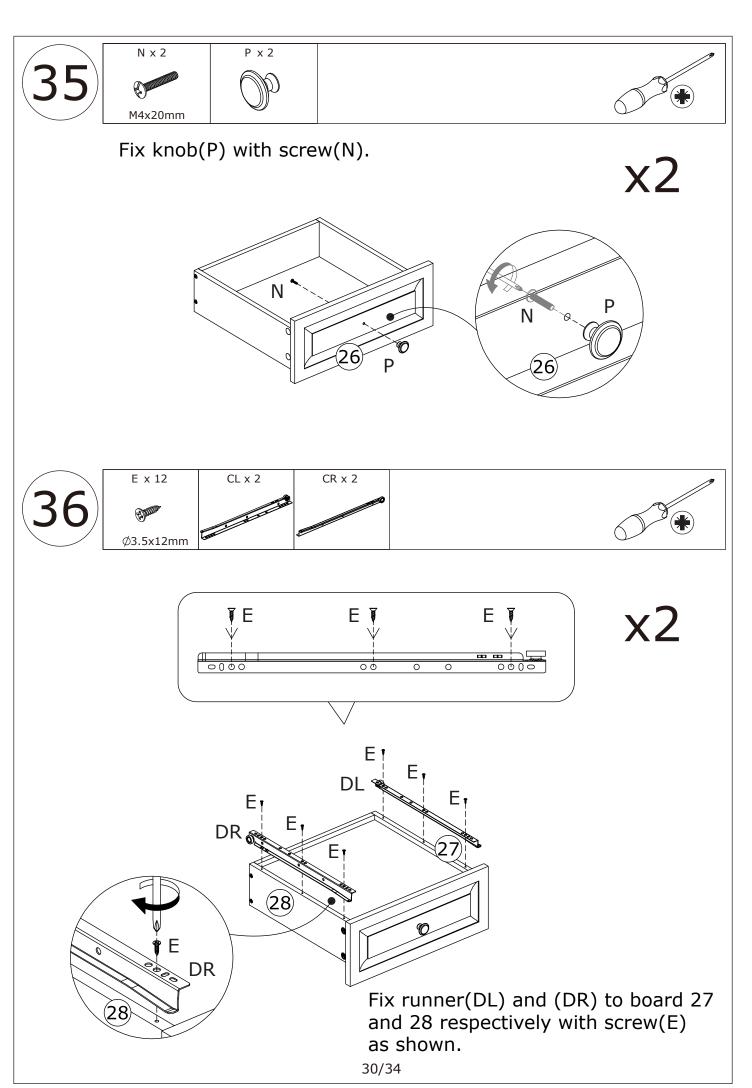

Insert drawers in.

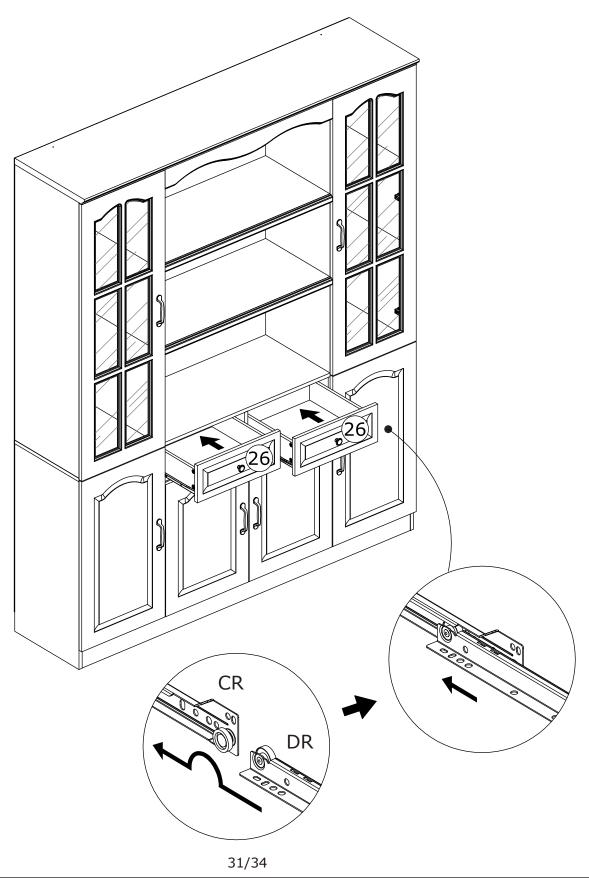

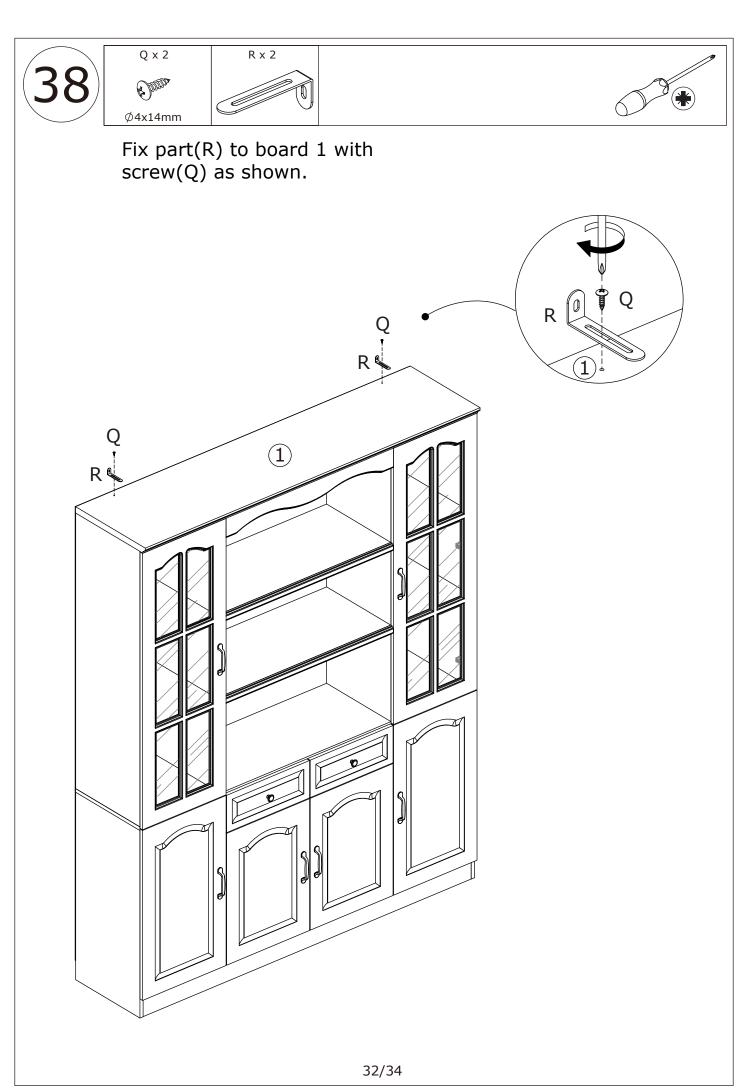

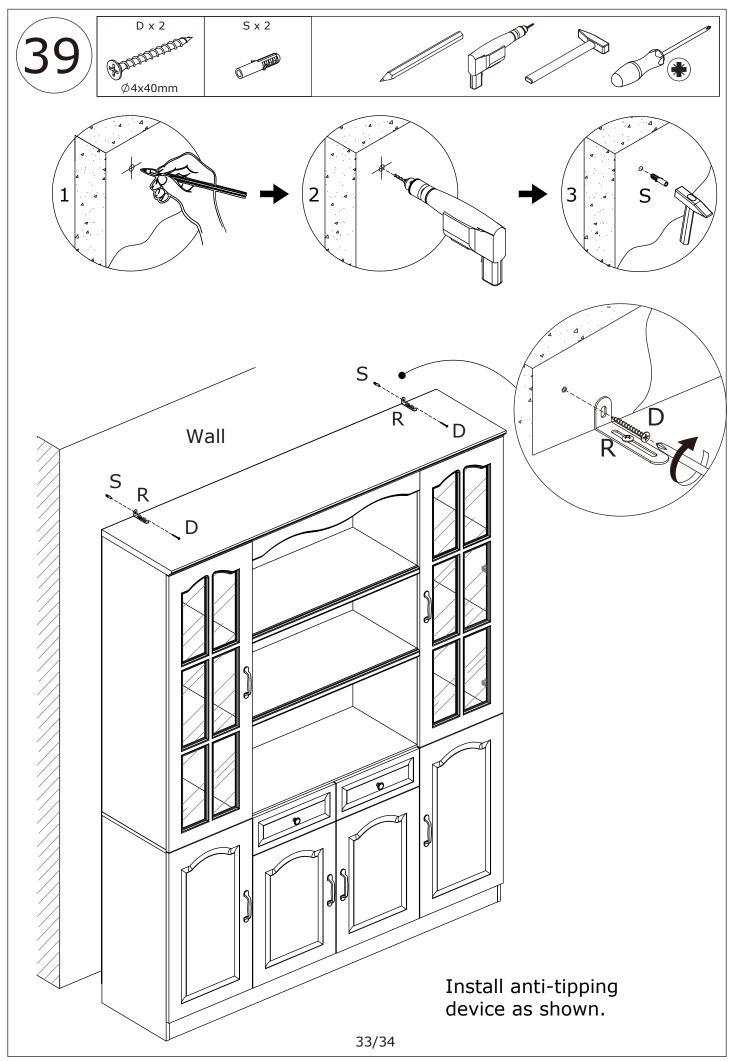






If doors are still not aligned if the hinges are properly correctly, please watch the video.

https://youtu.be/n0Lb36SoODM

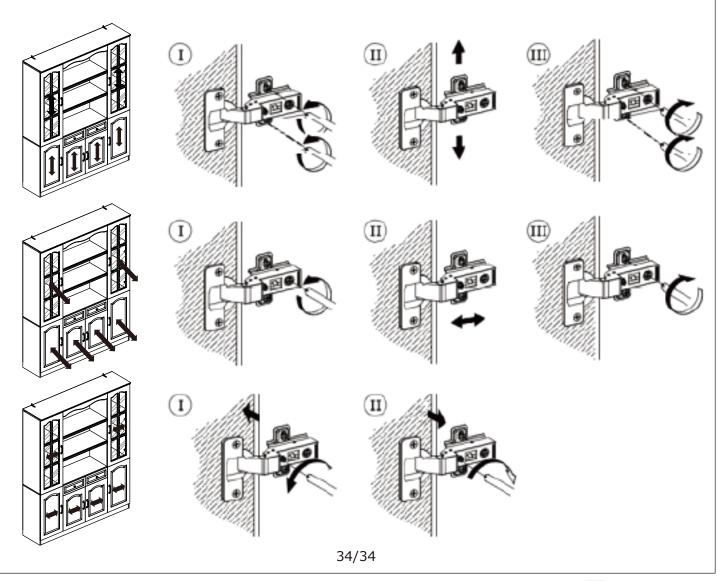

WARRANTY

WARRANTY CLAIMS

- •There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- •Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- •The product must be used in accordance with the instructions provided. For health reasons.
- •For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- •Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- •Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- •After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- •Sheet parts: 1 month from the date of purchase.
- •Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

•If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

•If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

•If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.