

Item #:	WHHD1792
Product Name:	Peppermint Candy Lighted Holiday Decoration

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure no missing or damaged parts. Do not attempt to assemble or use the product if any parts are missing or damaged.

CARTON CONTENTS:


Description	Quantity
Large Peppermint Candy	1
Medium Peppermint Candy	1
Small Peppermint Candy	1
Base Frame Section	1
Support Rods	2
Stakes	4

Before You Start

1. Decide on an appropriate location for your product. Please read the assembly and Instruction procedure carefully.
Note: This decoration can be displayed outdoors and indoors.
2. Retain the instructions for future use and save the carton for storing your tree.


Assembly and Instruction Procedure (no tools required for assembly):

1. Secure the large peppermint candy to the base frame.

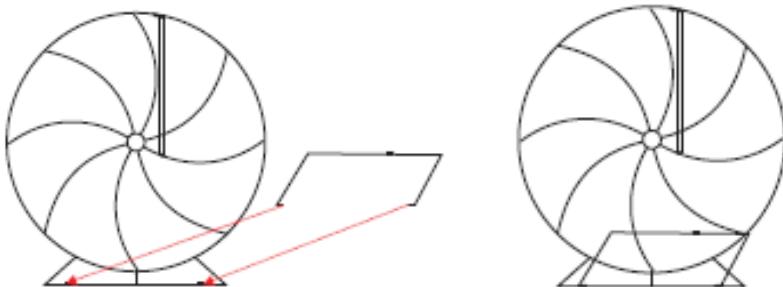


Item #:	WHHD1792
Product Name:	Peppermint Candy Lighted Holiday Decoration

2. Next, attach the middle peppermint candy to the large peppermint candy by connecting the tubes.

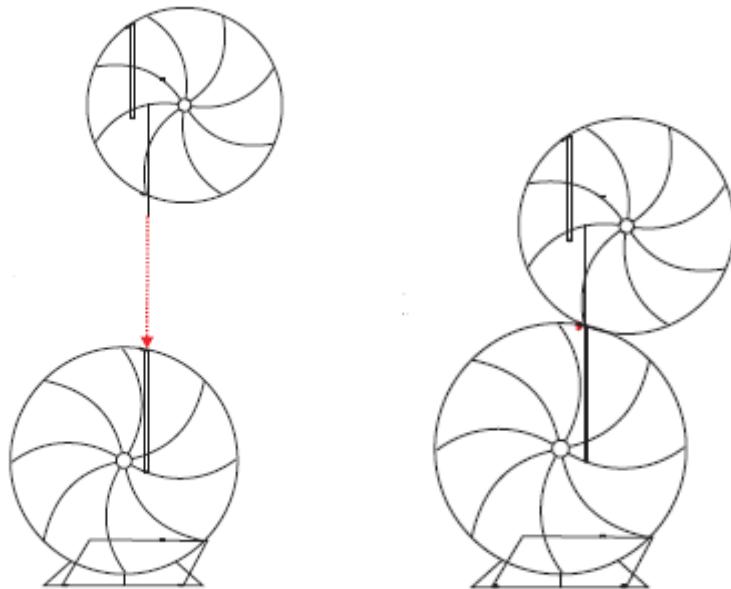


3. Connect the support rods and insert it into the large and middle sections of the peppermint candy decoration.

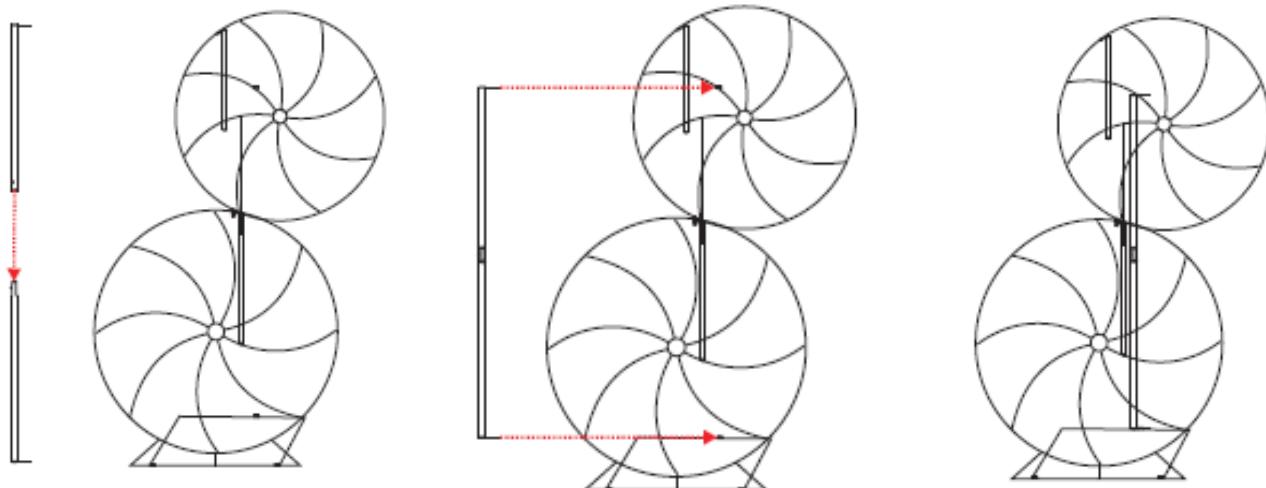


Item #:	WHHD1792
Product Name:	Peppermint Candy Lighted Holiday Decoration

4. Connect the tubes by attaching the small peppermint candy to the large section.

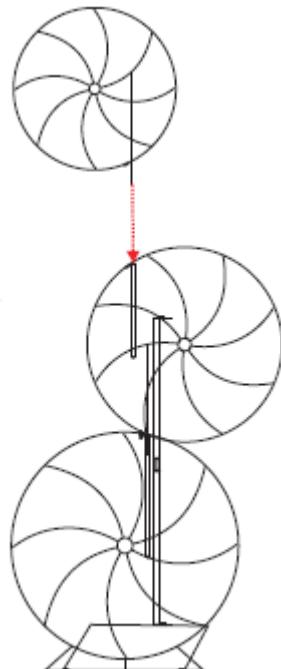

5. When displaying outdoors, use the ground stakes to secure the display to the ground.

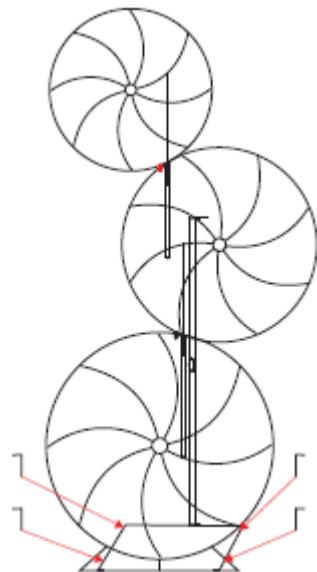

Plug in the lights and enjoy the lighted decoration!

Item #:	WHHD1792
Product Name:	Peppermint Candy Lighted Holiday Decoration



Warnings:

1. Risk of Fire and Electric Shock – please follow instructions and warnings on lights.
2. Keep wires clear of being pinched or cut during assembly or installation. Discard sets with cut or pinched insulation.
3. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.

Troubleshooting:

1. Some bulbs are not lighting or do not come on: Search for any loose plug connections between the presents.

Note: If this action does not resolve the issue, please contact customer service for assistance.