

Widespread Lavatory Faucet SLW-4512



Installation and Service Instructions

Model Numbers

SLW-4512 Lavatory faucet with pop-up drain

Tools & Materials



Alternate Finish Code

append to part numbers when applicable

- -STN Satin Nickel
- -- Chrome (standard)



- ASME A112.18.1/CSA B125.1
- NSF/ANSI 61.9, NSF/ANSI 372
- WaterSense 1.0 & 1.5 gpm



Need Help?

Contact Symmons customer service at P: (800) 796-6667, F: (800) 961-9621 Email: customerservice@symmons.com Monday - Friday 7:30 am - 7:00 pm EST

Please check Symmons website for technical help, the latest product information and warranty policy. www.symmons.com/service



Installation Instructions

Caution: If replacing an older faucet ensure water supply is turned OFF before removing. Then open faucet valves to relieve water pressure.

collar

fastener

gasket

valve body

flange nut

mounting washer

Step 1 Attach control valves to sink

- Thread flange nut down 2 inches from threaded end of valve body.
- Insert valve body from underneath sink through mounting hole. Ensure valve with red striped hose (hot) is on left and blue (cold) is on right.
- Place gasket over valve *body* and thread *fastener* mounting screws onto valve body until stop is reached.
- Tighten *flange nut* and *mounting washer* under sink and secure with mounting screws if necessary.
- Thread *collar* over outer threads of fastener until tightened against surface of the sink.

Step 2 Attach faucet handles

- Turn *valve spindles* to the OFF position. HOT - left valve, clockwise COLD - right valve, counter clockwise
- Attach handle to valve *spindle* in OFF location as shown.
- plug button screw handle valve spindle

spout

 Fasten to spindle with Phillips head screw and insert plug button.

Step 3 Attach faucet spout to sink

- Unscrew tee and remove washer and *nut* from threaded end of spout as shipped.
- Insert end of spout down through mounting hole in sink and then fasten from under sink with *washer* and *nut*.
- tee • Tighten *nut* while ensuring *spout* is centered over mounting hole and flat edge of washer is facing rear of sink.

washer

nut

Step 4 Connect water supply lines

- Apply pipe sealant on both *flex hose adapters*. Thread into sides of tee.
- Thread center of tee onto end of spout. Note: This may require about 4 inches of clearance to rotate.
- Attach flex hoses to flex hose adapters.
- Plumb hot water supply to left valve inlet, cold water to right inlet (supply hoses not included).
- spout valve outlet & inlet flex hose adapter XX tee valve body XX flex hose

PLUMBERS PUTTY

flange

beveled

washer

friction

washer

pivot

cavity

Check for leaks if only replacing faucet and drain is already installed by first turning faucet handles to the OFF position and then turn water supply valves ON.

Step 5 Fasten drain body to sink

- Remove stopper, unscrew flange and remove flat rubber washer from end of drain body as shipped.
- Apply plumber's putty around bottom of flange.
- Move friction washer, beveled washer and flange nut down away from threaded end of drain body.
- Place *flange* in drain opening and under sink screw drain body up into flange at least 2-3 turns until hand tight. Apply putty or teflon tape to tail piece and attach to drain body.
- Position *drain body* so *pivot cavity* is facing rear of sink and then slide beveled washer and friction washer up against sink.
- Tighten *flange nut* up against *friction washer* to evenly compress beveled washer while also ensuring flange is centered in drain opening.

flange nut

drain body

tail piece

Take care not to over tighten *flange nut*.

Step 6 Install stopper and set eye position

Stopper can be removable or non-removable stopper determined by position flange of eye hole when non inserting pivot rod. removable removable Insert stopper through *flange*

opening and position eye hole.



Removing stopper When installed in removable position, move pivot rod to the up position (lift rod is in the down position when later installed). Eye hole will slide over end of pivot rod.

Step 7 Attach pivot rod to drain body

- Remove retaining nut and outer seat from pivot cavity.
- Insert pivot rod into pivot cavity so ball is against inner seat and end of rod passes under stopper according to selected eye hole position.



- Slide outer seat over pivot rod with curved end against pivot ball.
- Fasten pivot rod to drain body with retaining nut. Tighten using your fingers until ball is seated snug and pivot rod can move around freely.

Step 8 Connect lift rod and adjust linkage

- Insert *lift rod* through hole on top of water spout.
- Fasten end of *pivot* rod with spring clip through *location* hole in clevis strap that is best aligned to enable *lift rod* also fasten to end of clevis *strap* when in the up position and stopper is in the closed position.



end of clevis strap and fasten with thumb screw at

Insert *lift rod* into

location where stopper can be easily opened and closed. If necessary, select another location hole in clevis *strap* and re-adjust *lift rod* where fastened to *clevis strap*.

Step 9 Attach drain body to drain trap

Step 10 Flush water supply lines

Thoroughly flush supply lines to prevent foreign matter, i.e. copper chips, sand, etc. from damaging the sealing surface inside control valves.

 Remove aerator from end of faucet spout by rotating counter clockwise



- Turn hot and cold faucet handles to full ON position and then open water supply valves to flush supply lines thoroughly.
- Turn faucet OFF, replace aerator and check for any leaks.

Care of faucet finish

Clean finish area by using mild soap and water or non-abrasive cleaner and then rinse immediately. A non-abrasive wax may be used to preserve finish area.

Valve cartridge replacement

Step 1 Remove handle

Carefully pry loose button plug and remove Phillips head screw.

Step 2 Remove collar

Remove collar by turning counter clockwise.

Note: Ensure not to use any tool that could scratch finish without taking protective measures.

Step 3 Remove cartridge

Using a wrench, turn hex nut on cartridge counter clockwise.

Note: Ensure valve assembly under sink doesn't rotate while turning nut.

Step 4 Insert cartridge

Insert replacement cartridge and tighten hex nut using a wrench.

Step 5 Attach collar

Screw collar onto fastener and tighten using your hand.

Step 6 Attach faucet handle

- Ensure cartridge spindle is rotated to the OFF position.
- Attach handle to top of spindle in OFF location as shown.
- Fasten with screw and replace button plug.







WARNING: This product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Symmons Industries, Inc. • 31 Brooks Drive • Braintree, MA 02184 Phone: (800) 796-6667 • Fax: (800) 961-9621 Website: symmons.com • Email: gethelp@symmons.com SYMMONS® the smart choice™