


SQUARE TIERED OUTDOOR BIRD BATH WATER FOUNTAIN WITH LED LIGHTS SSS-337

Read the assembly instructions carefully and follow the care instructions. Keep these instructions for future reference.

Select a smooth, level surface to place the fountain.

Assemble components of this fountain on a soft, clean surface to avoid scratching or damaging the finish.

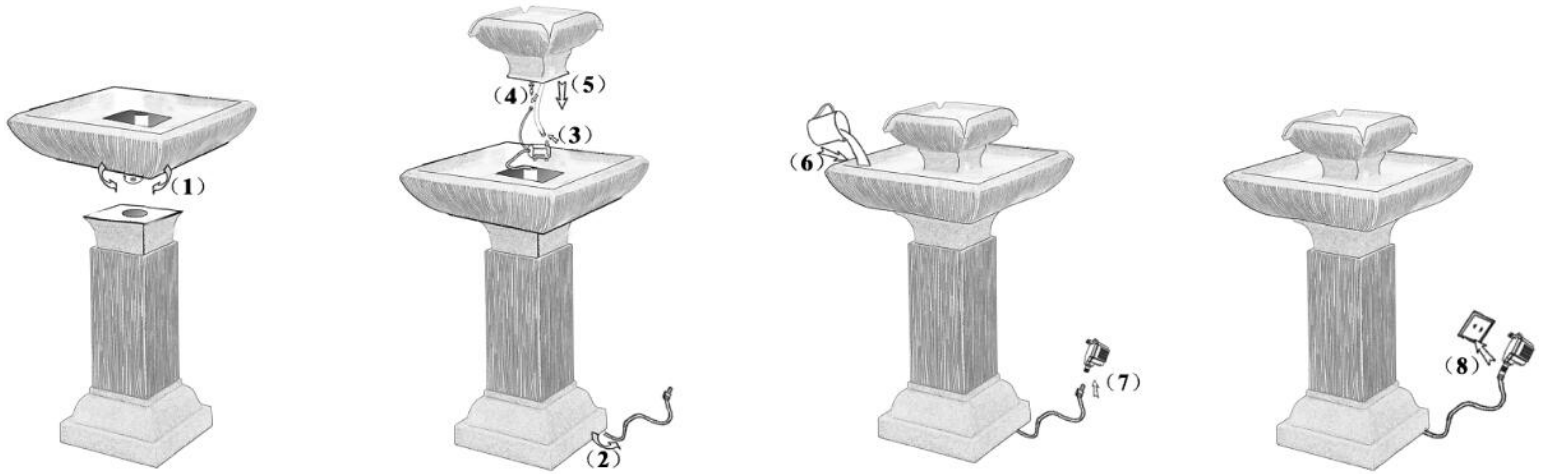

ASSEMBLY

PARTS	QTY.
Topper	1
Bottom Tier	1
Pedestal	2
Electric Submersible Pump	1
AC Adapter	1

1. Place the bottom bowl onto the pedestal and twist clockwise to lock into place.
2. Run the long cable on the pump through the tube in the bottom bowl and pedestal.
3. Attach the pump to the built-in tubing of the top tier.
4. Firmly attach the short cable on the pump to the built-in light cable in the topper.
5. Gently place the topper onto the bottom tier.
6. Fill the fountain with enough water to keep the pump fully submersed during operation.
7. Firmly attach the AC adapter to the pump power cable.
8. Plug the power cord into an electrical outlet.

Note: When first used, there may be air in the pump. It may take several minutes for the air to escape and water begins to flow.

⚠ IMPORTANT INFORMATION ⚠

USE & CARE

- For outdoor use only. Some splashing is normal; adjust the flow rate on the pump if the water rate is too high.
- Check the water level frequently to ensure the pump remains fully submersed; never allow the pump to run dry as it will burn out the motor.
- Only use water in this fountain; distilled water will help prevent mineral buildup but is not required, tap water is okay to use.
- Periodically change the water to keep the water, fountain and pump clean. Remove scale and build-up regularly.
DO NOT use harmful additives such as bleach, chlorine, etc.
DO NOT use anything abrasive to scrub the fountain.
DO NOT use a pressure washer.
- Always shut off the power supply before cleaning and maintaining the fountain and the recirculating pump.
- Take care when handling the pump; only pick it up by the body of the pump, never the power cord.
- During freezing weather, drain the fountain, disconnect the pump and store indoors; allowing ice to form will damage the fountain.

TROUBLESHOOTING

- Ensure that the pump is fully submersed and add water to the basin if necessary.
- Check to make sure the power outlet is working; if in doubt about electrical connections, consult a certified electrician.
- Check the pump and tubing for obstructions.
- Check the flow control on the body of the pump as it may need to be adjusted to achieve the desired flow rate.
- If the light is not working, ensure the cables are fully connected and the seal is adequately tightened (do not over-tighten).
- If water is not flowing within several moments of the fountain being plugged in, unplug the power supply for a few moments and plug it back in; the pump may have air bubbles in the filter which can prevent water from circulating properly.

Any modification or failure to follow the recommended care will void the product warranty.