 




# REFRIGERATOR TOP FREEZER

**Model - MDFR 280WE**



## OWNER'S MANUAL

---

Read the instructions carefully and keep for future reference

## Warranty

---

**Your appliance is protected by this warranty under normal, personal, family or household use (1 Year), and limited commercial use (90 days), in the USA and Canada.**

Conserv Appliances undertakes to the consumer-owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in the USA and Canada, for a period of one year from the date of original purchase. For commercial use, the product is warranted for a period of 90 days. During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been installed and operated in accordance with the written instructions with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer-owner. Service would be provided from Monday to Friday between normal business hours.

## Exclusions

---

In no event shall Conserv Appliances be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workmanship or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer-owner.

**Specifically, the following work is not covered under warranty and does not constitute warranty work:**

**Installation – e.g. installing as built-in**

**Maintenance – e.g. cleaning appliance using solvents**

**Mishandling – e.g. breakage of door handle or shelves**

Most work is covered. The defining factor is, has the machine malfunctioned (Conserv Appliances is responsible) or has the customer omitted or done something to cause machine to malfunction (customer is responsible). Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

## WARRANTY SERVICE

---

This warranty is given by:

**ConServ Appliances**  
**10216 Georgibelle Drive, Suite 900D**  
**Houston, TX 77043-5249**

For Service:

Call 1-800-776-3538  
Email: [Service@ApplianceDesk.com](mailto:Service@ApplianceDesk.com)  
Web: [www.ApplianceDesk.com](http://www.ApplianceDesk.com)  
Business hours: 9:00 a.m. to 5:00 p.m. weekdays

## GENERAL

---

Since it is responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, Conserv Appliances recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose.

Remember to send in your Warranty Registration Card so that a proof of your purchase exists with Conserv Appliances. You can also register online at **[www.ApplianceDesk.com](http://www.ApplianceDesk.com)**.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

*All rights reserved. Manual subject to change without notice.*

## Safety Precautions

---

**Please always follow the safety precautions listed below:**

- Do not put acid or flammable or volatile materials inside the appliance.
- Unplug the unit immediately if you find any abnormal smell or smoke, and contact Customer Service.
- This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Use a dedicated power outlet and a three prong power socket, that is properly grounded.
- Do not use extension cords or ungrounded two prong adapters.
- Do not use the power cord or plug if it is damaged.
- When removing the power plug, do not pull on the cord. Grasp the plug firmly and pull it out from the socket.
- Unplug the unit first when doing maintenance or repair and when replacing the light bulb.
- Keep ventilation openings free of obstructions.

## Safe Disposal

- Before discarding the refrigerator, remove doors and shelves in order to prevent risk of child entrapment.
- Dispose of this appliance in accordance with local regulations.

State of California Proposition 65 Warnings:


WARNING: This product contains one or more chemicals known to the State of California to cause cancer.

WARNING: This product contains one or more chemicals known to the State of California to cause birth defects or other reproductive harm.

---

## Placement

- This unit is designed to be free standing and not built-in.
- The unit should be placed in a ventilated and dry environment.
- Do not put the unit in direct sunlight, and keep it as far as possible from heat sources.
- Don't put the unit in a cold area.
- The unit should be placed on flat and stable ground. Keep the unit level by adjusting the front leg levelers.
- There should be enough space around the unit as shown, to allow proper ventilation.

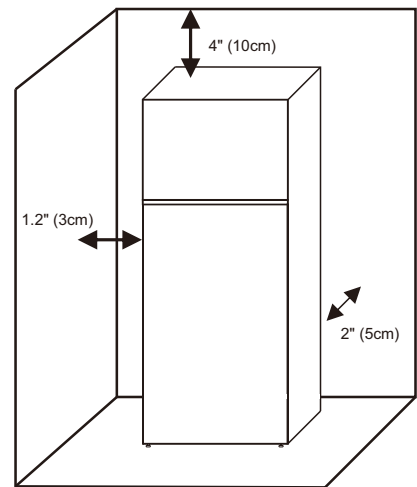

## Before Use

- Before initially plugging in the refrigerator, keep the unit standing upright and stable for 2 hours. The refrigerator should be on for up to 4 hours and adequately cold, before putting food in it.
- It is recommended that you clean the interior of the unit before placing food inside.

## Operation

**This appliance is intended for household use.**

- Temperatures in the refrigerator and freezer compartments are controlled by 2 separate thermostat control knobs.
- Both control knob settings are marked: Min, Med, and Max. Max is the coldest setting.
- Medium is the default setting.
- After plugging in the refrigerator, both sides on the unit will become warm. This is normal.
- Open the freezer door after 30 minutes. If there is cold air, that means the unit is working properly. After a period of time the thermostat will switch off & on automatically and set the refrigerator and freezer compartments at the desired temperatures.
- The glass shelves are adjustable and can be moved up or down as needed.

### Cleaning

- Always unplug the unit before cleaning.
- Clean inside, behind and around the refrigerator regularly, using water and mild detergent, and a damp cloth (not wet).
- Never use boiling water, harsh cleaning chemicals or abrasive materials.
- Check and clean the door gasket regularly to ensure that the door closes and seals properly.

### Water Pan Cleaning

- The water pan is located at the back of the appliance. Its function is to collect the defrost water. Usually it doesn't need special care, but if you find some water overflow or odd smell, it may need to be checked and cleaned. Pull out the power cord first. Lift the water pan up a little, and then pull it straight out carefully. (Caution: make sure the discharge pipe is not too hot). After cleaning, replace the water pan into the original position. Make sure that the pipe is on top of the water pan before you push it into the original position.

### Extended Absence or Vacation

- If the unit will be switched off for a long time, the plug should be pulled out, and the unit cleaned thoroughly.
- The door must be left open and place the unit in a well ventilated area to avoid build up of odor.

### Changing The Light Bulb

Before removing the light bulb, turn off the refrigerator first and then unplug the unit from the wall outlet. Failure to do so could result in electrical shock or personal injury.

- Use Phillips screwdriver to take out the screw
- Remove the light cover by pulling downwards gently
- Unscrew the bulb
- Replace with a 15 watt refrigerator bulb that is the same shape and size
- Replace the light bulb cover and tighten the screw

**Before calling for service, please check the following issues first:**

<b>Fault</b>	<b>Possible Cause</b>
<b>The unit does not work</b>	<ul style="list-style-type: none"><li>• Power is not on or the unit is not connected to Power.</li><li>• Low Voltage.</li><li>• The control knob is set at “Min”.</li></ul>
<b>The unit works inefficiently</b>	<ul style="list-style-type: none"><li>• The control knob is set at a high temperature (Min).</li><li>• Too much food or hot food is in the unit.</li><li>• Door opened &amp; closed too frequently.</li><li>• There is a heat source nearby.</li><li>• The unit is exposed to direct sunlight.</li></ul>
<b>Noise</b>	<ul style="list-style-type: none"><li>• Floor is not flat, and the unit is not placed in a stable position.</li><li>• Refrigerant flow and compressor working may produce some sounds which are normal.</li></ul>
<b>Food frozen in refrigerator</b>	<ul style="list-style-type: none"><li>• The control knob is set at a low temperature (Max).</li><li>• Food is near the area where cold air comes into the compartment.</li></ul>
<b>Doors cannot be closed properly</b>	<ul style="list-style-type: none"><li>• The door is obstructed by items inside the unit.</li><li>• The door gasket is not providing a good seal. Heat the gasket with a hair dryer.</li></ul>

### **The following occurrences are normal**

- The sound like a rivulet is caused by the refrigerant flowing inside of the system pipe.
- While the unit runs, heat is emitted from both sides of the cabinet.
- When the environment is too humid, the edges around door may have a little moisture. Simply wipe it with a dry cloth.

## Technical Parameters

Model No.	MDFR 280WE
Category	Refrigerator-Freezer
Refrigerating Mode	No Frost
Rated Voltage/Frequency	115V~60Hz
Rated Power (W)	150
Rated Current (A)	0.76
Refrigerant, Amount	R600a (1.4oz / 40g)
Foaming Agent	Cyclopentane
Energy Class	E-STAR
Weight	130lbs / 59kg
Dimensions (HxWxD) inches	59.8x23.2x26.6 / 152x59x67.5 cm
Overall Space Required (HxWxD) inches	64x27x29 / 162x65x73 cm

## Electrical Diagram

