 


ASSEMBLY INSTRUCTIONS

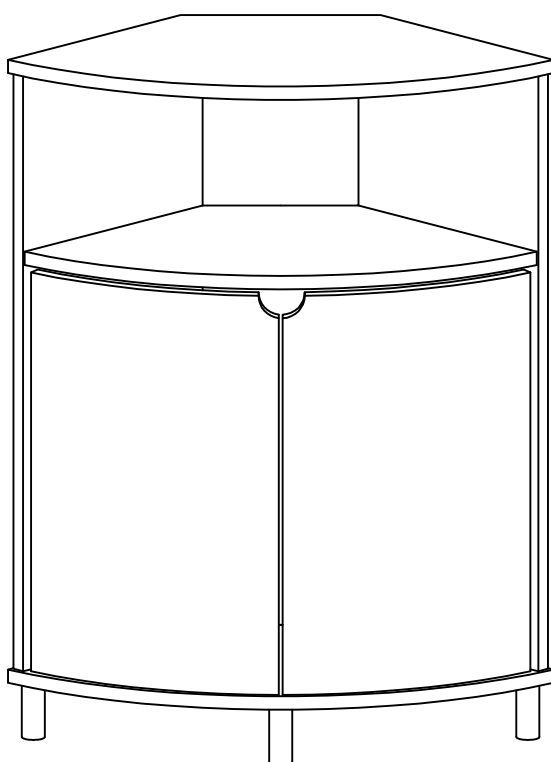

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For most products, two persons are recommended.

 
EASY



DIFFICULT


Tools Required for Assembly:

Phillips Screwdriver



(Not Included)

 Hammer

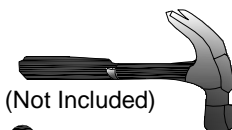

(Not Included)



2 PERSONS RECOMMENDED

Thank you for your purchase!

We hope you will enjoy your new product for many years to come. Our commitment to providing quality products does not simply end when a purchase is made. We stand behind our products and will provide any support needed in order for you to fully enjoy your purchase. Your satisfaction is the greatest recognition we could have.

Because we value your trust in our company, we will do our best to meet your service expectations. Should you have any assembly related questions, parts replacement requests, comments or suggestions, please feel free to contact us any time. To help expedite the service, please have the assembly instructions available, along with your order receipt.



 
ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

BASIC ASSEMBLY TECHNIQUES




It is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly.

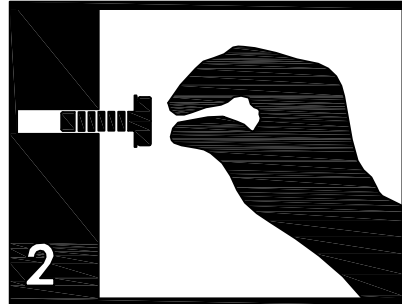


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.



 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

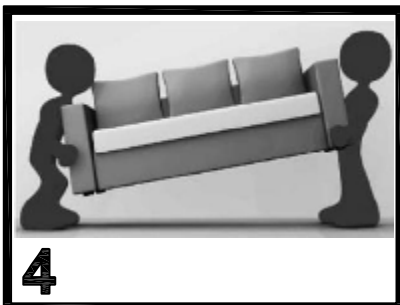

 ALWAYS have at least two people to help with transporting and assembling the product to avoid any potential injury and/or damage.

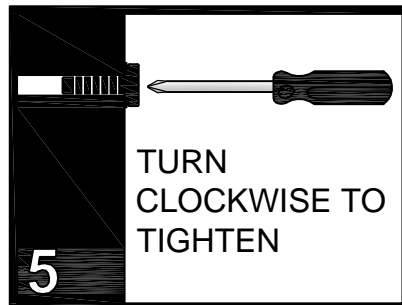

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

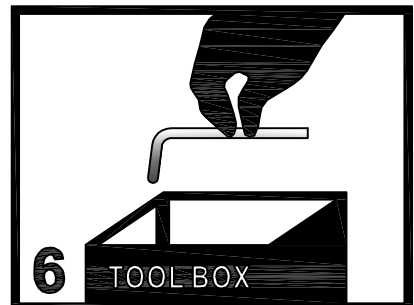

Save the instructions and store any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

 
 
PRE-ASSEMBLY INTRODUCTION

Unless you are particularly adept at assembling flat-pack/knock-down furniture, we understand building ready-to-assemble furniture can be a frustrating experience for some. To help avoid confusion and to make the assembly process quicker and smoother, we have provided some helpful tips. Before you begin the assembly, please read the following :

1. Due to the size and/or weight on most of the ready-to-assemble furniture, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling of the product to avoid any potential injury and/or damage.
2. To protect from damage, assemble the item on a clean, protective surface, such as on a carpet or cardboard.
3. Make sure you have taken all the parts and hardware out of their packaging. Do not throw away packaging material until assembly is completed.
4. Make sure all parts and hardware are accounted for by comparing the actual parts and hardware to the list provided in the assembly instructions. Also check for any irregularity such as crack, flaw or improperly drilled hole. If there is any problem or missing piece, please contact the manufacturer or the supplier. Please have the model number, part number and a brief description of the problem ready will help expedite the replacement process.
5. Read the entire instruction manual and view the diagrams first before assembling. Arrange your parts in order of use and group the identical hardware together to make it easier to grab each piece as you begin to assemble.
6. During the assembly process, make sure parts are properly aligned before tightening with the tool provided or required for the assembly. Do not use power tools and do not over tighten.
7. When applying glue to the wood dowels to bond the parts together, please be **ABSOLUTELY** certain that the parts are correct and lined up with each other (refer to diagrams and take notice of the various pre-drilled hole locations). When in doubt, assemble the parts together first and if the parts fit right, then apply glue to the wood dowels.



CAMLOCK FASTENER ASSEMBLY INSTRUCTIONS

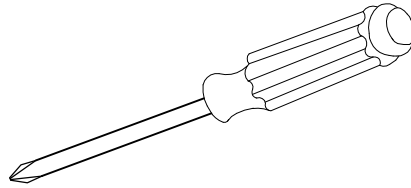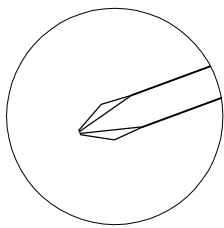


Note: Every cam lock bolt must have a cam lock connector in order to fasten the parts together.

- (1) Secure the threaded end of the cam bolt by using a screwdriver.




Turn right (clockwise) to tighten.

 
Align the cam connector with its side opening (or arrow) pointing to the small drilled hole.

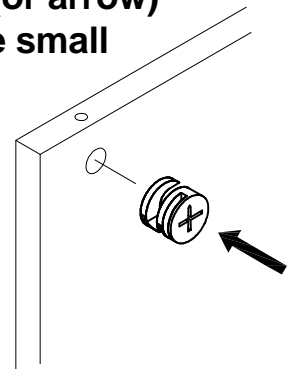

 
- (2) Insert the cam lock bolt into the pre-drilled hole above the cam connector.

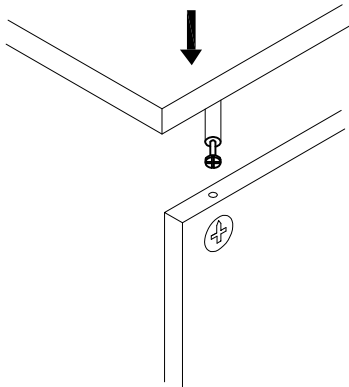

 - (3) Two parts should fit snugly against each other.

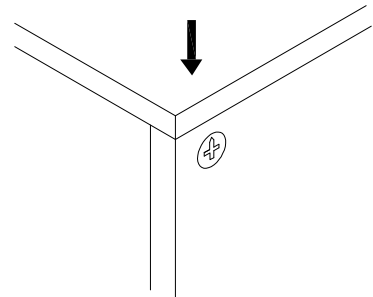

 
- (4) Turn right (clockwise) to tighten.

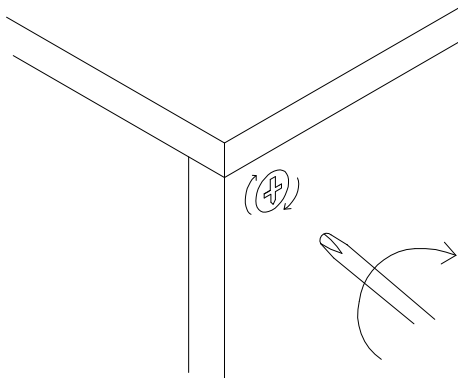

Turn the cam connector with a screwdriver until it will not turn any more with light to moderate force.



 PARTS LIST

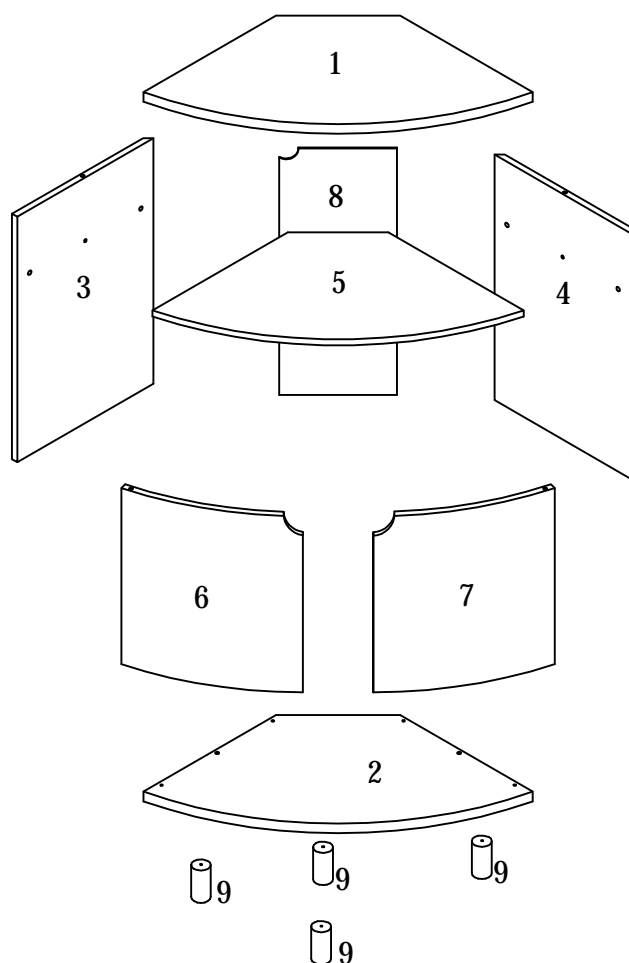


 
 



 

 
 







| | | | |
|-----|-----|-----|------|
| (1) | 1pc | (7) | 1pc |
| (2) | 1pc | (8) | 1pc |
| (3) | 1pc | (9) | 4pcs |
| (4) | 1pc | | |
| (5) | 1pc | | |
| (6) | 1pc | | |



 Before you begin, please read "Assembly and Care Advice", "Pre-Assembly Introduction" and "Cam Lock Fastener Assembly Instructions".

HARDWARE LIST


| | | | |
|---|---|----------|-------|
| A |  | L29 | 8pcs |
| B |  | Ø15 | 8pcs |
| C |  | Ø6x30 | 6pcs |
| D |  | Ø4 x 60 | 4pcs |
| E |  | Ø4 x 30 | 4pcs |
| F |  | | 10pcs |
| H |  | | 2pcs |
| I |  | Φ 3 x 16 | 4pcs |
| J |  | | 2pcs |
| K |  | Φ 3 x 14 | 4pcs |
| L |  | | 2pcs |
| O |  | Ø8x40 | 1pc |
| P |  | Ø12x12x1 | 2pcs |
| Q |  | Ø5x40 | 1pc |
| R |  | Ø4x25 | 1pc |
| S |  | 197×5×1 | 1pc |
| T |  | Ø22 | 4pcs |



Due to the size and/or weight of this product, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling the product to avoid any potential injury and/or damage

ASSEMBLY INSTRUCTIONS

 HOW TO





Cam Bolt



Cam Lock



| 1 | 2 | 3 | 4 |
|-------------------------------|---|--|---|
| | | | |
| 1. Screw Cam Bolt into panel. | 2. Insert Cam Bolt into bolt hole of joining panel. | 3. Insert Cam Lock. arrow facing bolt. | 4. Gently turn Cam Lock clockwise to lock position. |

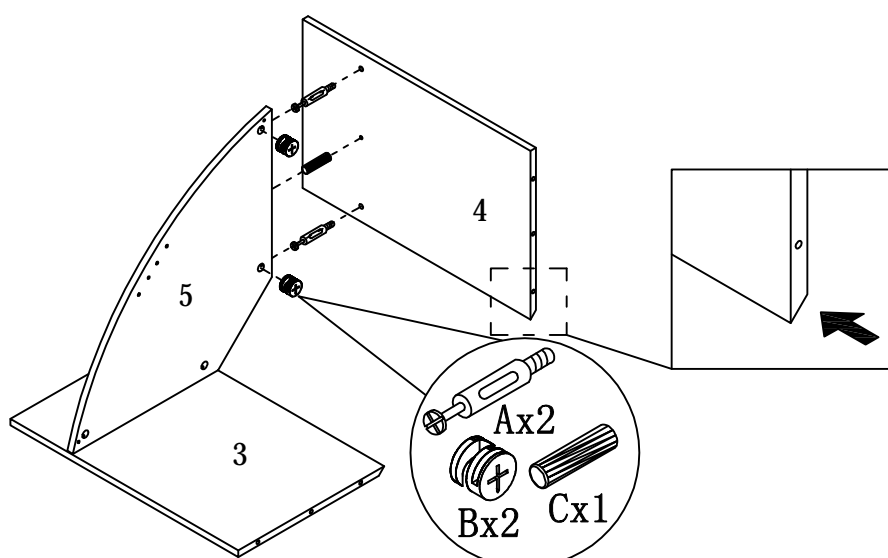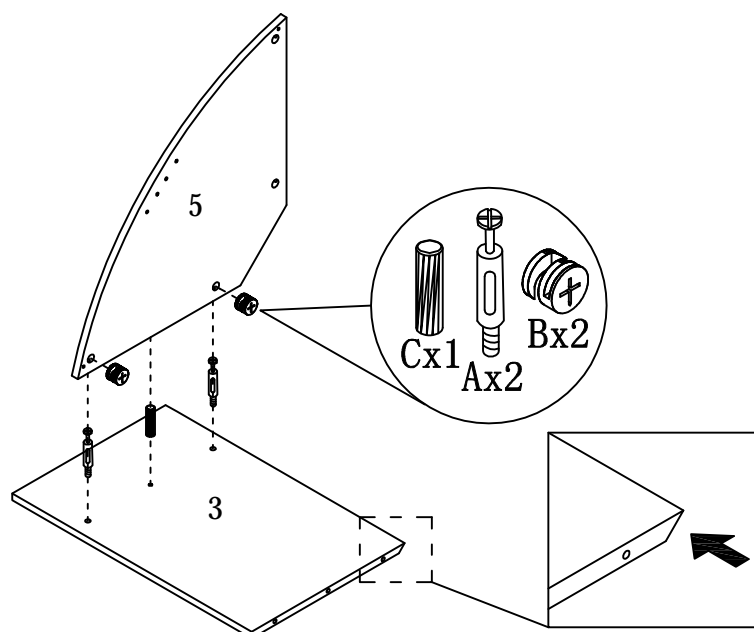  



ASSEMBLY INSTRUCTIONS



 
 
LED Strip

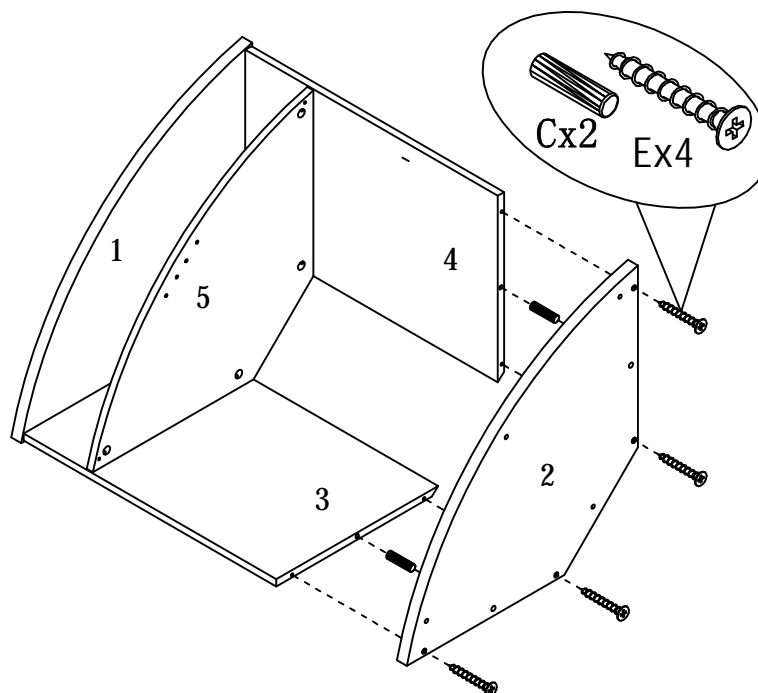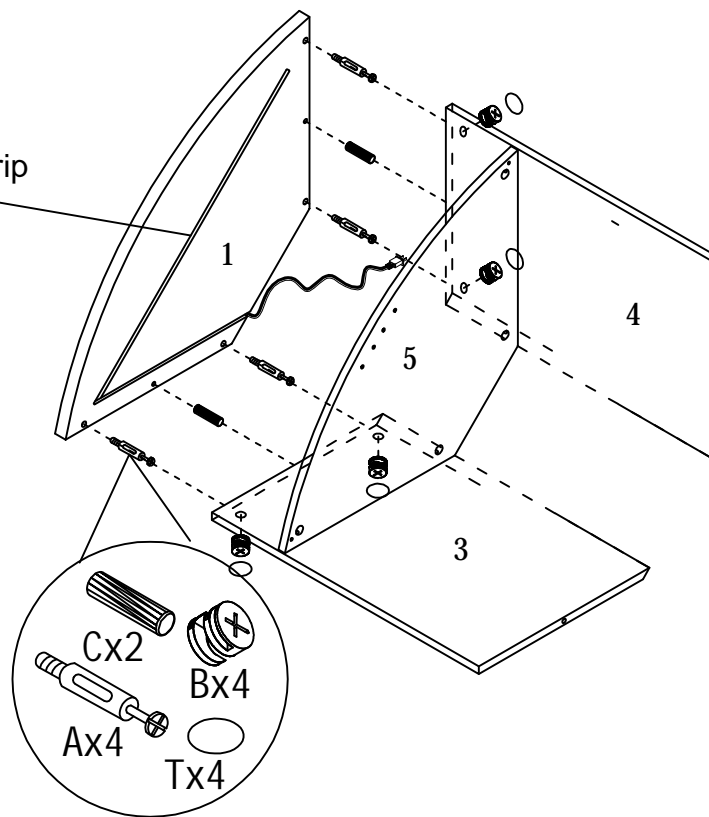

ASSEMBLY INSTRUCTIONS

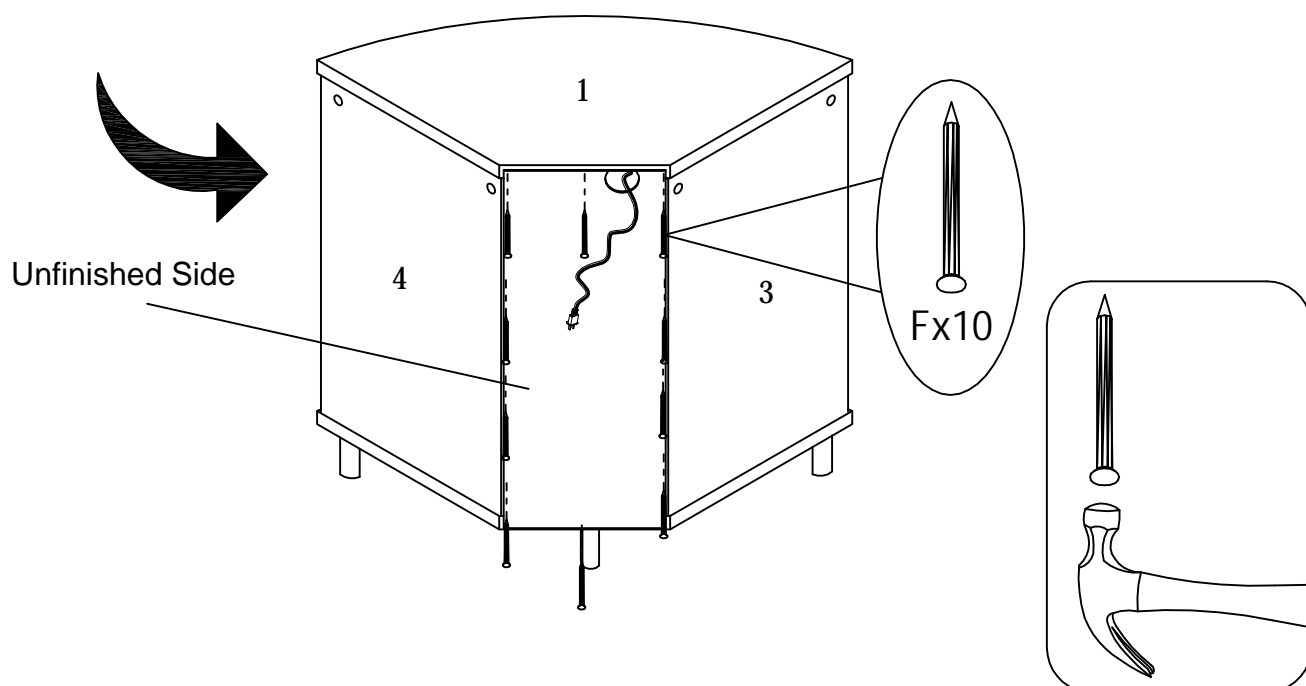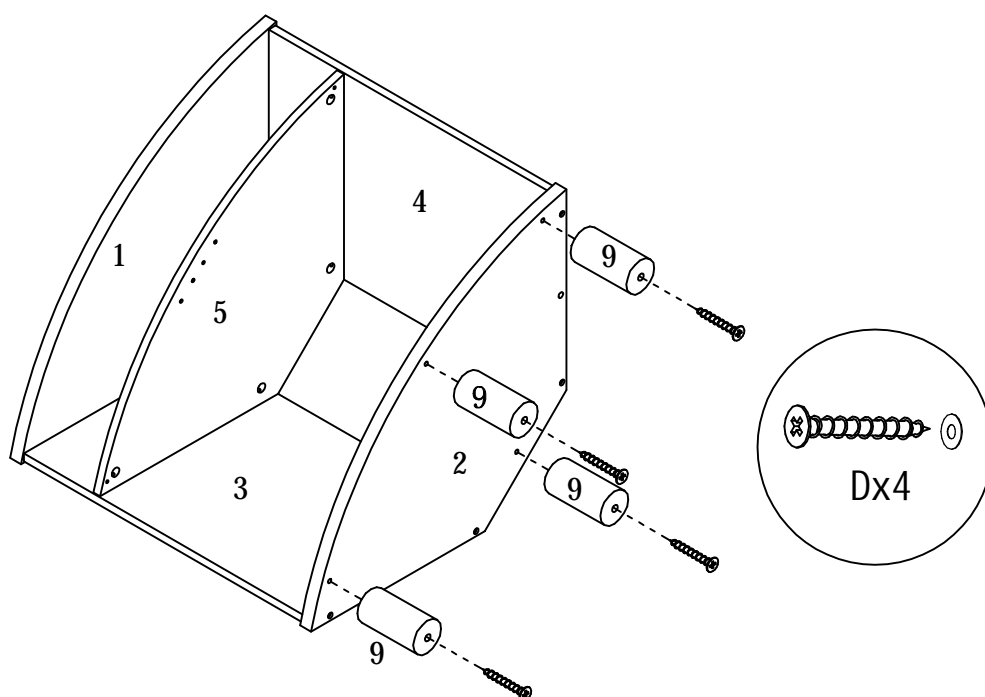  

ASSEMBLY INSTRUCTIONS

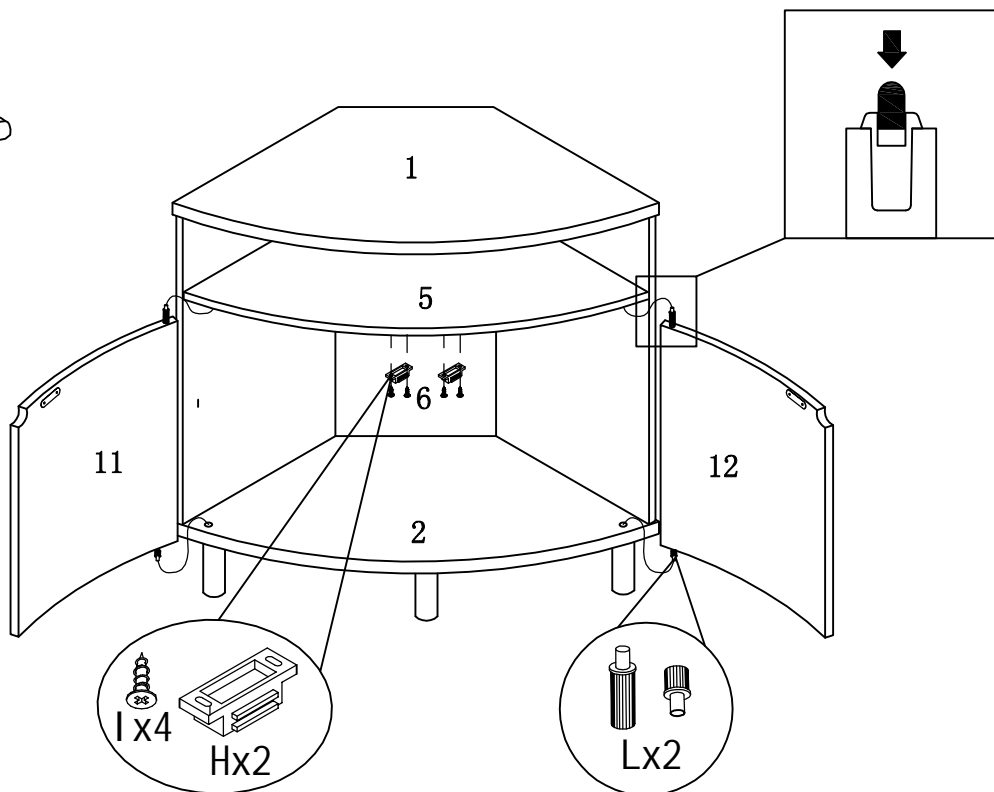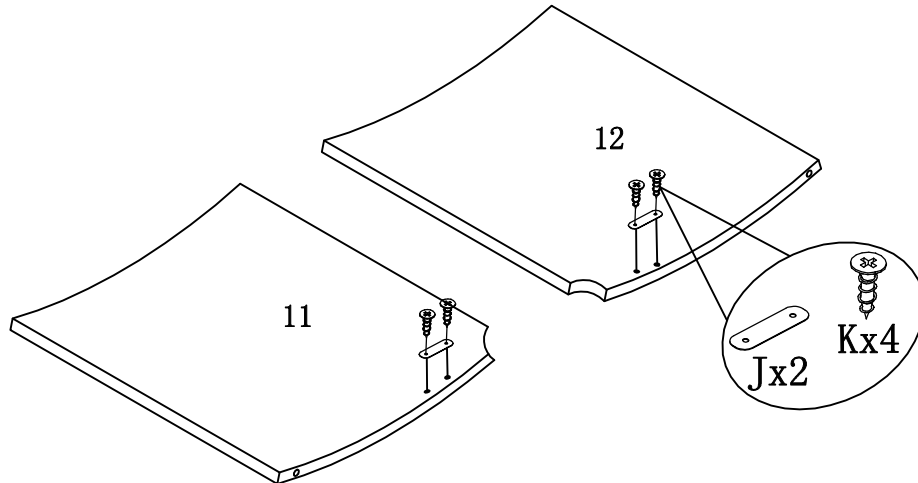  

ASSEMBLY INSTRUCTIONS



 
SAFETY STRAP TO PREVENT TIP-OVER

SAFETY STRAP TO PREVENT TIP-OVER

Drywall: Select a location where you want the table to be mounted. Place the assembled table against the wall and, on the wall, mark the location where the anchor will be placed. Drill a hole slightly smaller than the size of the screw. Push the anchor as far as it will go with your finger. Tap gently with a hammer until the anchor is flush with the wall surface. Secure the strap using a Phillips screwdriver to tighten the screw through the strap and into the anchor. On the other end of the strap, secure it using a Phillips screwdriver to tighten the screw through the strap and into the back of the table.

If the location happens to be a wood stud, do the following:

No anchor will be needed if securing to a wood stud. Drill a hole slightly smaller than the size of the screw. Secure the strap using a Phillips screwdriver to tighten the screw through the strap and into the wall (wood stud). On the other end of the strap, secure it using a Phillips screwdriver to tighten the screw through the strap and into the back of the table.

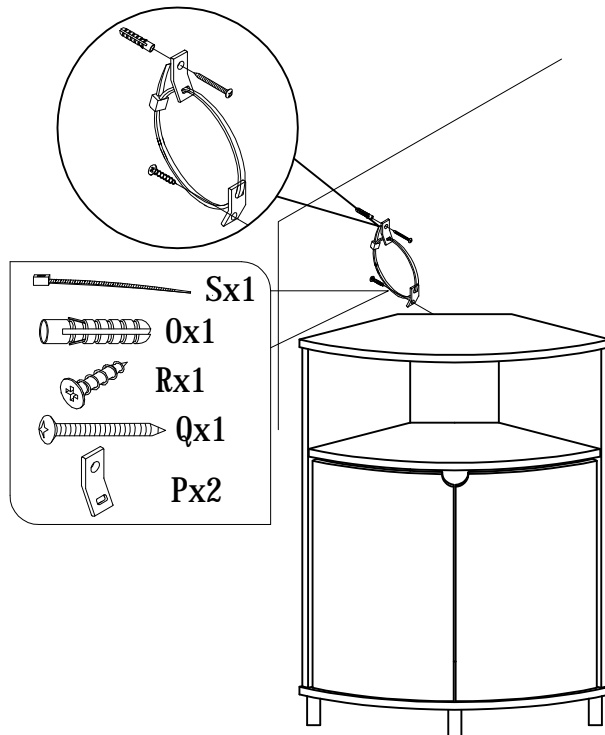

Before strapping, make sure the table is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.

ASSEMBLY IS COMPLETED

RF Wireless 24-key
RGB Controller Specification

Instructions for the use of remote
control keys:

Product Profile:

ON

Press the ON button to turn on the light.

OFF

Press the OFF button to turn off the light.

Static Color Shortcut

Each button is assign to a color, press the button to select your desire color.

Increase

Press the increase button to increase brightness in static color mode.
Press the increase button to increase effect speed in light effect mode.

Decrease

Press the decrease button to decrease brightness in static color mode.
Press the decrease button to decrease effect speed in light effect mode.

Flash 7

Press the button to enable spectrum cycle mode.
The colors will cycle between red, green blue, orange, cyan, violet, and white.

Strobe 7

Press the button to enable color breathing mode.
The colors will cycle between red, green blue, orange, cyan, violet, and white.

Flash 16

Press the button to enable spectrum cycle mode.
The colors will cycle between all 16 colors.

Strobe 16

Press the button to enable color breathing mode.
The colors will cycle between all 16 colors.

USER INSTRUCTION (REMOTE CONTROL)

RF Wireless 24-key
RGB Controller Specification

Technical parameters:

Working temperature: -20°C-60°C (-4°F-76°F)

Power supply voltage: DC 5-24V

Output: 3 Loops

Connection mode: Gongyang

Remote control distance: 8-15 meters

 
Remote control mode: walkable

The size of remote controller: L51.6 * W7.1 * H84.6mm

Static power consumption: <0.5W

Output current: <3A(each circuit) 5V<30W 12V<108 24V<216W

Fourth, remote control size:

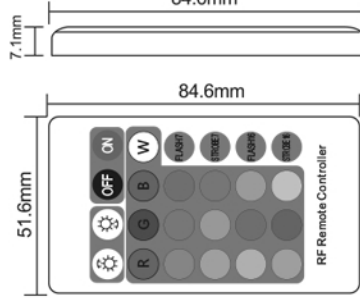


V. Typical Applications



Install / Replace Battery

The remote control is provided with CR2025 batteries.

 1. Press and slide of the back cover from the remote control.
2. Insert CR2025 batteries into the battery compartment and make sure to install batteries in the correct polarity.
3. The negative end of the battery should be install against the spring inside the battery compartment.

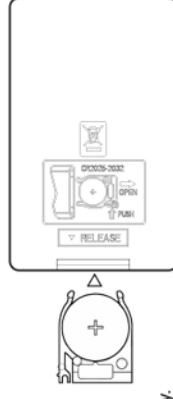

CAUTION /WARNING

- Dispose old / used battery at a suitable recycling point or according to local regulations.
- DO NOT ingest battery. If accidentally swallowed, seek for medical help immediately.