 
 




Cabinet

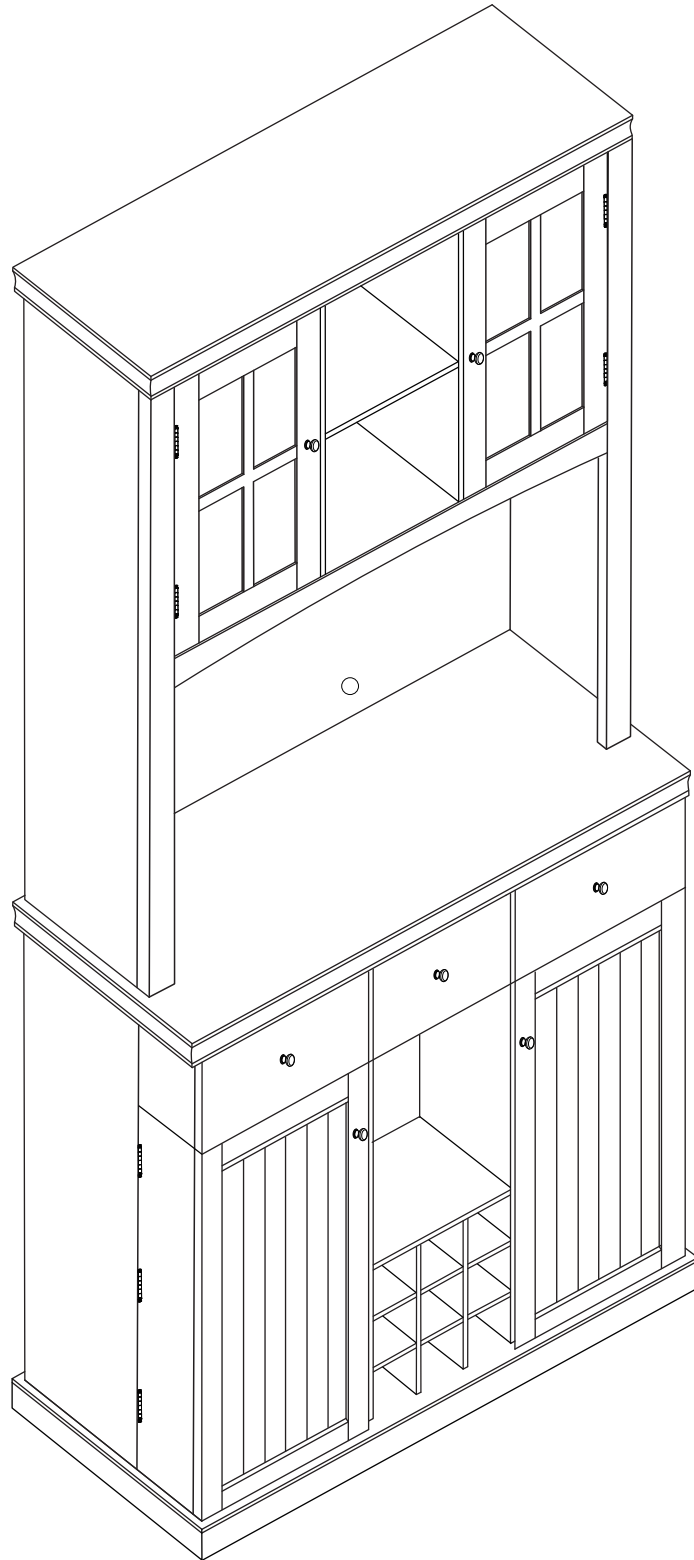

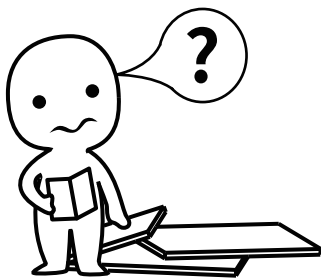


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

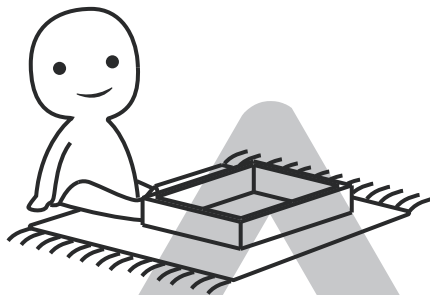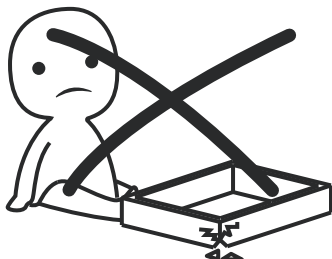



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

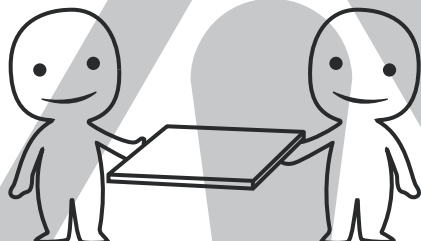

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

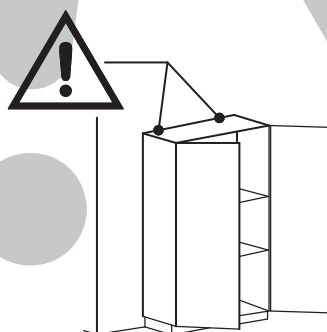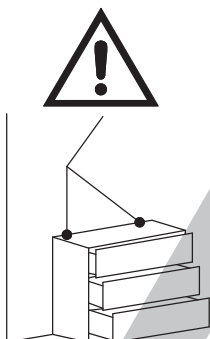

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

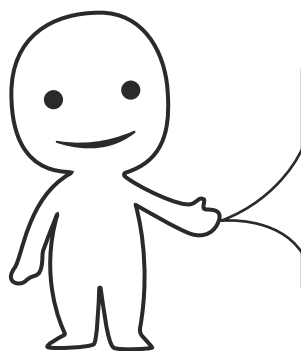


Please prepare the following tools

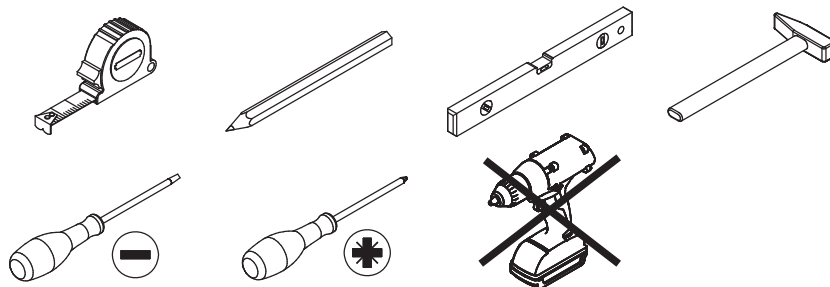 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 66+1



Bx 124+1

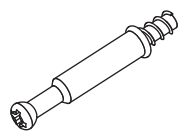 

Ø 6 x 35 mm

Cx 124+1



Ø 15 x 10 mm

D x 82+1



Ø 3 x 12 mm

E x 21



Ø 5 x 40 mm

F x 7



Ø 4 x 16 mm

G x 7



 
H x 10



J x 2



K x 4




L x 1




M x 1



 N x 1



P x 12

 

Ø 4 x 30 mm

Q x 1



Ø 4 x 12 mm

R X 28



S x 8



Ø 3 x 14 mm

TX28+1

 


Ø 3 x 14 mm


U X 24




V X 1



Ø 4 x 35 mm

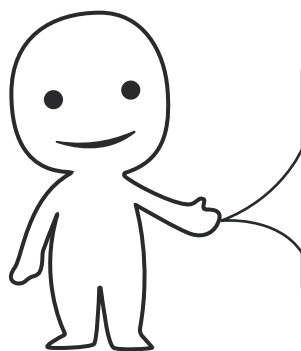 

Please prepare the following tools

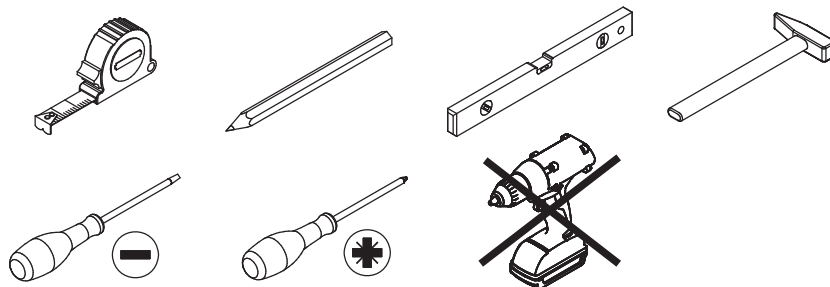 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size


W X 2



 
CL X 3



CR X 3

 
















DL X 3
















 


















DR X 3







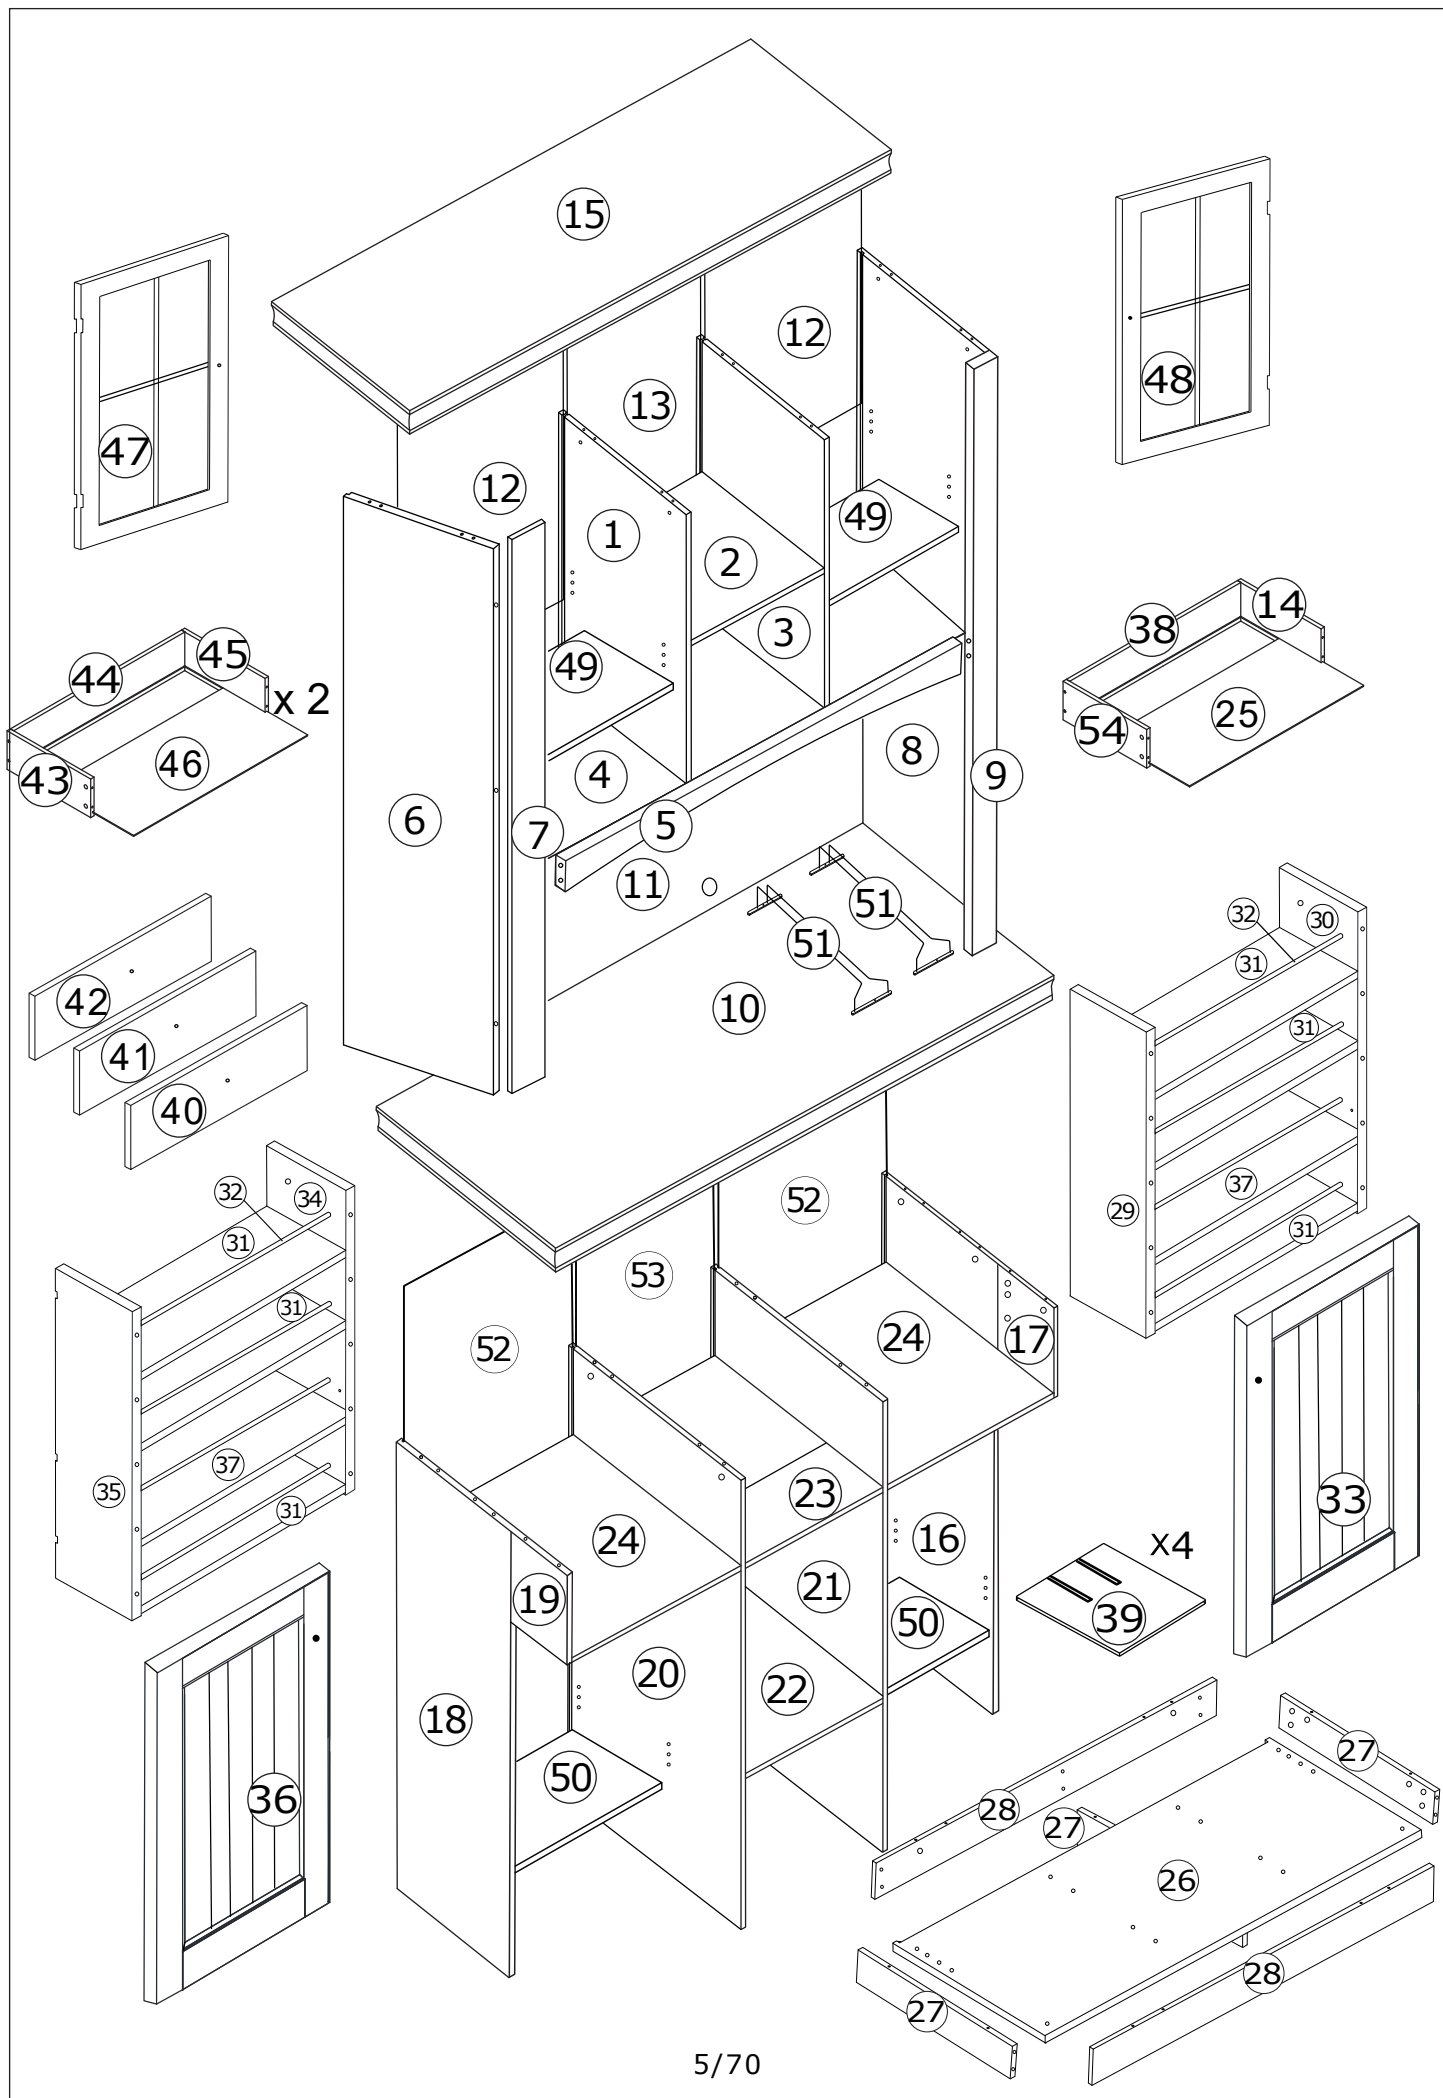 

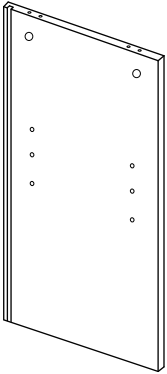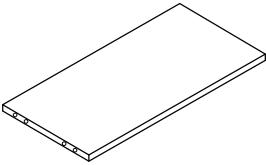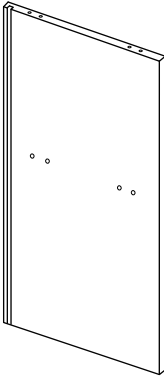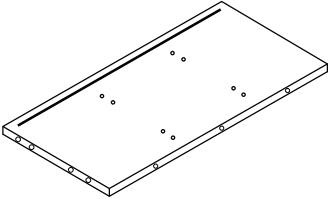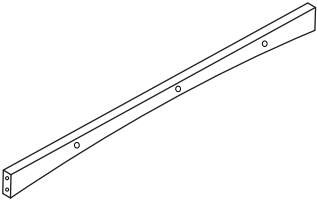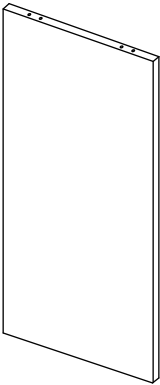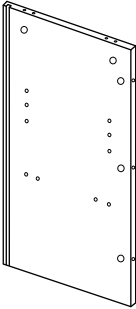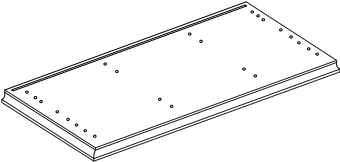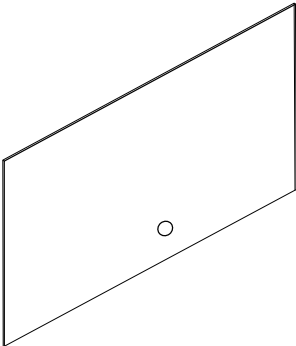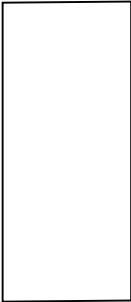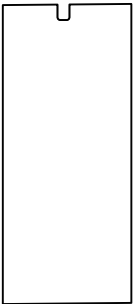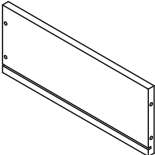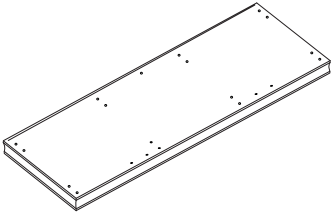              ①  1PC	②  1PC	③  1PC	④  1PC
⑤  1PC	⑥  1PC	⑦  1PC	⑧  1PC
⑨  1PC	⑩  1PC	⑪  1PC	⑫  2PC
⑬  1PC	⑭  1PC	⑮  1PC	⑯  1PC

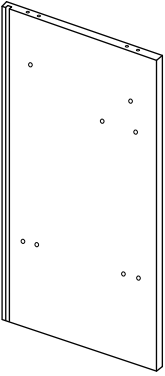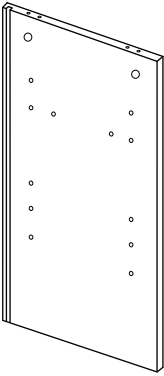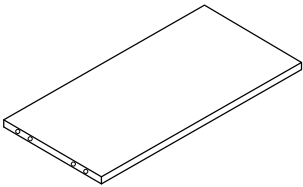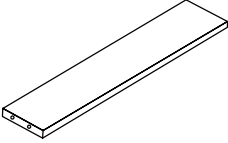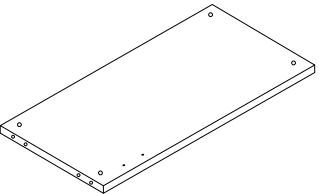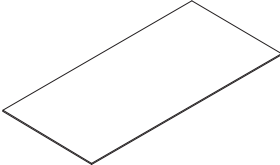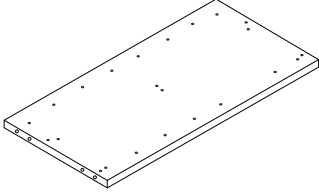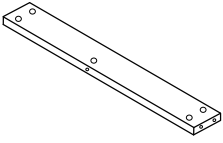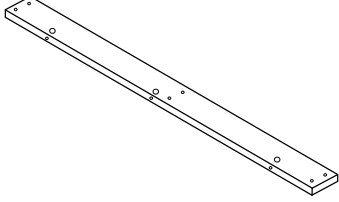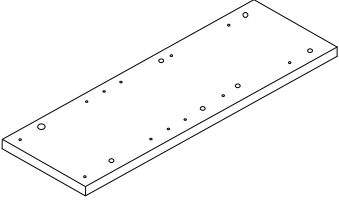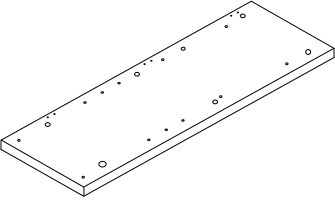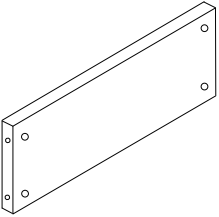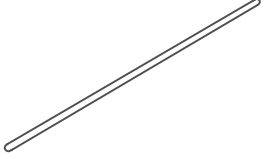                ①⑦  1PC	①⑧  1PC	①⑨  1PC	②⑩  1PC
②①  1PC	②②  1PC	②③  1PC	②④  2PC
②⑤  1PC	②⑥  1PC	②⑦  3PC	②⑧  2PC
②⑨  1PC	③⑩  1PC	③①  6PC	③②  8PC

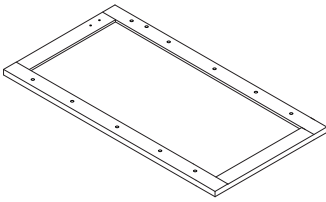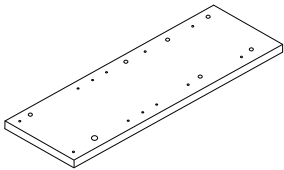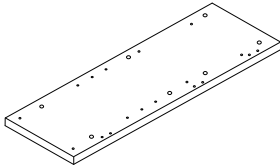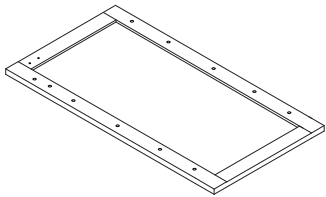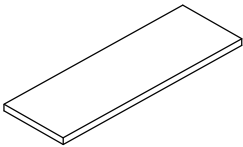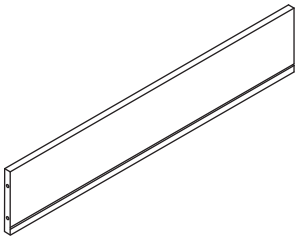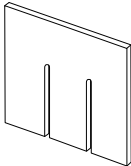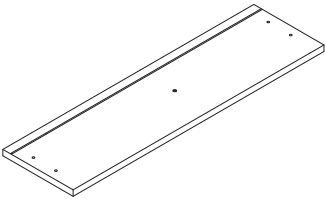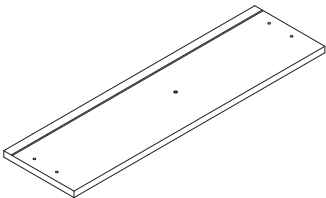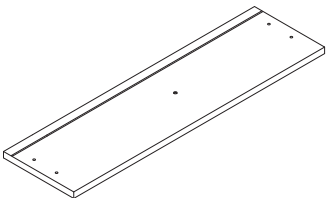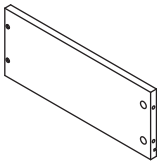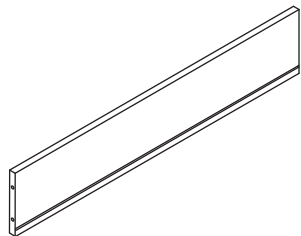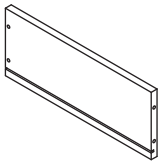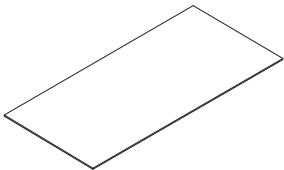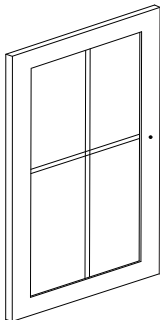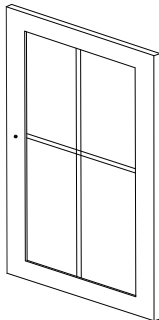                33  1PC	34  1PC	35  1PC	36  1PC
37  2PC	38  1PC	39  4PC	40  1PC
41  1PC	42  1PC	43  2PC	44  2PC
45  2PC	46  2PC	47  1PC	48  1PC

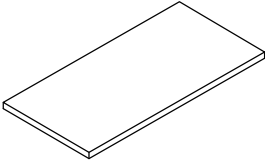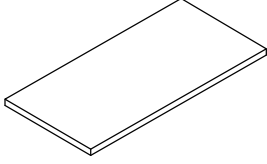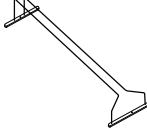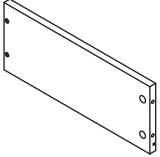    
49  2PC	50  1PC	51  2PC	52  1PC
53  1PC	54  1PC	55 PC	56 PC

1





B x 4



 Ø 6x35mm




    Insert quickfit screw(B) into corresponding holes in No.1 and No.3 plate with a screwdriver as shown.

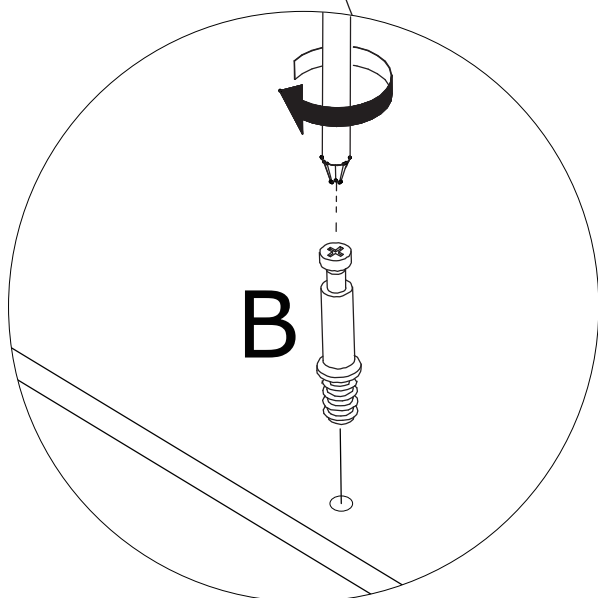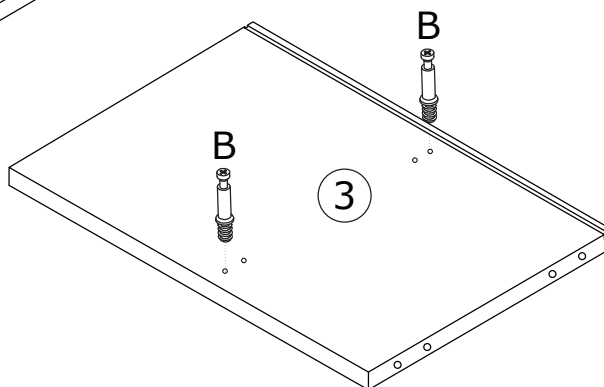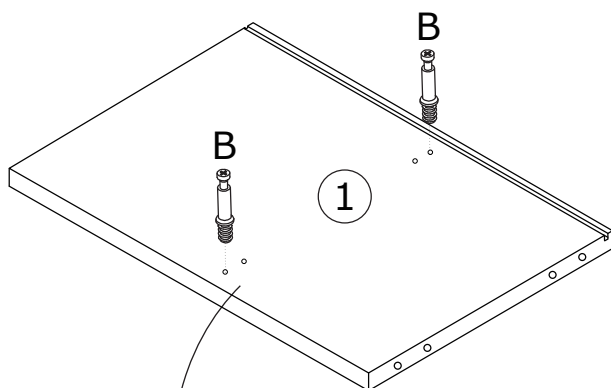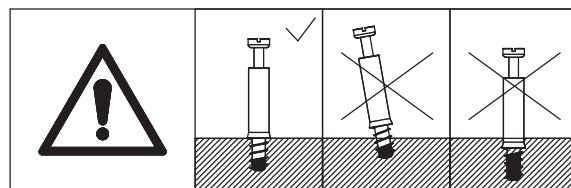

2






 
A x 4




C x 4




      Ø 15x10mm

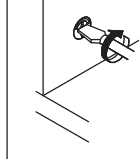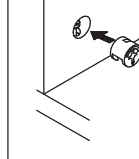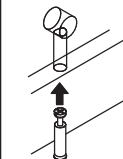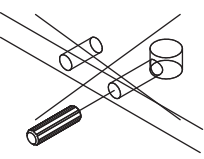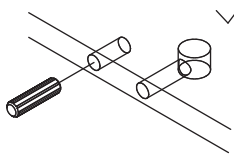



  Connect No.1 and No.3 plate with No.2 using wooden dowel(A), then turn cam lock(C) clockwise in No.2 plate to tighten as shown.

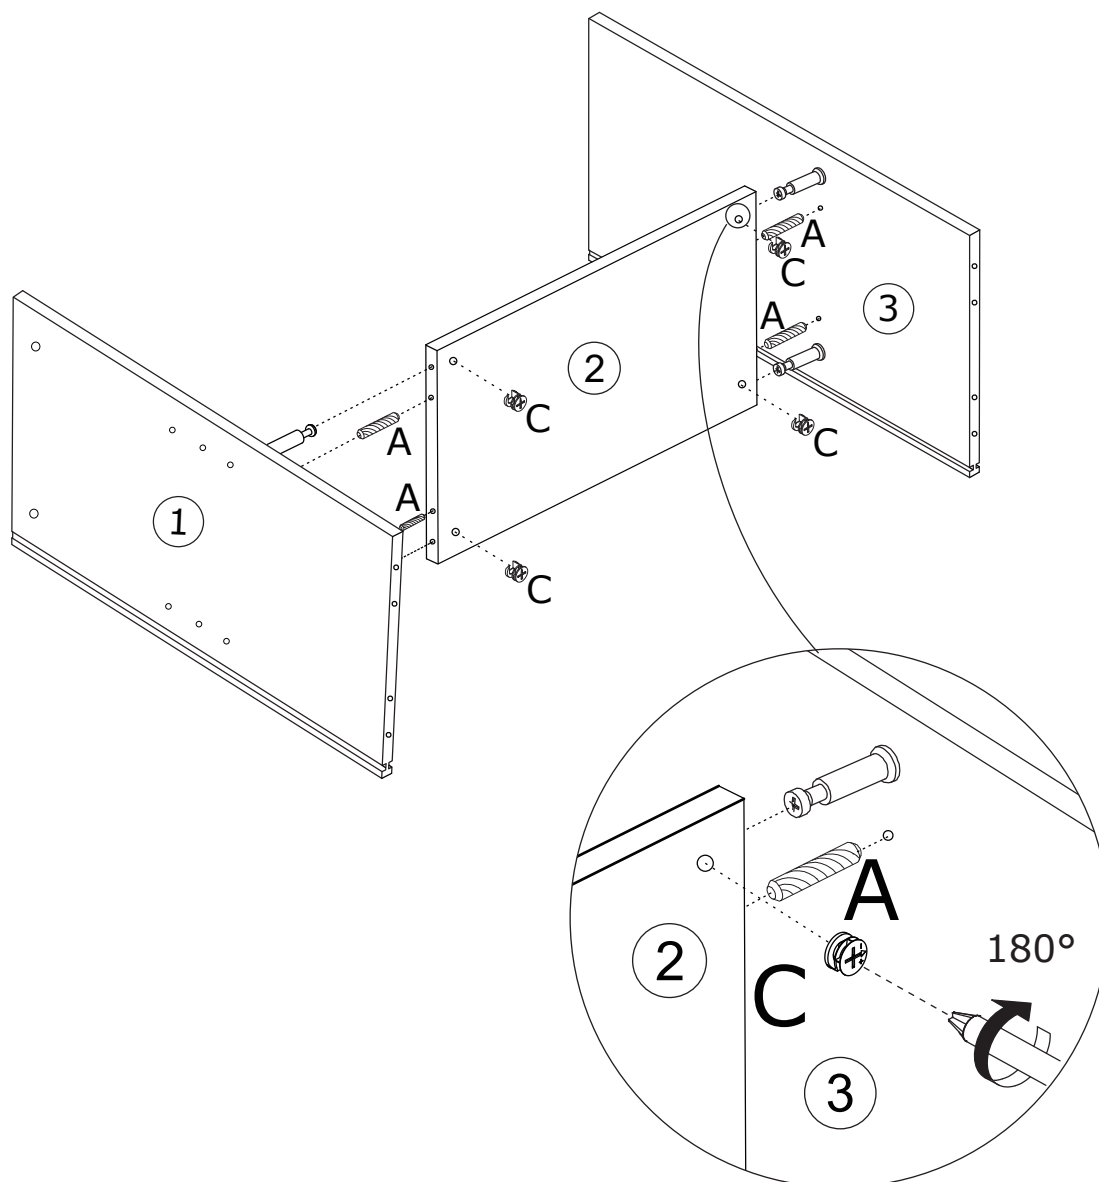

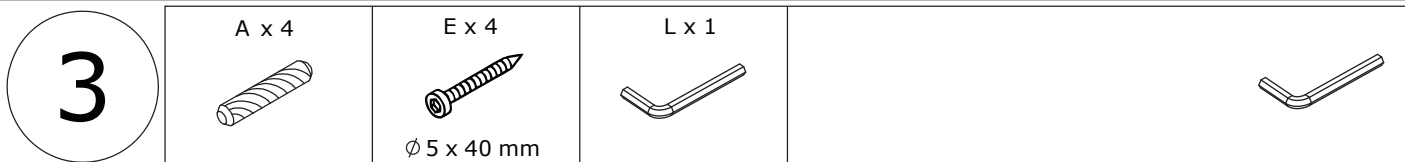

  Attach No.4 plate to No.1 and No.3 plate using wooden dowel(A), then fix with screw(E) as shown.

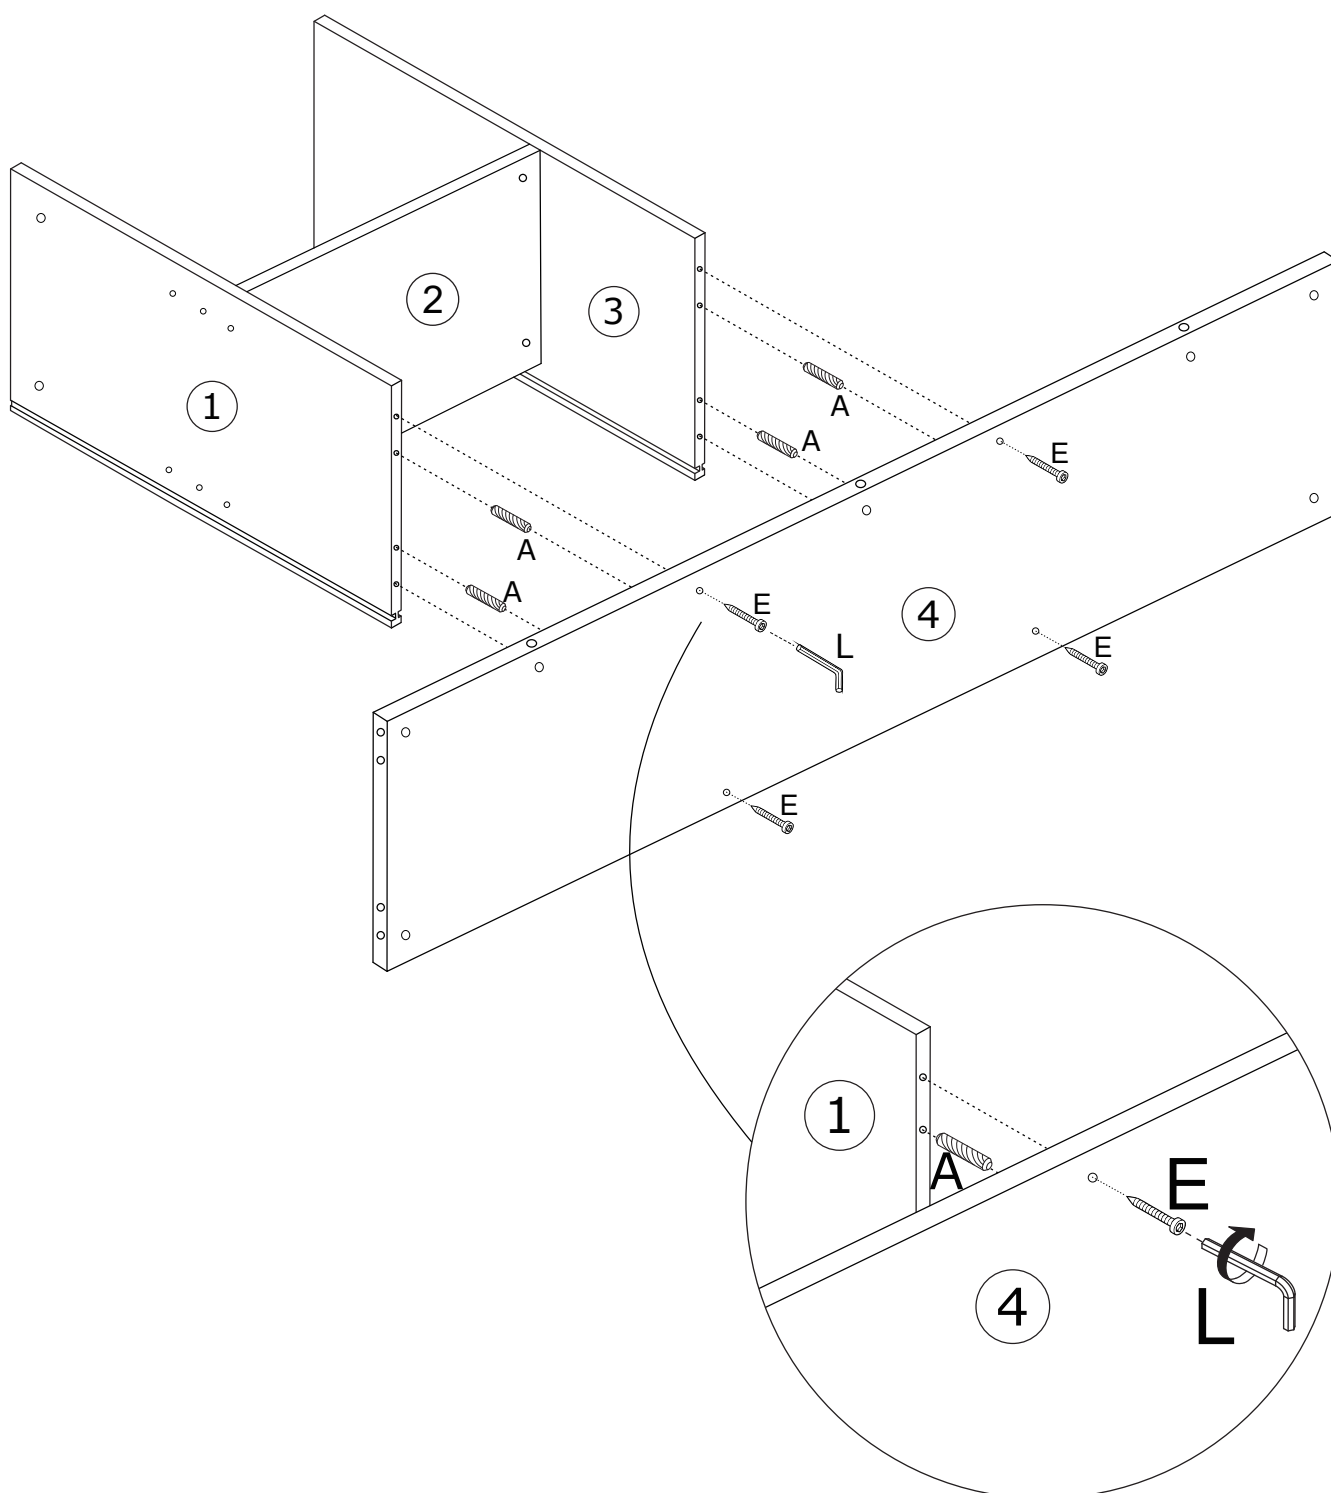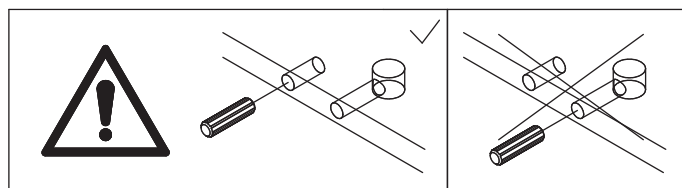

4

 
 
B x 3



Ø 6x35mm



Insert quickfit screw(B) into No.5 plate with a screwdriver as shown.

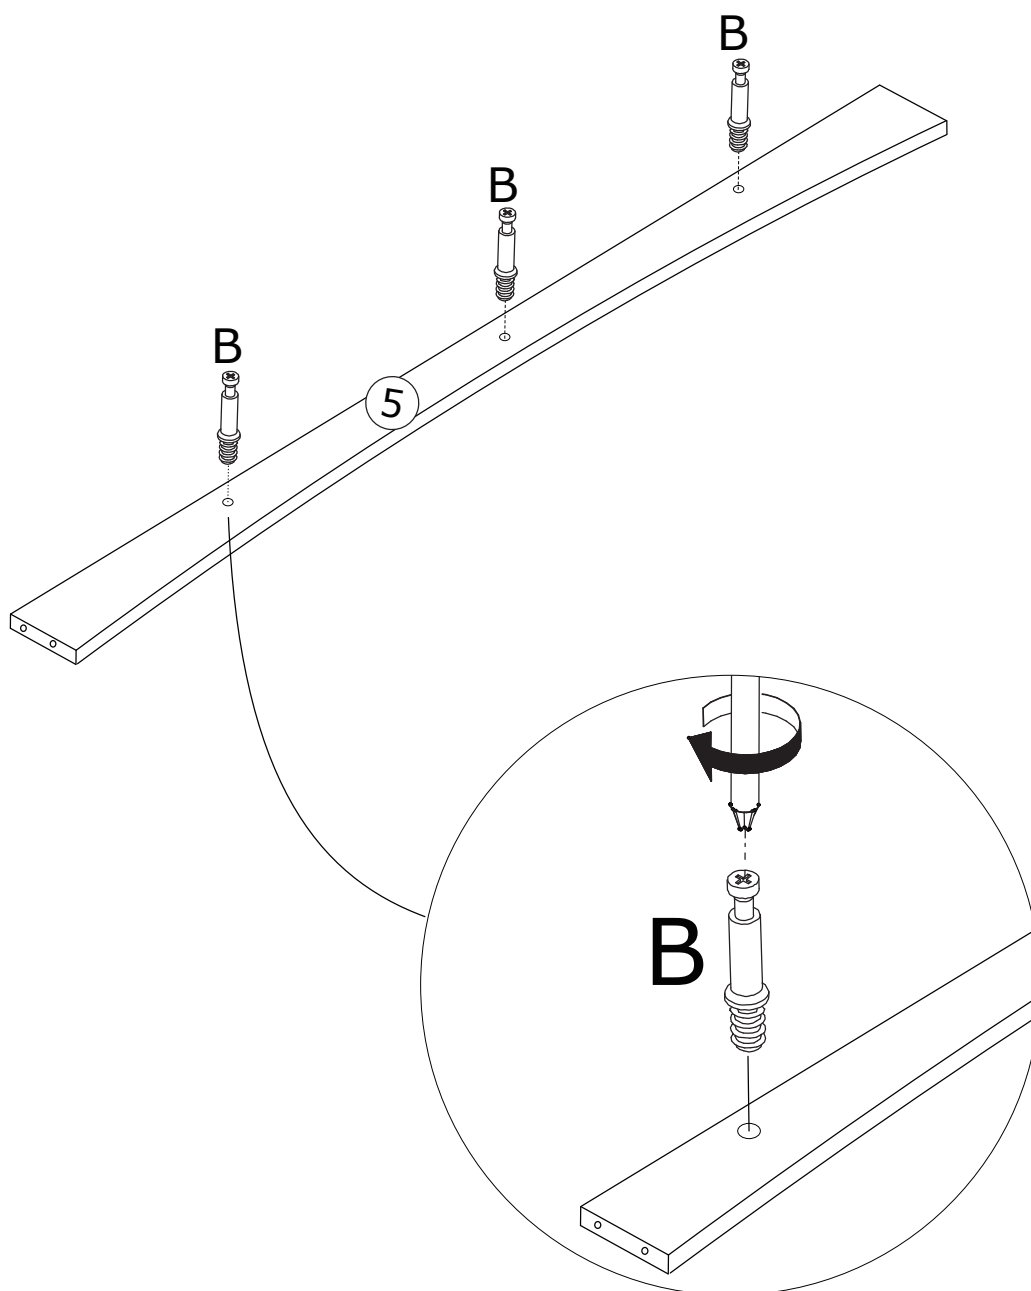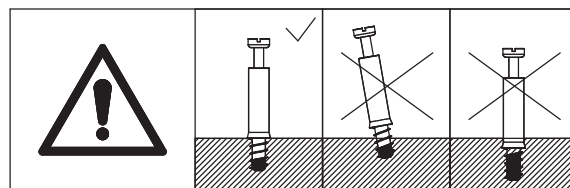



5

C x 3




 Ø 15x10mm



  
Attach No.5 plate to No.4, then turn cam lock(C) clockwise in No.4 plate to tighten as shown.

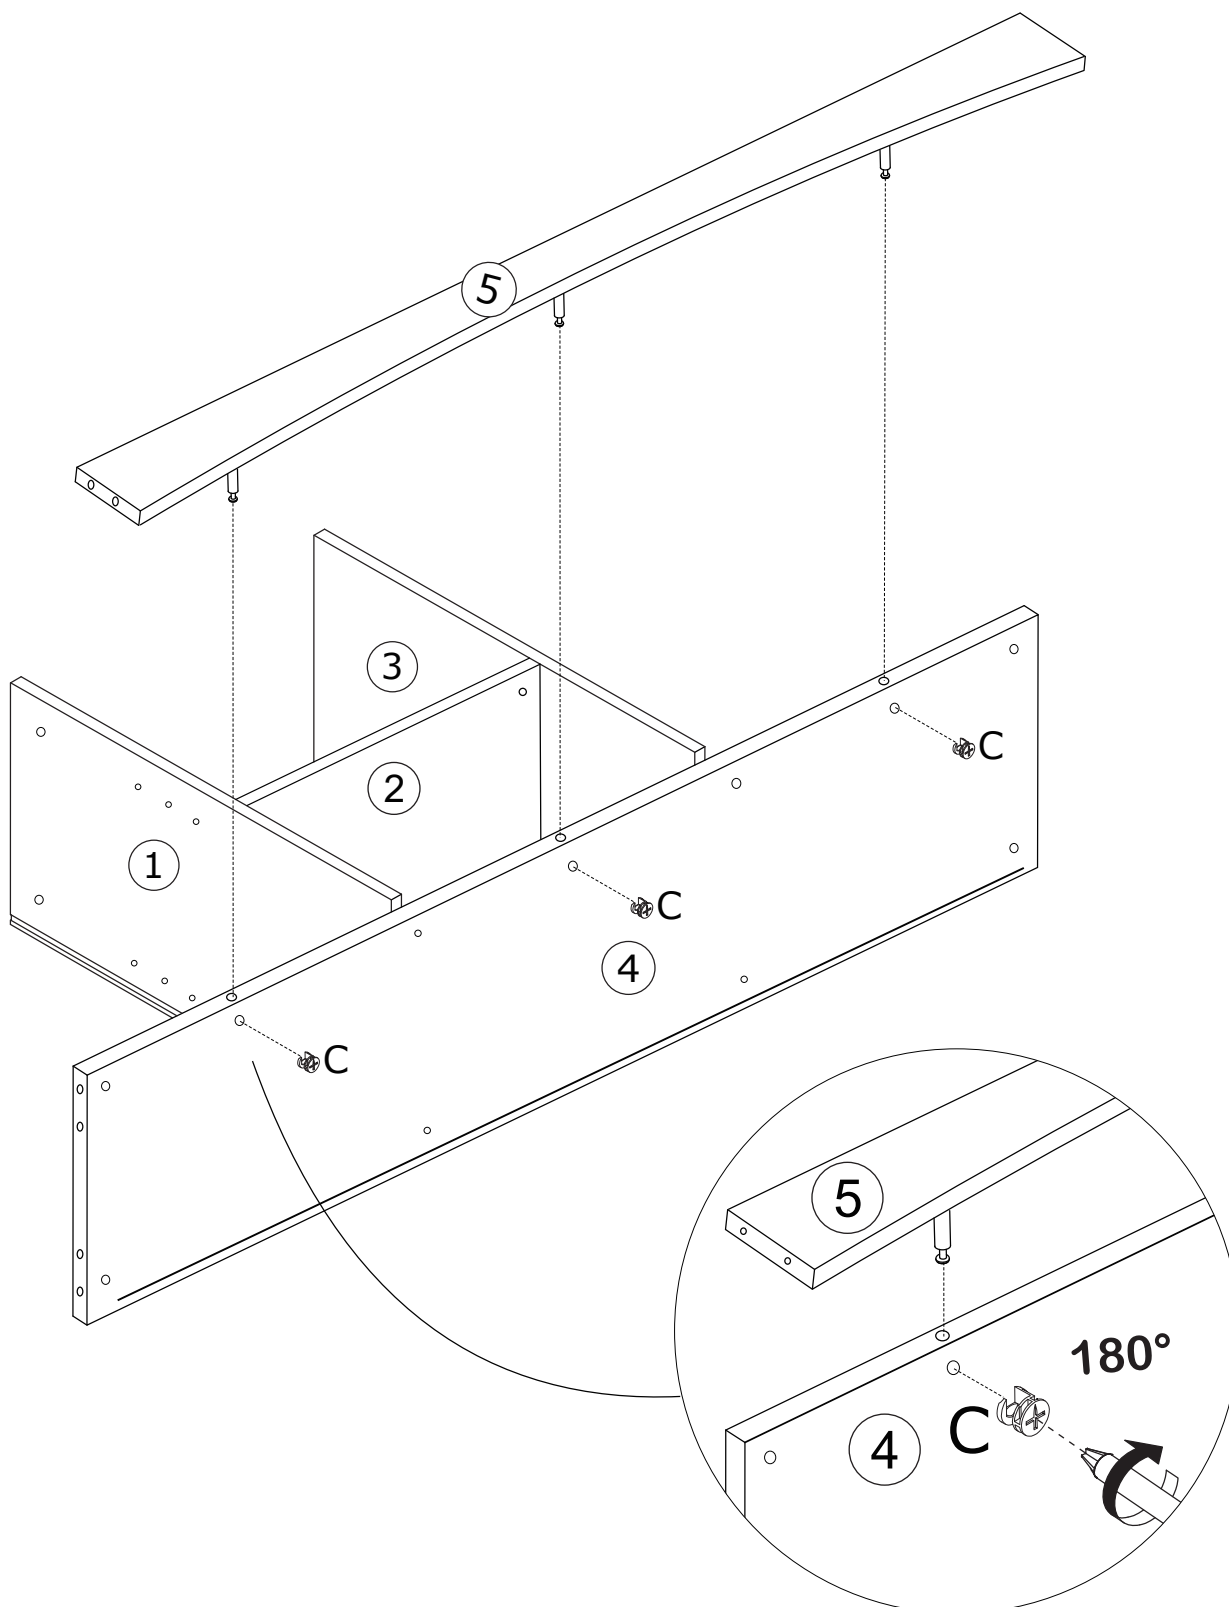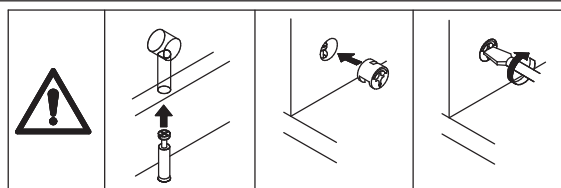


6

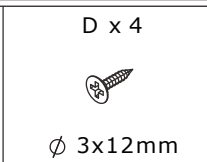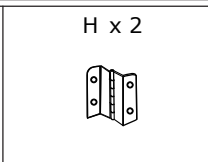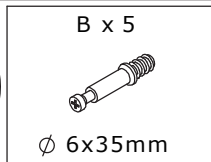   

 Insert quickfit screw(B) into corresponding holes in No.6 and No.7 plate with a screwdriver as shown.

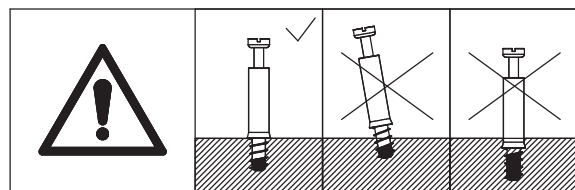

 Fix hinge(H) to No.7 plate with screw(D) as shown.

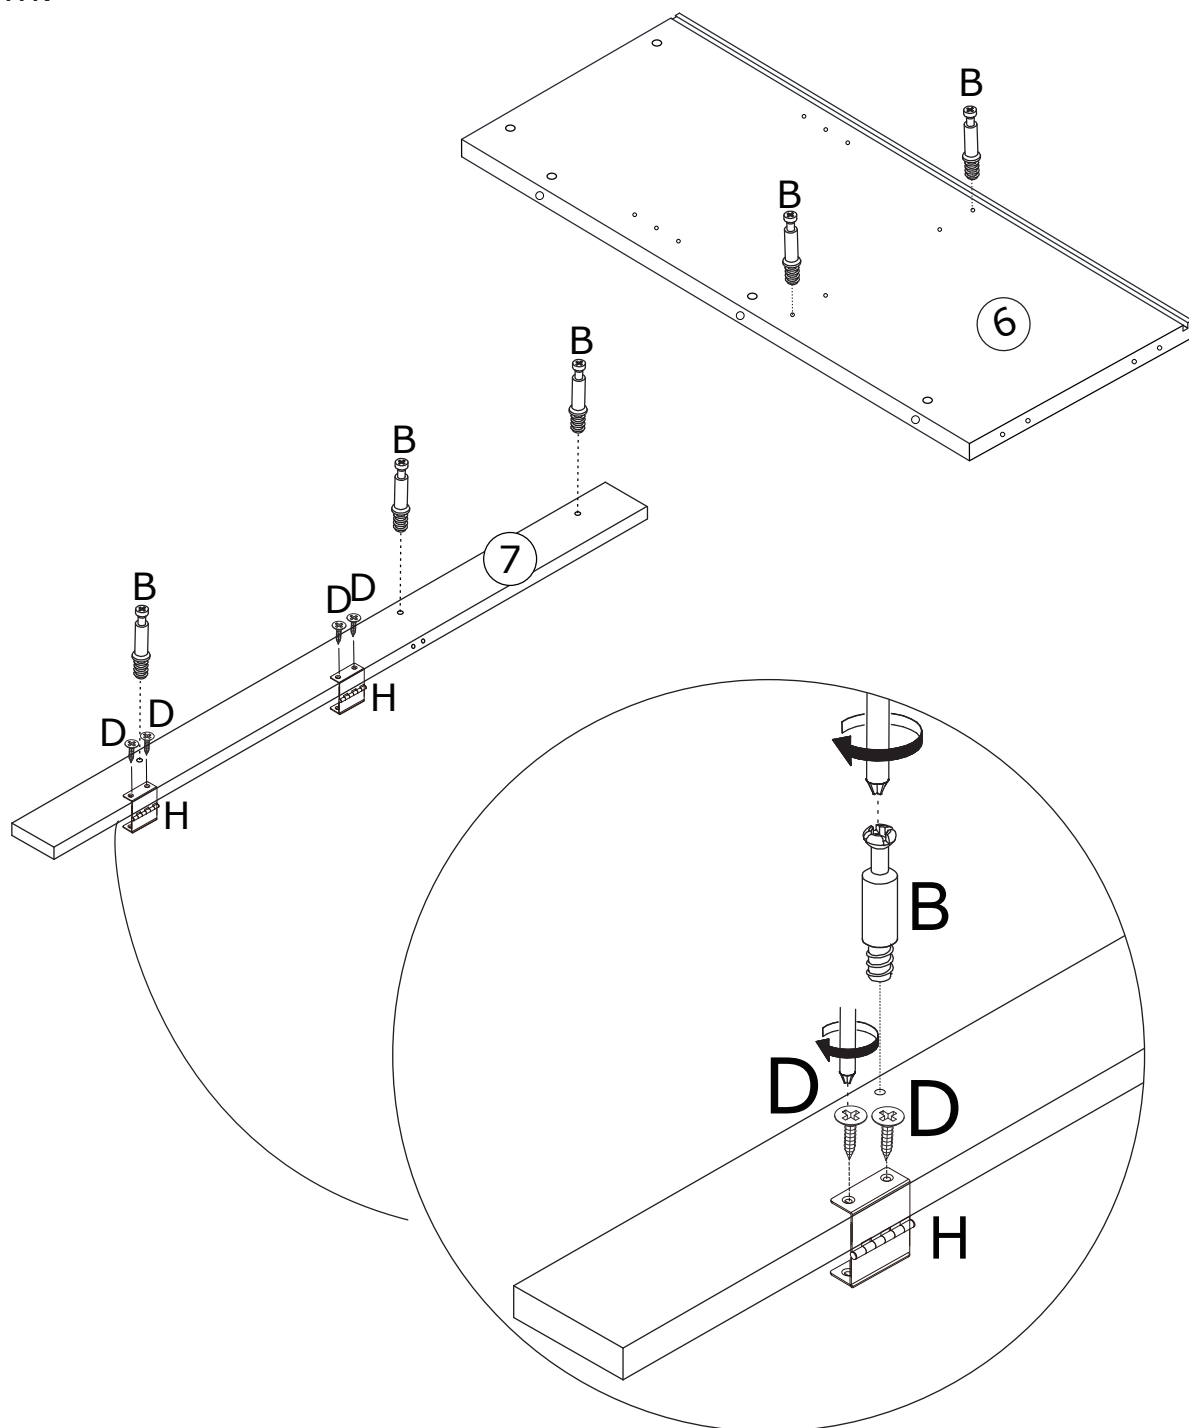


7




C x 3





 
Ø 15x10mm



   
Attach No.7 plate to No.6, then turn cam lock(C) clockwise in No.6 plate to tighten as shown.

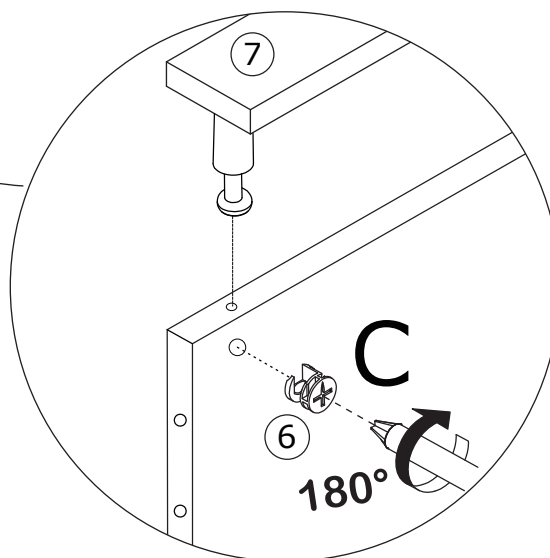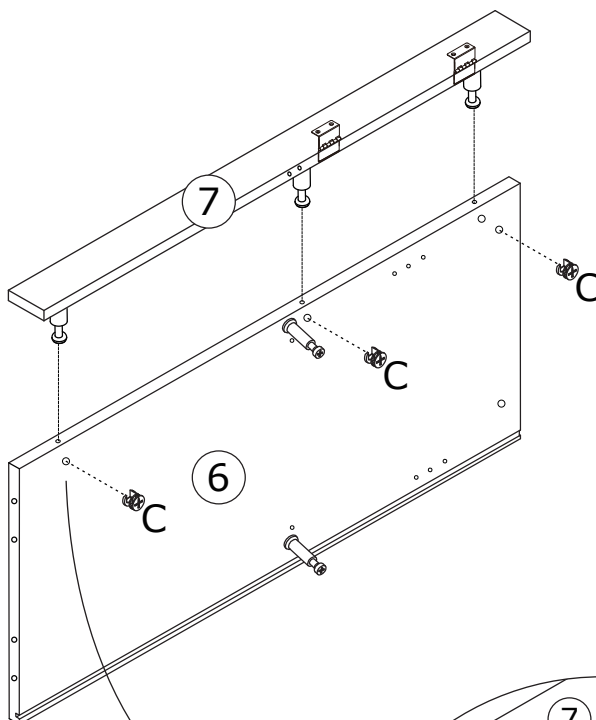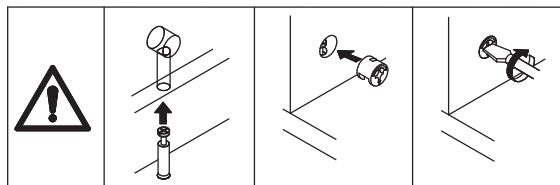


8

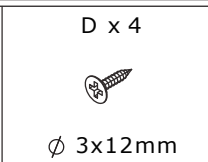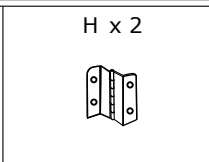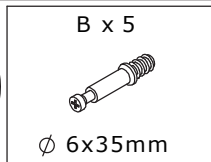   

 Insert quickfit screw(B) into corresponding holes in No.8 and No.9 plate with a screwdriver as shown.

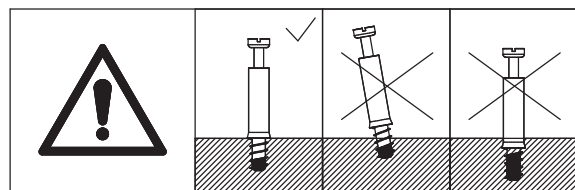

 Fix hinge(H) to No.9 plate with screw(D) as shown.

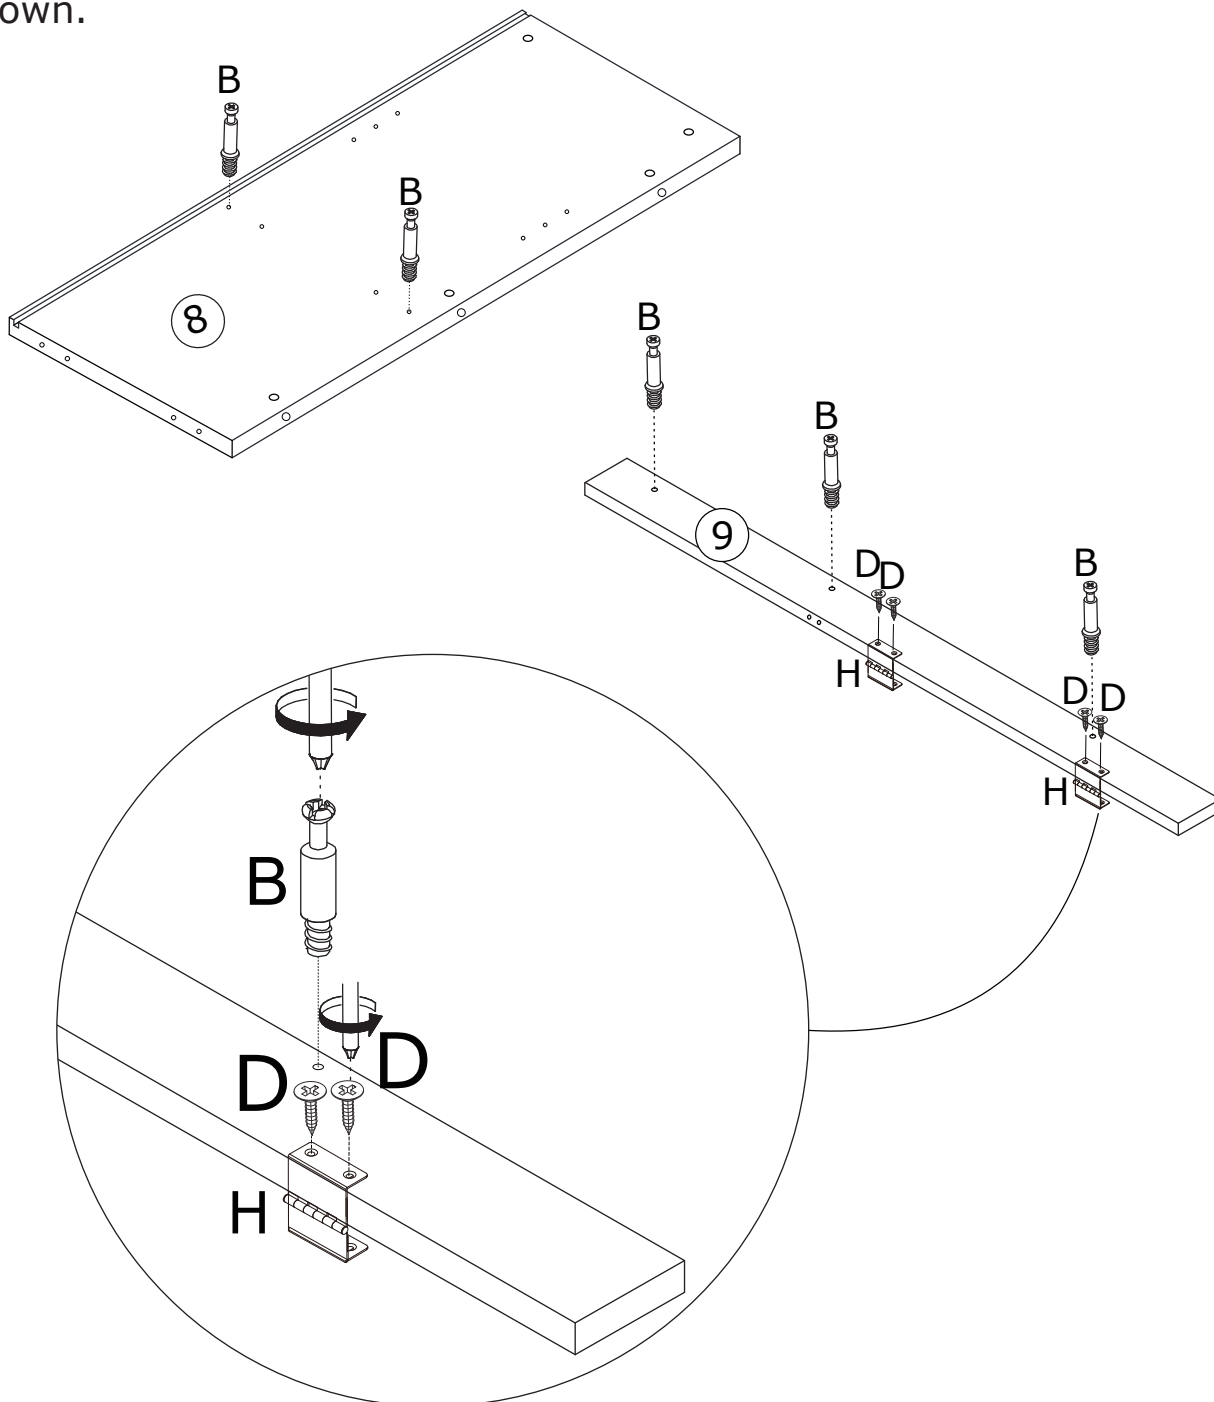


9



C x 3



 Ø 15x10mm




  Attach No.9 plate to No.8, then turn cam lock(C) clockwise in No.8 plate to tighten as shown.

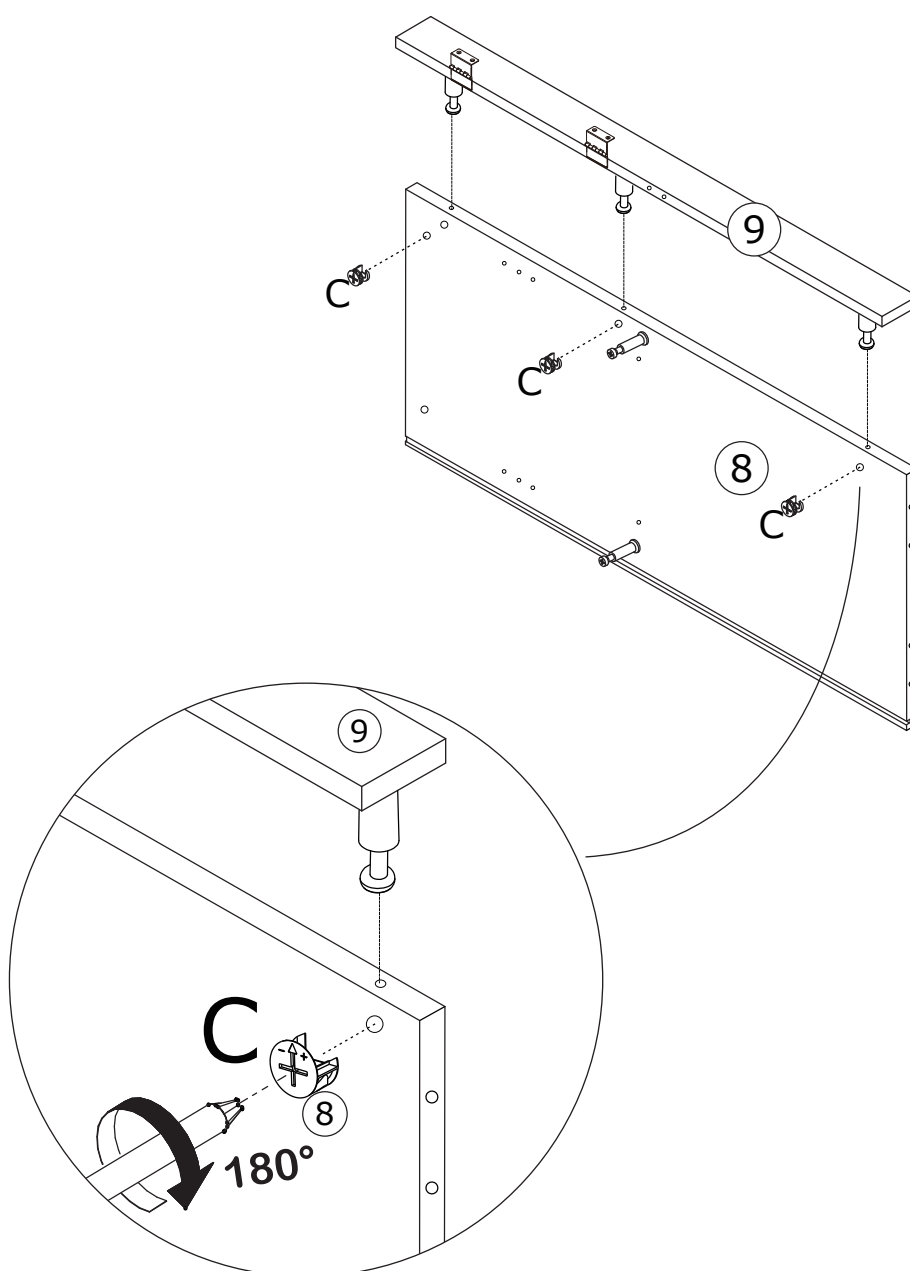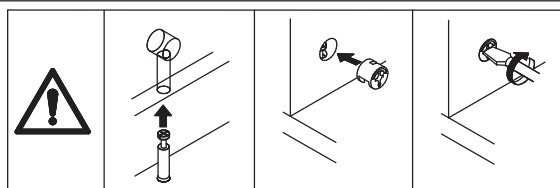

10






 
A x 4




C x 2



      Ø 15x10mm

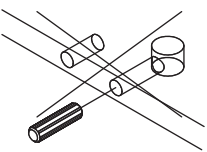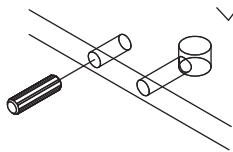


 Connect No.9 plate with No.5 using wooden dowel(A);
connect No.8 plate with No.4 using wooden dowel(A),
then turn cam lock(C) clockwise in No.4 plate to tighten
as shown.

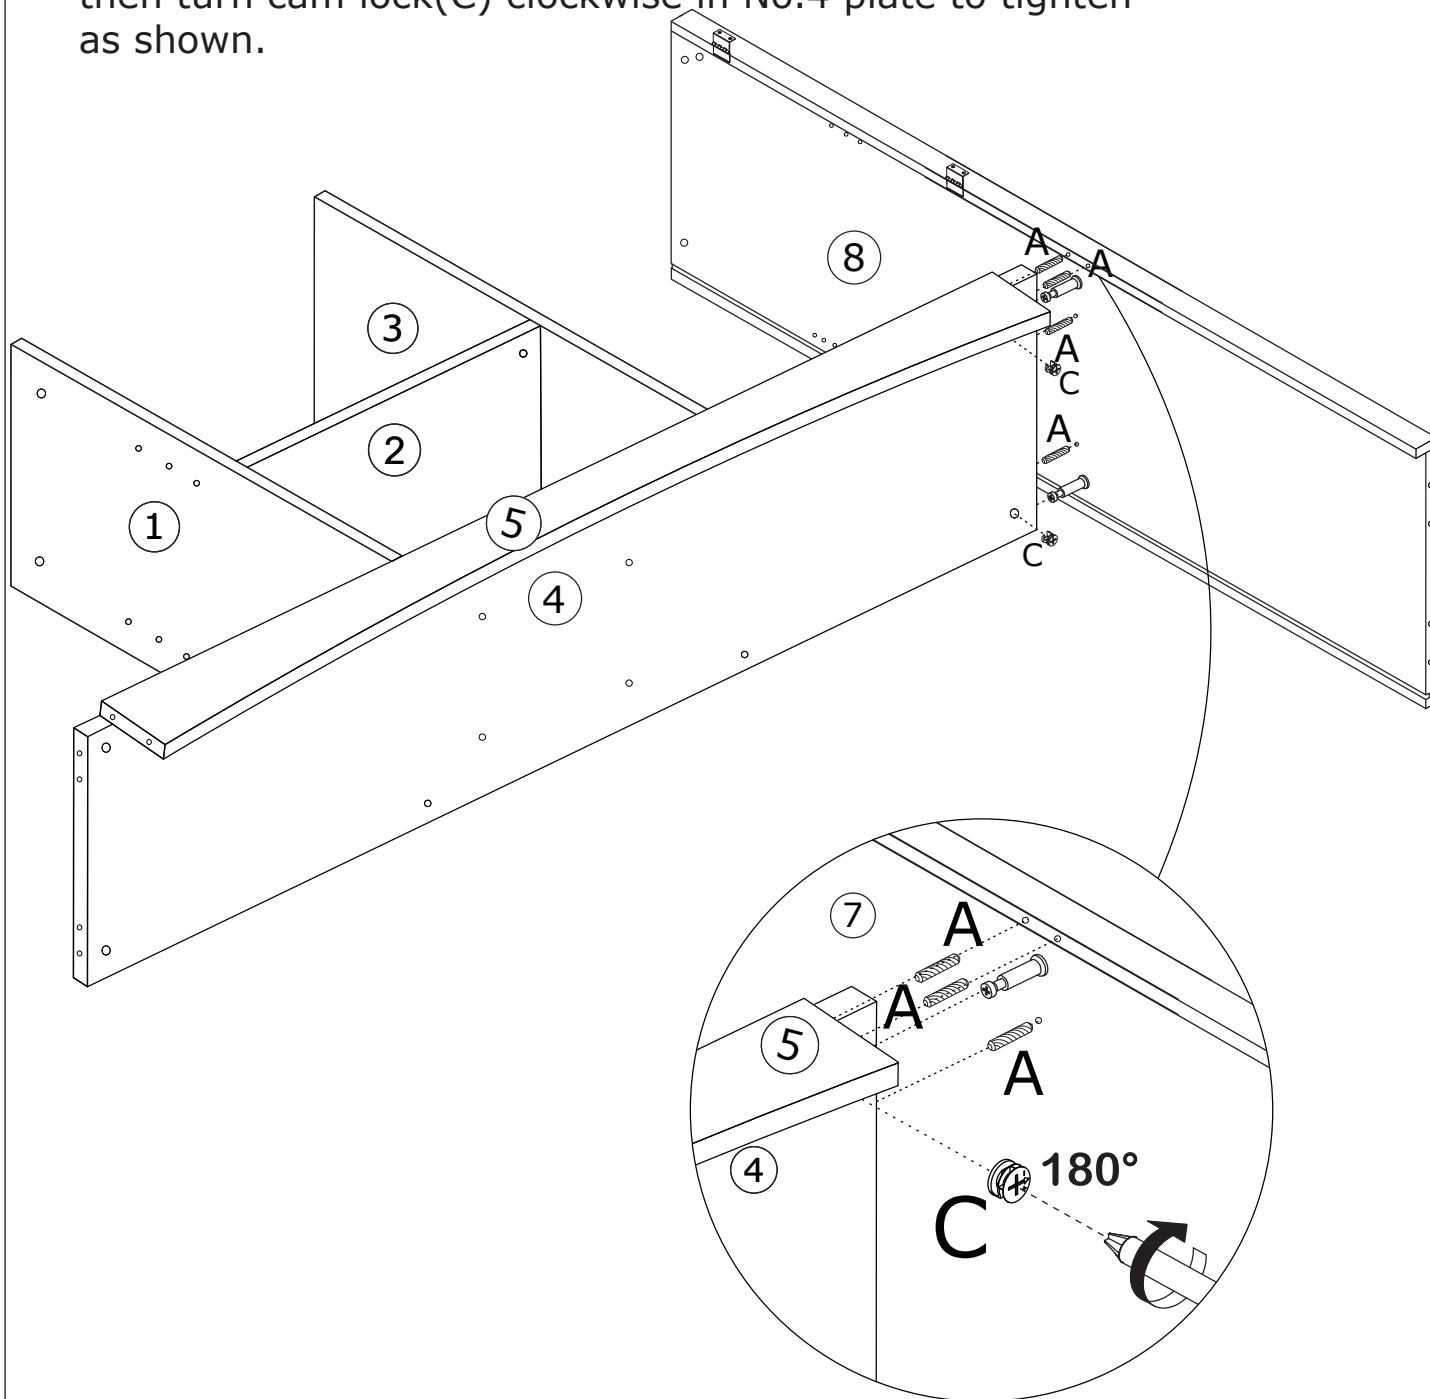

11






 
A x 4




C x 2



      Ø 15x10mm

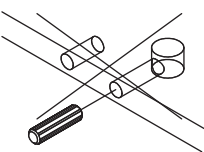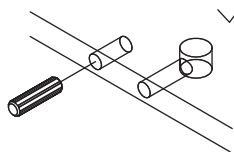

 Connect No.7 plate with No.5 using wooden dowel(A);
connect No.6 plate with No.4 using wooden dowel(A),
then turn cam lock(C) clockwise in No.4 plate to tighten
as shown.

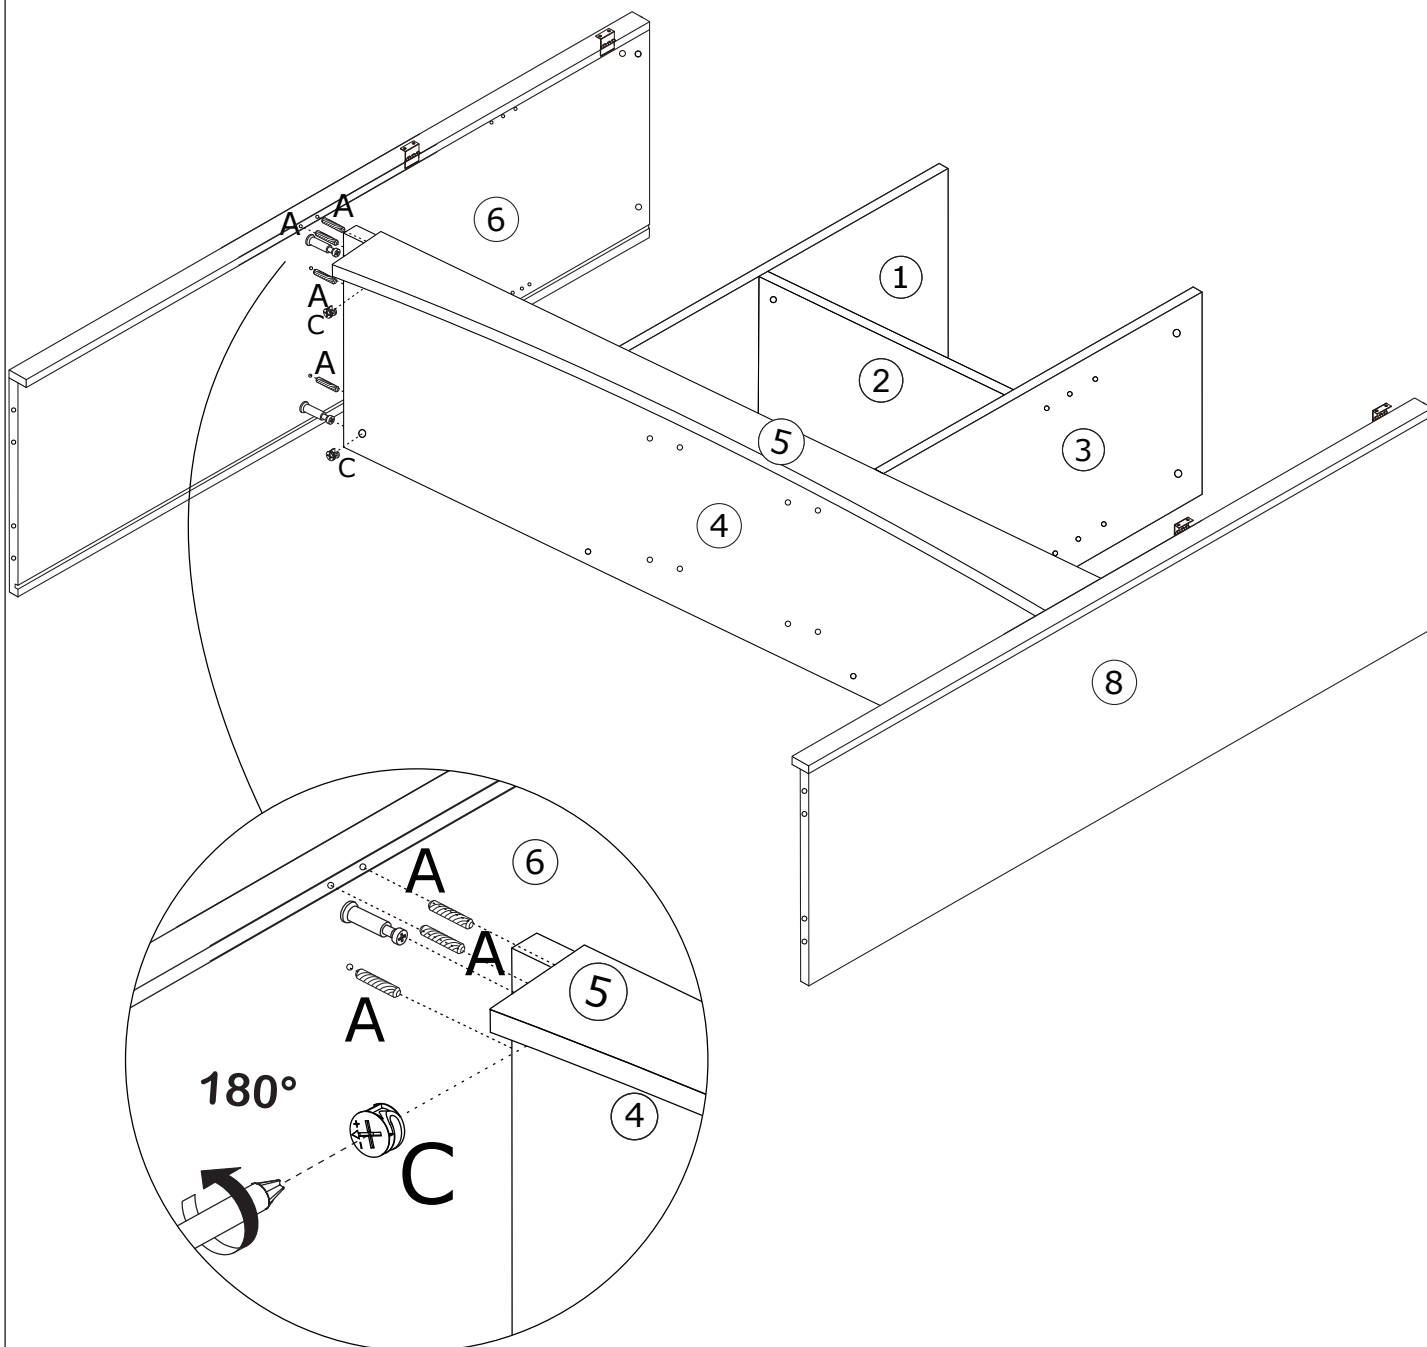


12



D x 4



 Ø 3x12mm



  Fix No.51 to No.4 plate with screw(D) as shown.

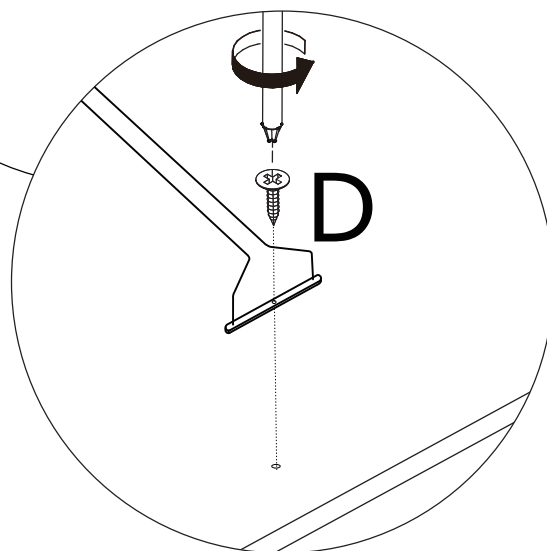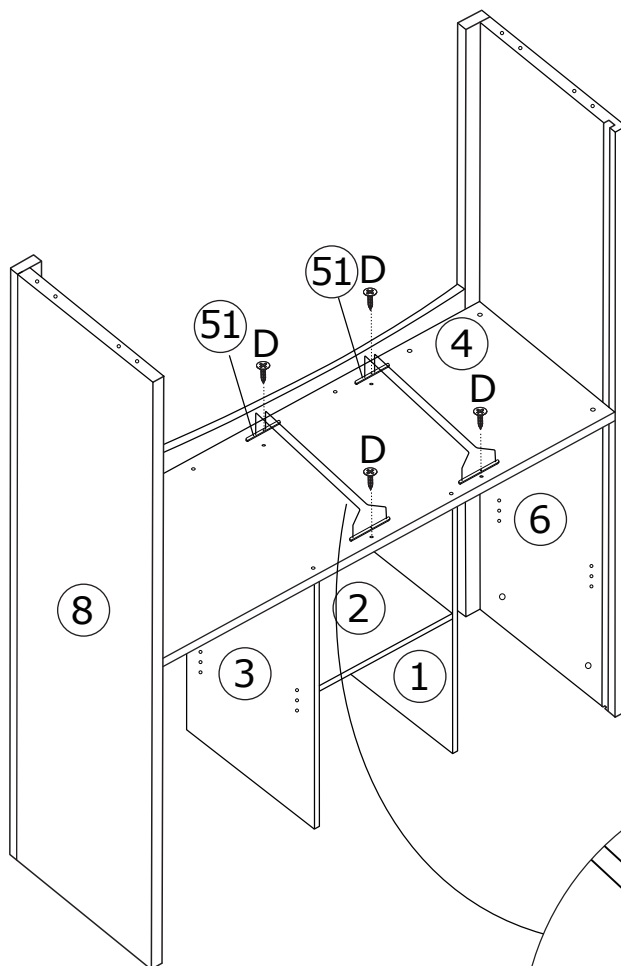



13

B x 12




Ø 6x35mm

  Insert quickfit screw(B) into corresponding holes in No.10 plate with a screwdriver as shown.

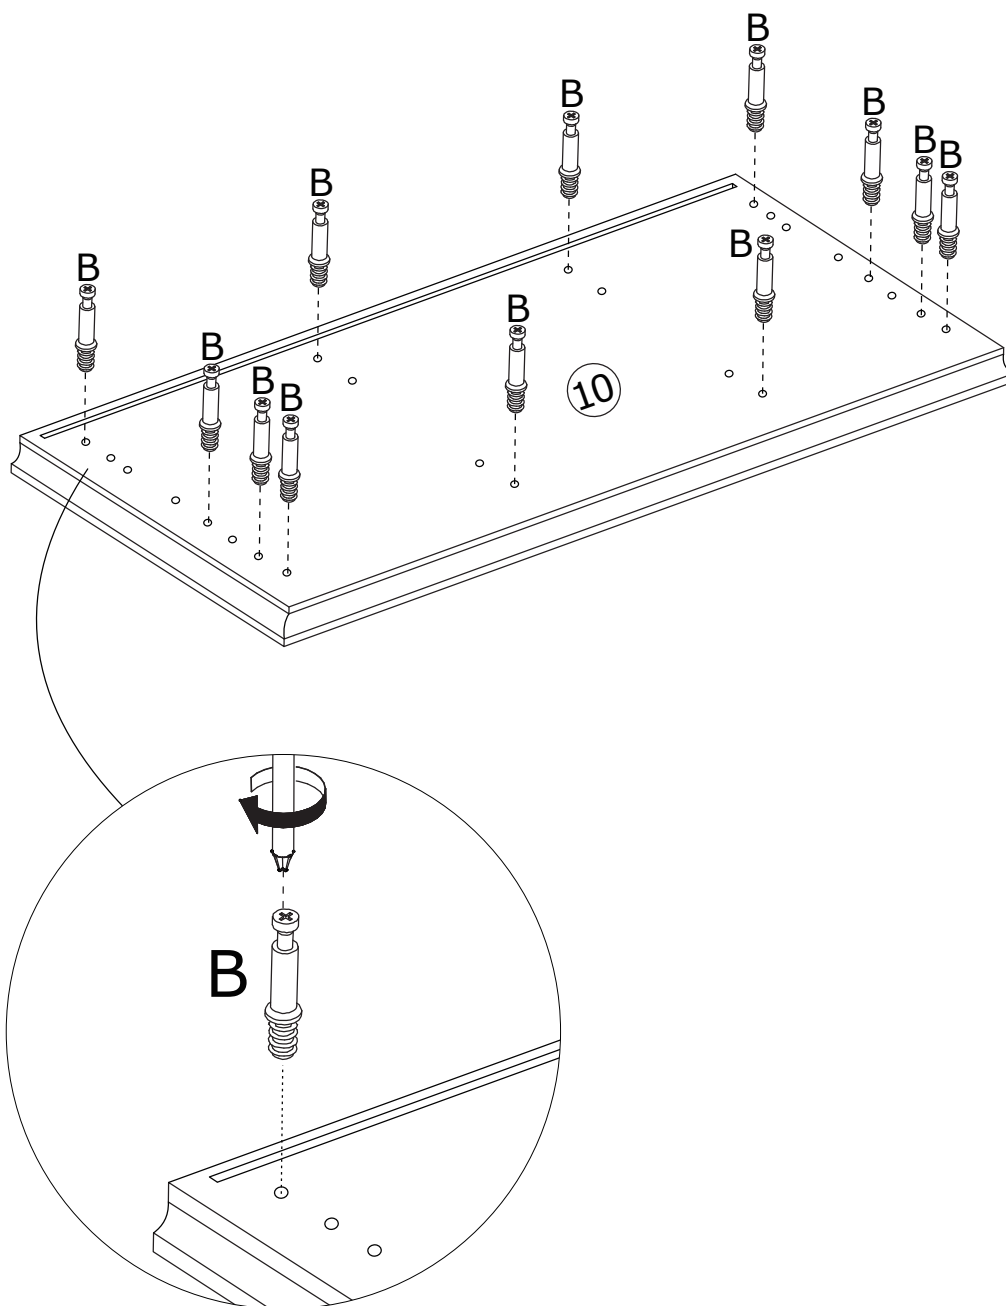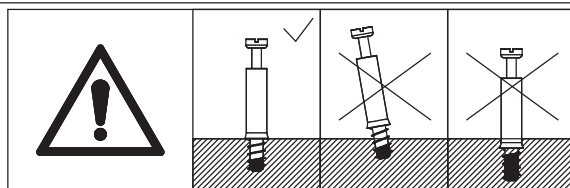


14

 Slide No.11 plate into available slots as shown.

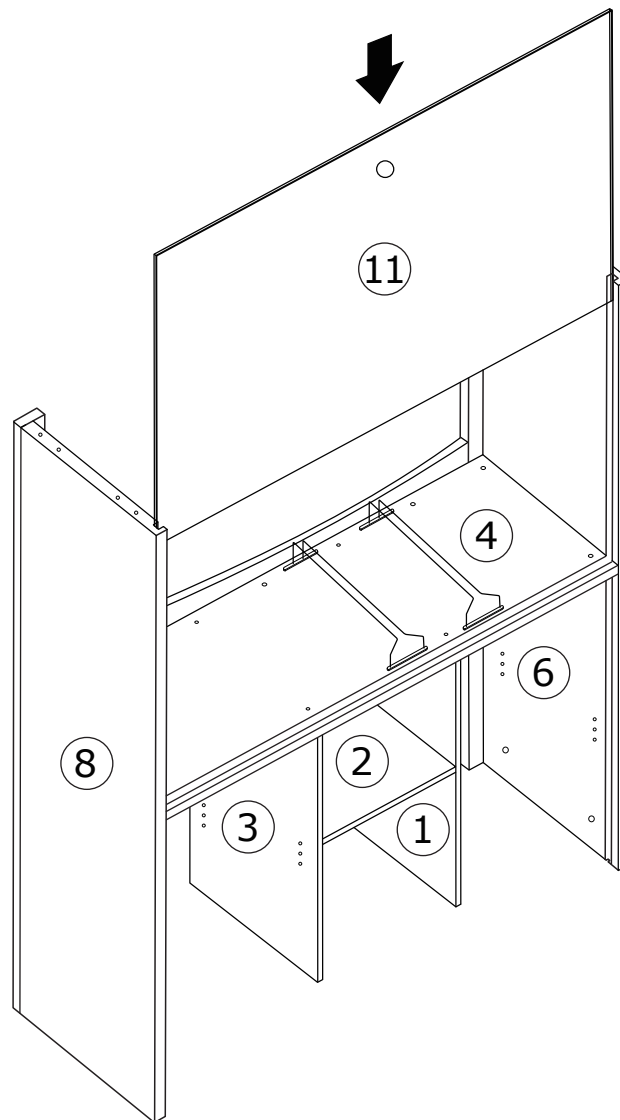

15


 
A x 4





E x 4



  Ø 5 x 40 mm

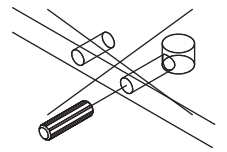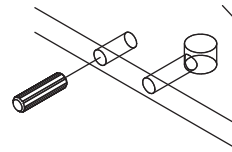


  Attach No.10 plate to No.6 and No.8 using wooden dowel(A), then fix with screw(E) as shown.

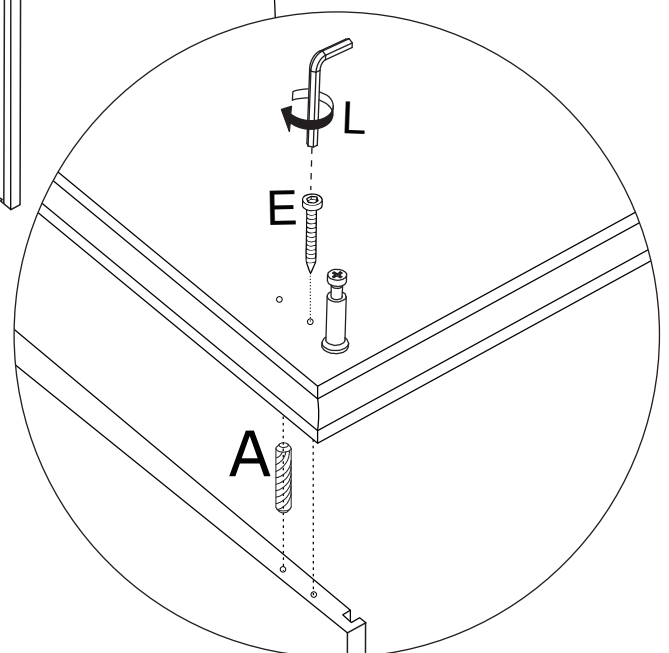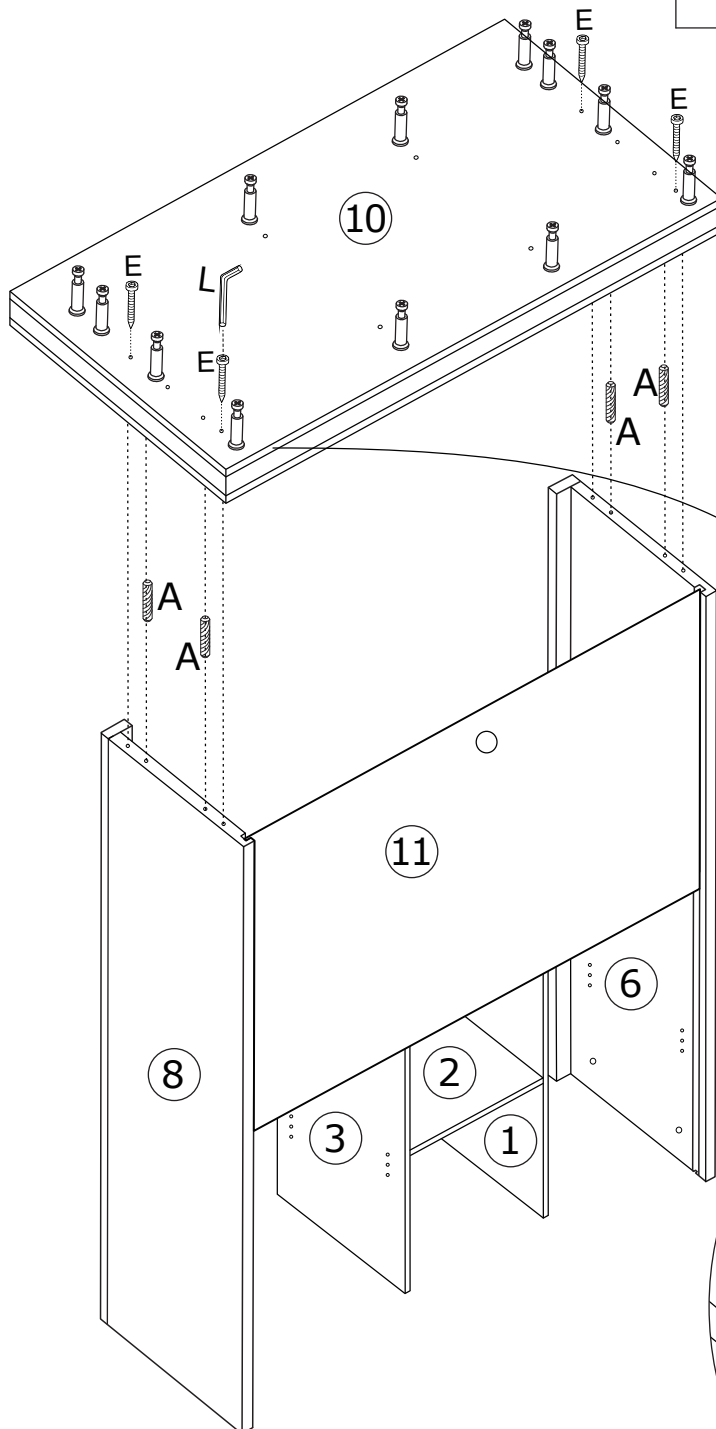

16

 Slide No.12 and No.13 plate into available slots as shown.

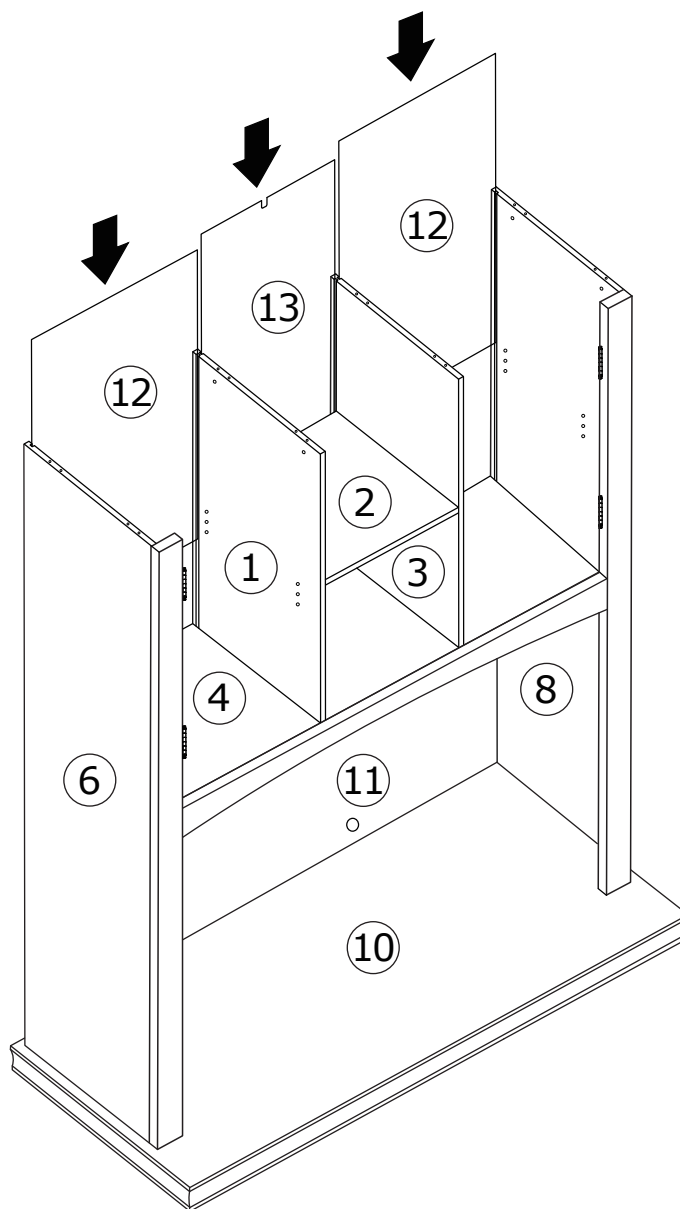

17

B x 8



Ø 6 x 35 mm

K x 2



M x 1



Q x 1

 


Ø 4 x 12 mm


S x 4






Ø 3 x 14 mm



 Insert quickfit screw(B) into corresponding holes in No.15 plate with a screwdriver as shown.

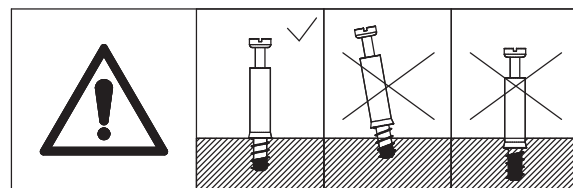

   Fix part(M) with screw(Q), fix part(K) with screw(S) as shown.

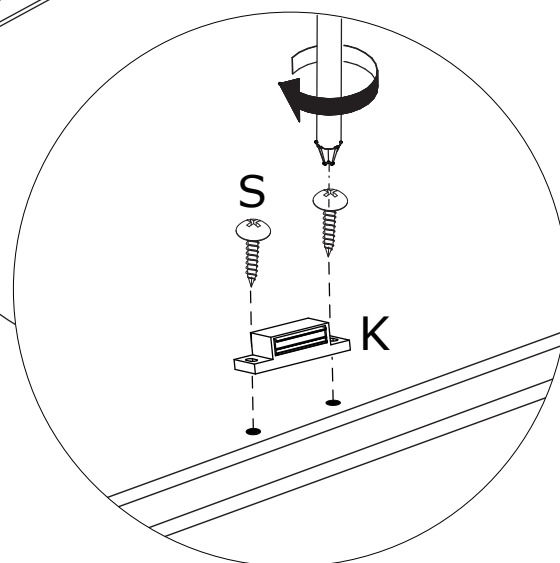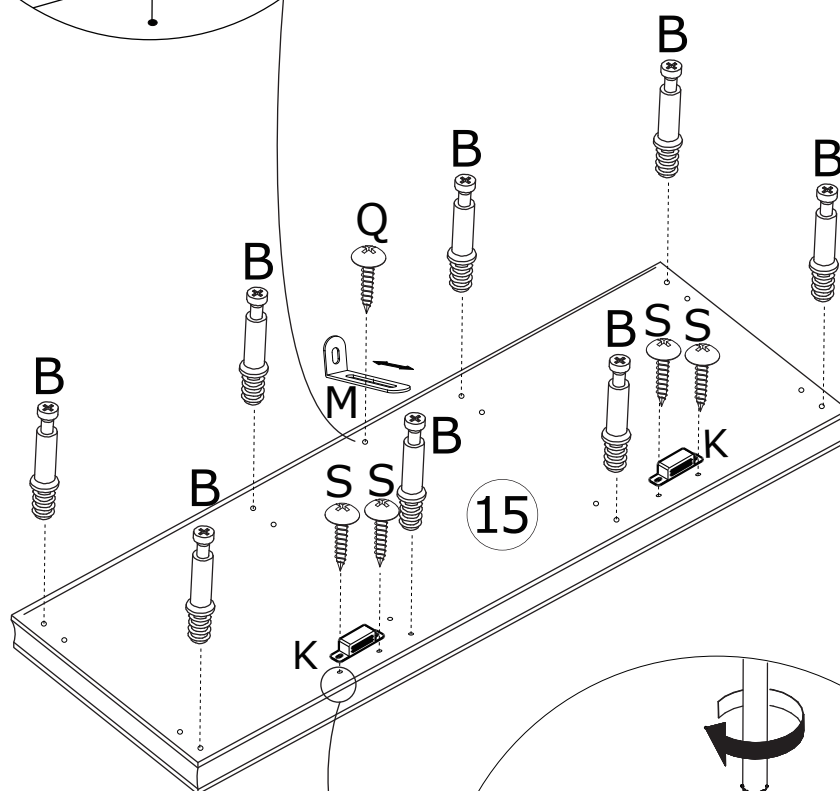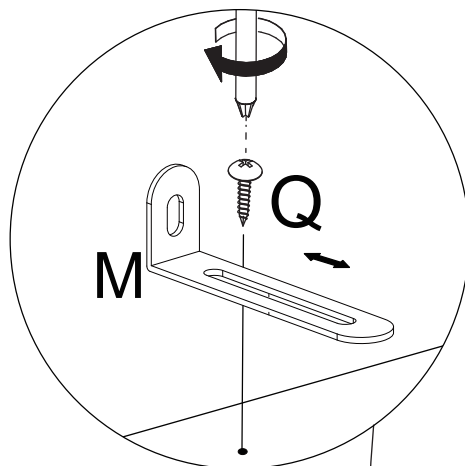

18

 
 
 
 
 
 
 
A x 8




C x 8




Ø 15x10mm

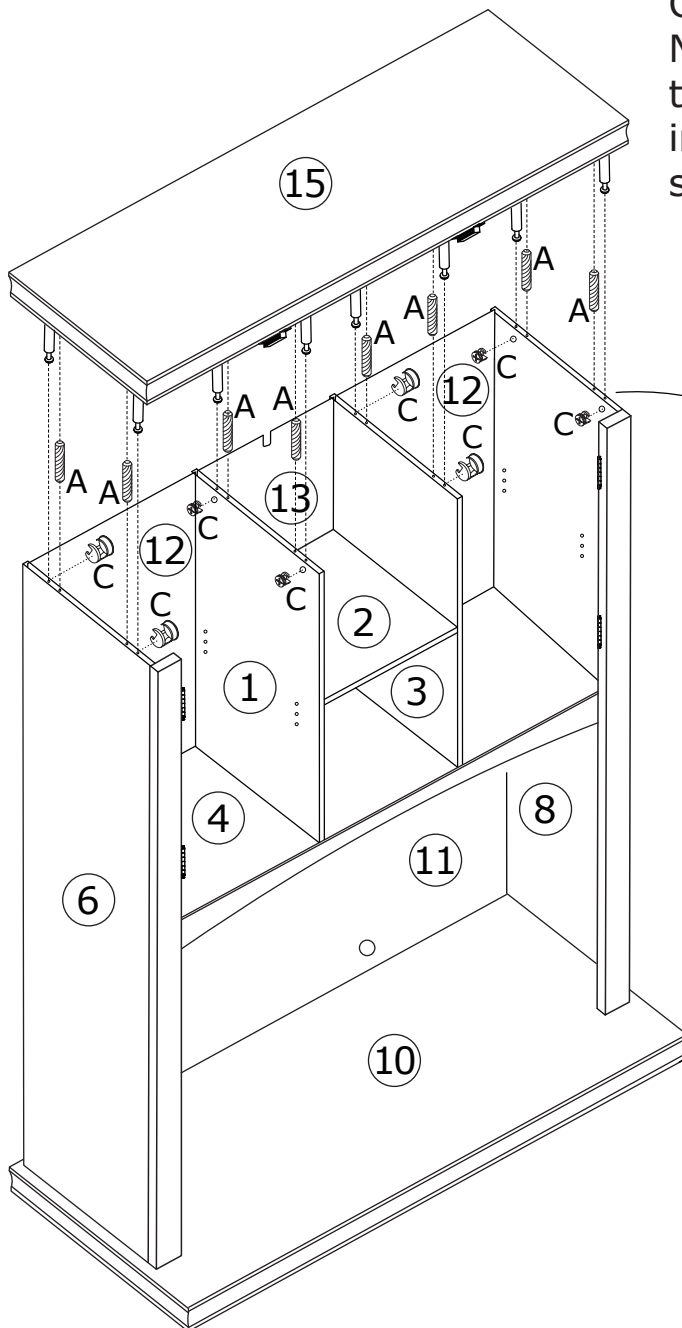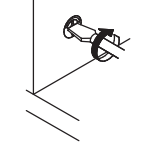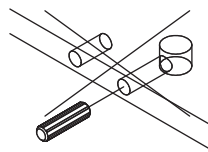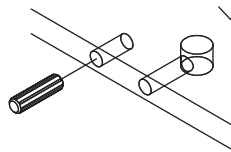

  
Cover No.15 plate to No.6 and No.8 using wooden dowel(A), then turn cam lock(C) clockwise in No.6,1,3,8 plate to tighten as shown.

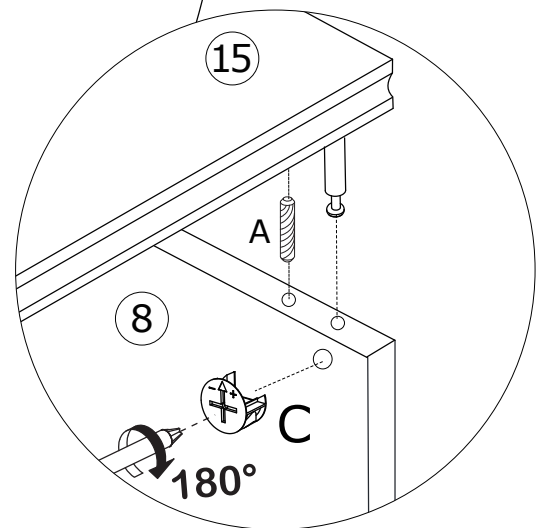

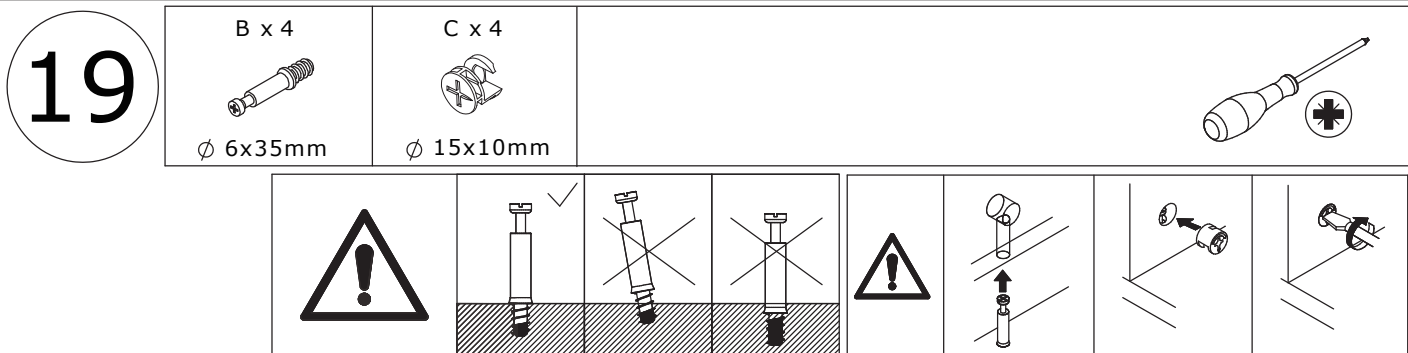

Insert quickfit screw(B) into No.16 and No.18 plate with a screwdriver as shown.

 Connect No.17 plate with No.16; No.19 plate with No.18, then turn cam lock(C) clockwise in No.17,19 plate to tighten as shown.

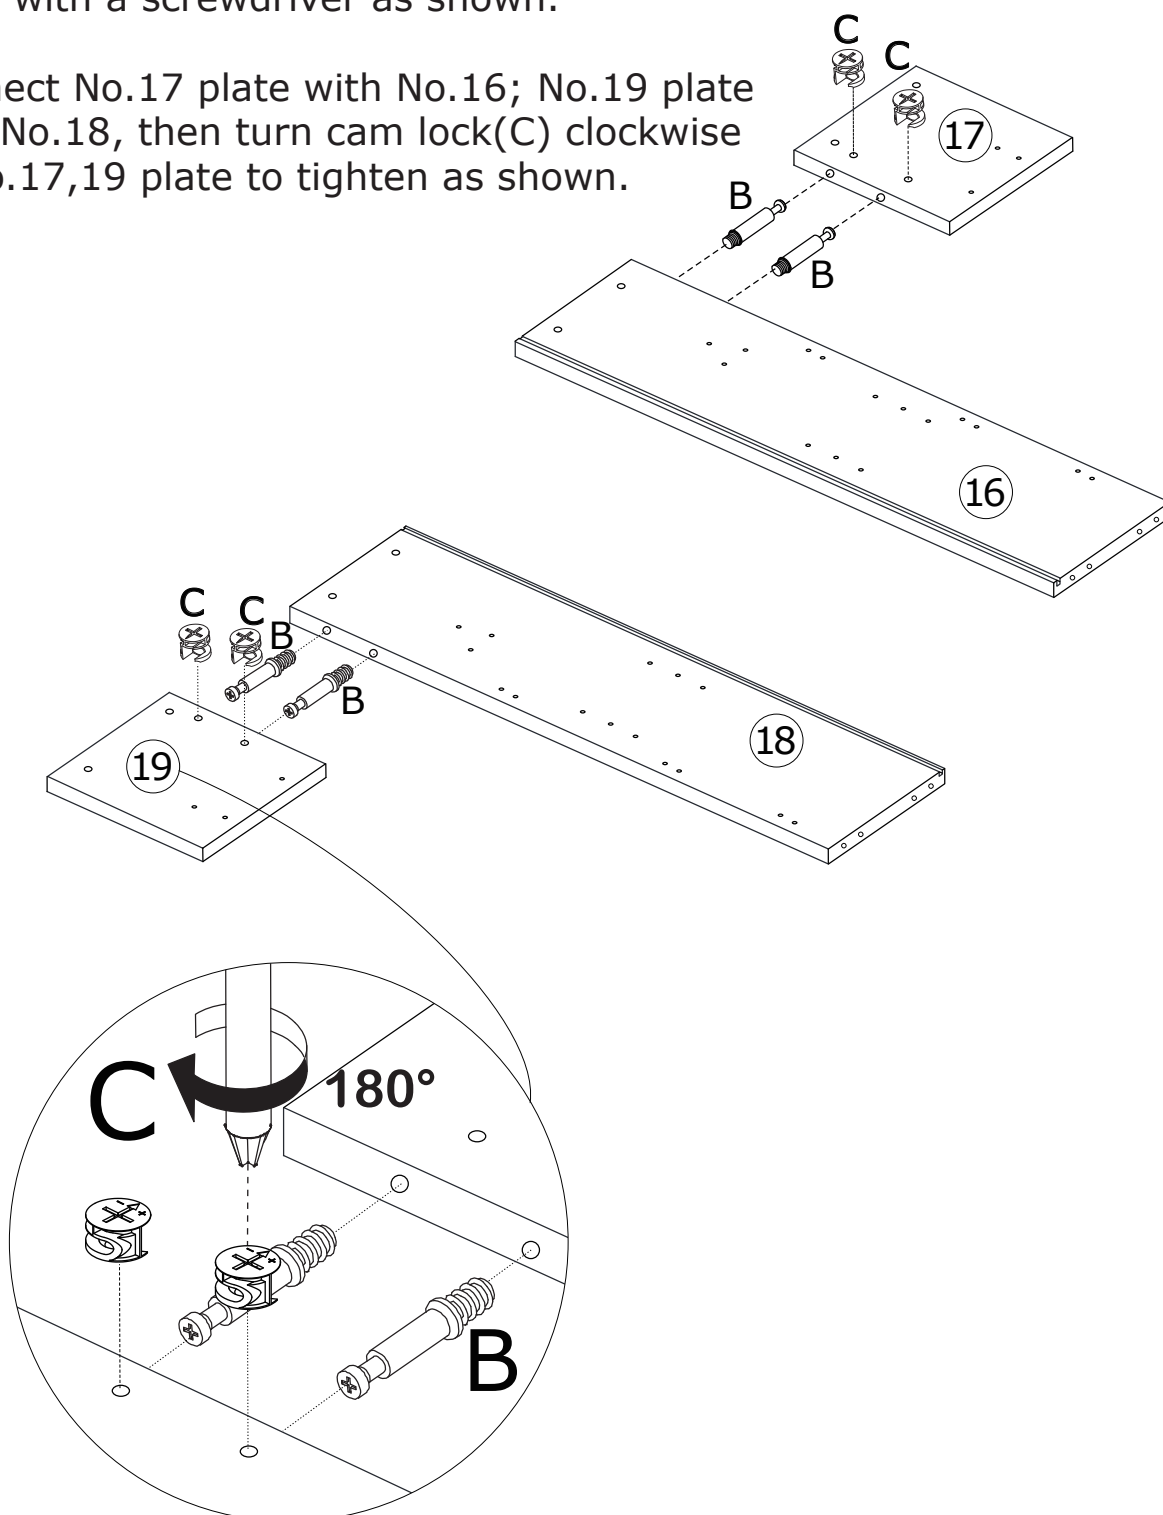


20



B x 4





 
Ø 6x35mm







  Insert quickfit screw(B) into No.16, No.17, No.18 and No.19 plate with a screwdriver as shown.

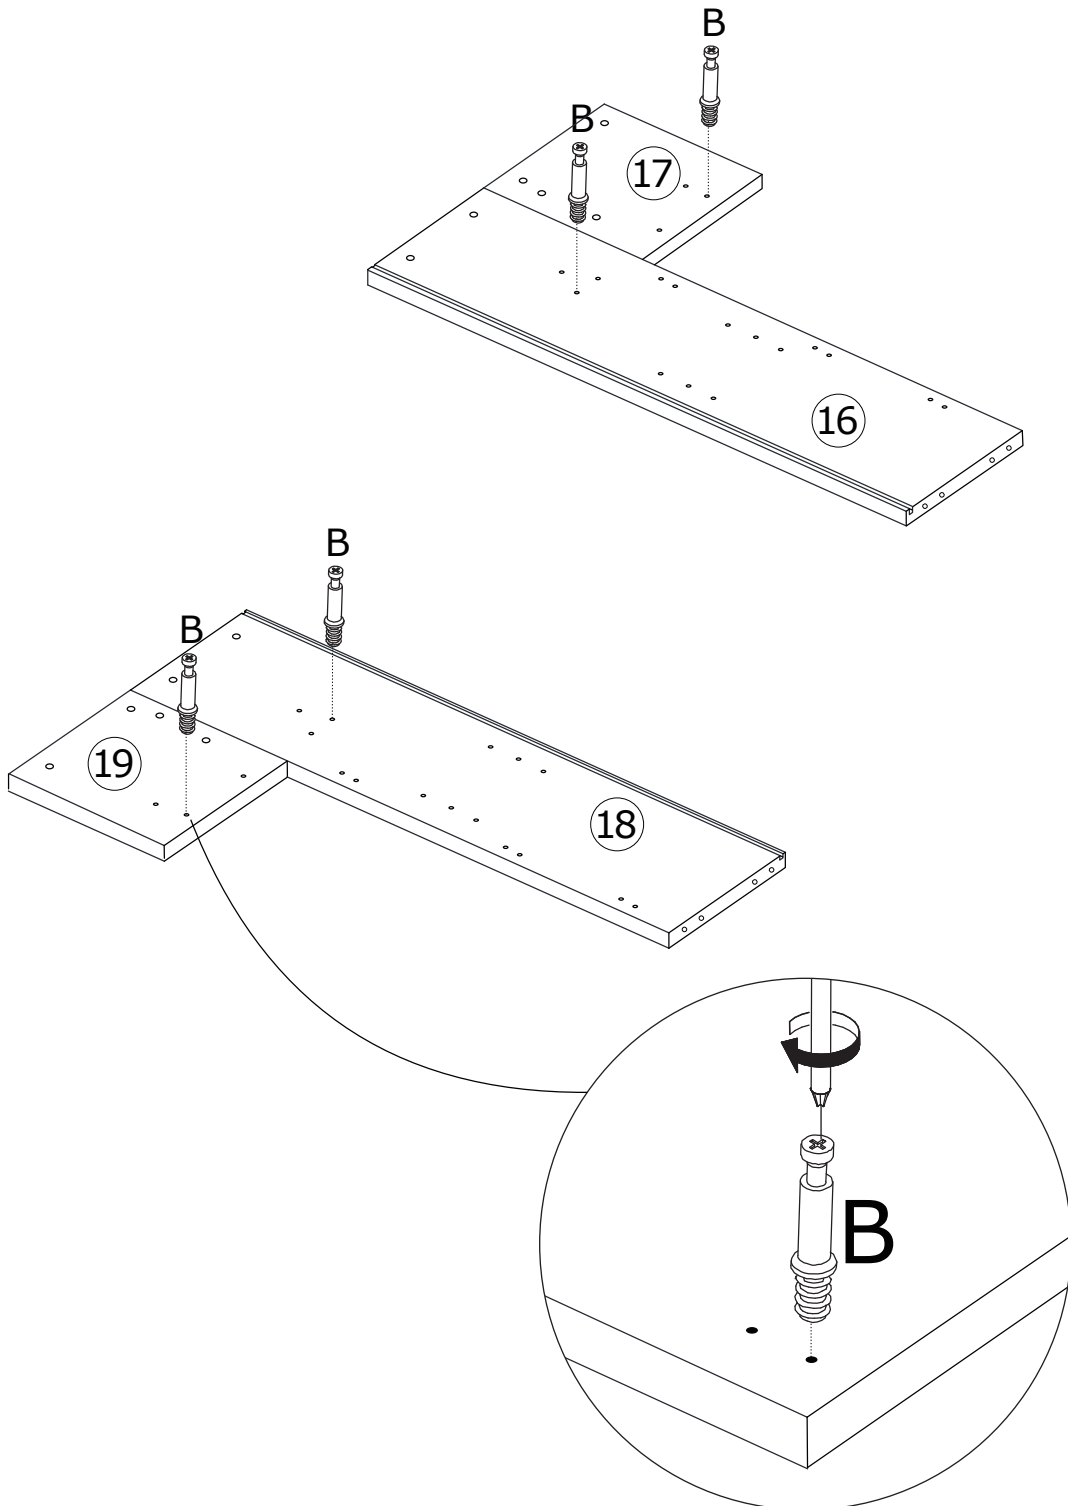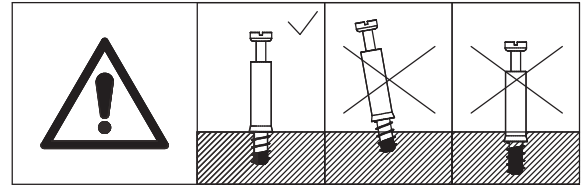


21

   D x 4  Ø 3 x 12mm	CL x 1 	CR x 1 	
--	---	---	---

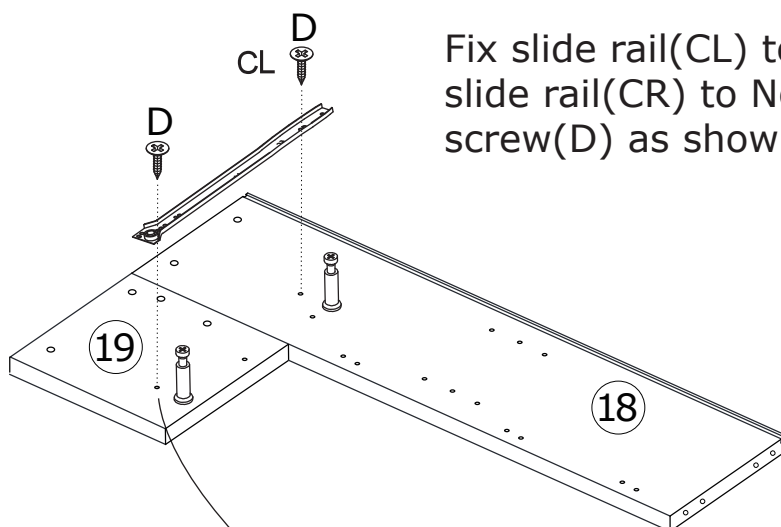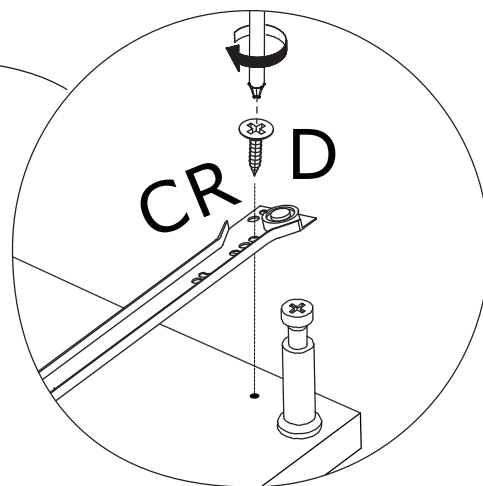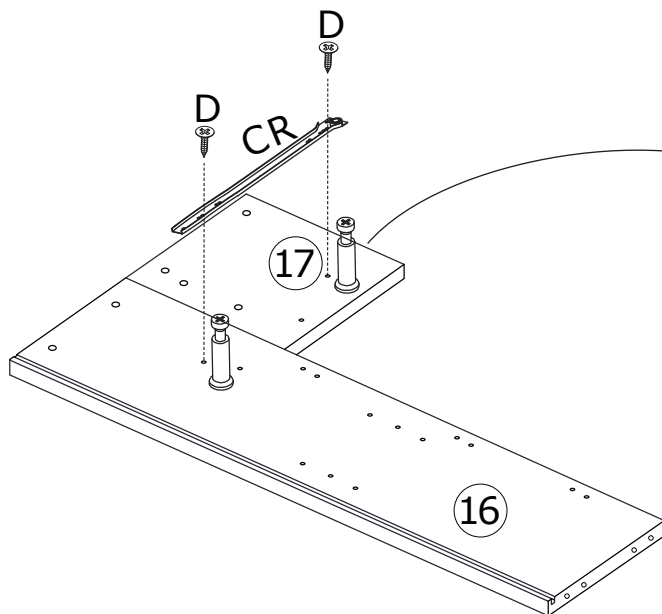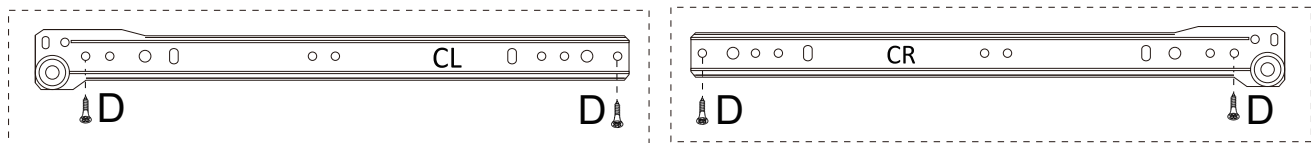    

 Fix slide rail(CL) to No.19 and No.18 plate;
slide rail(CR) to No.16 and No.17 plate with
screw(D) as shown.

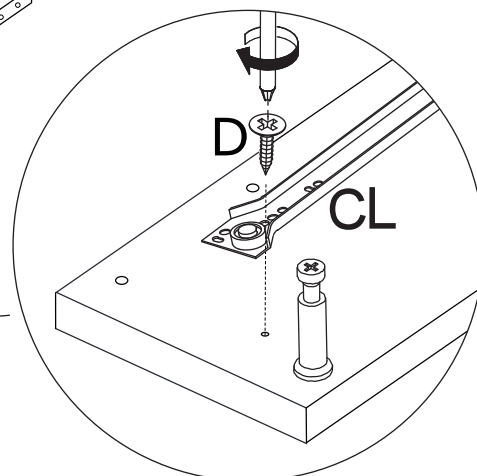


22

D x 4




Ø 3 x 12mm

 CL x 1








CR x 1

 

B x 5






     Ø 6 x 35mm

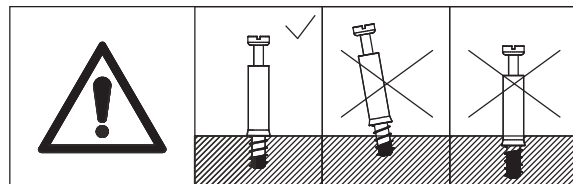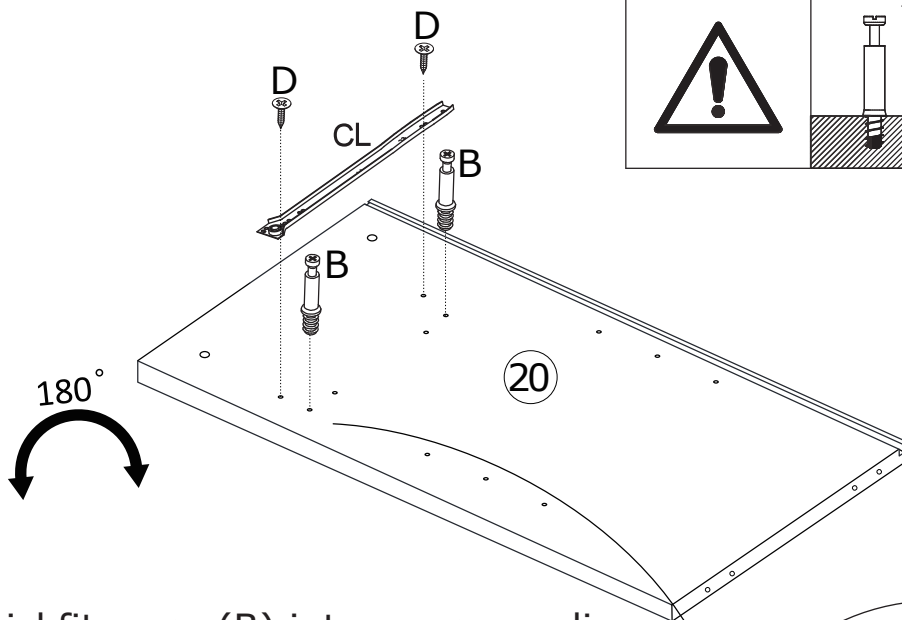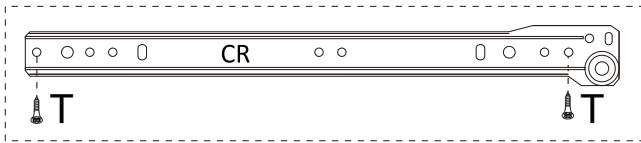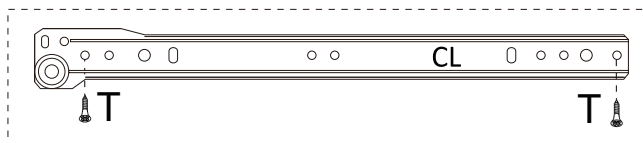


Insert quickfit screw(B) into corresponding holes in No.20 plate, then fix slide rail(CL) with screw(D) as shown.

   Flip the plate, insert quickfit screw(B) into corresponding holes, then fix slide rail(CR) with screw(D) as shown.

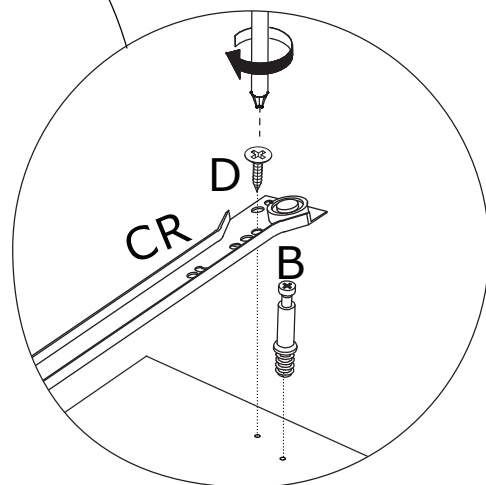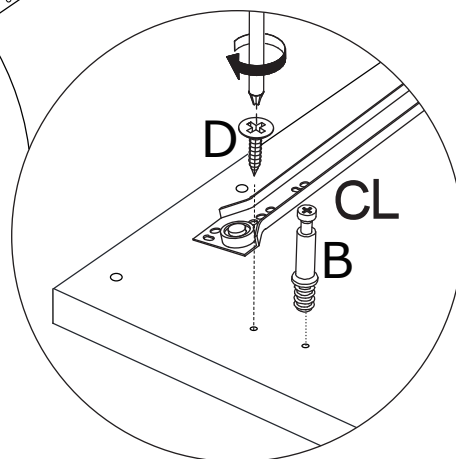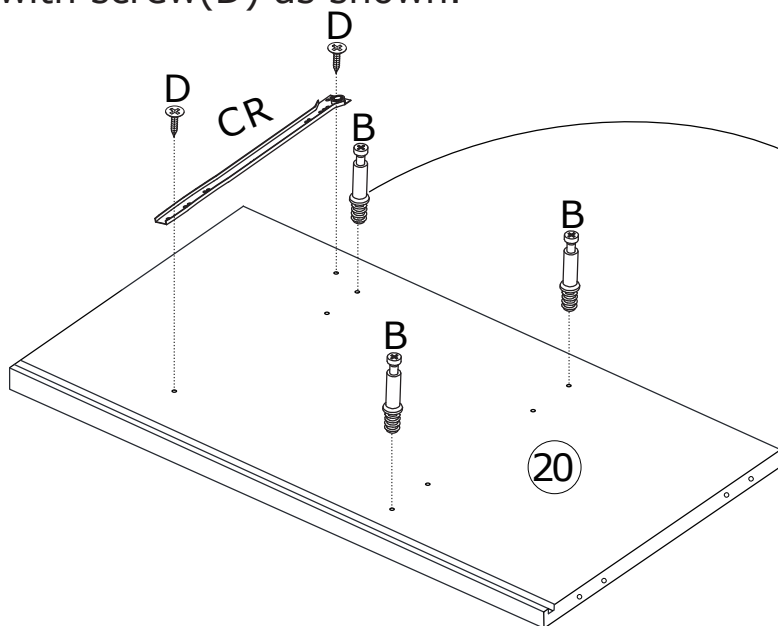


23

 
D x 4






CL x 1

 

CR x 1


 


B x 5

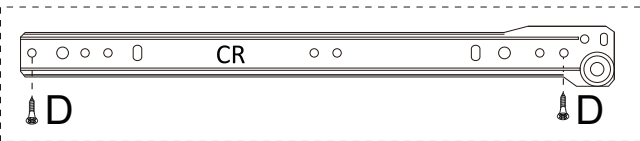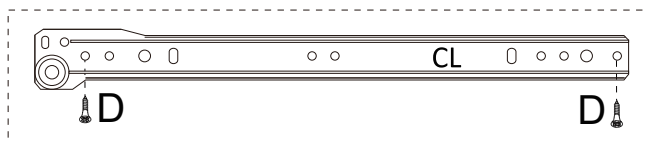   

Insert quickfit screw(B) into corresponding holes in No.21 plate, then fix slide rail(CL) with screw(D) as shown.

  Flip the plate, insert quickfit screw(B) into corresponding holes, then fix slide rail(CR) with screw(D) as shown.

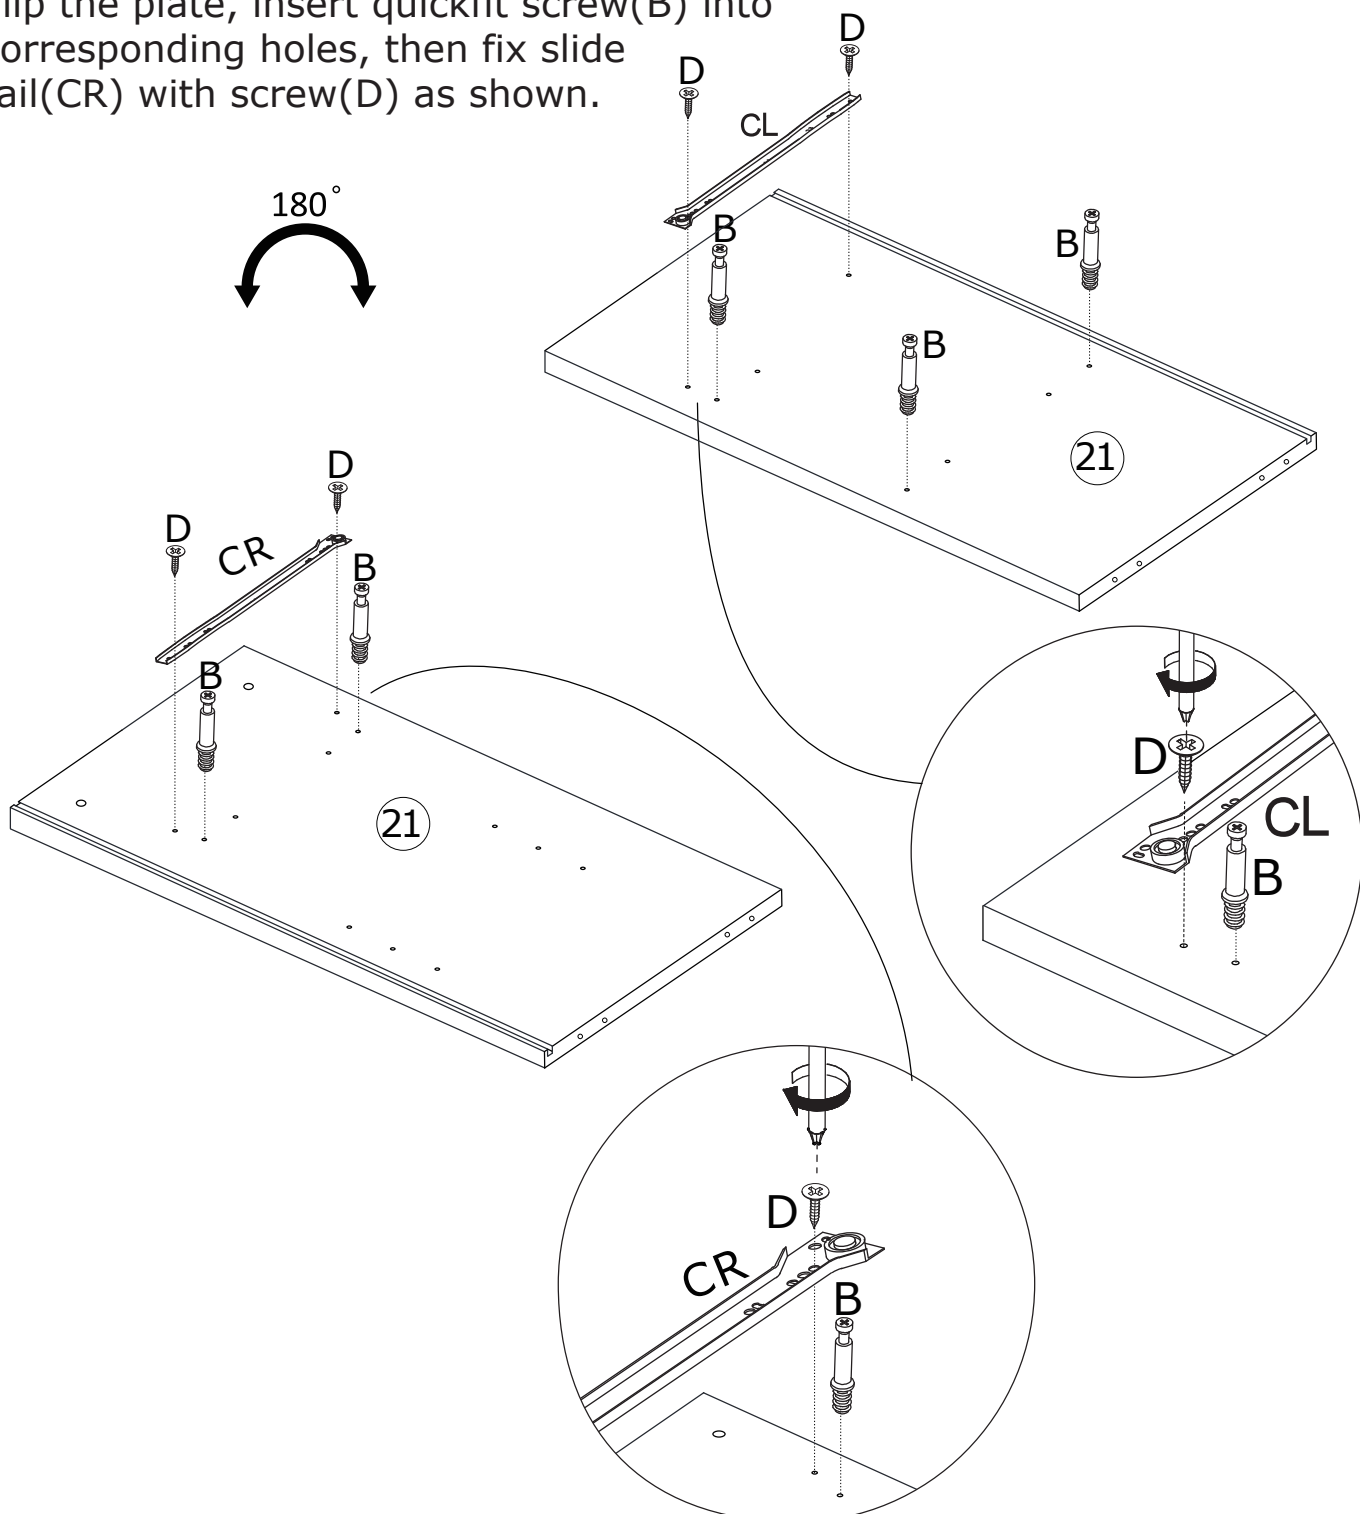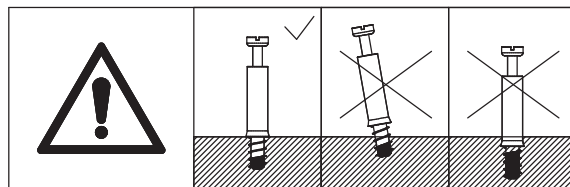







24

C x 6





Ø 15x10mm

      A x 6

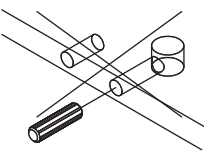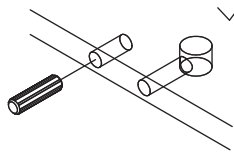

  Connect No.20 and No.21 plate with No .22 and No.23 using wooden dowel(A), then turn cam lock(C) clockwise in No.22,23 plate to tighten as shown.

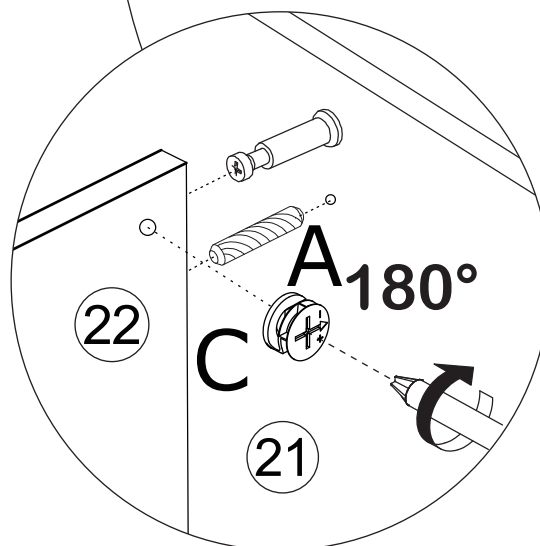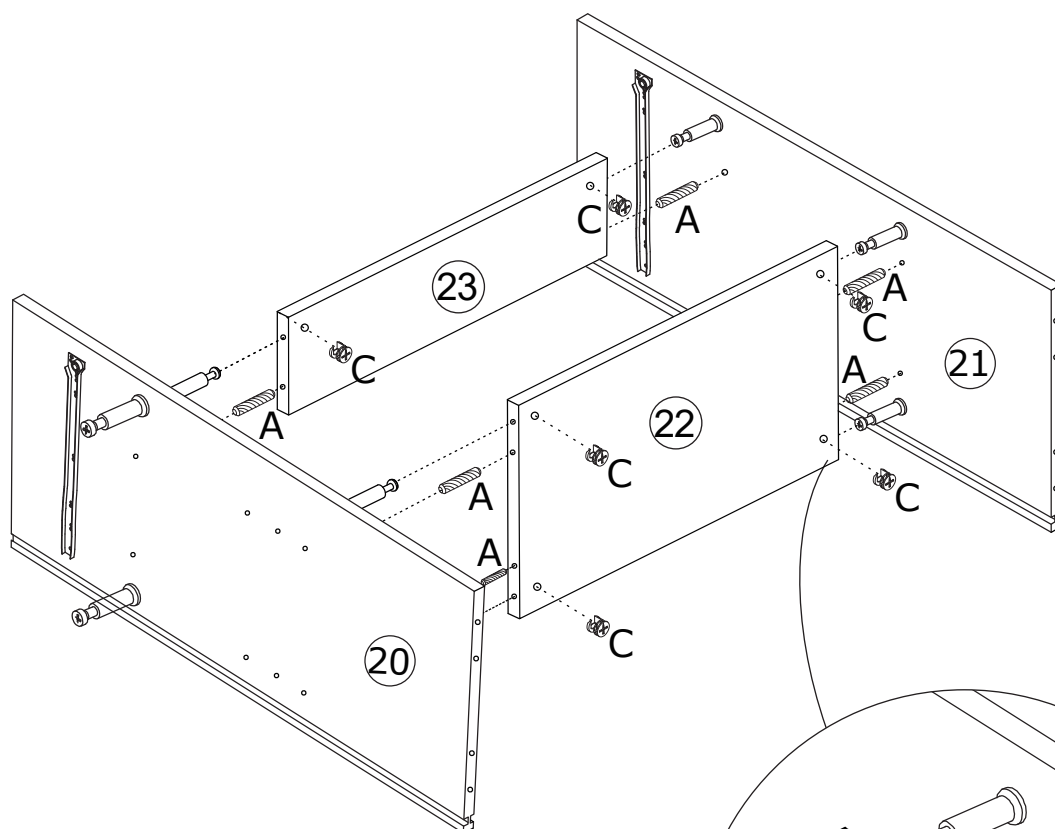


25

S x 4






Ø 3x14mm

 K x 2



   Fix part(K) to No.24 and No.25 plate with screw(S) as shown.

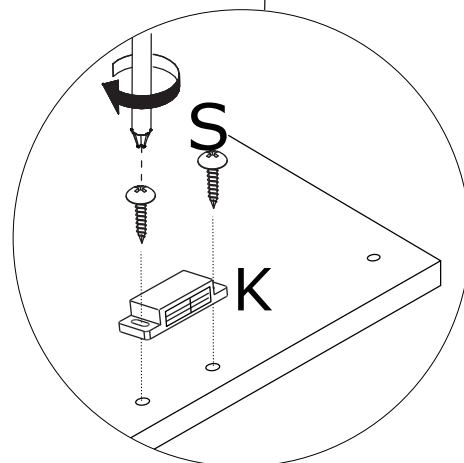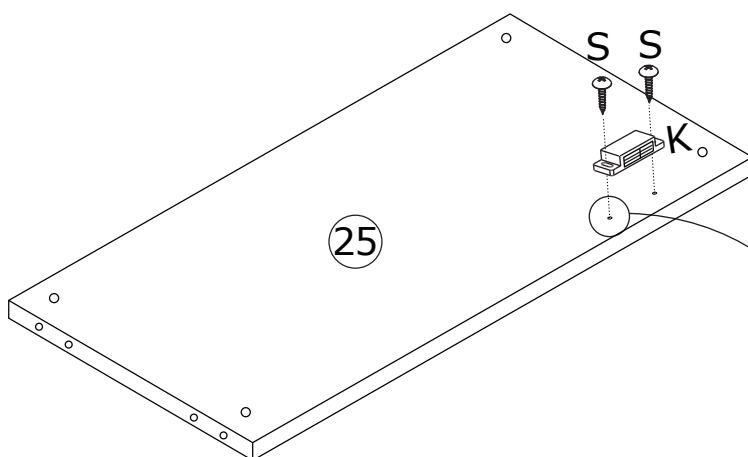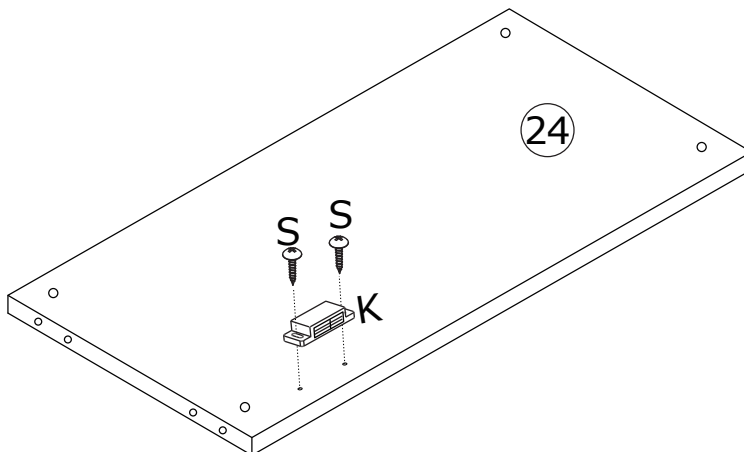








26

C x 4





Ø 15x10mm

       A x 4

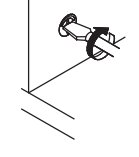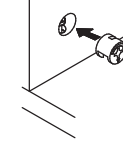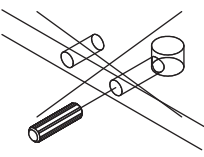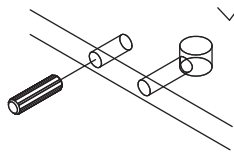

Attach No.24 plate to No.20 using wooden dowel(A), then turn cam lock(C) clockwise in No.24 plate to tighten as shown.

  Attach No.18 and No.19 plate to No.24 using wooden dowel(A), then turn cam lock(C) clockwise in No.24 plate to tighten as shown.

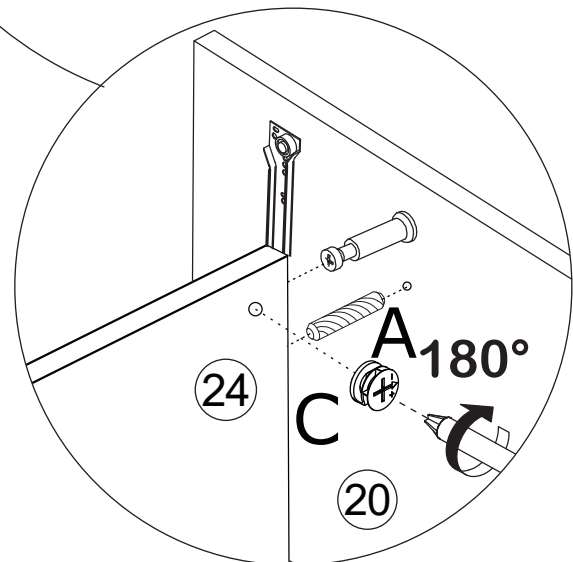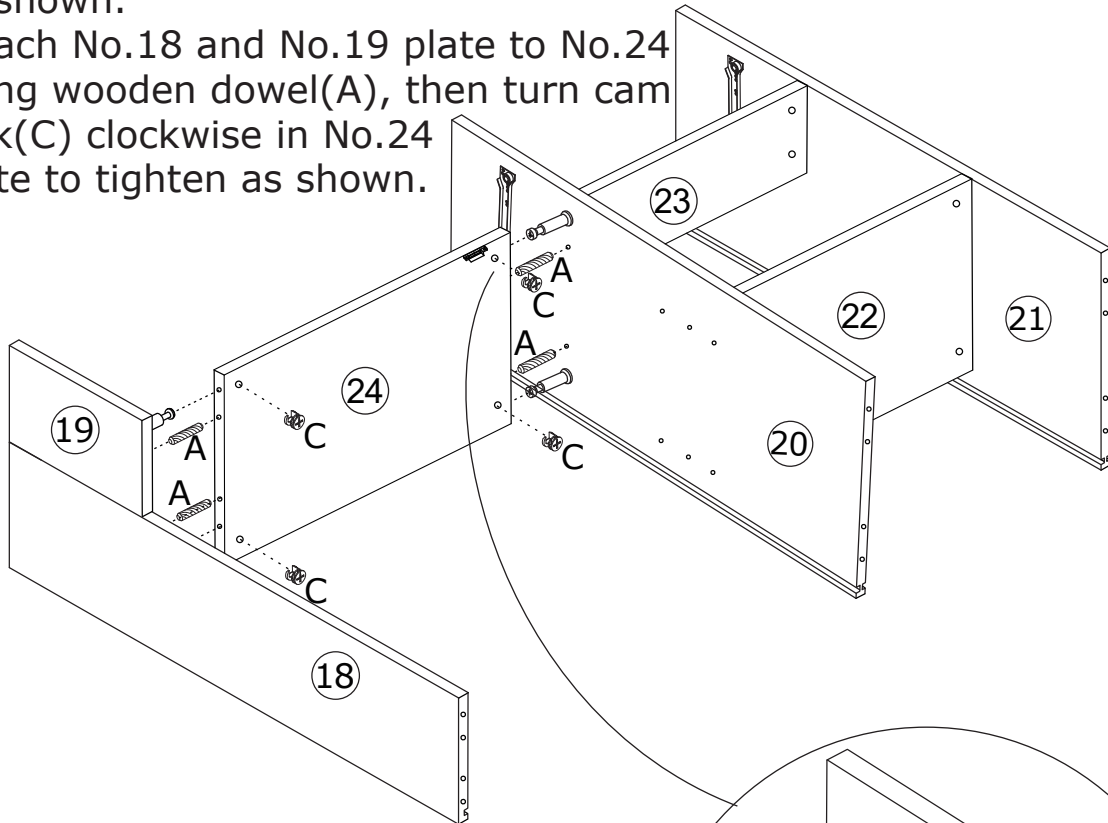







27

C x 4





Ø 15x10mm

      A x 4

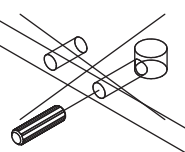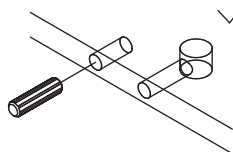

Attach No.25 plate to No.21 using wooden dowel(A), then turn cam lock(C) clockwise in No.25 plate to tighten as shown.

  Attach No.16 and No.17 plate to No.25 using wooden dowel(A), then turn cam lock(C) clockwise in No.25 plate to tighten as shown.

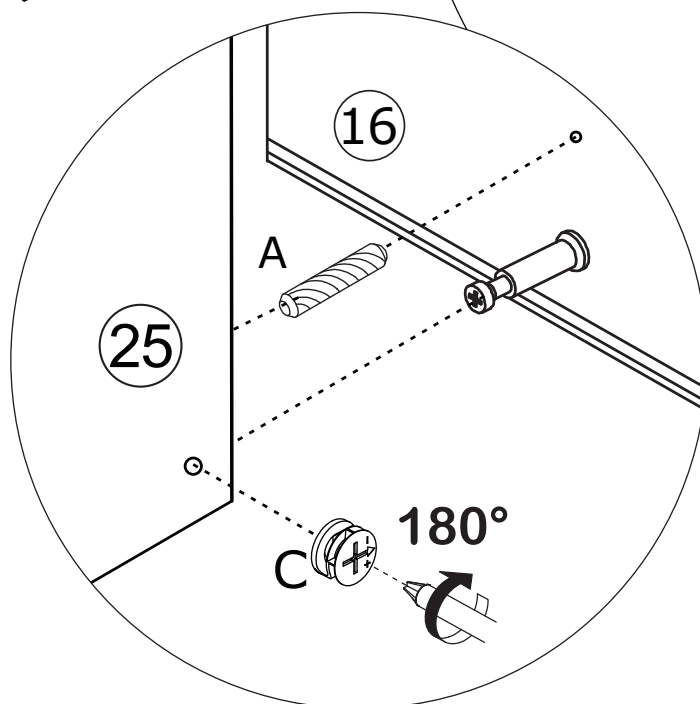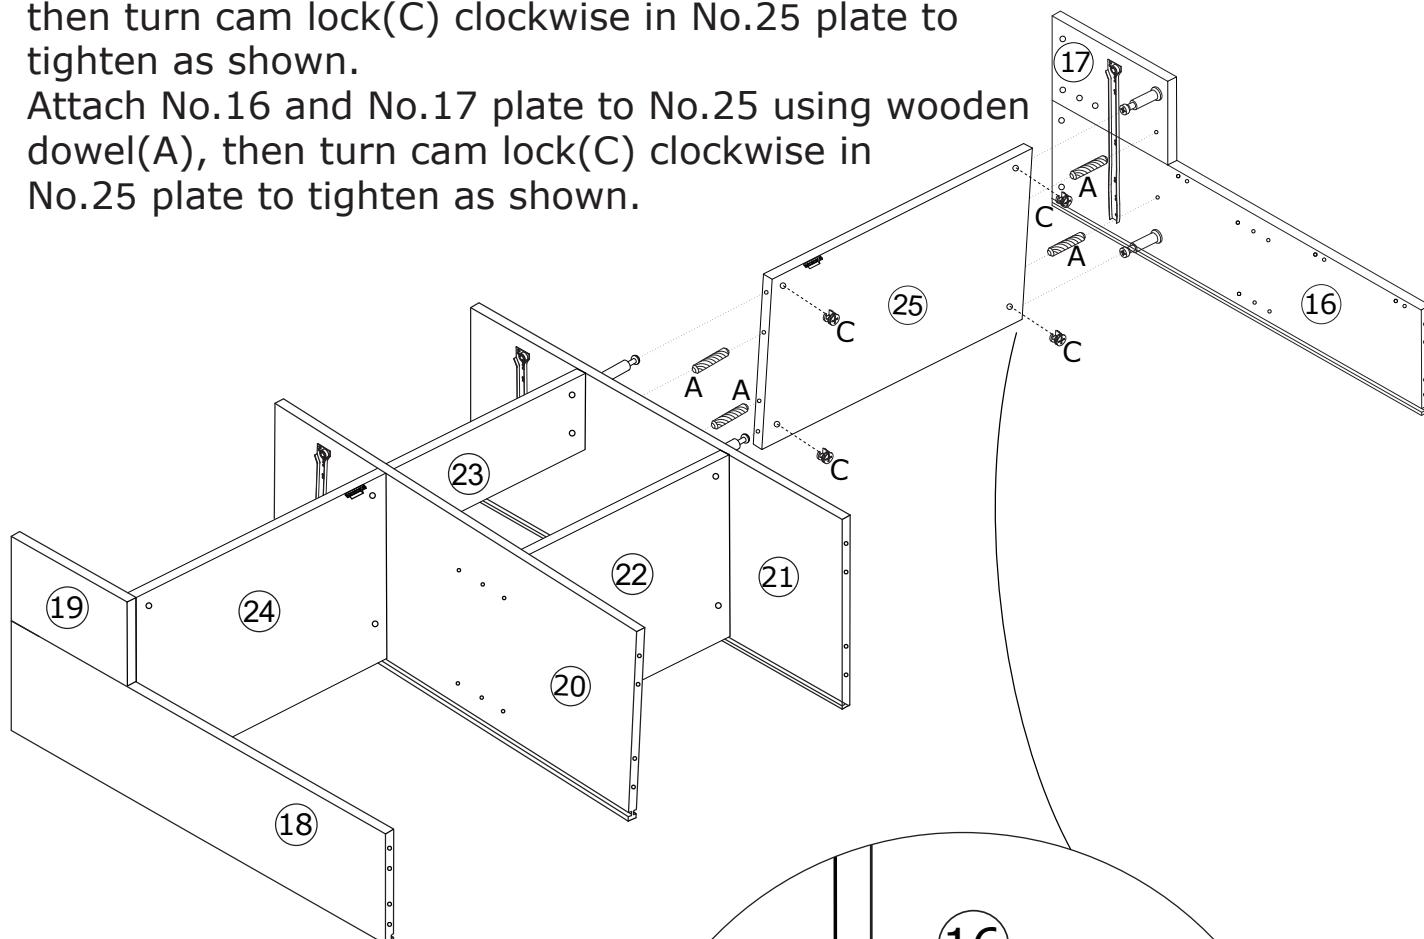


28



B x 9



 Ø 6x35mm




  Insert quickfit screw(B) into corresponding holes in No.26 plate with a screwdriver as shown.

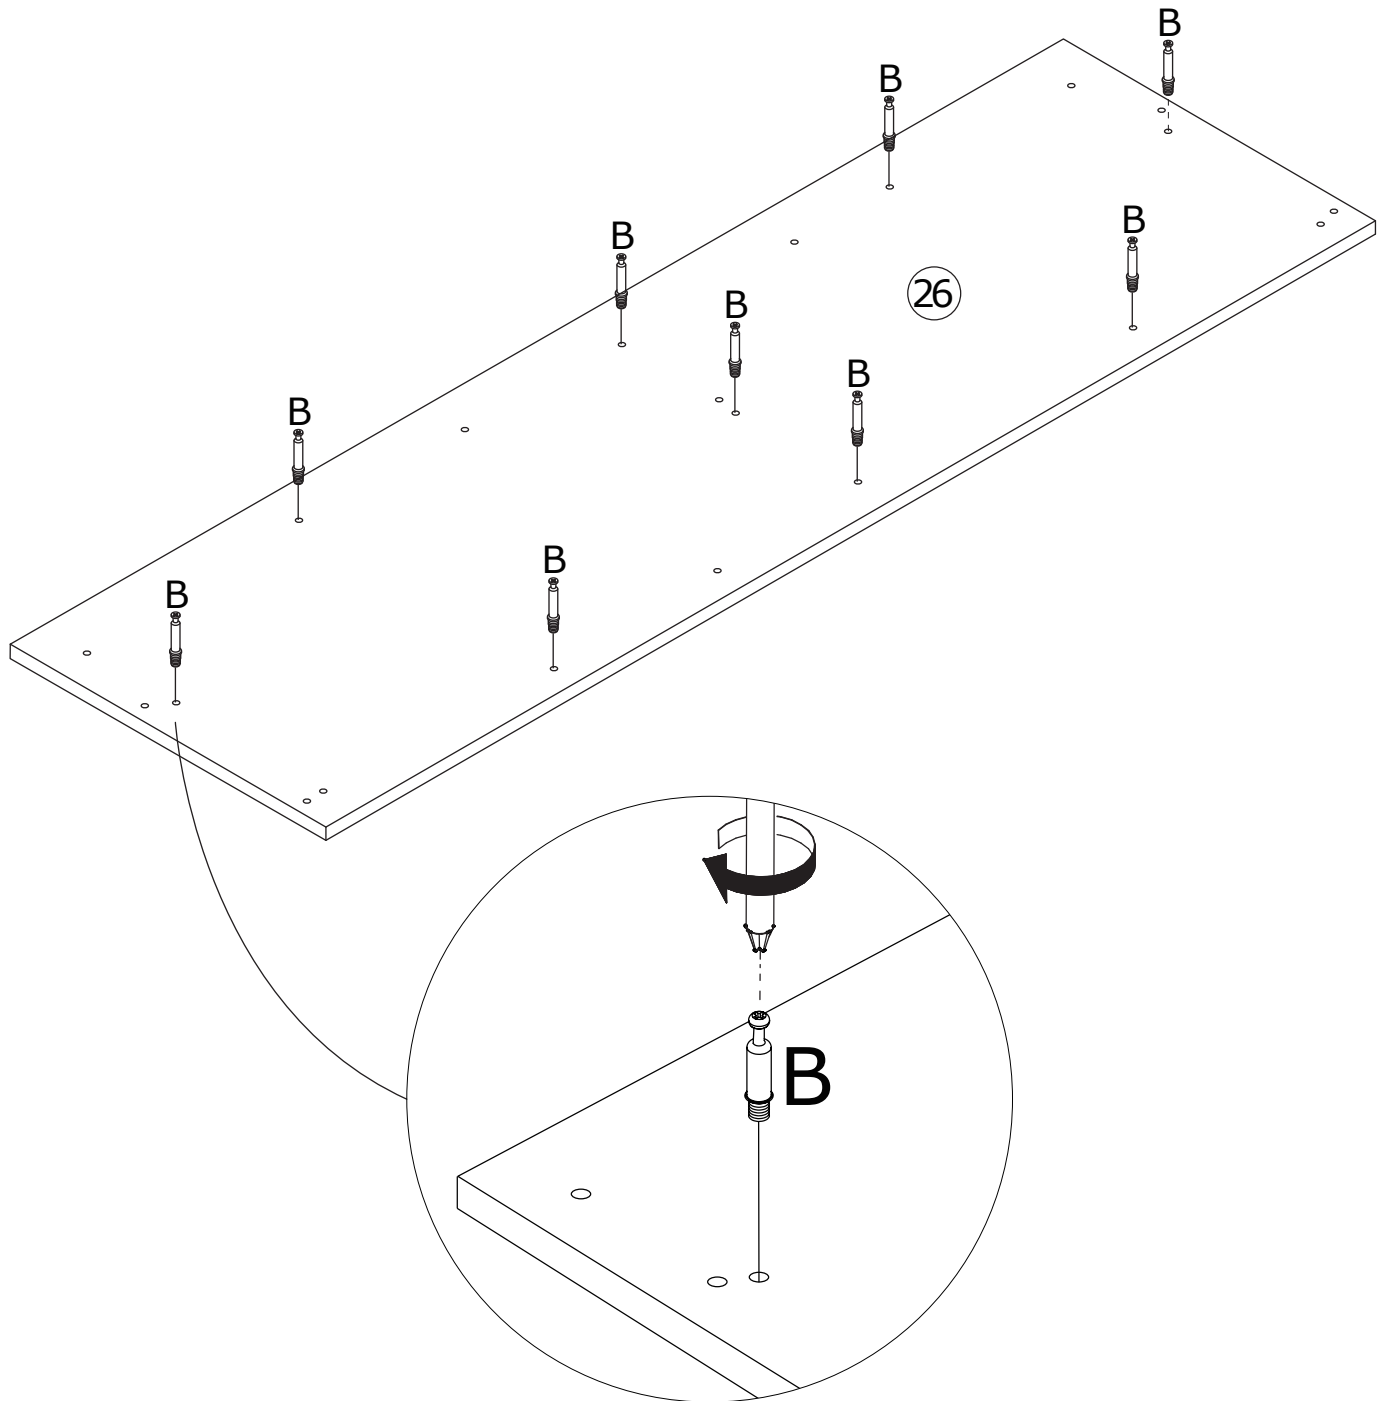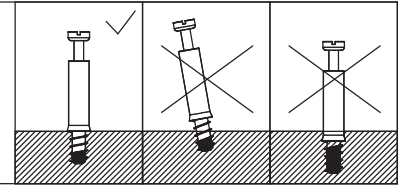

29

 A x 8






E x 8



Ø 5 x 40 mm



   Attach No.26 plate to No.18,20,21, 16 using wooden dowel(A), then fix with screw(E) as shown.

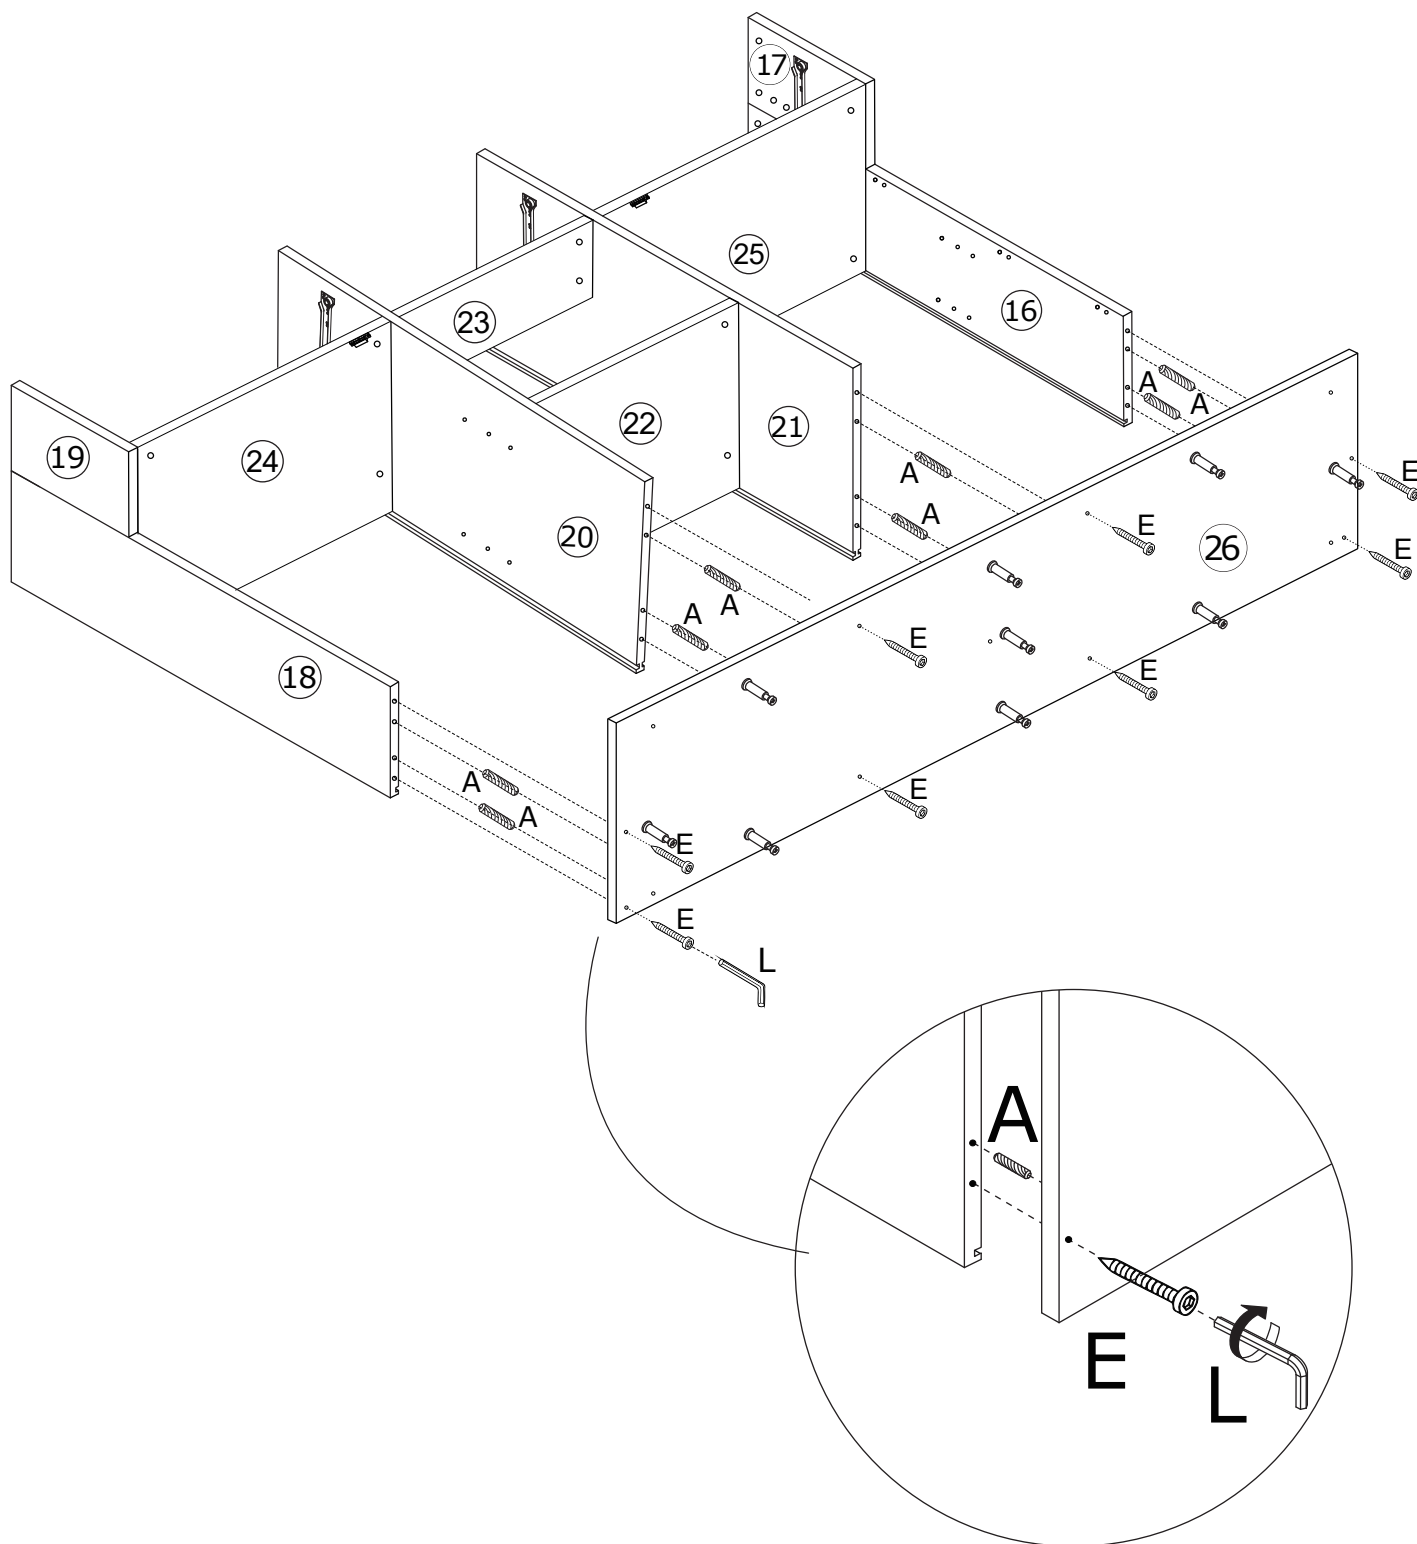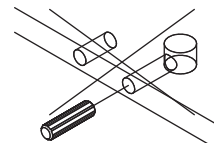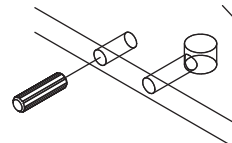


30



B x 12



 Ø 6x35mm



  Insert quickfit screw(B) into corresponding holes in No.28(x2) plate with a screwdriver as shown.

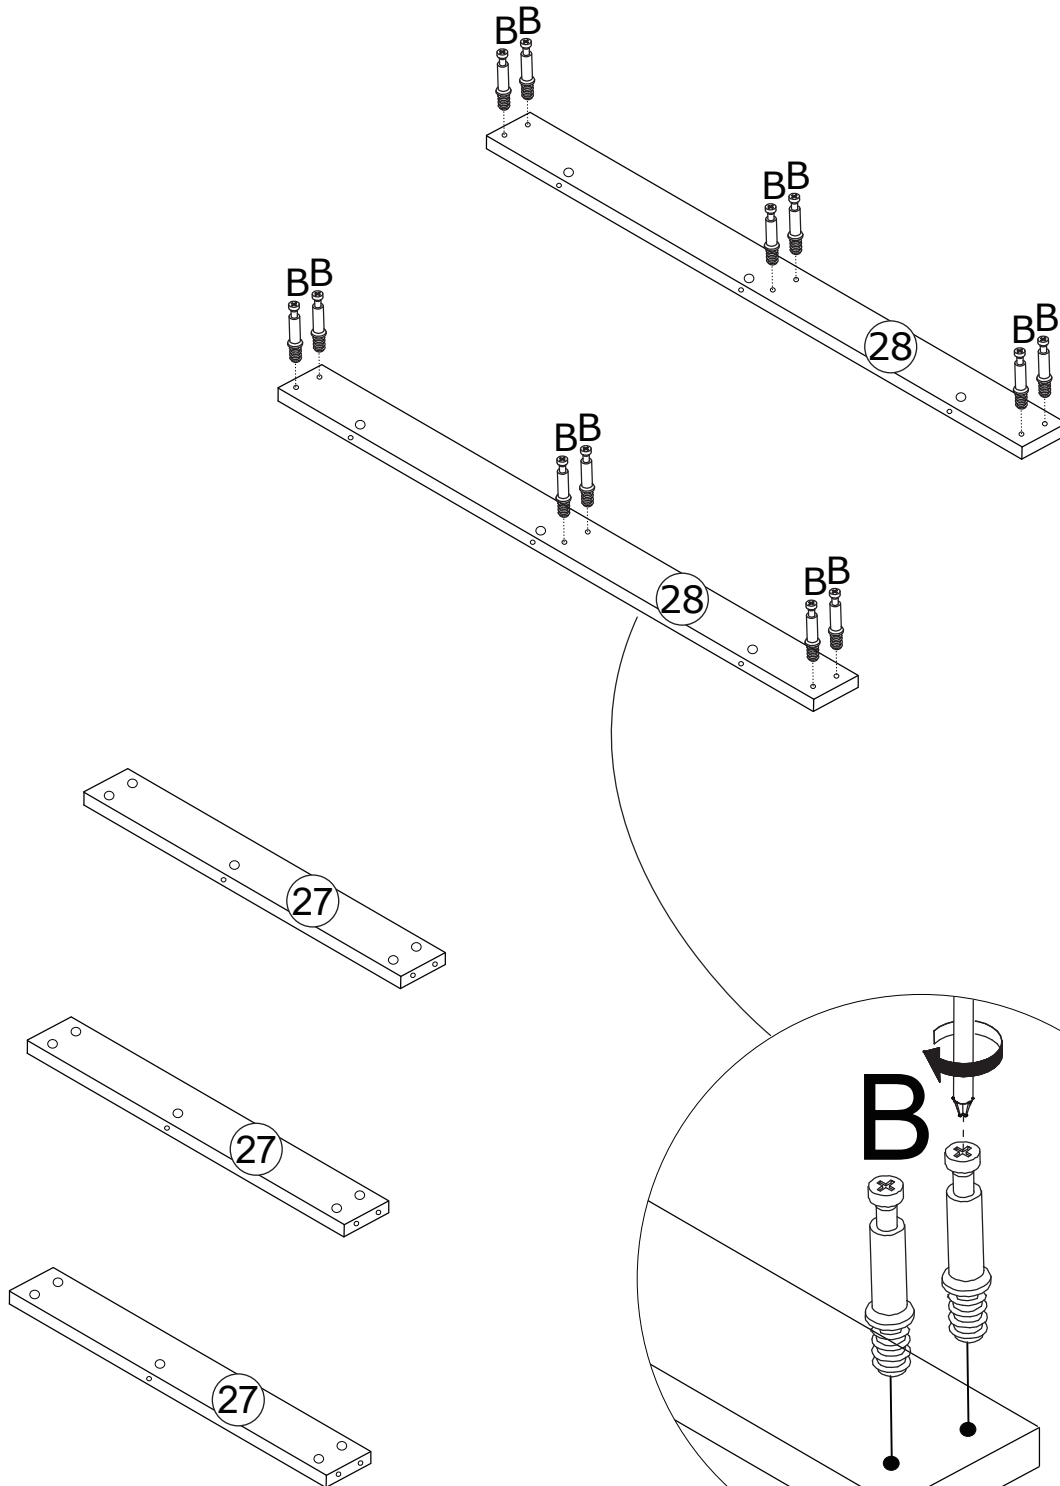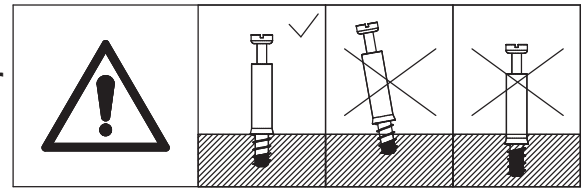


31



C x 12



 Ø 15x10mm



  Connect No.28 plate with No.27, then turn cam lock(C) clockwise in No.27 plate to tighten as shown.

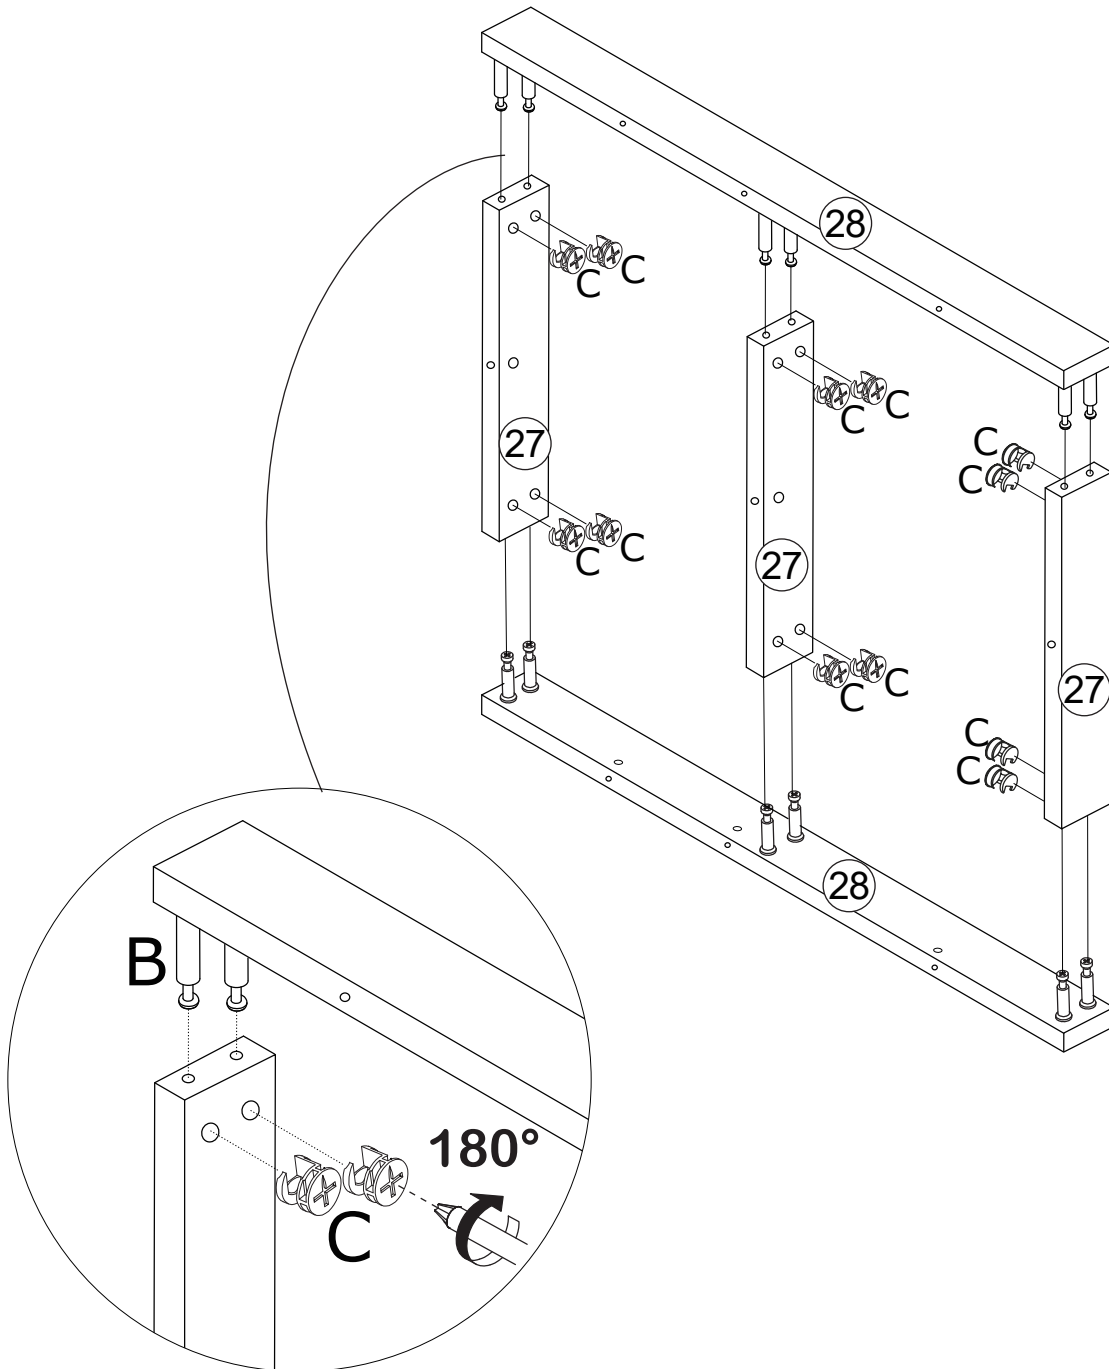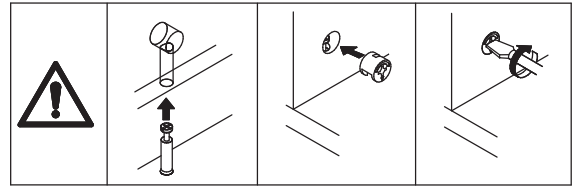


32



C x 9



 Ø 15x10mm



  Attach the component to No.26 plate,
then turn cam lock(C) clockwise in
No.27,28 plate to tighten as shown.

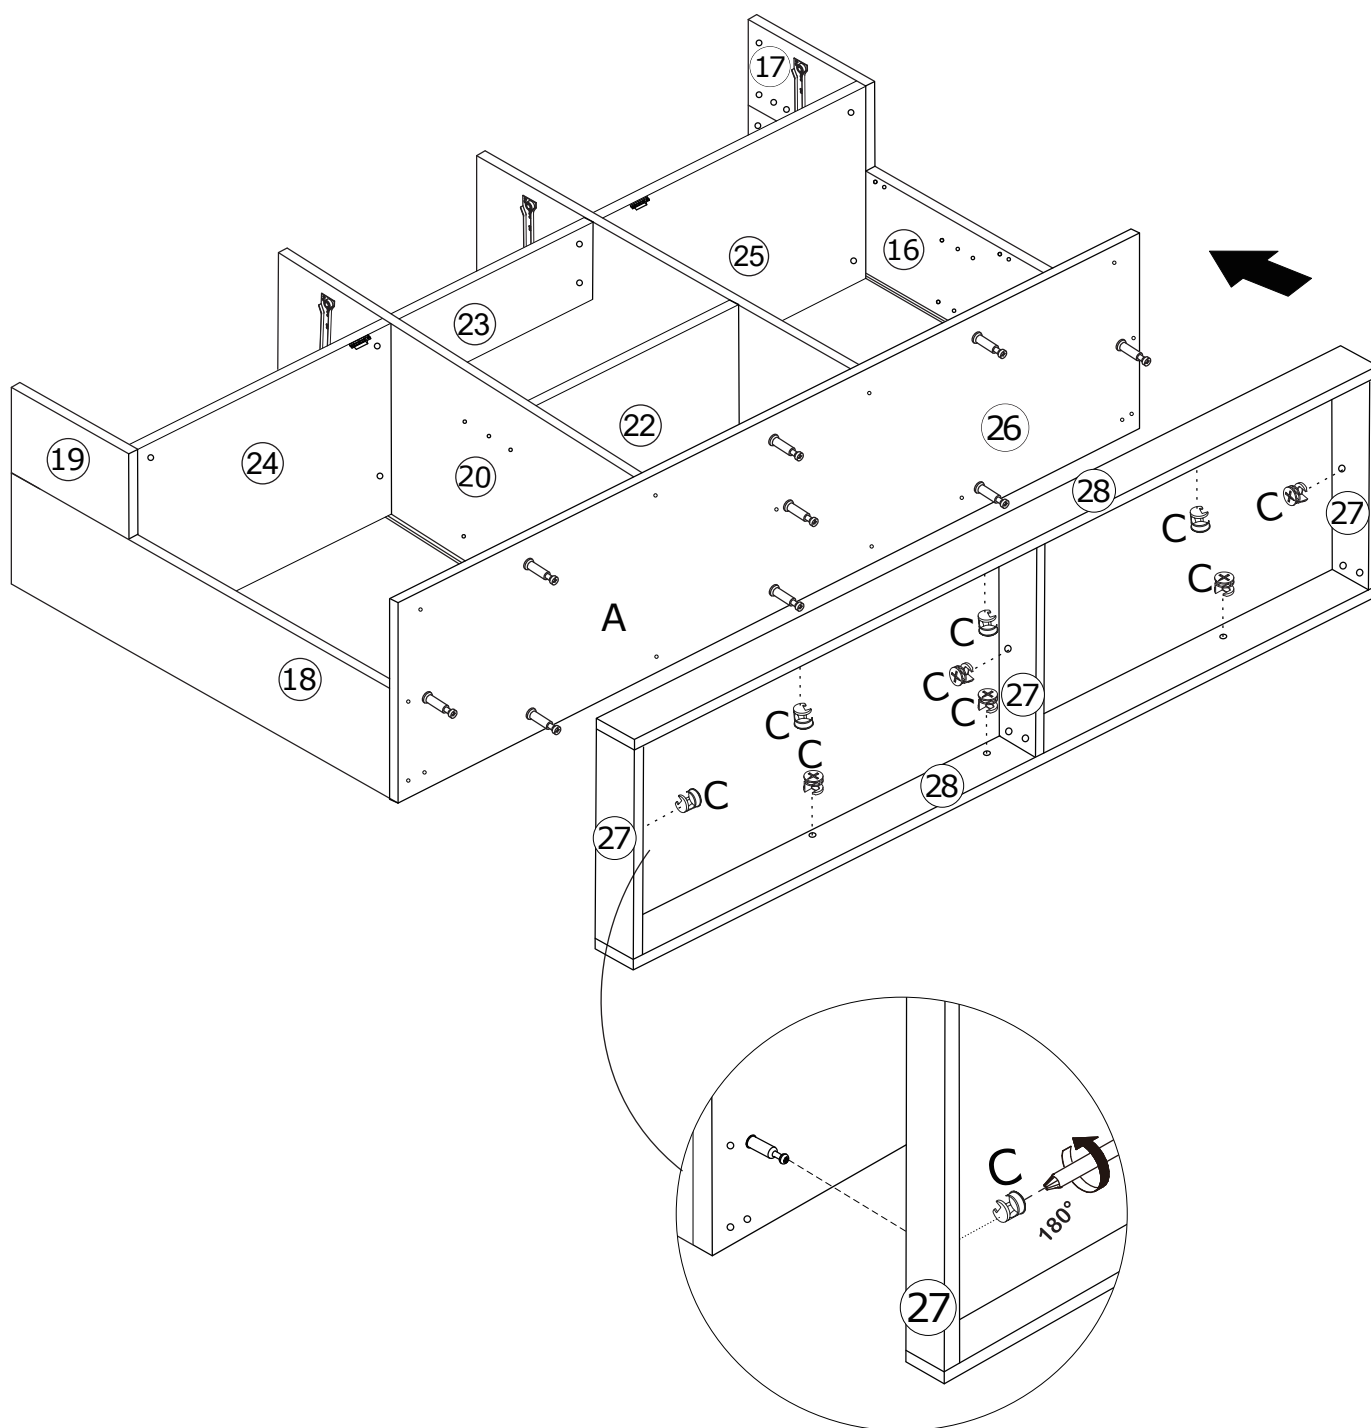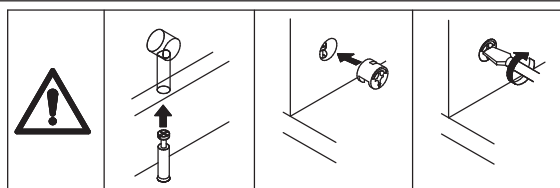

33

 
E x 5



Ø 5 x 40 mm



Slide No.52 and No.53 plate into available slots as shown.

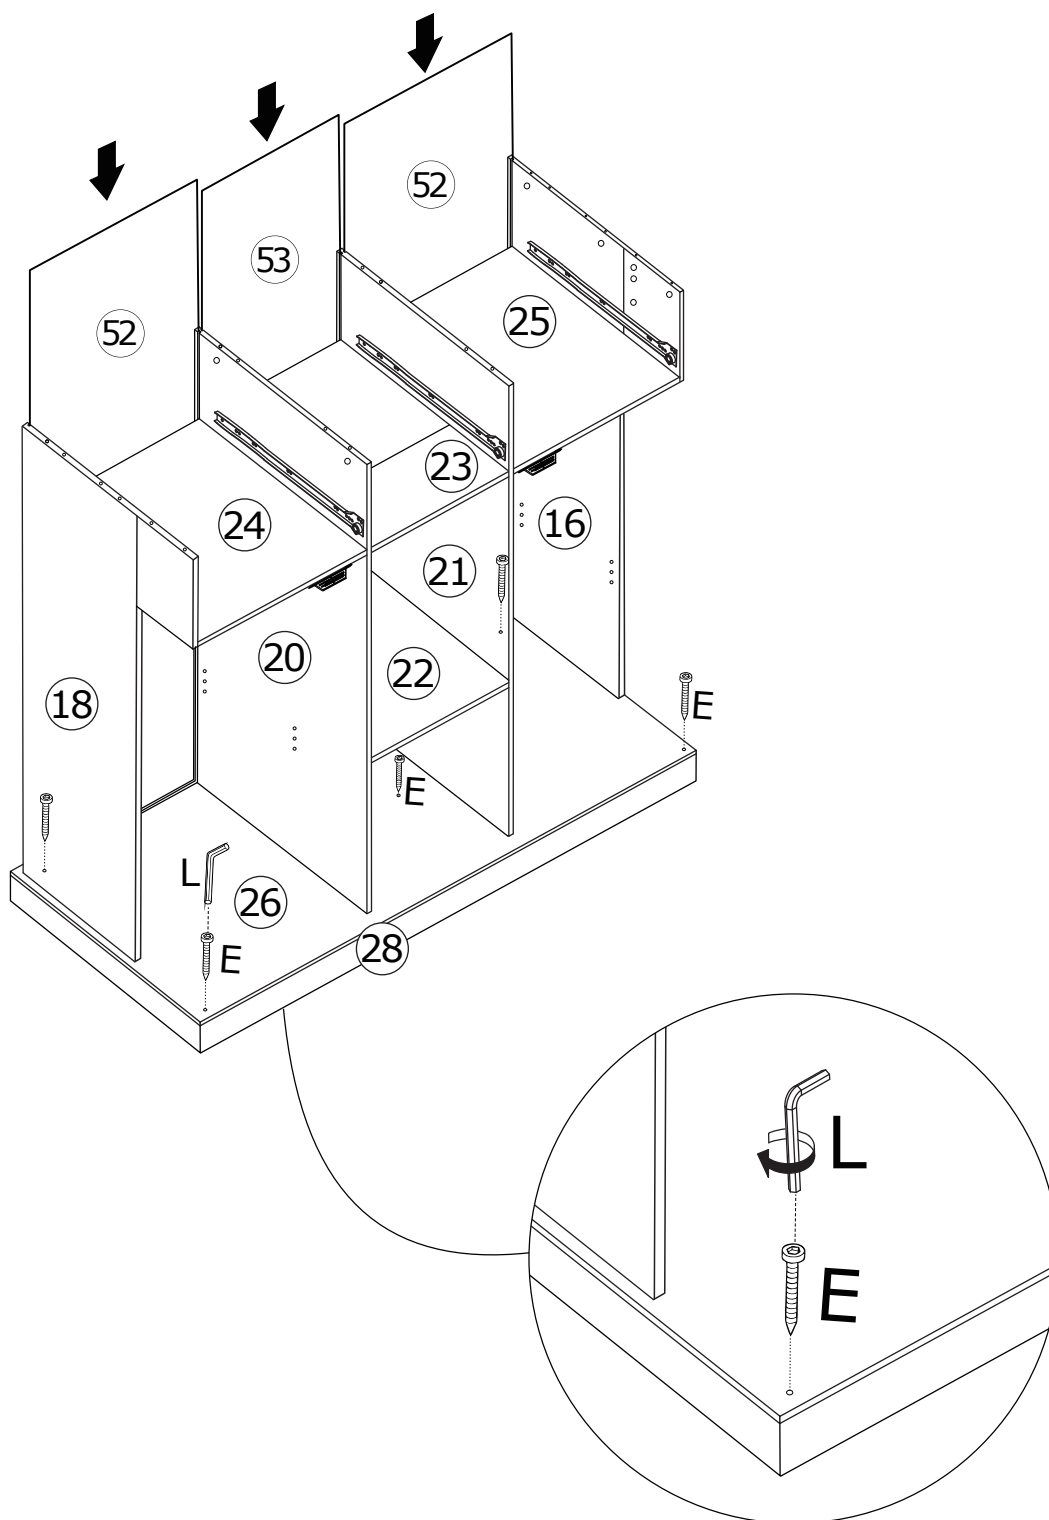

34

 
 
 
 
 
 
A x 8



C x 12





Ø 15x10mm

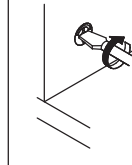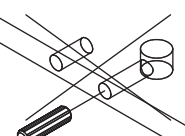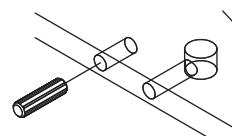

Connect the two assembled components using wooden dowel(A), then turn cam lock(C) clockwise to tighten as shown.

  Recommend more than two people to assemble!

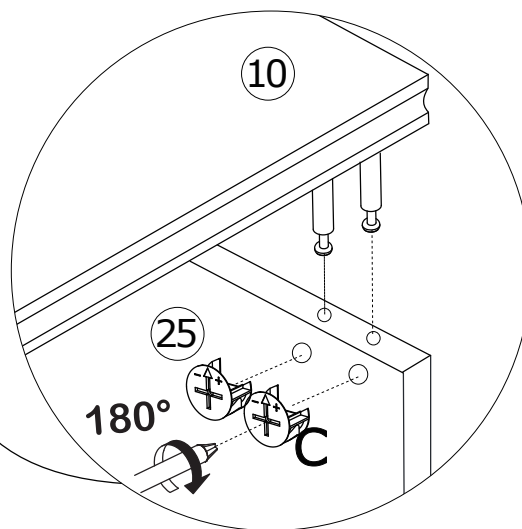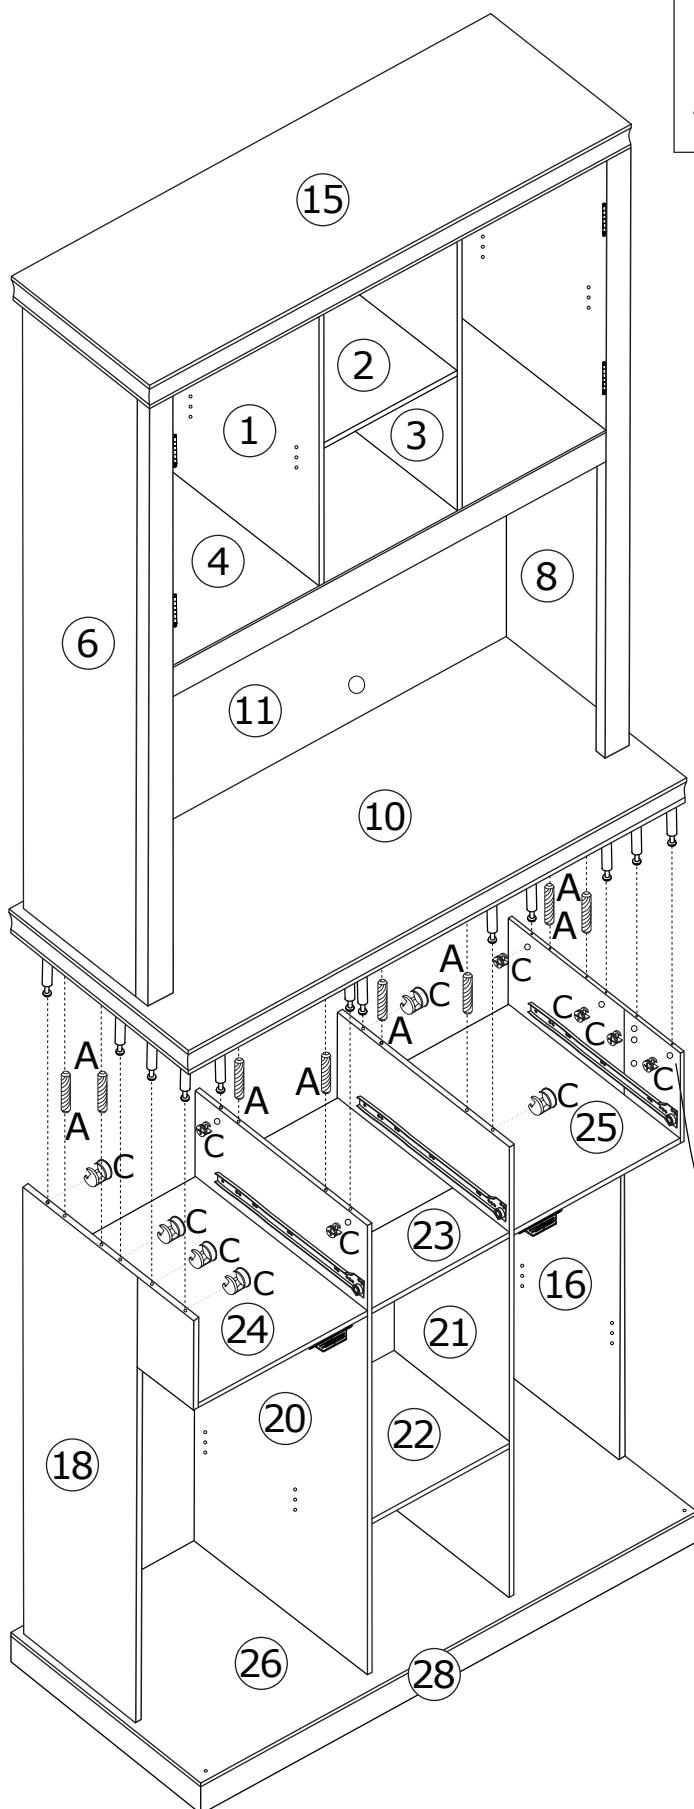

35

B x 12



Ø 6 x 35 mm

 
H x 3



D x 6





Ø 3 x 12 mm



Insert quickfit screw(B) into corresponding holes in No.29 and No.30 plate with a screwdriver as shown.

  Fix hinge(H) to No.30 plate with screw(D) as shown.

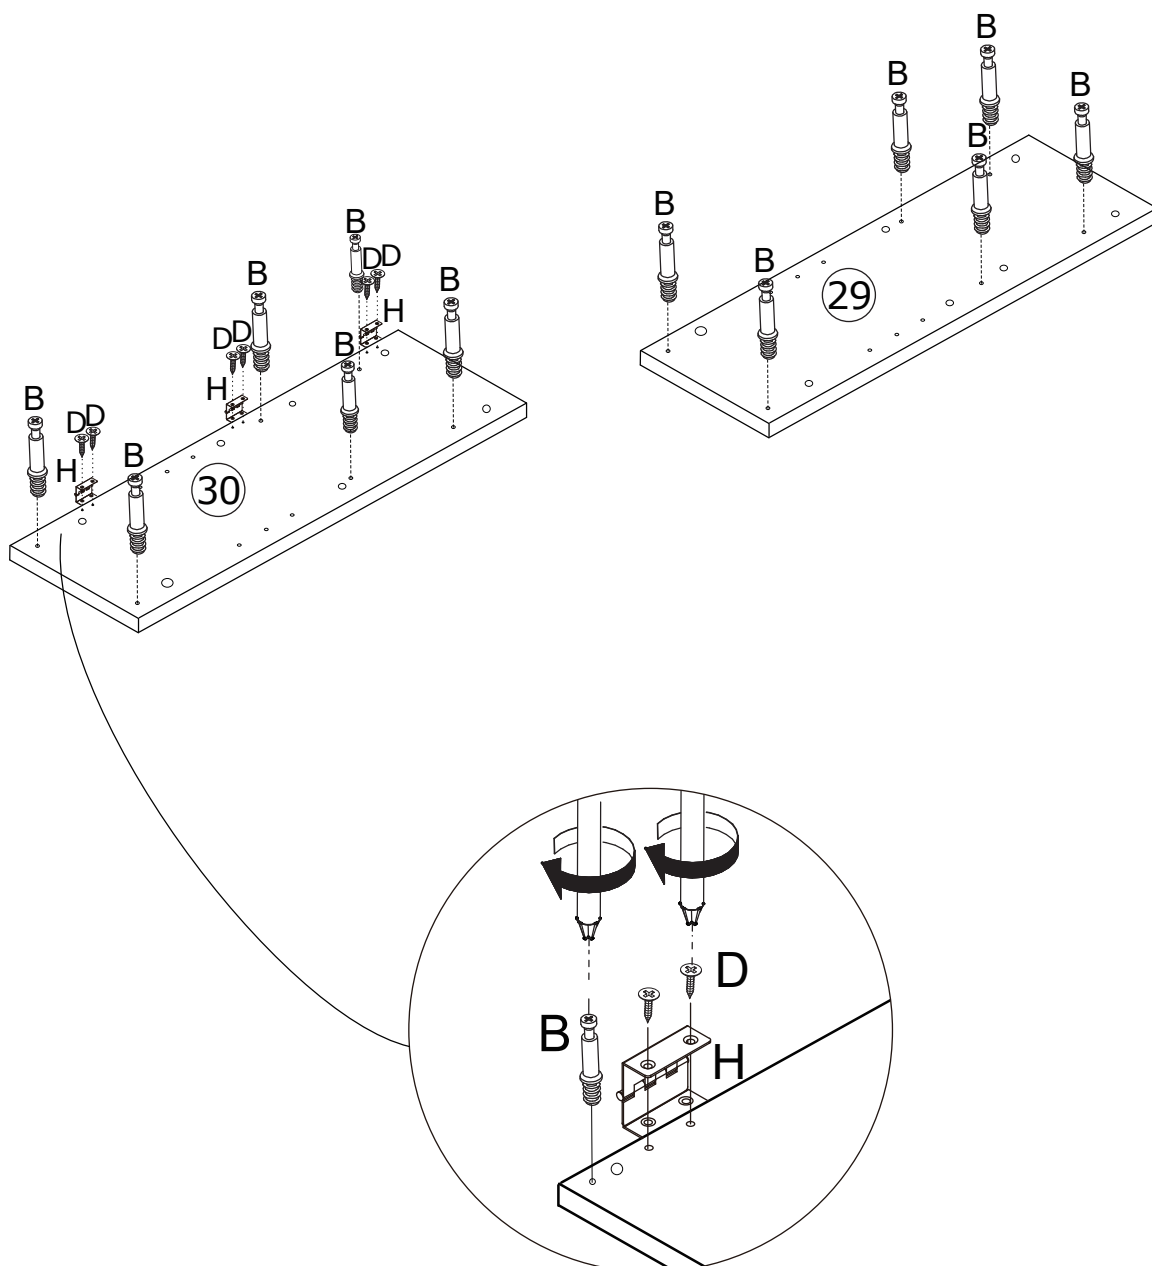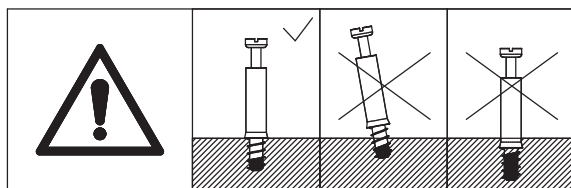


36



C x 6



 Ø 15x10mm



  Attach No.31(x3) to No.29 plate, then turn cam lock(C) clockwise in No.31 plate to tighten as shown.

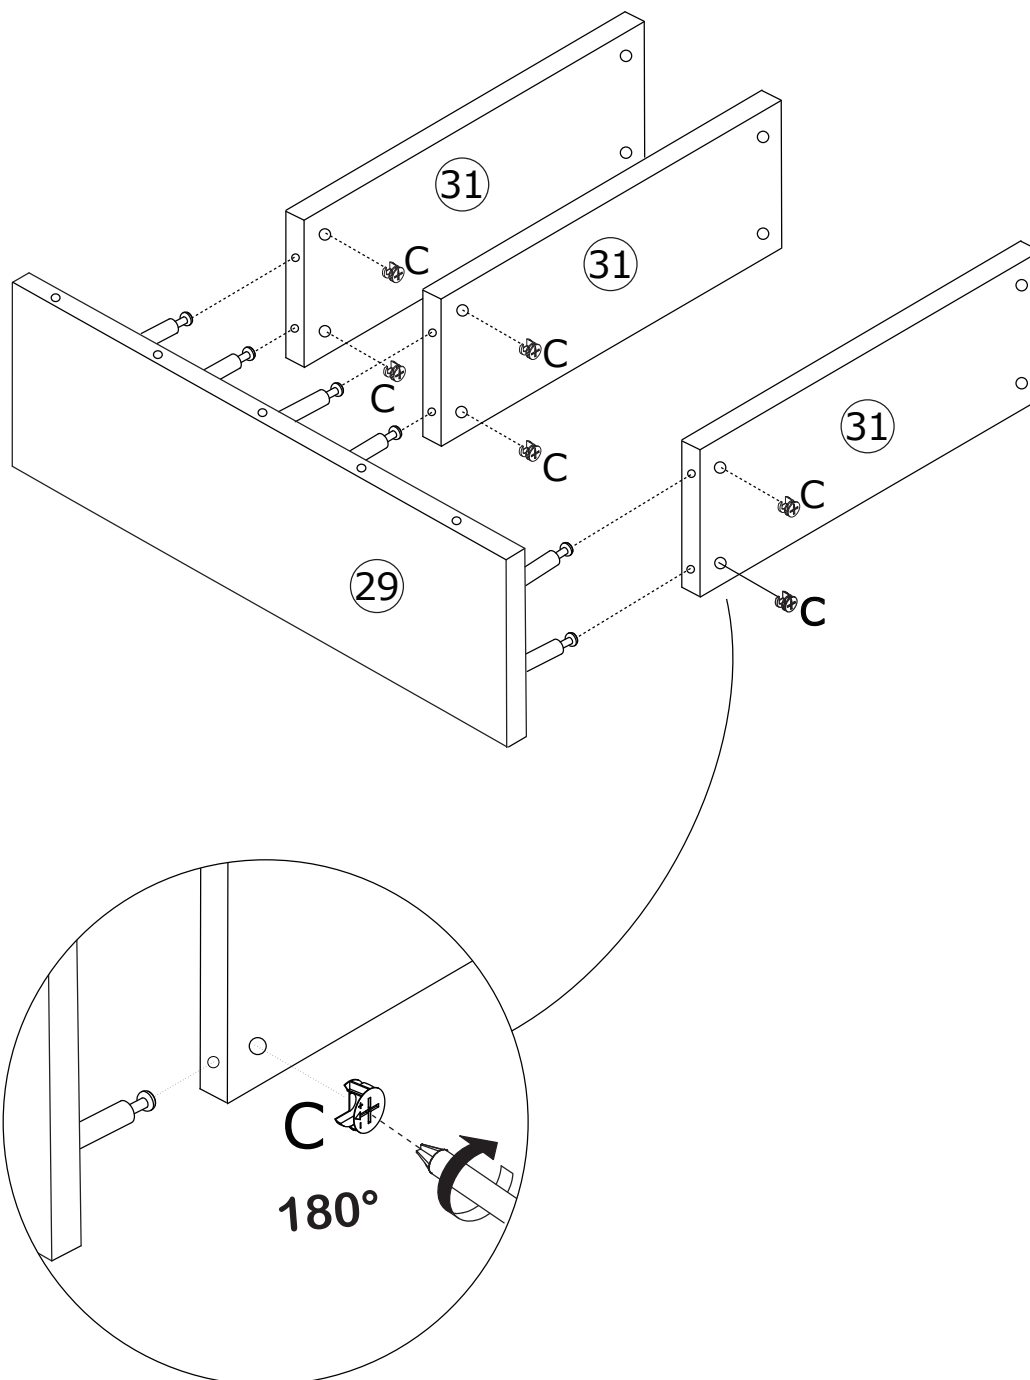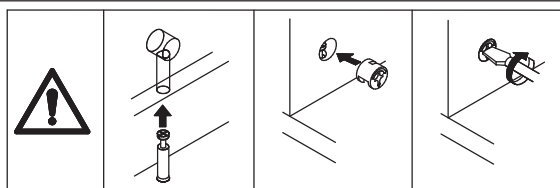


37




C x 6



 
Ø 15x10mm



   Attach No.30 to No.31 plate and No.32 part, then turn cam lock(C) clockwise in No.31 plate to tighten as shown.

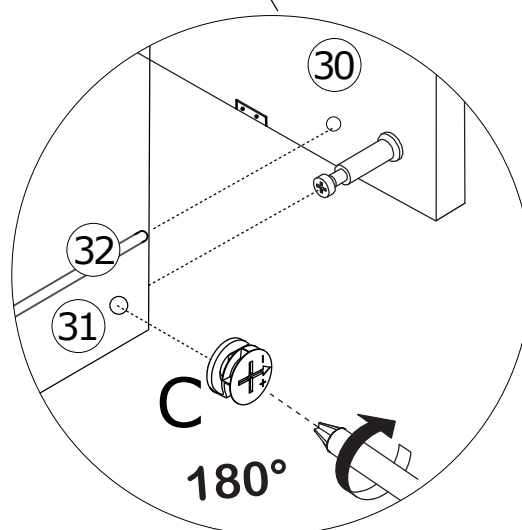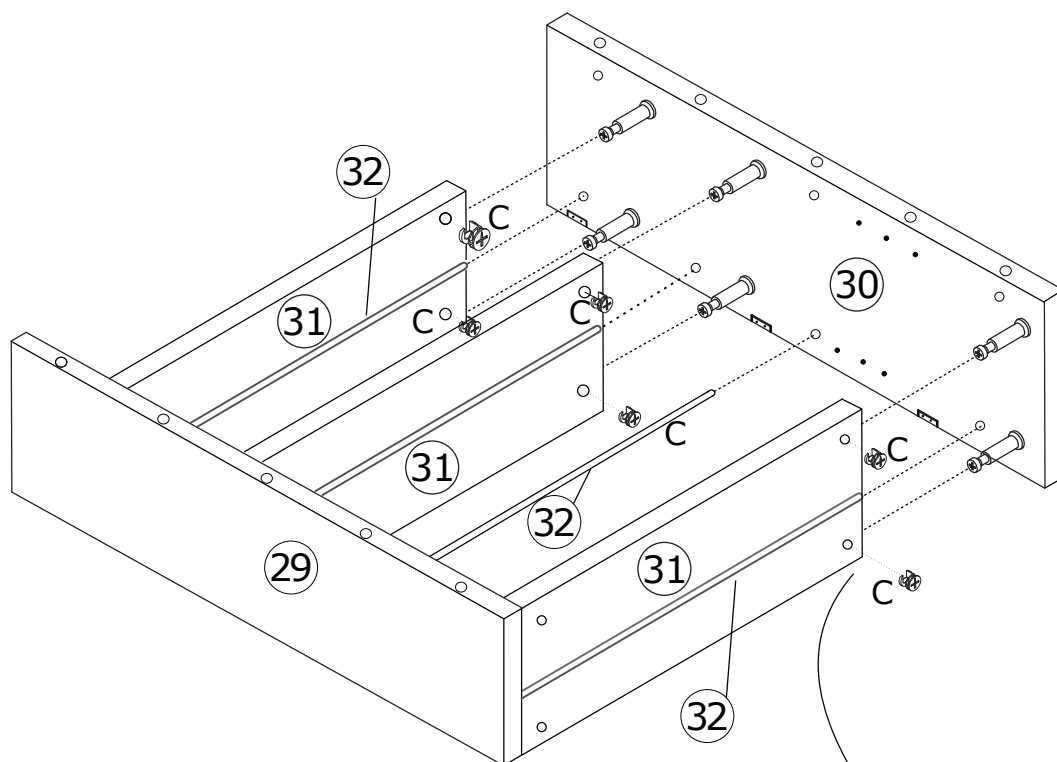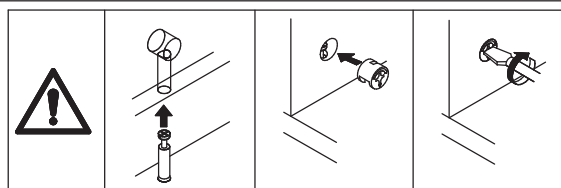



38

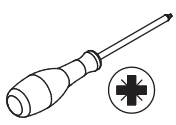 F x 1  ϕ 4x16mm	B x 6  ϕ 6x35mm	G x 1 	D x 2  ϕ 3x12mm	J x 1 	
--	--	---	--	---	---

Insert quickfit screw(B) into corresponding holes in No.33 plate with a screwdriver as shown.

Fix part(J) to No.33 plate with screw(D) as shown.

  Fix knob(G) with screw(F) as shown.


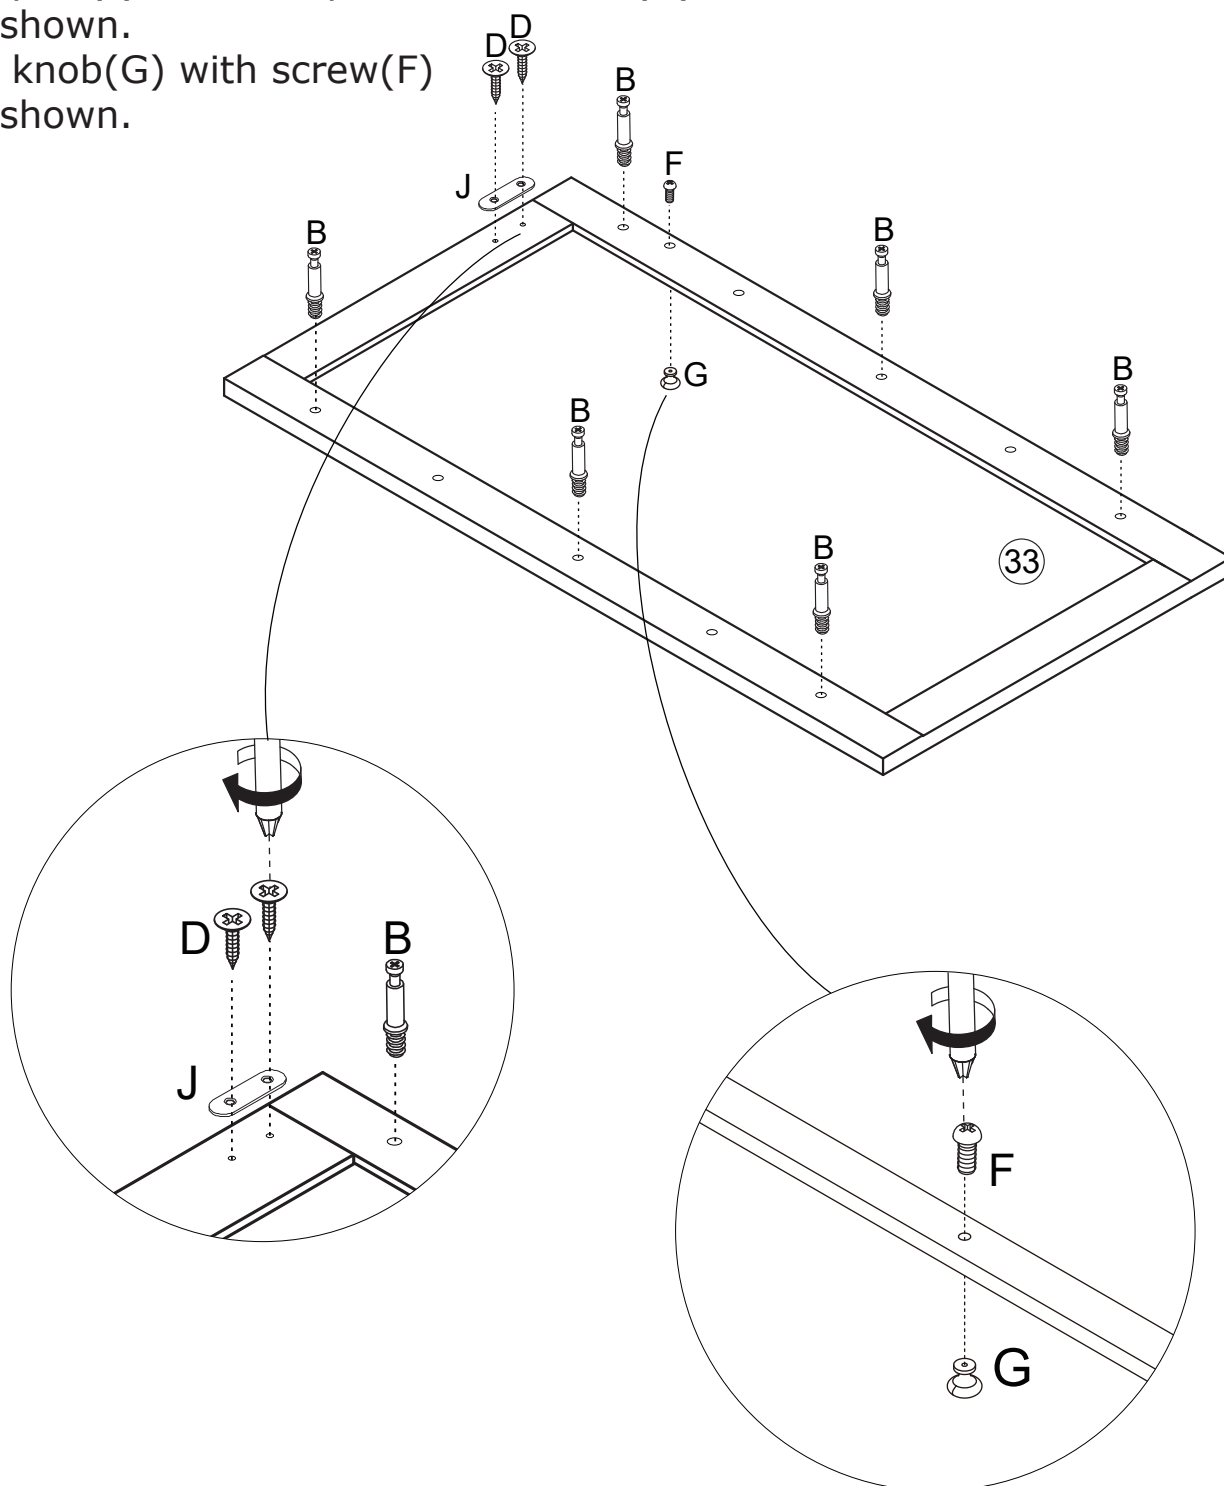
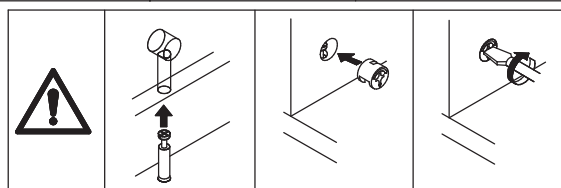


39

A x 4



   Attach No.33 to No.29 and No.30 plate using wooden dowel(A) as shown.

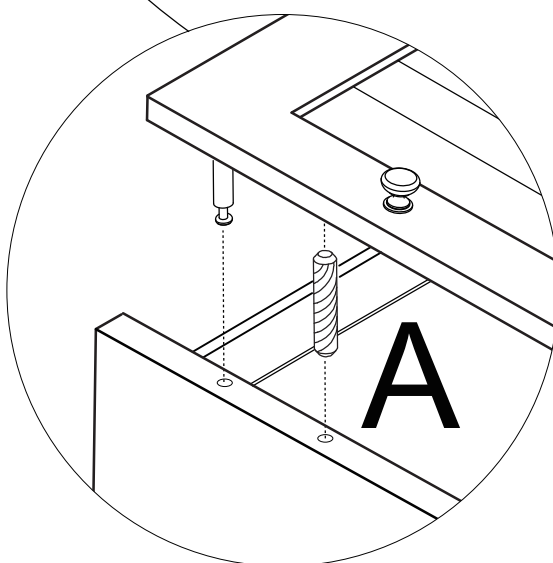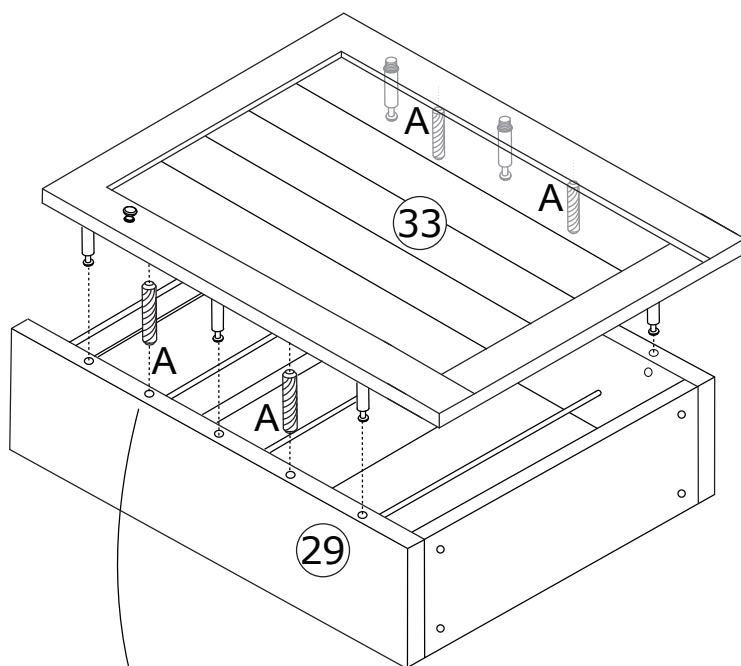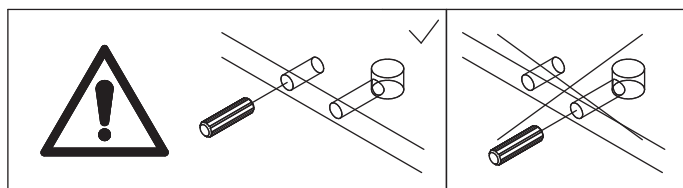


40




C x 6



 
Ø 15x10mm



   
Turn cam lock(C) clockwise in No.29 and No.30 plate to tighten as shown.

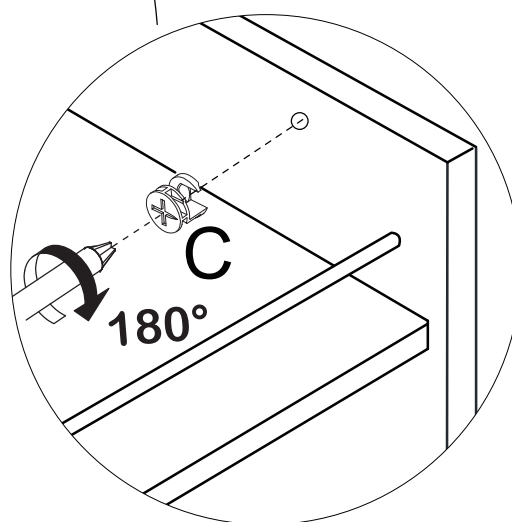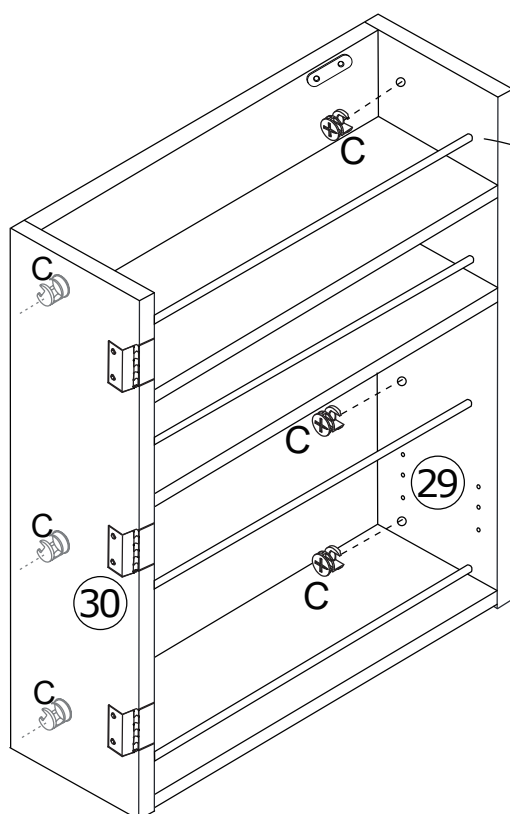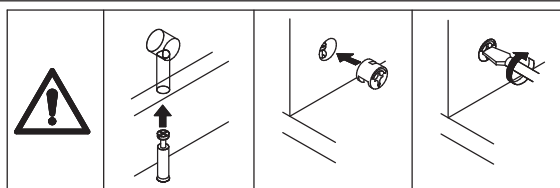


41

 B x 12  Ø 6 x 35 mm	H x 3 	D x 6  Ø 3 x 12 mm	
--	--	---	---

 Insert quickfit screw(B) into corresponding holes in No.34 and No.35 plate with a screwdriver as shown.

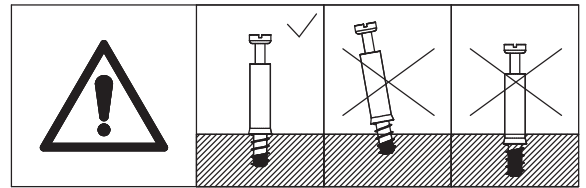

 Fix hinge(H) to No.35 plate with screw(D) as shown.

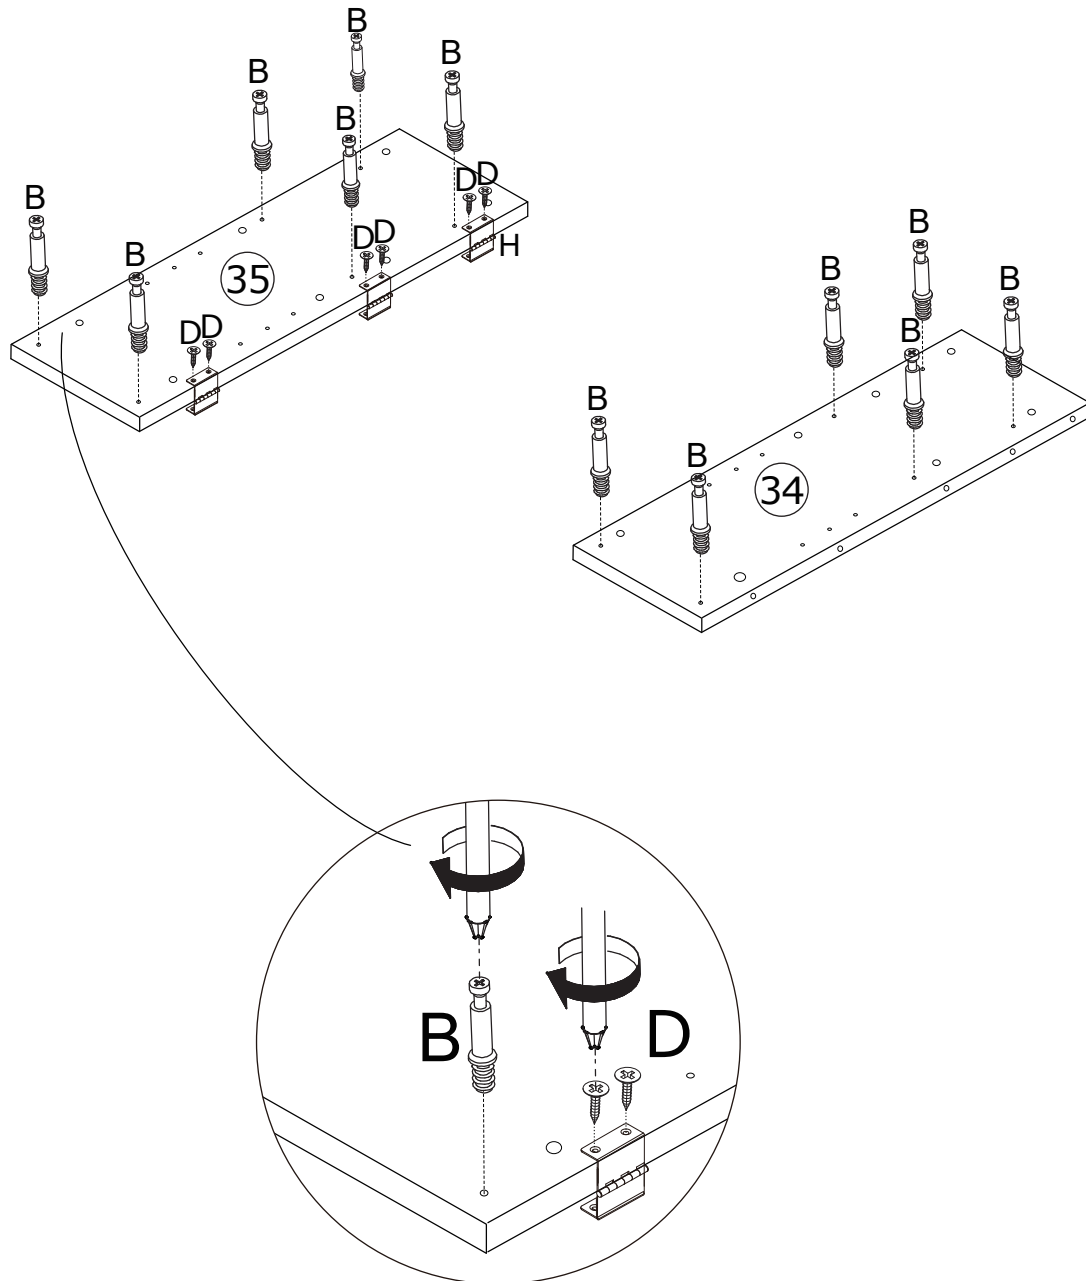


42



C x 6



 Ø 15x10mm



  Attach No.31(x3) to No.35 plate, then turn cam lock(C) clockwise in No.31 plate to tighten as shown.

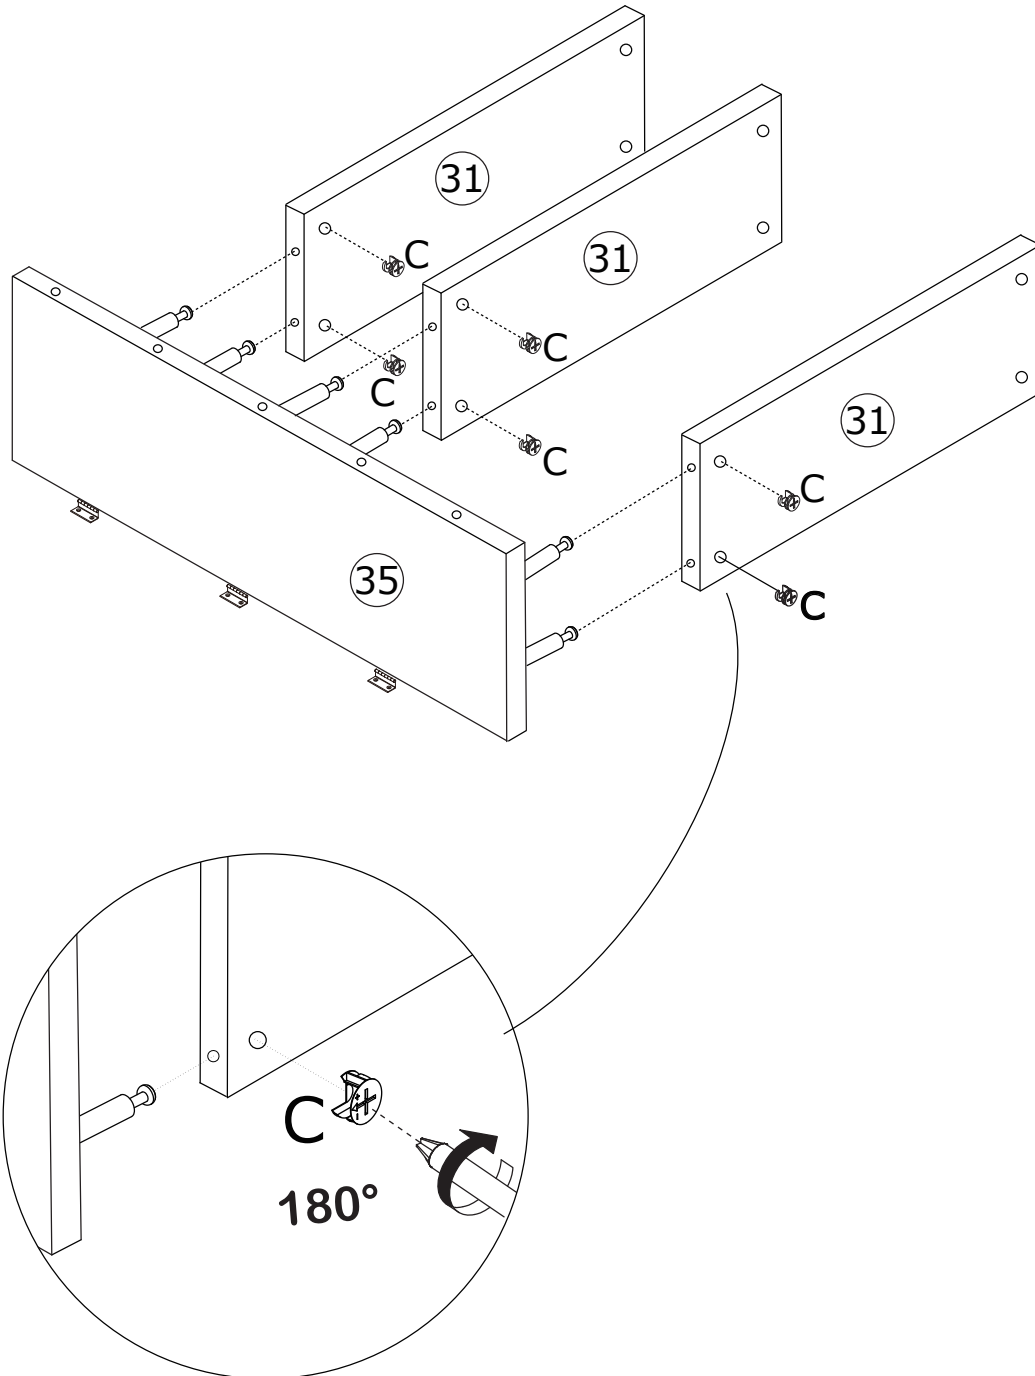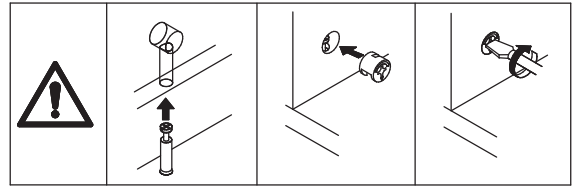


43




C x 6



 
Ø 15x10mm



   Attach No.34 to No.31 plate and No.32 part, then turn cam lock(C) clockwise in No.31 plate to tighten as shown.

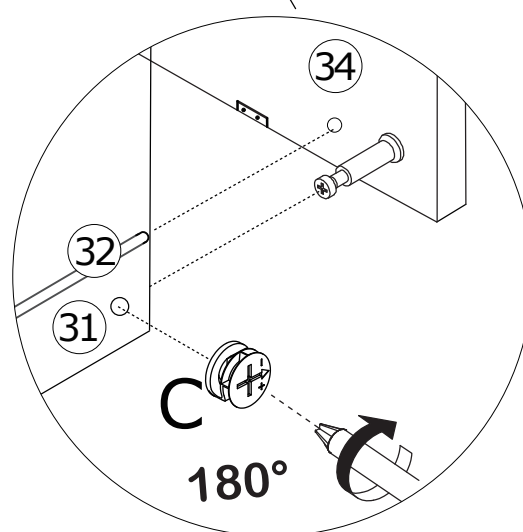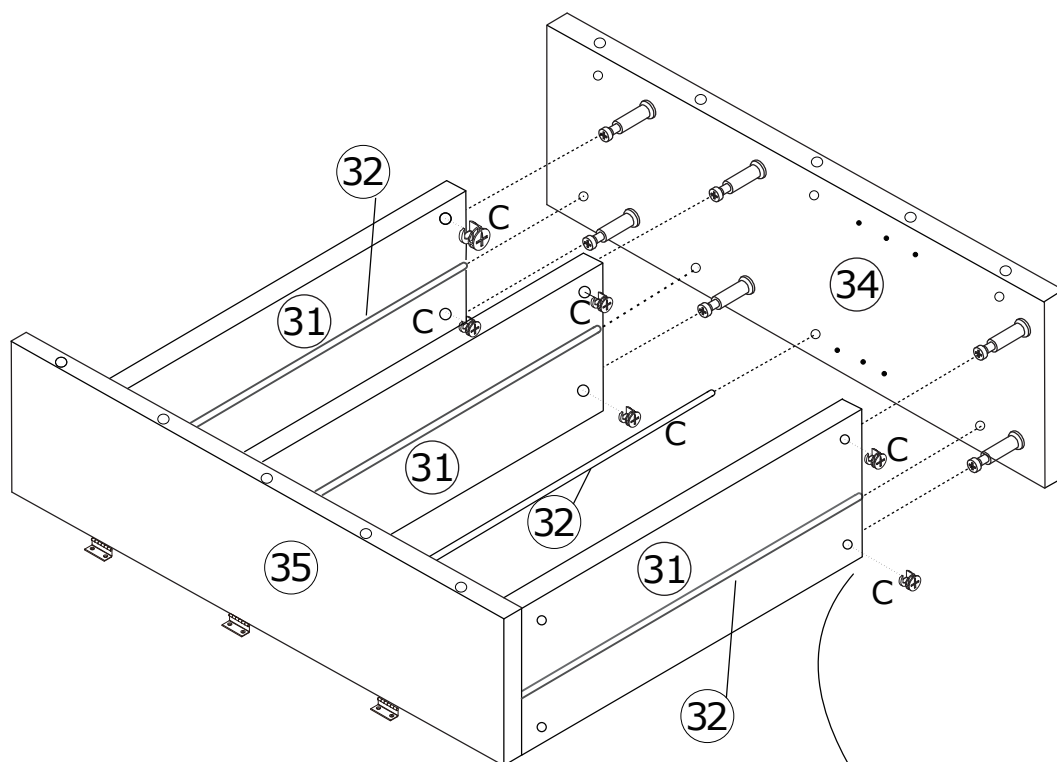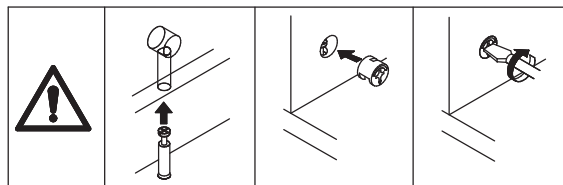



44

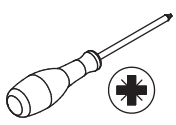 F x 1  ϕ 4x16mm	B x 6  ϕ 6x35mm	G x 1 	D x 2  ϕ 3x12mm	J x 1 	
--	--	---	--	---	---

Insert quickfit screw(B) into corresponding holes in No.36 plate with a screwdriver as shown.

Fix part(J) to No.36 plate with screw(D) as shown.

  Fix knob(G) with screw(F) as shown.


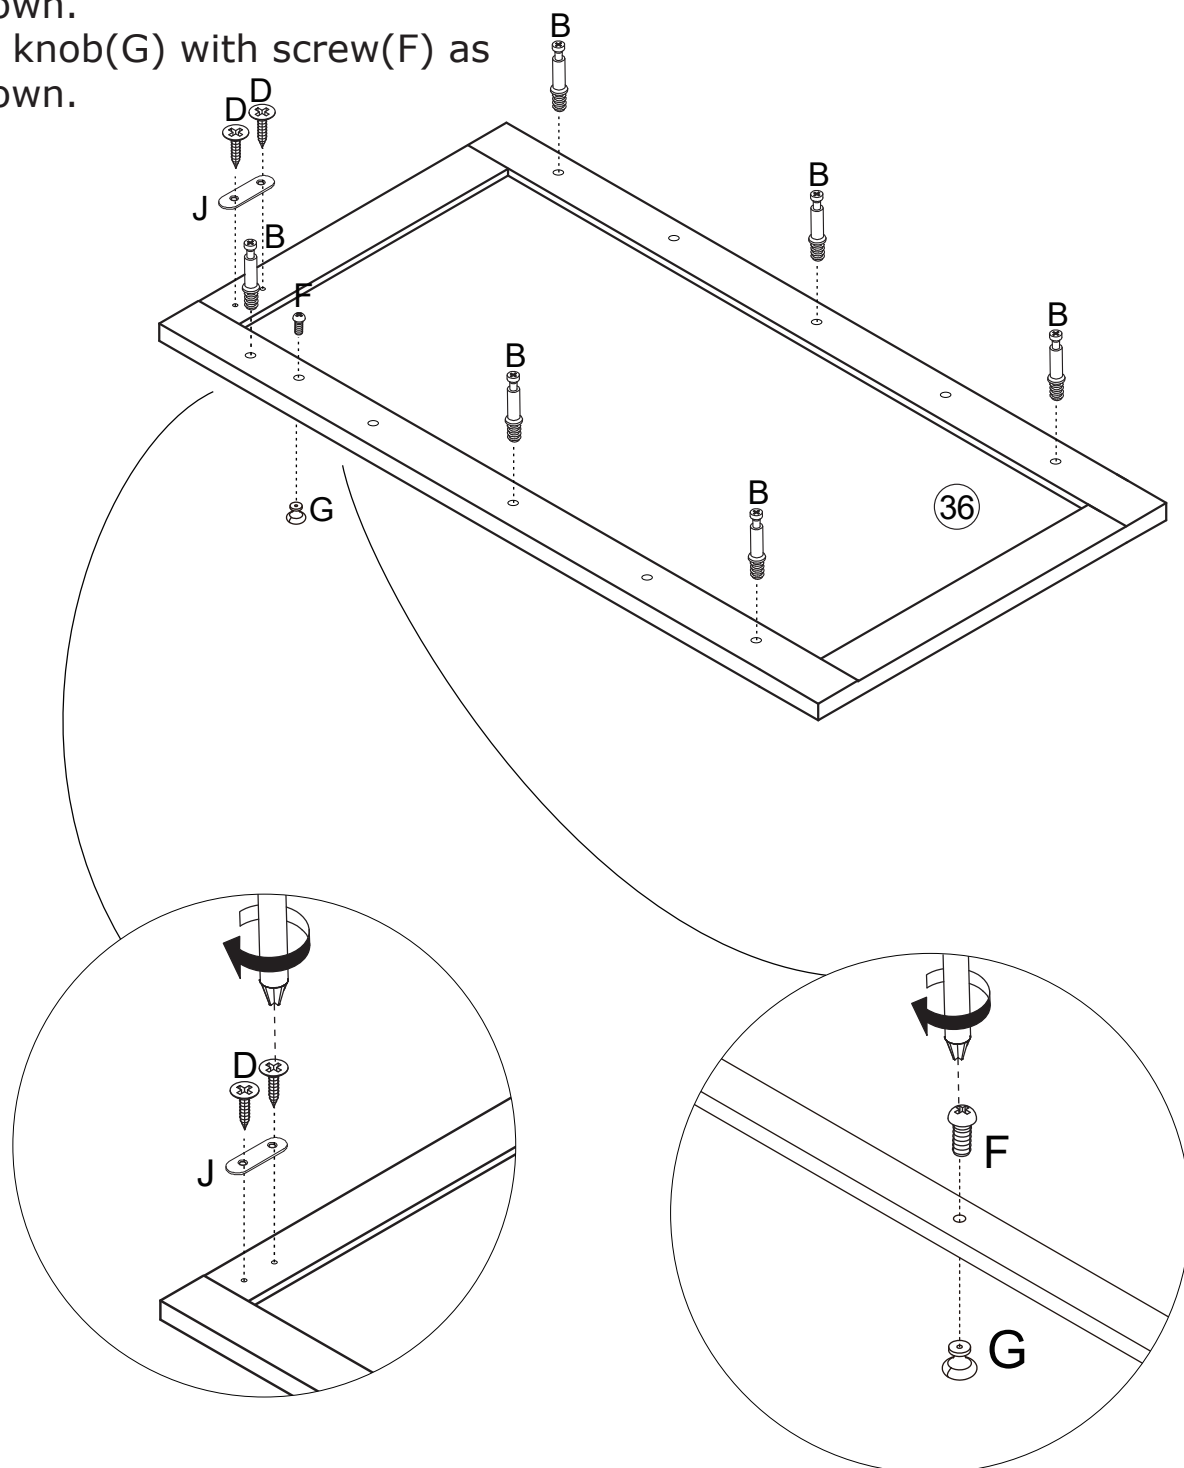
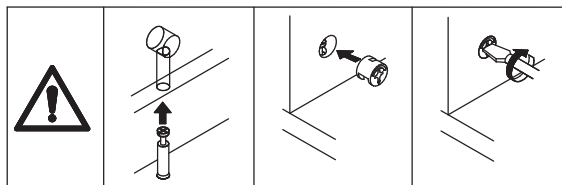


45

A x 4



   Attach No.36 to No.34 and No.35 plate using wooden dowel(A) as shown.

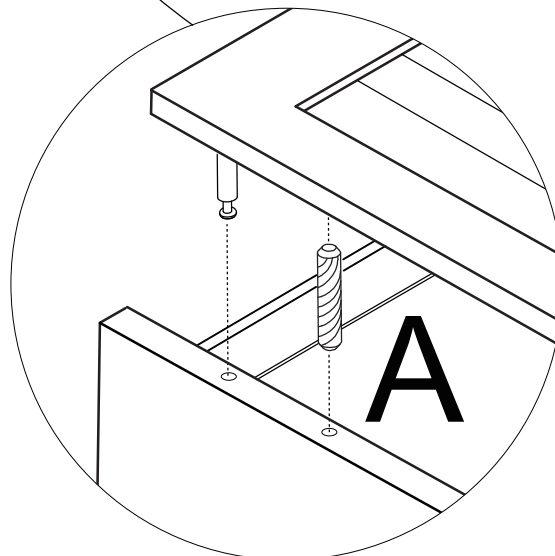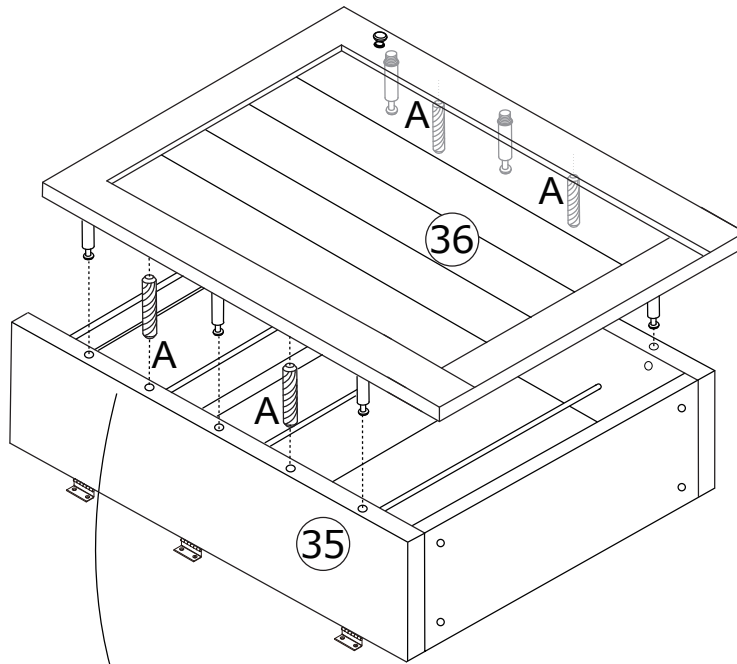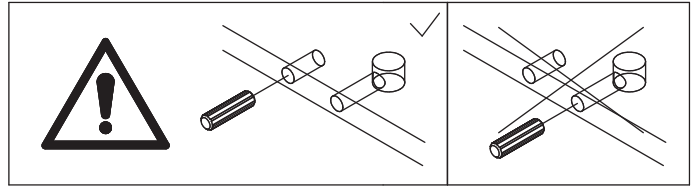


46




C x 6



 Ø 15x10mm



   Turn cam lock(C) clockwise in No.34 and No.35 plate to tighten as shown.

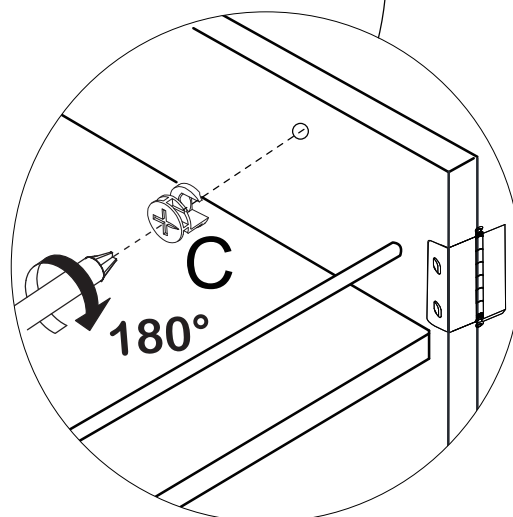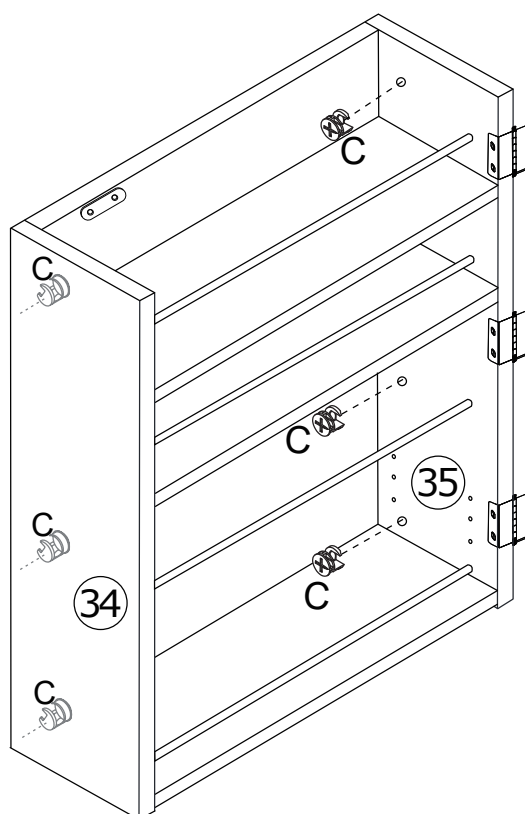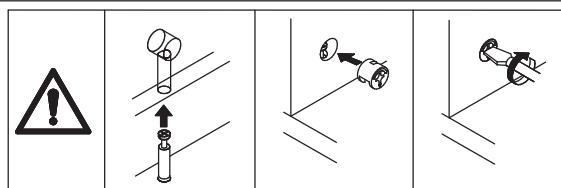

47

 
U x 16




D x 12



Ø 3x12mm




 Attach the two shelf components to sides of the cabinet(No.35 plate to No.18; No.30 plate to No.16) by fixing hinge with screw(D) as shown. Insert part(U) into No.34,35,18, 20,21,16,30,29 plate, then place No.37 and No.56 shelf in as shown.

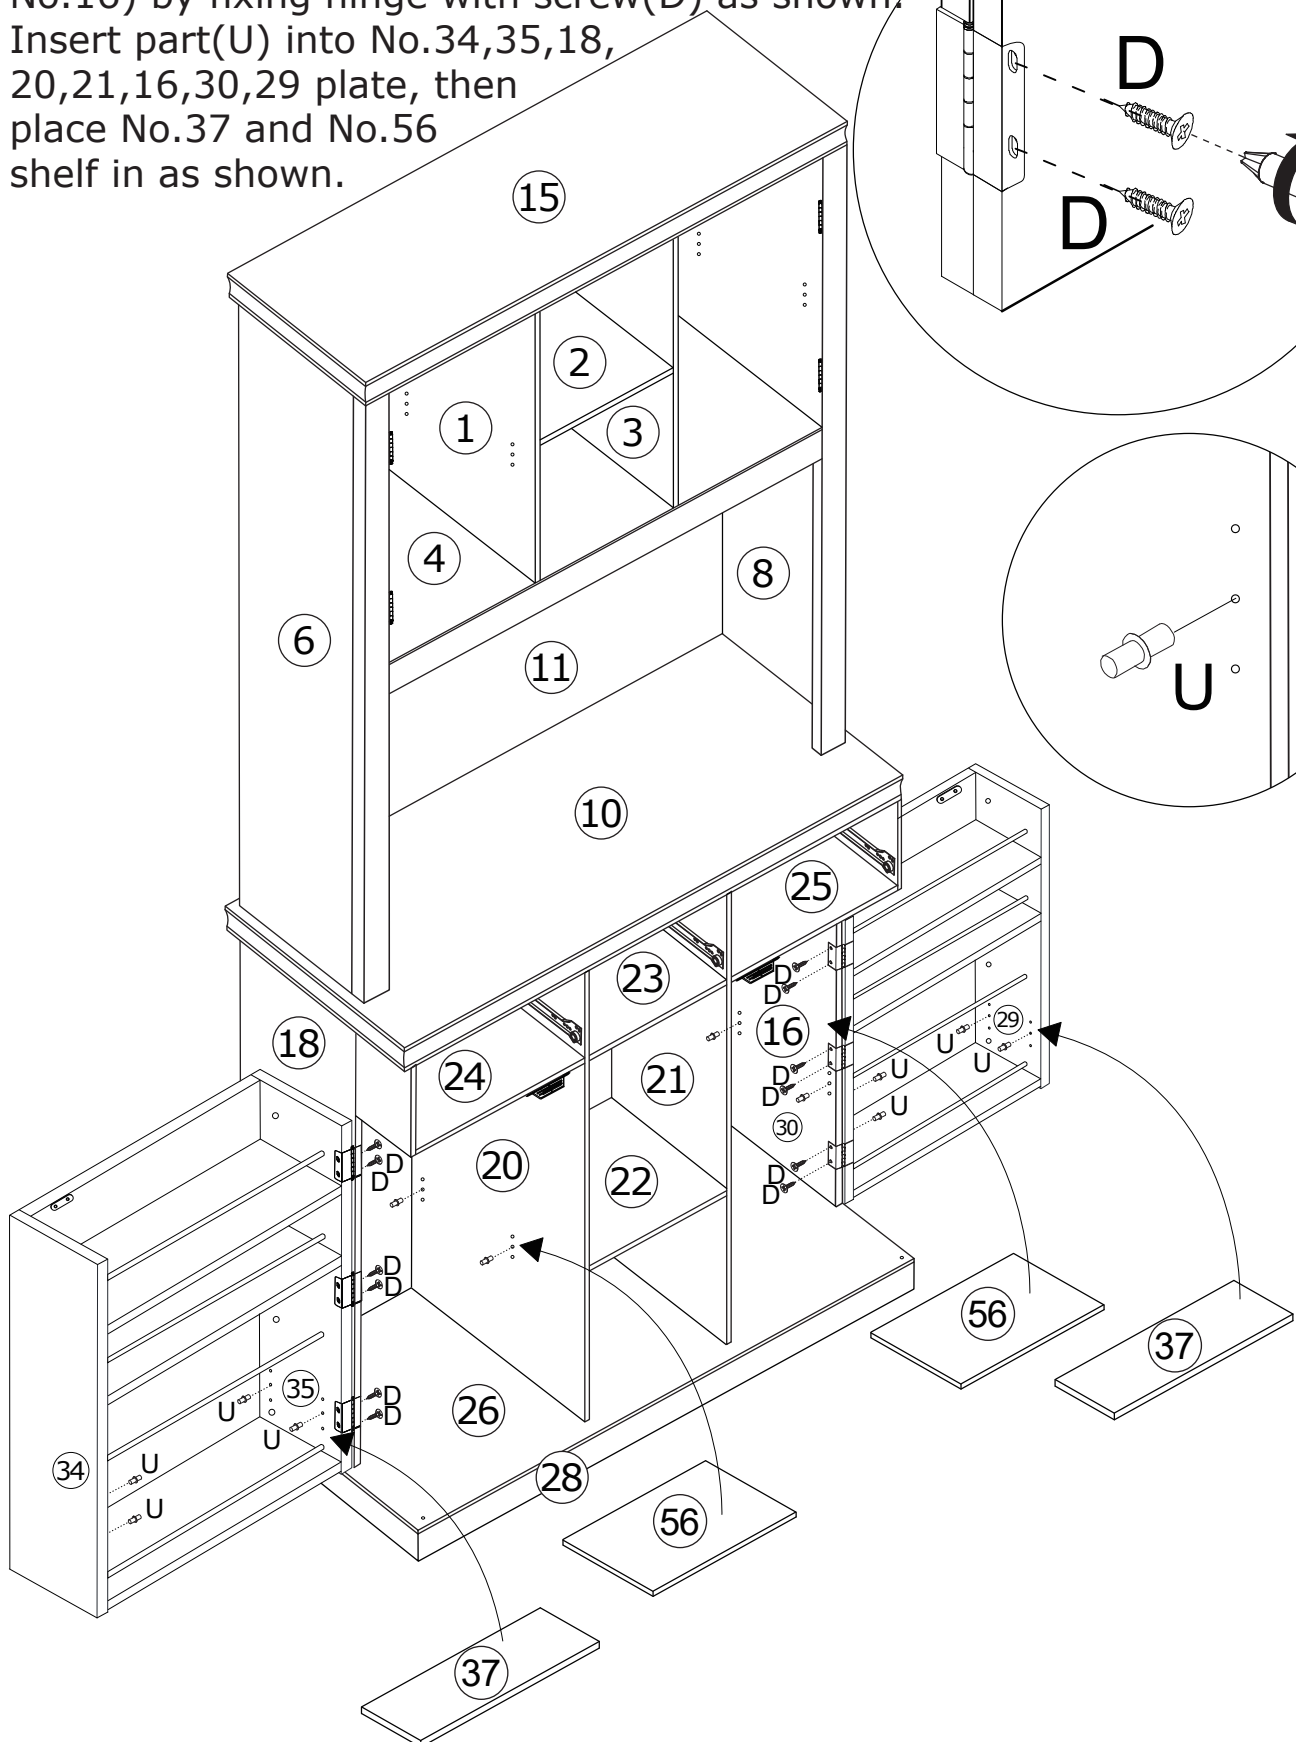


48

 
Connect four No.39 plate as shown.

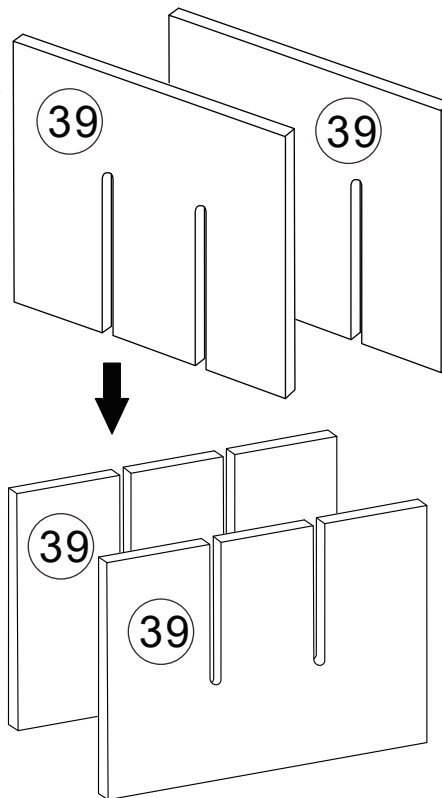

49

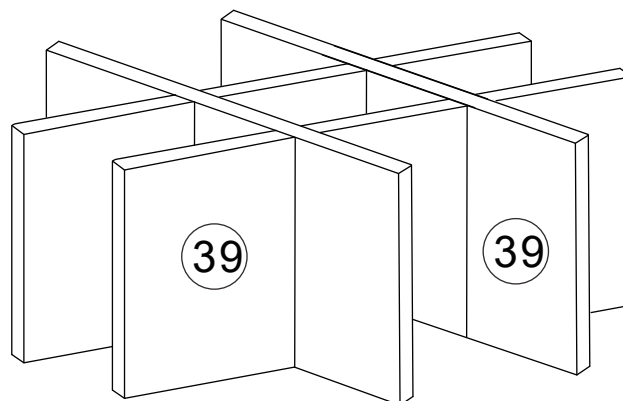 

Place the part to bottom shelf.

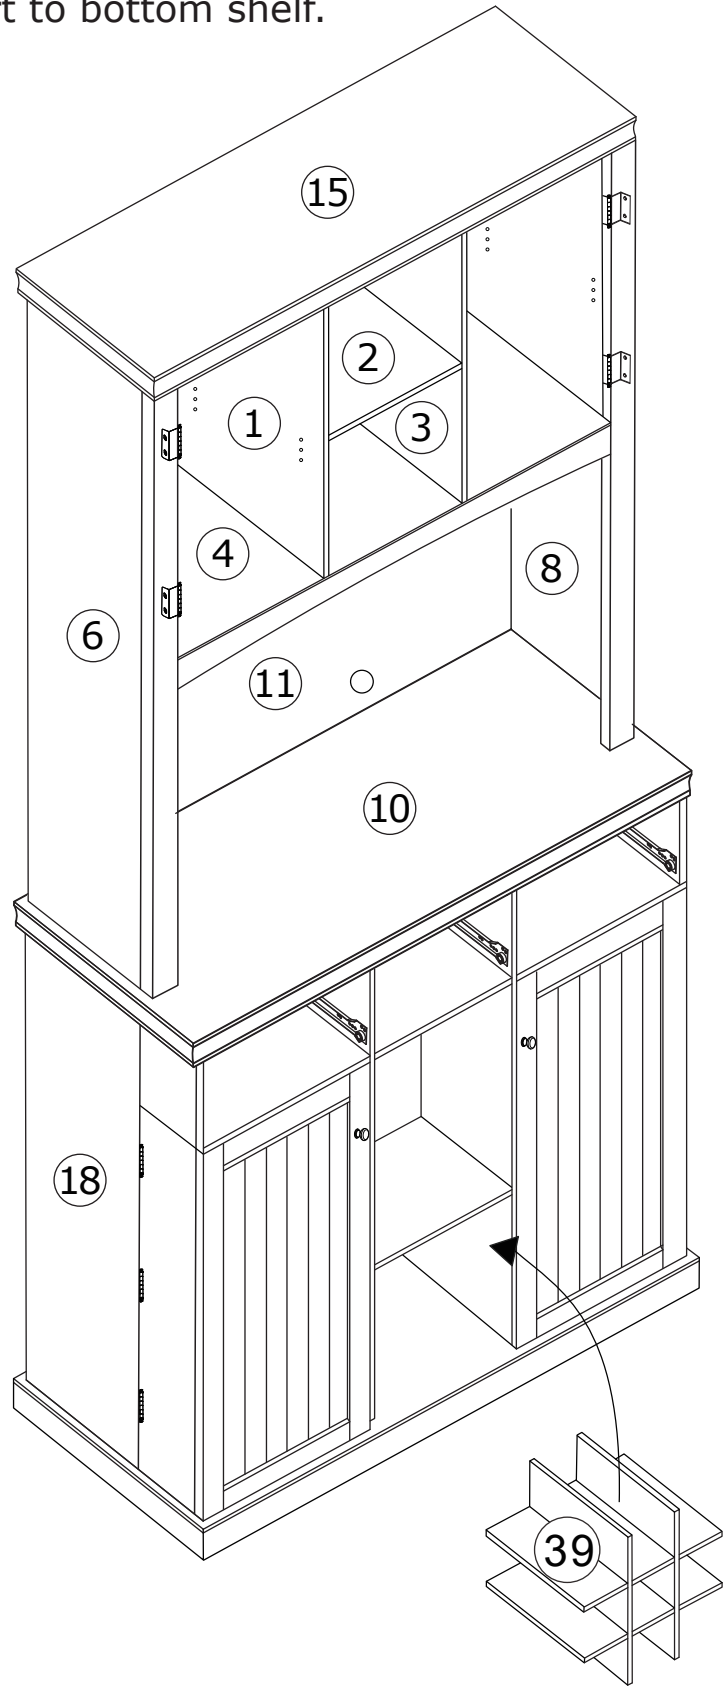 

51

B x 12



 
 
Ø 6x35mm

F x 3








Ø 4x16mm

G x 3

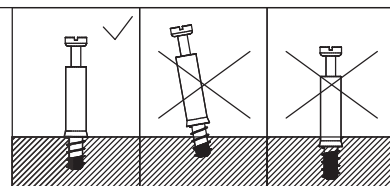

Insert quickfit screw(B) into corresponding holes in No.40, No.41 and No.42 plate with a screwdriver as shown.

     Fix knob(G) with screw(F) as shown.

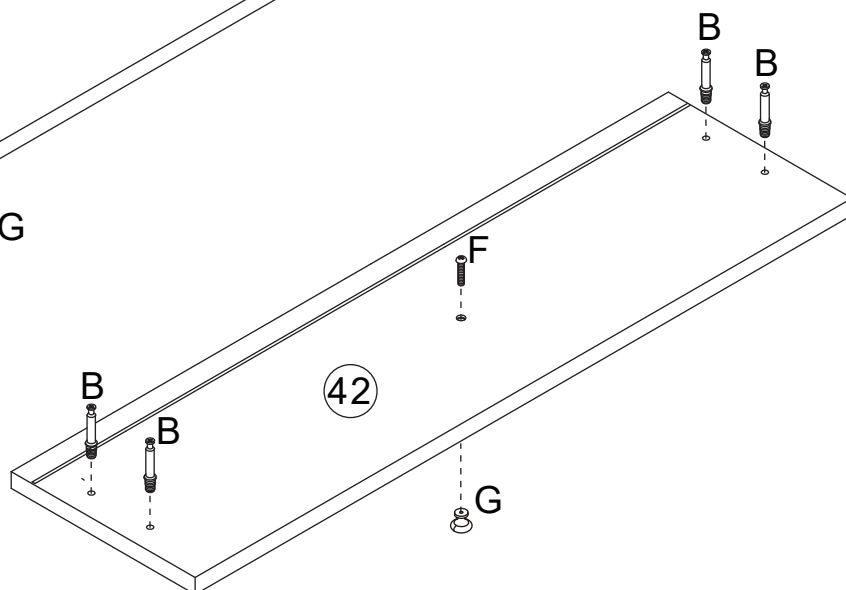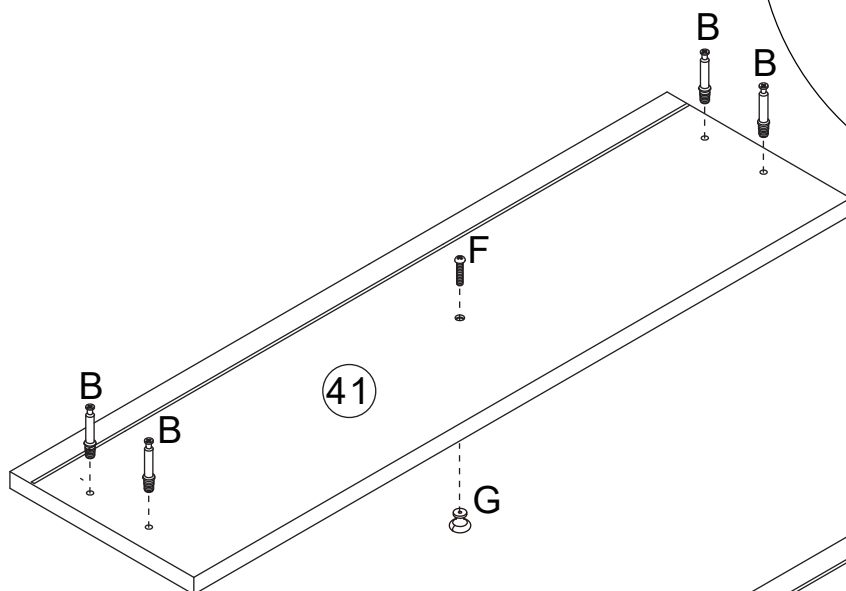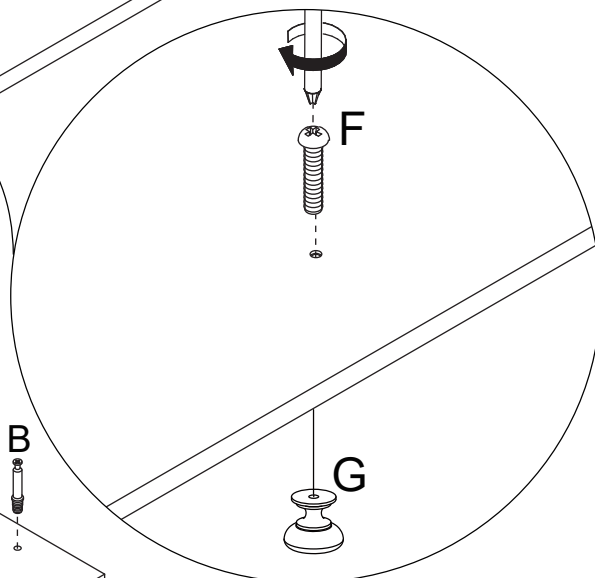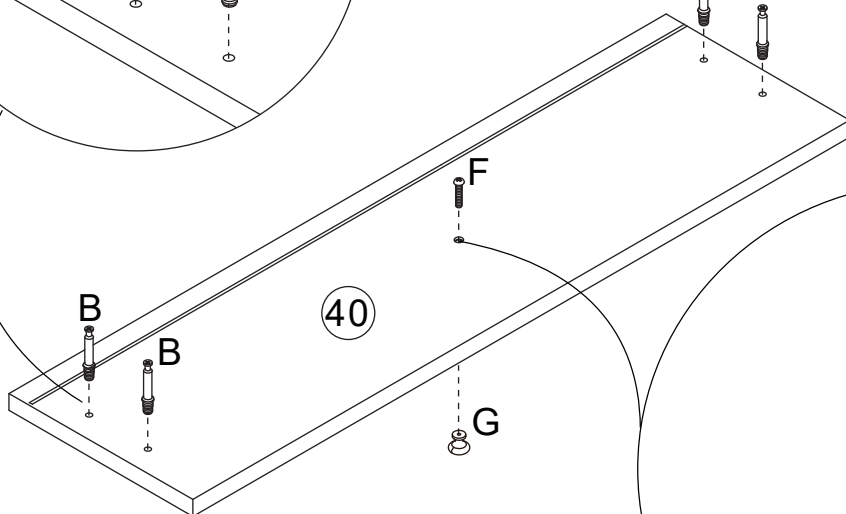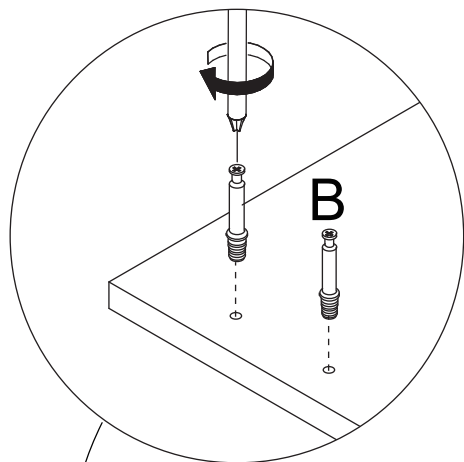


52


P x 12



 Ø 4x30mm





 When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

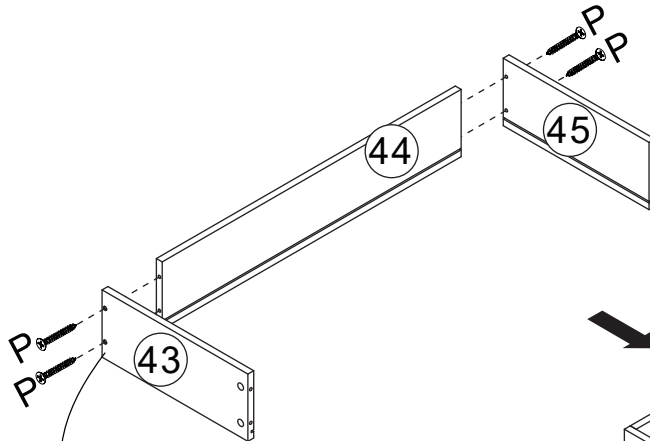


Connec No.43 and No.45 plate with No.44 using screw(P) as shown.

  Slide No.46 plate into available slots as shown.

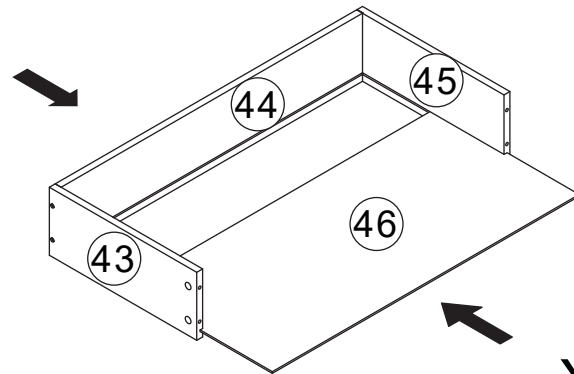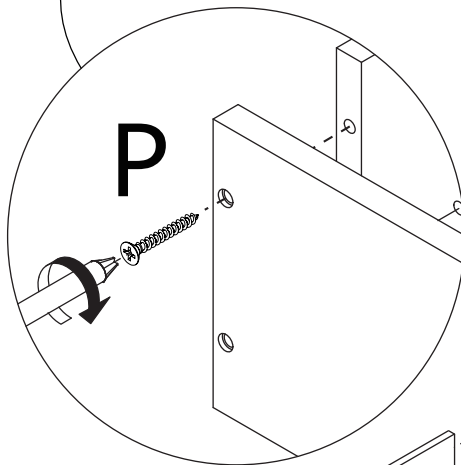


x 2

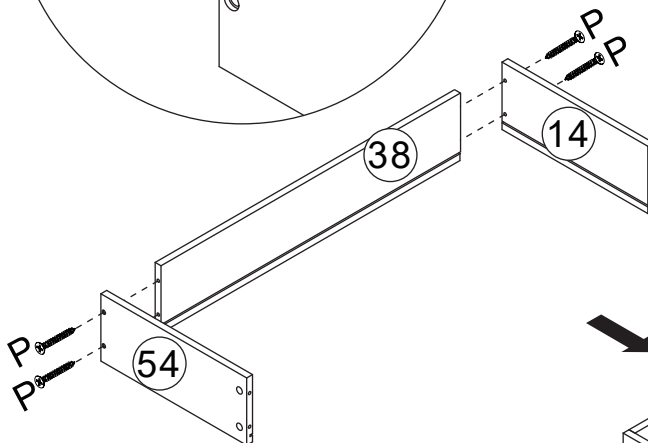 

Connec No.14 and No.54 plate with No.38 using screw(P) as shown.

 
Slide No.25 plate into available slots as shown.

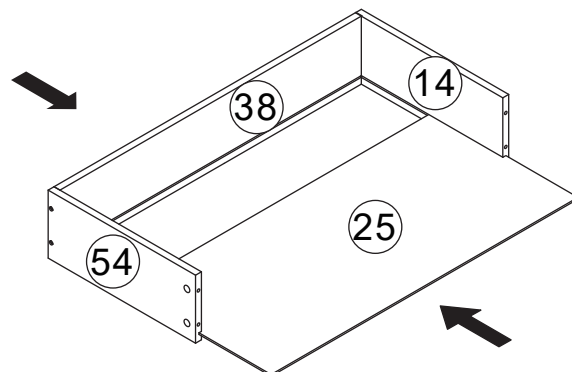



53

C x 12

 
 Ø 15x10mm



 
 
Attach No.40 plate to No.43 and No.45, then turn cam lock(C) clockwise to tighten as shown.

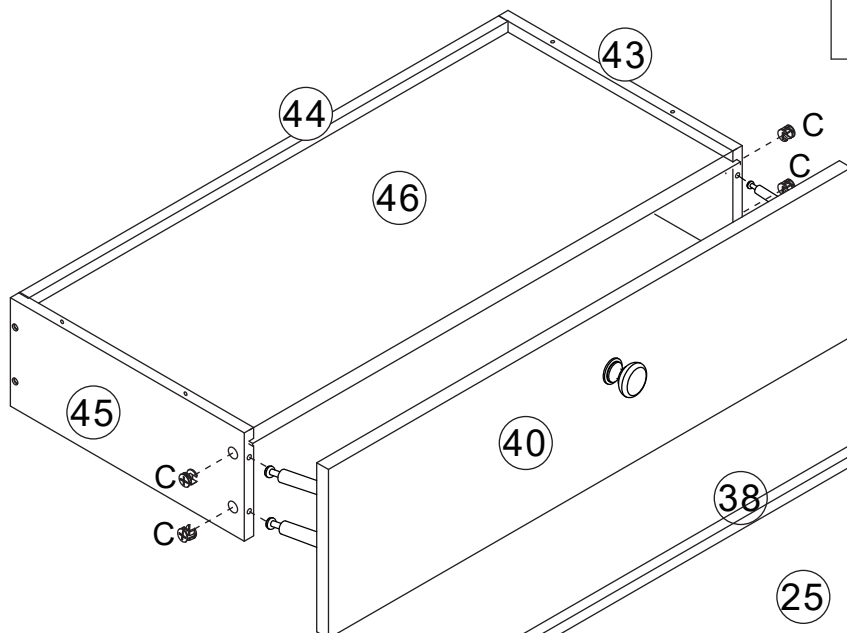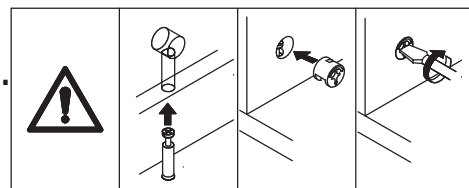



 
Attach No.41 plate to No.14 and No.54, then turn cam lock(C) clockwise to tighten as shown.


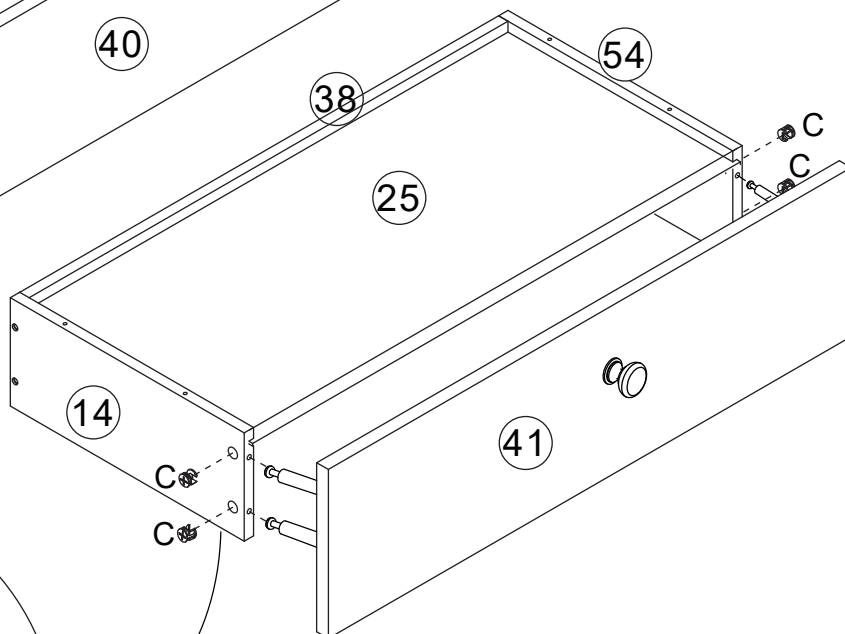


  Attach No.42 plate to No.43 and No.45, then turn cam lock(C) clockwise to tighten as shown.



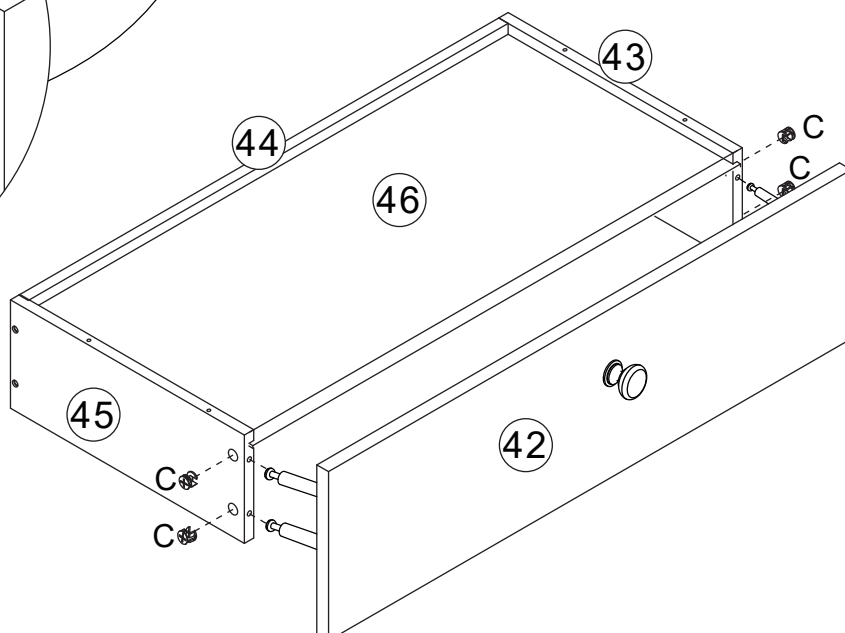
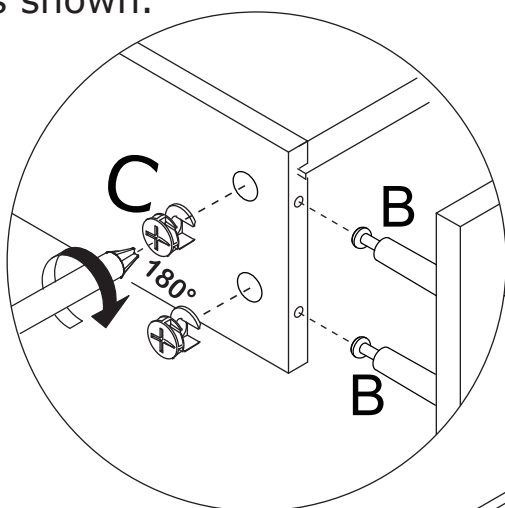


54

   Dx 12  Ø 3 x 12mm	DL x 3 	DR x 3 	
--	---	---	---

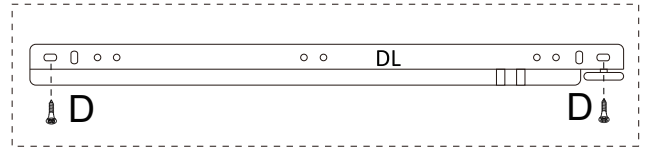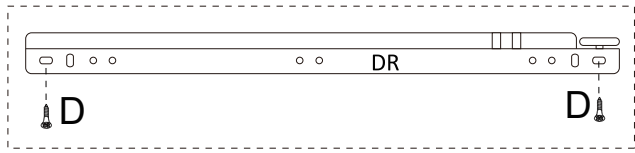  


    Fix runner(DL) to No.43(x2), No.54 plate with screw(D) as shown.
 Fix runner(DR) to No.45(x2), No.14 plate with screw(D) as shown.

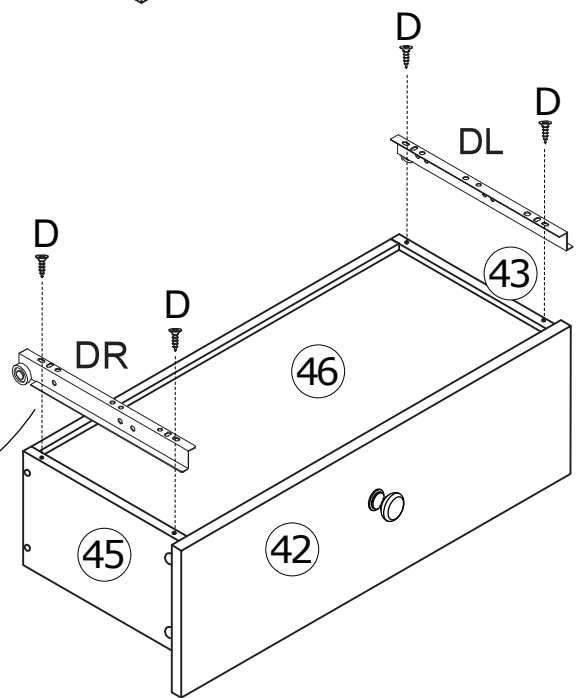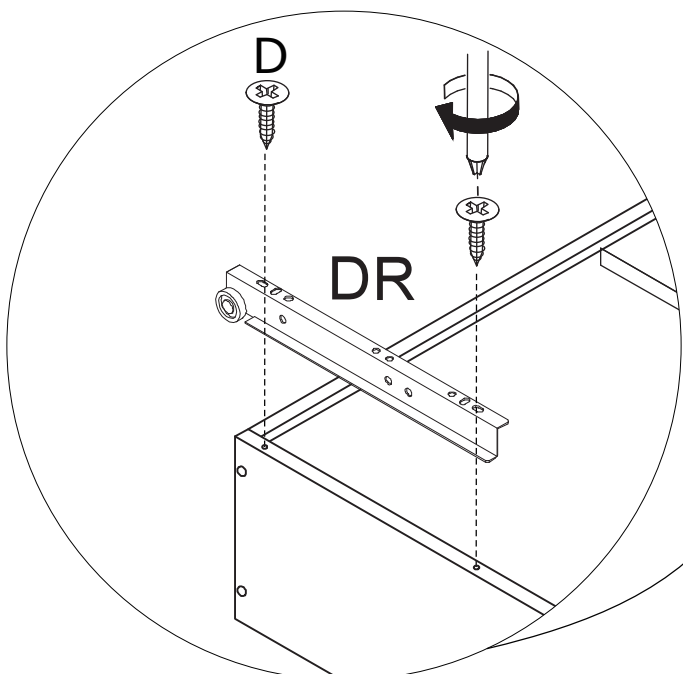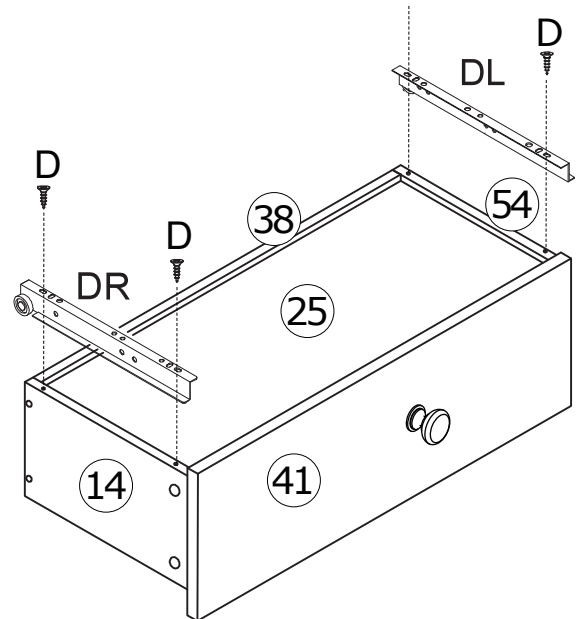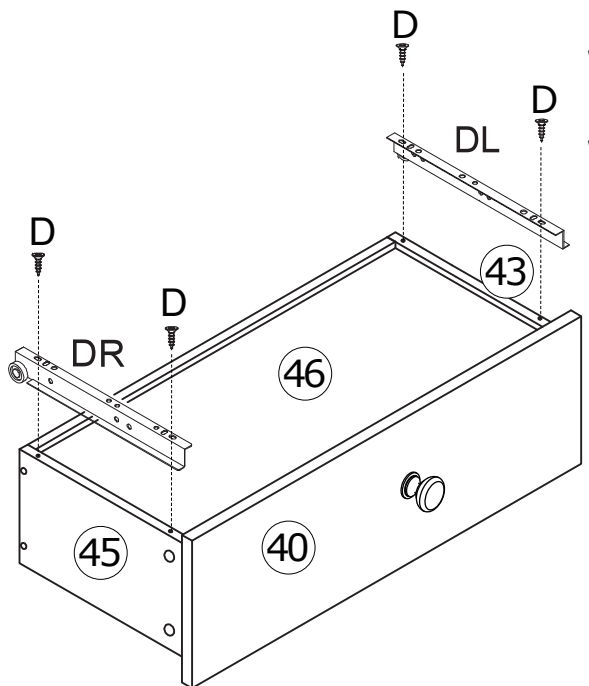

55

 Align rails, slide all drawers.

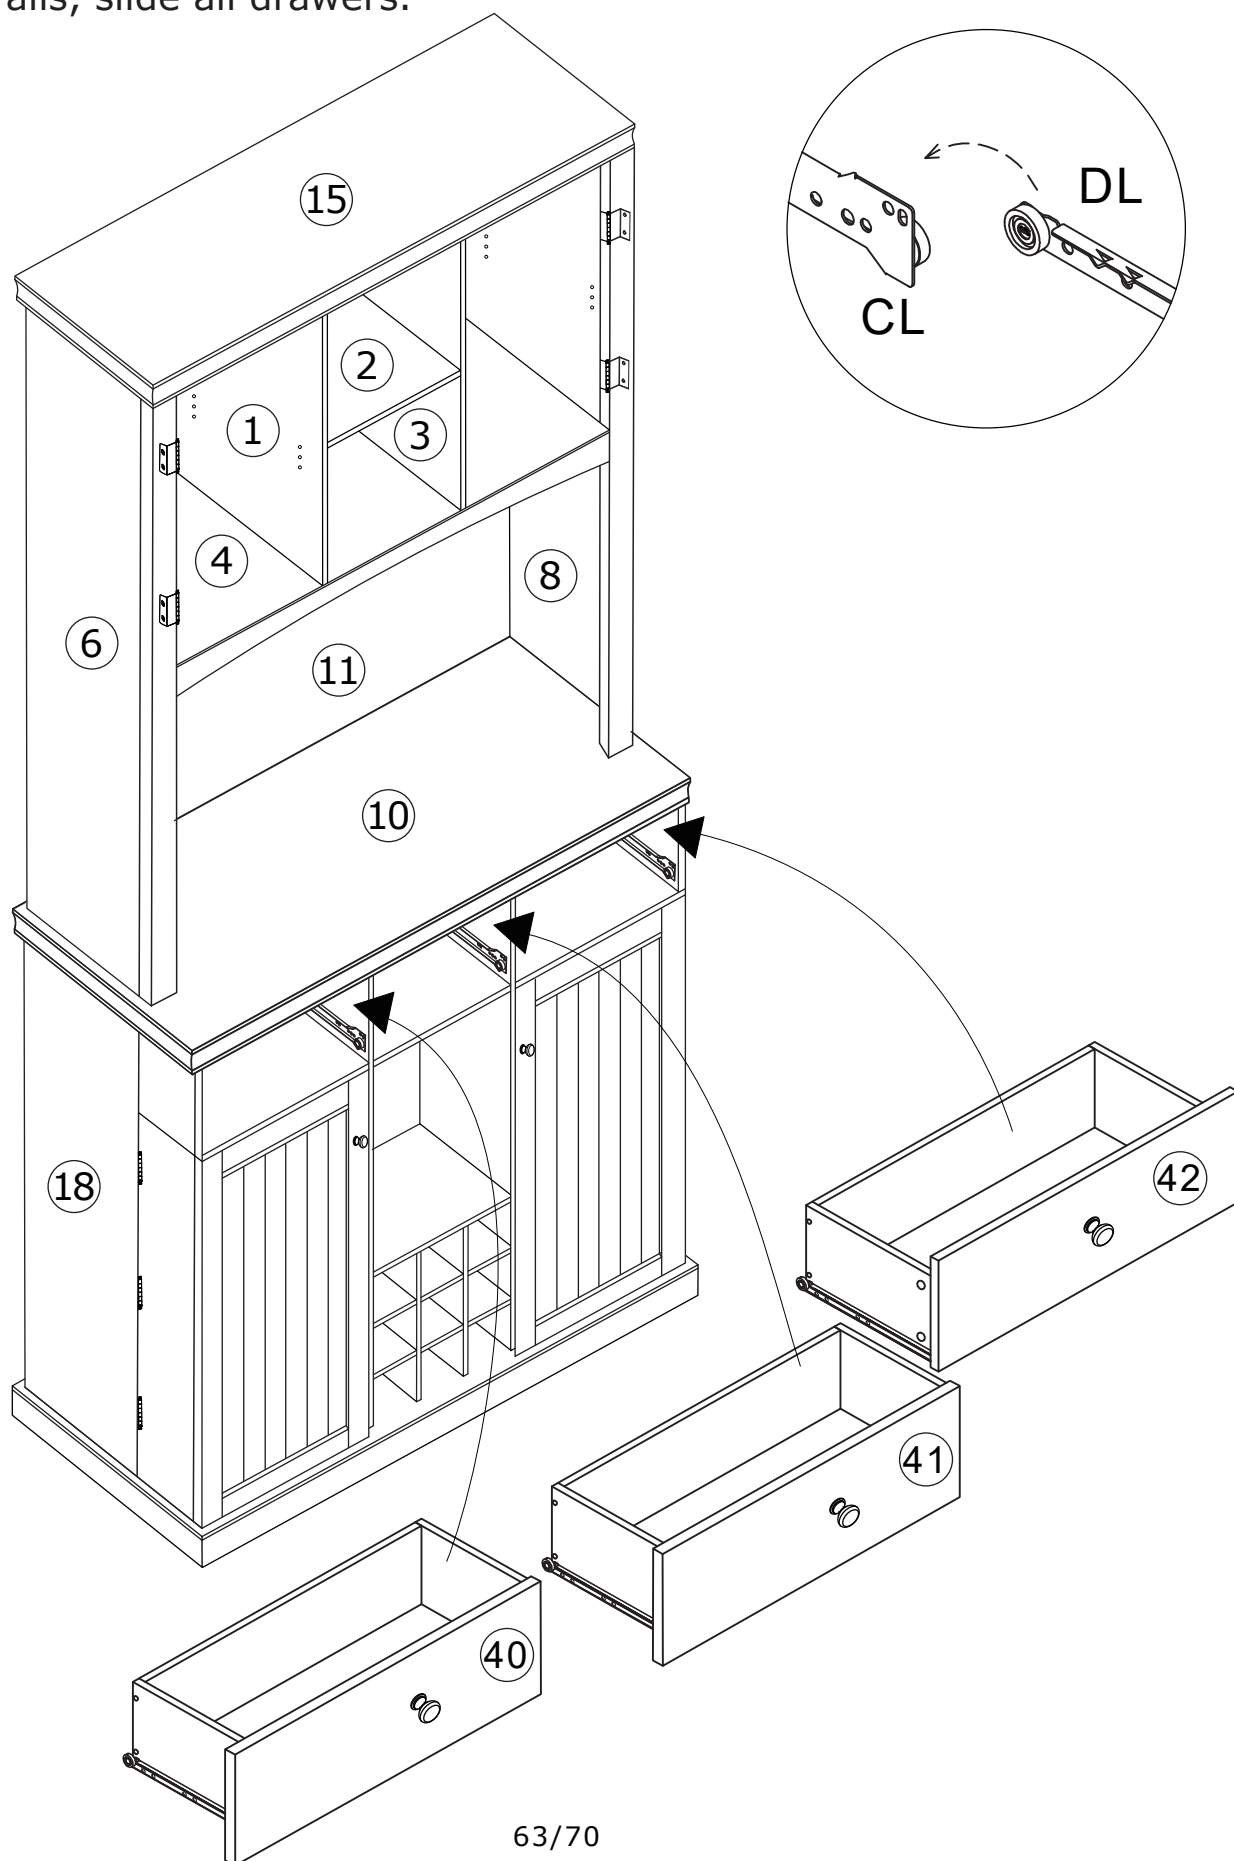

63/70

56

D x 2



φ 3x12mm

W x 2

 


F x 2







φ 4x16mm

G x 2



    Fix part(W) to No.47 and No.48 plate
with screw(D) as shown.
Fix knob(G) with screw(F).

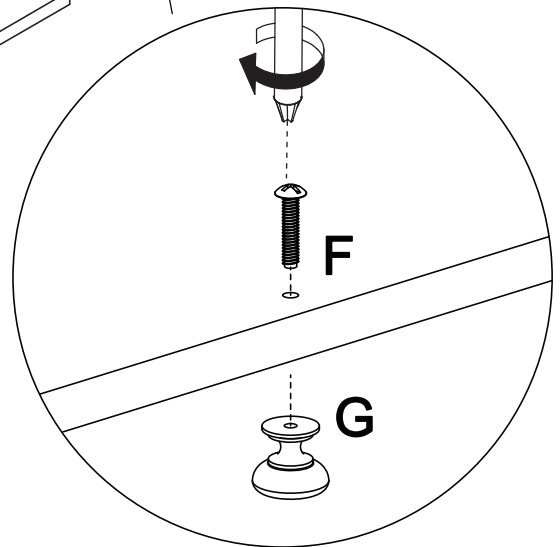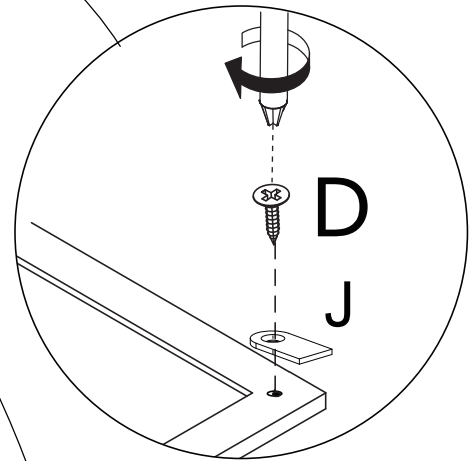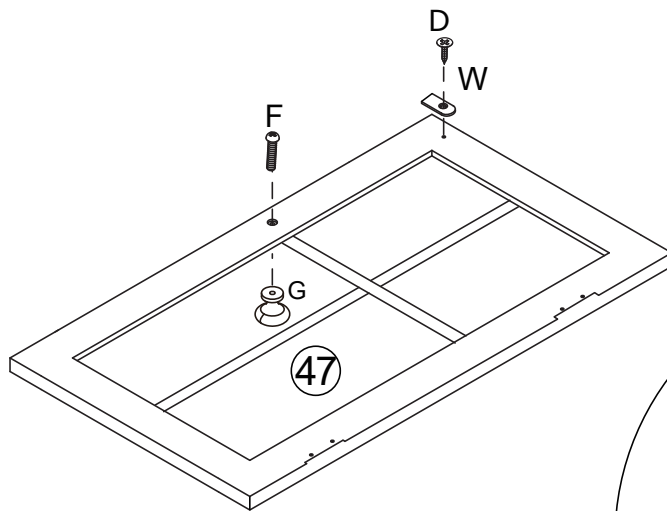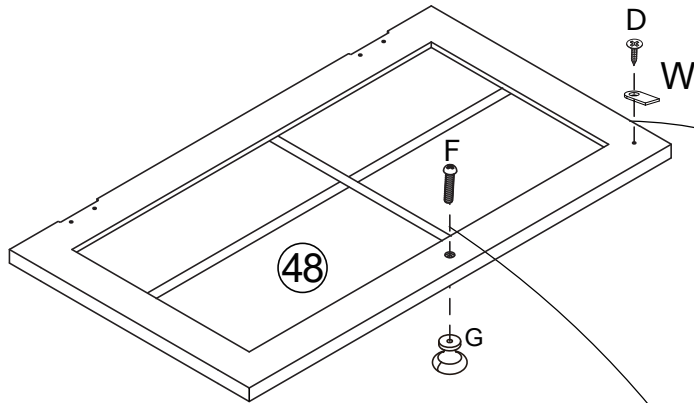


57



D x 8



 Ø 3x12mm



  Attach No.47 plate to No.6; No.48 plate to No.8 by fixing hinge with screw(D) as shown.

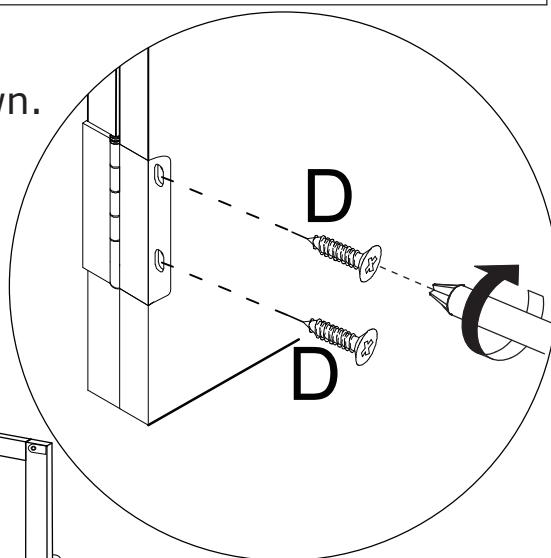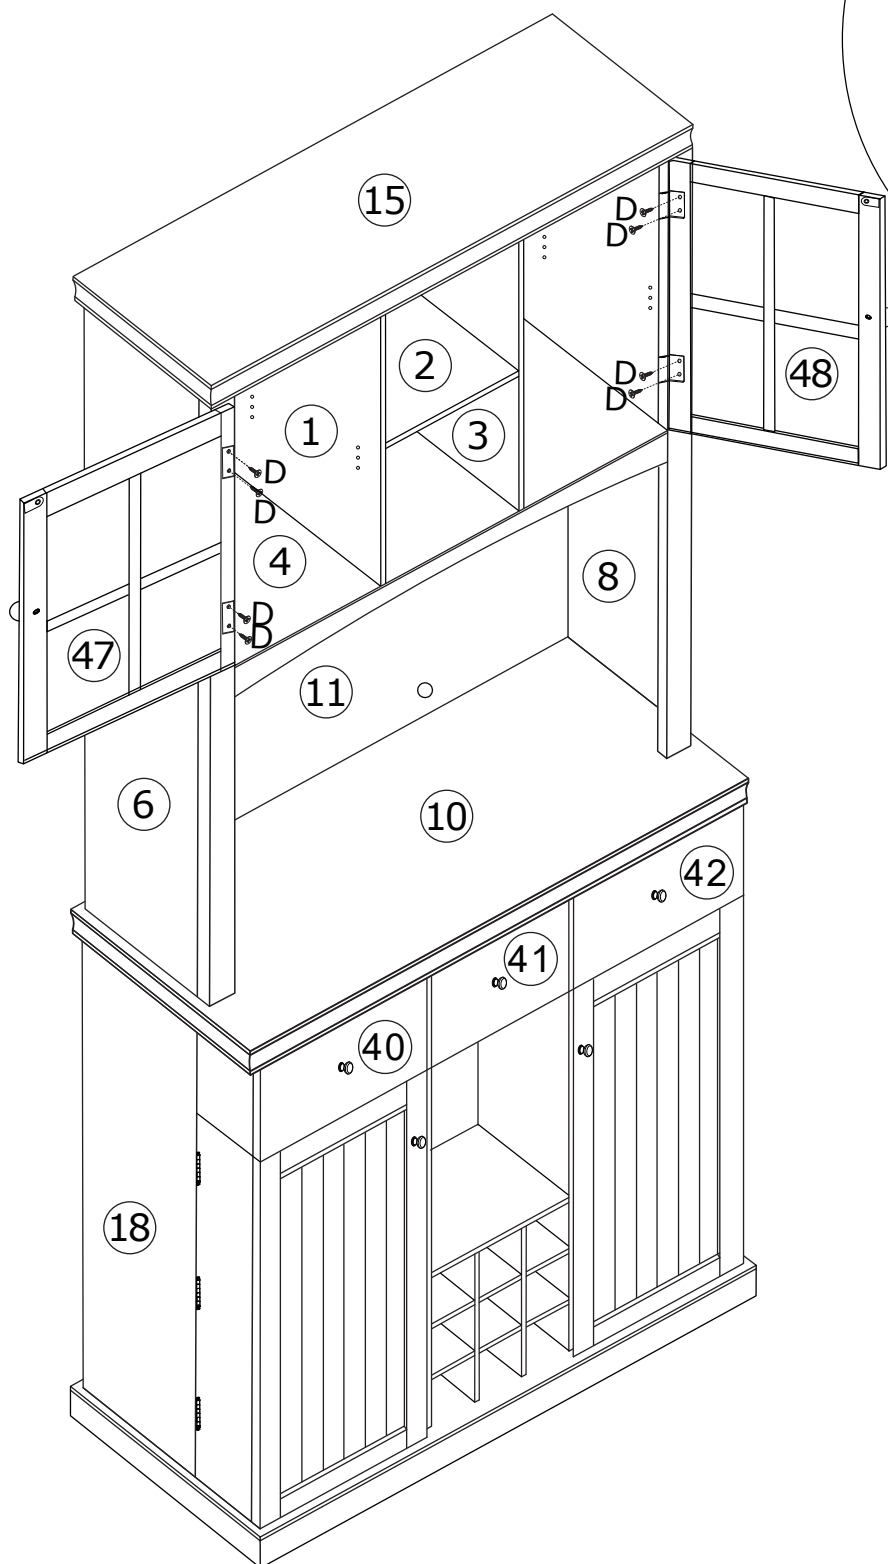


58

U x 8



 Insert part(U) into No.6,1,3,8 plate,
then place No.49 shelf in as shown.

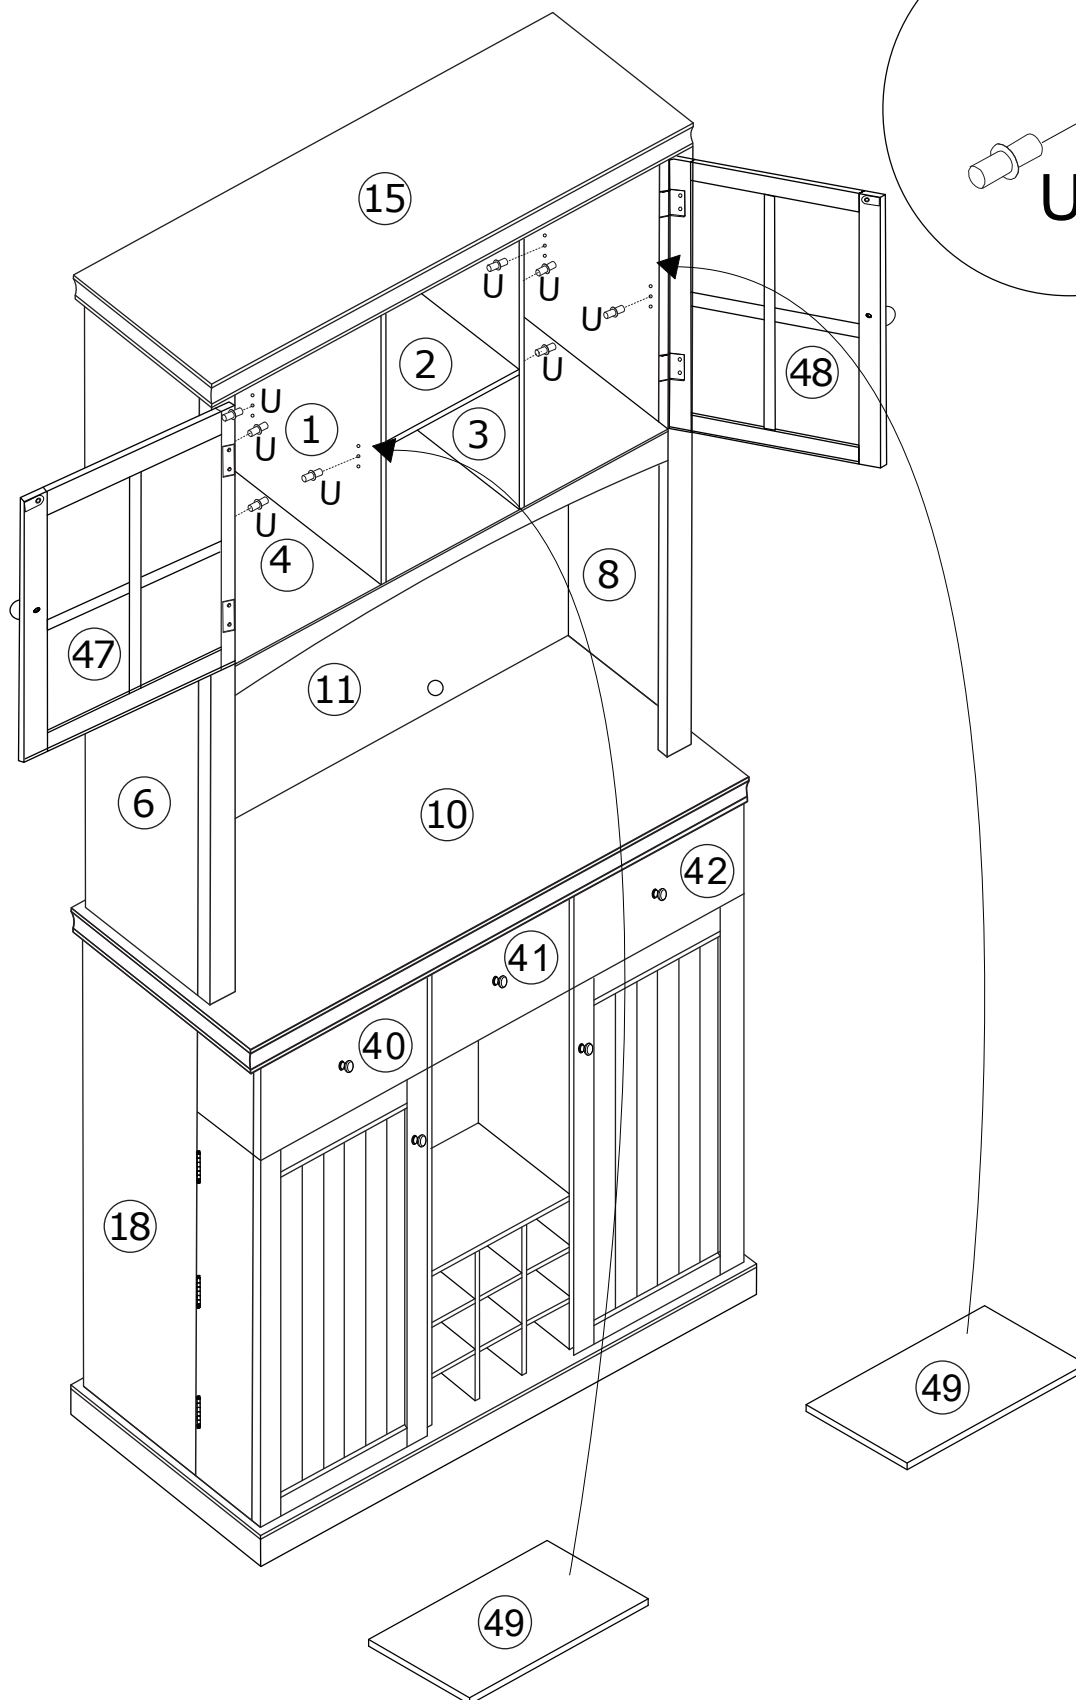


59



T x 28

 Ø 3 x 14 mm

 
R x 28



 
 
Reinforce back plate using part(R)
 with screw(T) as shown.

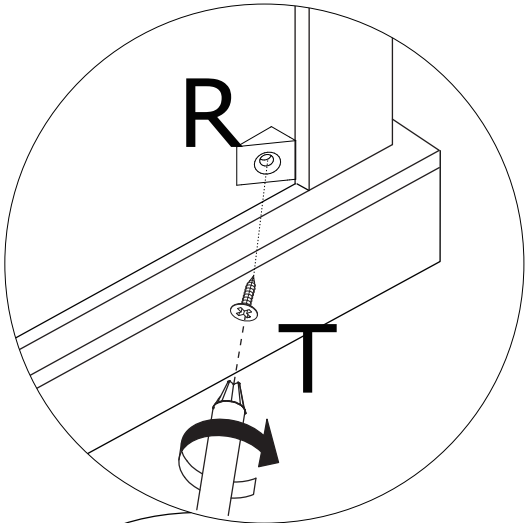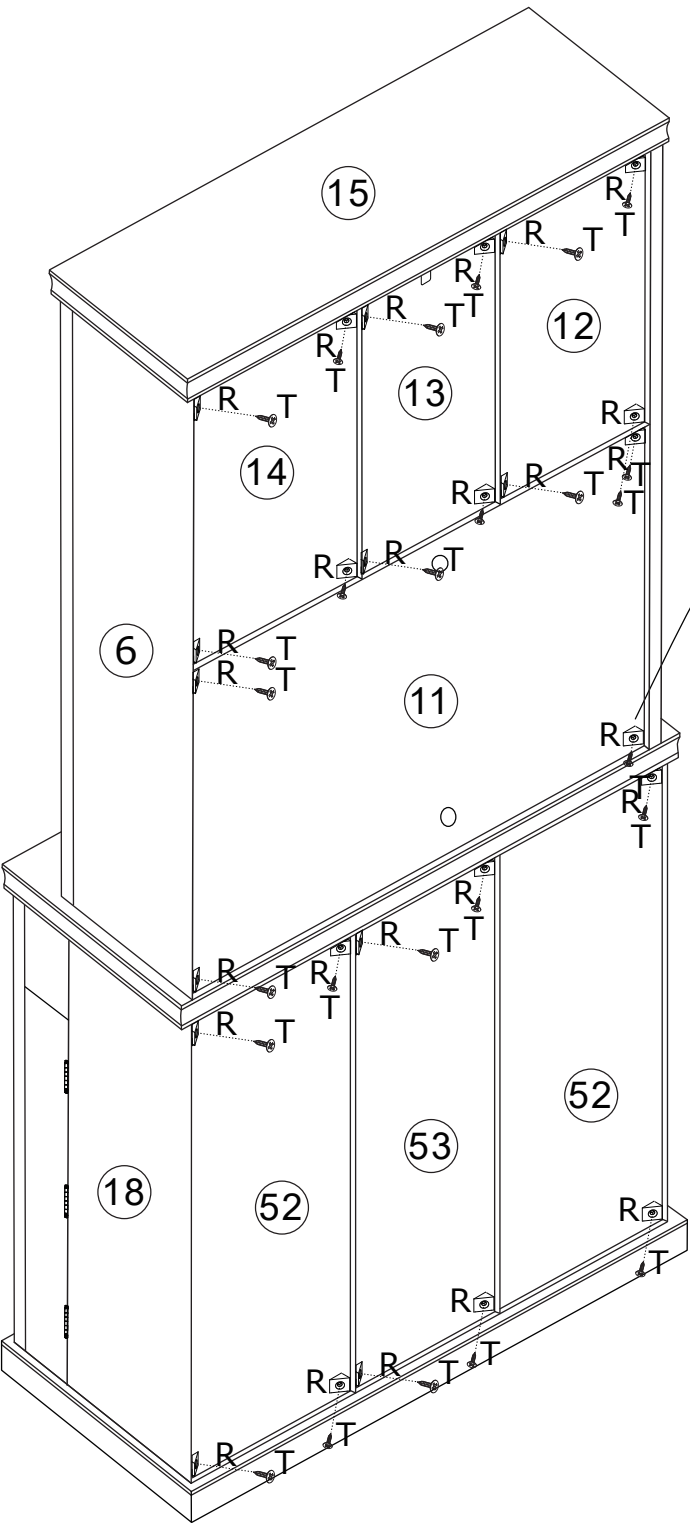

60

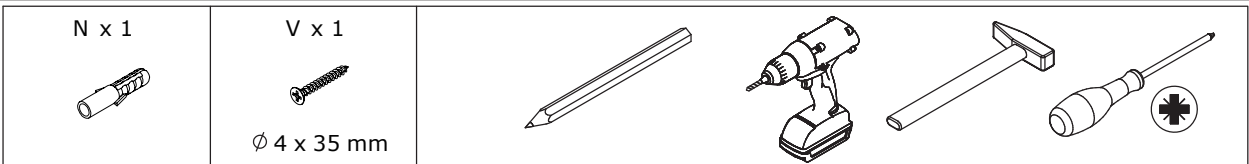 

    Install anti-tipping device(N,V) as shown.

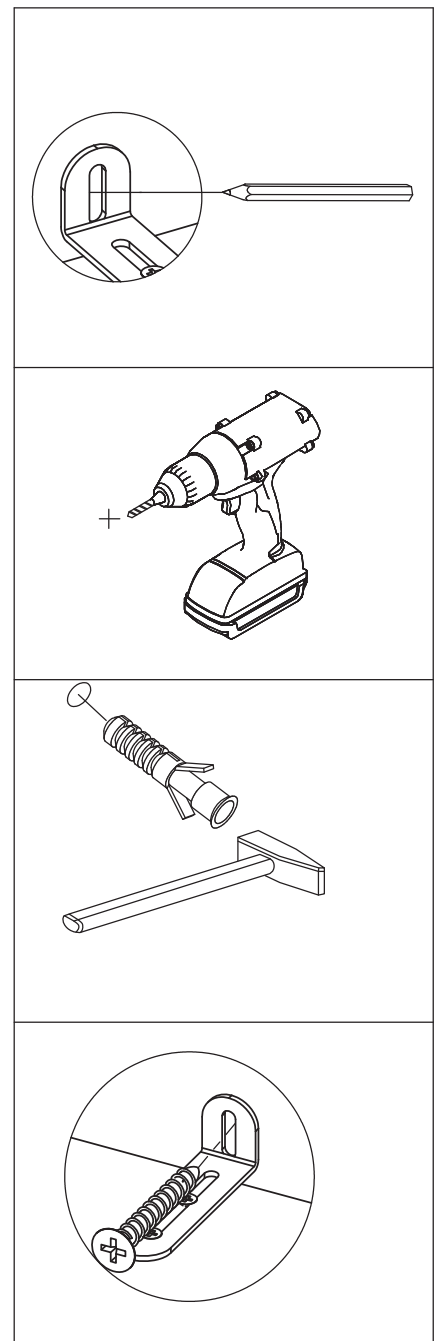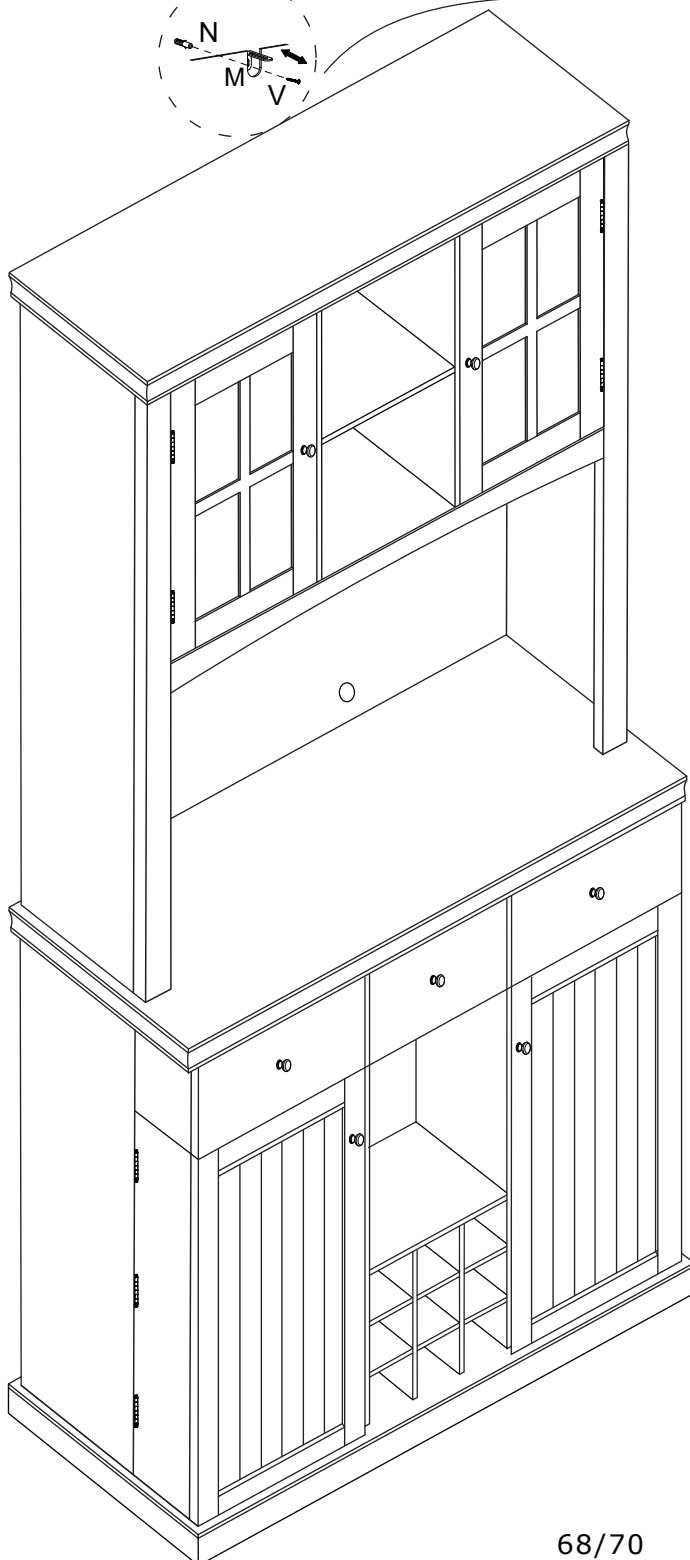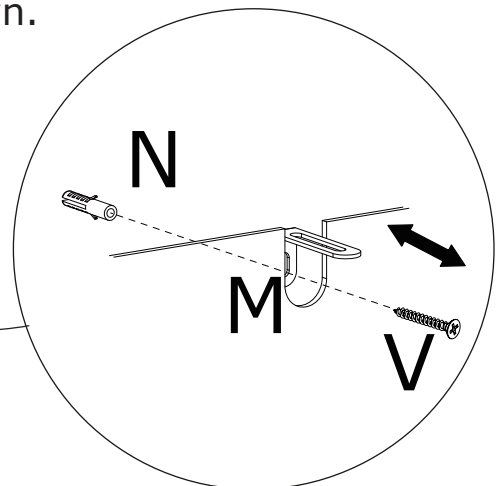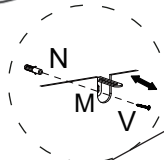

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.