

Fahrenheit

ELECTRIC INFRARED TOWER HEATER WITH SPEAKER & RGB LIGHTING

OWNER'S MANUAL

MODEL: THSR-68BK-1.5



SAVE THIS INSTRUCTIONS MANUAL

TABLE OF CONTENTS

Introduction	1
Safety & Awareness	2-3
Product Diagram	4
Specifications	5
Parts	5
Instructions	6
Operations	7-9
Grounding Instructions	10
Warranty	11
Contact	12



INTRODUCTION




Thank you and congratulations on purchasing the Farenheit Electric Infrared Tower Heater!

IMPORTANT SAFETY INSTRUCTIONS


PLEASE READ THIS ENTIRE MANUAL BEFORE OPERATING THIS PRODUCT.



WARNING

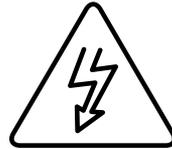

This manual contains important safety information concerning the maintenance, use and operation of this product. Failure to follow the instructions contained in this manual may result in serious injury and/or property damage. Do not operate this product unless you have read and understand the content of this manual.

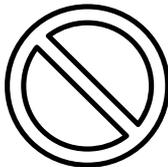

DO NOT store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other heating appliance.

Any required service other than maintenance should only be performed by an authorized service representative. Any other repairs attempted by anyone other than an authorized service representative will void the warranty.



IMPORTANT



REMOVE ALL FOAM PROTECTOR INSERTS FROM THE HEATING ELEMENT BEFORE TURNING ON THE HEATER. FAILURE TO DO SO WILL RESULT IN A BURNING SMELL AND POSSIBLE FIRE.



SAFETY & AWARENESS



IMPORTANT SAFETY INSTRUCTIONS

⚠️ WARNING: When using electrical appliances, basic precaution should always be followed to reduce the risk of fire, electric shock, and injury to persons, and/or property damage, including the following:

- Read all instructions before using this heater.
 - This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, curtains, etc. at least 3 feet (0.9 m) away from the heater, in all directions.
 - To avoid possible electric shocks, do not place the cable, plug or appliance in water or in any other liquid. Do not insert screwdrivers or metallic items inside the appliance.
 - If the power cable is damaged, it must be replaced by the manufacturer, its service technician or by someone else authorized by the manufacturer. In the event of handing of appliances by non-authorized people, the warranty will immediately cease to be valid.
 - DO NOT operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
 - To disconnect electrical appliances, wait until the heater stops and then unplug the cable from the electric socket.
 - Extreme caution is necessary when any heater is used by or near children or vulnerable people and/or whenever the heater is left operating.
 - DO NOT leave appliances working unattended. Ensure that the heater has completely shut off and cooled down before dismantling.
 - Unplug heater after each use and whenever not in use.
 - DO NOT allow children to use electrical appliance.
 - DO NOT leave appliance unattended when in use close to children.
 - Children of less than 3 years should be kept away unless continuously supervised.
 - Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
 - DO NOT dispose of this product as unclassified municipal rubbish. Due to the use of electrical and electric parts, this product must be collected separately.
- ⚠️ CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- ⚠️ WARNING:** The appliance shall, under no circumstances, be covered with insulating material or similar material.



SAFETY & AWARENESS



NOTICE

- The heater must not be located immediately next to a socket-outlet.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. DO NOT route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Connect to properly grounded outlets only.
- DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, DO NOT block air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons and/or property damage.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- The power supplied to this unit must comply with electrical requirement on its label. Damage, fire or injury may result if the incorrect power used.
- DO NOT use the heater in any area that contains flammable objects, gas, or dust.
- In order to avoid scalding, do not allow anyone to touch.
- Turn off all switches and unplug the heater immediately if an emergency situation occurs.
- Cleaning and user maintenance shall not be made by children without supervision.
- Please contact seller if heater does not work properly.
- DO NOT try to repair the heater by yourself. Any other repairs attempted by anyone other than an authorized service representative will void the warranty.
- Please contact the seller if you find other problems not covered in this operation manual.

SAVE THESE INSTRUCTIONS



PRODUCT DIAGRAM



RGB Lights

Immersive ambient lighting

- Hundreds of lighting colors to create the most ideal mood lighting.

 
Smart APP Control

- Download the free APP on your phone or smart device to conveniently control the lighting anywhere, anytime.

Ruby Red

Heating Tube

- No emissions or noise
- Direct heating - heats objects instead of air.



Speakers

 
Broadcast Audio

Connect multiple speakers at once to one device!



On/Off Switch

Turns on/off lights and speaker separately from the heater.



Knob

Low and High heating options.



SPECIFICATIONS



Model	THSR-68BK-1.5
Setting	0/750/1500W
Voltage	120V~60Hz
Power	1500W(Max)
N.W.	20.5 lbs.
Size	15.75(L) x 15.75(W) x 68(H) in.
Speaker	Impedance: 8 ohm Rated output power: 20W RMS Total output power: 25W Max
Bluetooth	Version: 5.0




PARTS




- Heater x 1
- Base Part x 2
- Hex Screw x 3
- Hex Wrench x 1

Hex Wrench x 1

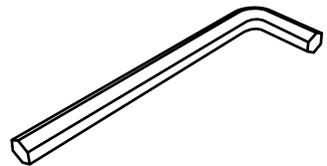

Base Part x 2

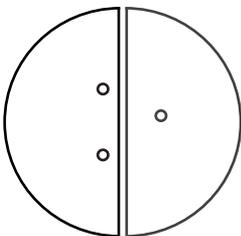

Hex Screw x 3



NOTE: Pictures are for reference only.




INSTRUCTIONS




Step 1 _____

- Place two base parts together.

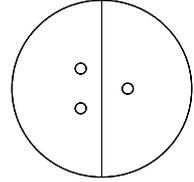


Step 2 _____

- Align the holes in the base to the holes on the bottom of the heater.

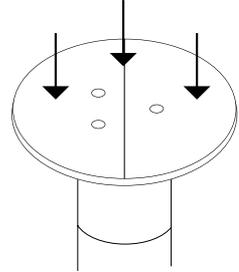

Step 3 _____

- Affix the base to the heater by inserting the 3 hex screws. Use the hex wrench to tighten the screws.

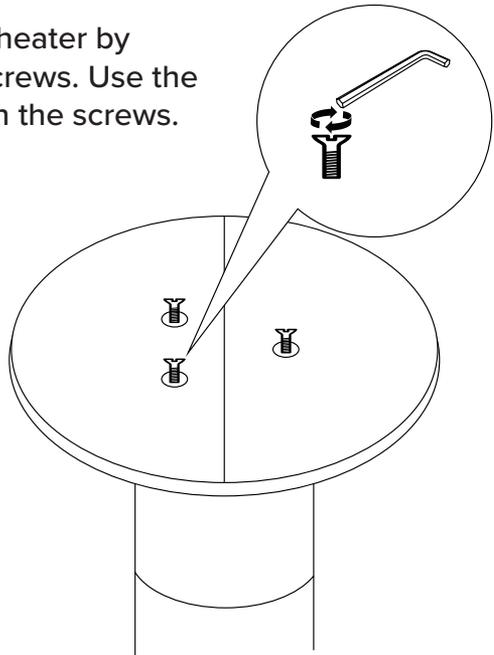



OPERATIONS




PRECAUTION:

- The energy supply must be connected through a properly grounded socket.
- The heater should not be facing the ceiling or inflammable substances.
- Do not use the heater directly near a bathtub, a shower, or a swimming pool.
- Ensure that there is no possibility of inflammable material coming into contact with the heater, or lying near the heater.

OPERATION:

- Before plugging in heater, turn switch to off position.
- Ensure that the unit is plugged into the correct power supply.
- Firmly plug power cord into a grounded socket.

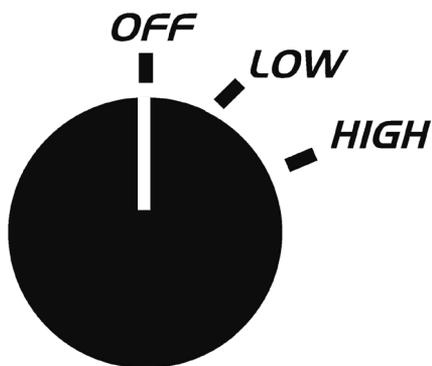

OFF	
Low	Operates at 750W
High	Operates at 1500W

TROUBLE SHOOTING

 
- 1) If the heater does not emit heat after turning on, please check if the power cord is plugged into electric socket properly.
- 2) During first couple of uses, it is normal for the heater to emit a small amount of smoke and/or an odor. This is due to protective-oil evaporation.



Download the App!

Download the app by visiting <https://epsilonelectronicstinc.com/thsr-68bk/> or scan the QR code below.

You can also find it on Google Play or App Store by searching “Tower Heater”.



Cleaning & Maintenance

WARNING:

- Always turn off and unplug the heater before cleaning.
- To clean the heater, use a damp cloth and make sure to dry excess water once cleaned.
- **ATTENTION:** DO NOT put the heater directly into any container with water or any type of liquid in it.
- Pack the heater in a plastic bag and store it in a cool, dry place. Ensure heater is completely cooled off prior to placing in plastic bag.


 **WARNING:** Any additional servicing should be performed by an authorized service representative.



Broadcast Audio

With Broadcast audio you can connect multiple heater speakers at once to broadcast music to multiple heaters with one device.

1. First plug in and turn on only one of the heaters. **Note:** If the speaker & lights are not on, check if the switch at the top is on.
2. Next, turn the Bluetooth on your device on and connect with the heater. Search for “Electric Heater”.
3. After connecting your first heater with to your device, turn on the other heaters. The other heaters will automatically connect to the first heater after a brief moment.
4. That’s it! All your heaters are now connected and the next step is to enjoy!

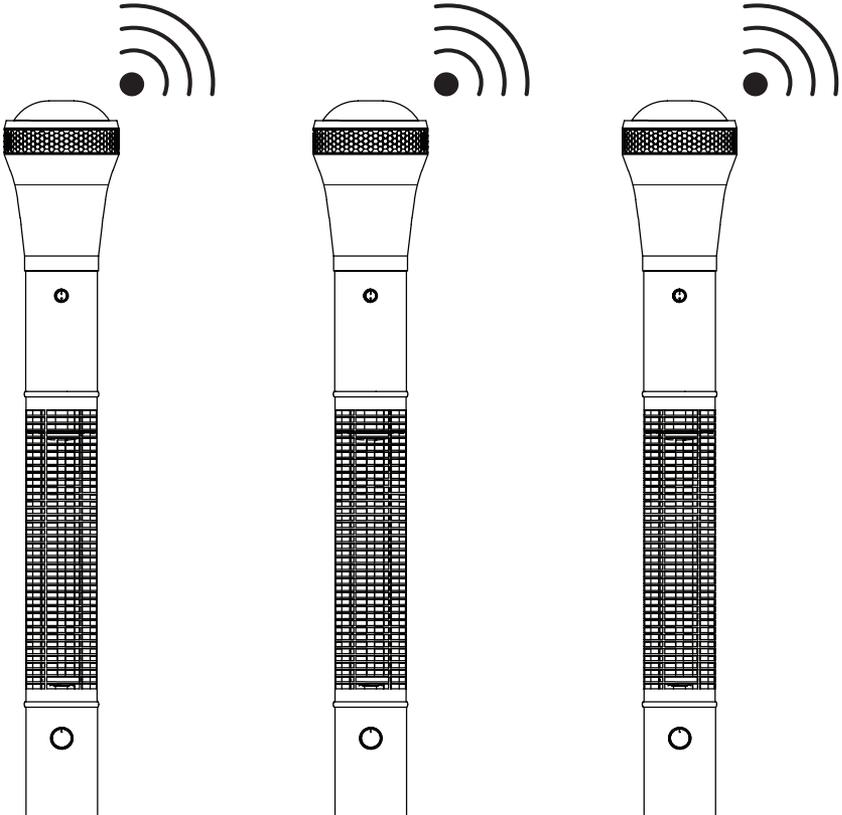




GROUNDING INSTRUCTIONS



This heater is for use on 120 volts. The cord has a plug as shown at A in Figure 1. An adapter as shown at C is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

Figure 1
Grounding methods

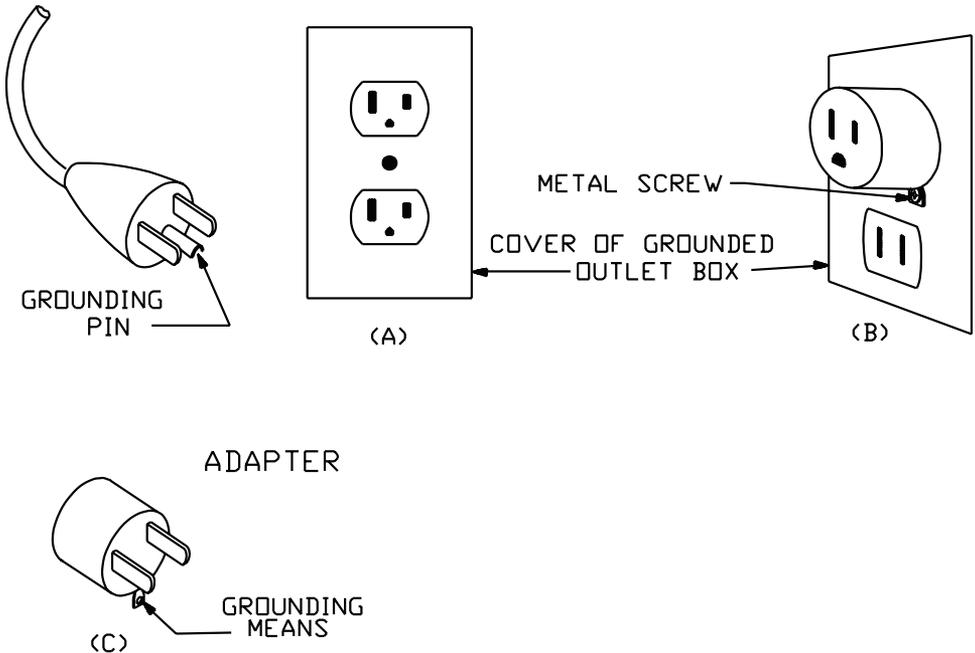



WARRANTY



Fahrenheit promises to the original purchaser, to repair or replace this product with a new or refurbished unit (at Fahrenheit's sole and absolute discretion) should it prove to be defective in workmanship or material under normal use, for a period of one-year from the date of purchase from the Fahrenheit authorized retailer. During this one-year period, there will be no charge for product repair or replacement, PROVIDED the unit is returned to Fahrenheit, return shipping prepaid, along with the required bill of sale or other dated proof of purchase, and the consumer's contact information.

The manufacturer warrants this product to be free from manufacturing and material defects for a period of one year from the date of purchase, subject to the following conditions and limitations.

- Install and operate this electric heater in accordance with the installation and operating instructions furnished with the product at all times. Any unauthorized repair, alteration, willful abuse, accident, or misuse of the products shall nullify this warranty.
- This warranty is non-transferable and it's made to the original owner, provided that the purchase was made through an authorized supplier of the product.
- The warranty is limited to the repair or replacement of part(s) found to be defective in material or workmanship, provided that such part(s) have been subjected to normal conditions of use and service after said defect is confirmed by the manufactures inspection.
- The manufacturer may, at its discretion, fully discharge all obligations with respect to this warranty by refunding the wholesale price of the defective part(s).
- Any installation, labor, construction, transportation, or other related costs/ expenses arising from defective part(s), repair, replacement, or otherwise of same, will not be covered by this warranty, nor shall the manufacturer assume responsibility for same.
- The owner/user assumes all other risks, if any, including the risk of any direct, indirect or consequential loss or damage arising out of the use, or inability to use the product, except as provided by law.
- All other warranties - expressed or implied - with respect to the product, its components, and accessories, or any obligations/liabilities on the part of the manufacturer are hereby expressly excluded.
- The manufacturer neither assumes nor authorizes any third-party to assume on its behalf, any other liabilities with respect to the sale of the product.
- The warranties as outlined in this document do not apply to non-accessories used in conjunction with the installation of this product.
- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void if: (A)The heater is subjected to prolonged periods of dampness or condensation. (B) Any unauthorized alteration, willful abuse, accident, or misuse of the product. (C) You do not have the original receipt of purchase.



CONTACT



**If you have any questions
or comments, feel free to
reach out to us:**




1-(800)-832-4647



info@fahrenheitusa.com



epsilonelectronicsinc.com

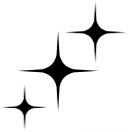

THANK YOU



FOR YOUR PURCHASE!

**There are so many choices
out there, but you chose us.**

**That means a lot and we
want to let you know that
we truly appreciate your
support.**



Fahrenheit

Fahrenheit

Scan here for more
product information



Or visit us at:

epsilonelectronicsinc.com

For more information



|| 1-800-832-4647



|| info@fahrenheitusa.com