



HADEN

ESTD. ENGLAND 1958

Crate&Barrel

DORCHESTER COFFEE MACHINE


**Permanent
Washable Filter**


**Brews
Up to 12 Cups**




**Delay Brew
Function**


**Keep Warm
Function**

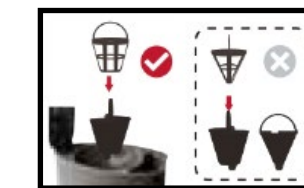
Available in:   

ACTIONS

1 SETTING UP THE FILTERS AND CLOSING THE LID OF THE MACHINE.



Open the lid



Place the filter
basket in the
correct direction



Align the groove in the
back of the filter basket
with the water spout



Gently press down on the
handle so the hook rests
on the locking pin



When in place, fold down
the handle towards the
right to lock the filter
basket in place



Close the lid

2 SETTING THE CLOCK

- When the coffee machine is first connected to the power supply, the screen display will be flashing 0000.
- Press the 'ON/OFF' once to enter 'Standby Mode'. (If pressed twice the coffee machine will enter brewing mode, press 'ON/OFF' again to cancel this).
- Press the 'H' (Hours) button to set the 12hr clock (12am-12pm).
- Press the 'MIN' button to set the minutes (0-59).
- Press the 'SET' button twice to confirm the time.



DORCHESTER COFFEE MACHINE


**Permanent
Washable Filter**


**Brews
Up to 12 Cups**




**Delay Brew
Function**

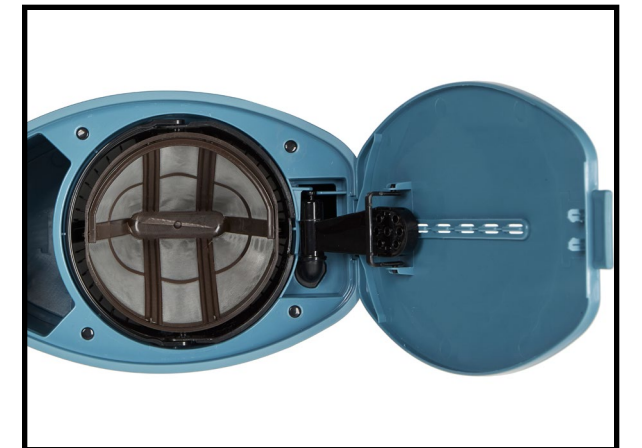

**Keep Warm
Function**

Available in:   

ACTIONS

3 BREWING & KEEP WARM

- Fill the water tank with the required quantity of water.
- Ensure that the funnel is correctly fitted and hooked into the coffee maker.
- Place the reusable filter into the funnel and add the desired quantity of ground coffee.
- Press the 'ON/OFF' button twice to start the brewing process. The screen will automatically display the brewing icon and a counter.
- Once the brewing cycle has finished the coffee machine will automatically enter the 'Keep Warm' mode. The counter will continue to run during this time for a maximum of 120 minutes in 'Keep Warm' mode.
- After this time, the 'Keep Warm' function will stop and the coffee maker will enter 'Standby Mode'.



4 DELAY BREWING

- Press the 'SET' button once and the timer will revert to 0:00 with a flashing clock underneath. The coffee maker is now ready for programming.
- Enter the desired brewing time using the 'H' and 'MIN' buttons.
- Press the 'SET' button to confirm your selection.
- Now on the main display a clock symbol will be displayed indicating that a delay program has been set.

Note: The Delay function will not work if the clock is not set.



DORCHESTER COFFEE MACHINE


**Permanent
Washable Filter**


**Delay Brew
Function**


**Brews
Up to 12 Cups**


**Keep Warm
Function**



Available in:   

ACTIONS

5 HOW TO CLEAN AND CARE FOR THE COFFEE MACHINE

- Turn off and allow the coffee machine to cool before cleaning.
- Clean all detachable parts after each use in hot soapy water.
- Wipe the exterior surface of unit with a soft, damp cloth to remove stains.
- Water droplets may build up in the above area of the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
- Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.
- Replace all parts and keep for next use.
- Take care in pouring to avoid spilling.

Spare parts are available at hadenusa.com





HADEN

ESTD. ENGLAND 1958

