 


WARING PRO®

FOOD SLICER

FS155

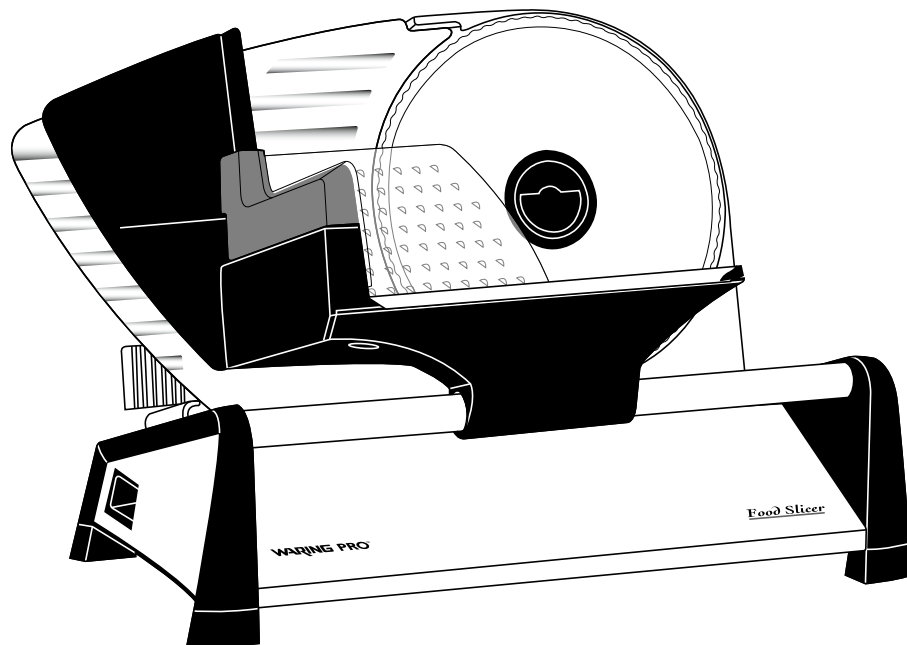 


For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **UNPLUG FROM OUTLET WHEN NOT IN USE, BEFORE PUTTING ON OR TAKING OFF PARTS, AND BEFORE CLEANING.**
3. **BLADE IS EXCEPTIONALLY SHARP. HANDLE VERY CAREFULLY.**
4. To protect against risk of electrical shock, do not put appliance in water or other liquids.
5. This appliance should not be used by or near children or individuals with certain disabilities.
6. Avoid contact with moving parts.
7. Never put the unit near a hot burner, in an oven, or in a dishwasher.
8. Do not operate the Waring Pro® Food Slicer, or any other electrical equipment, with a damaged cord or plug or after the unit malfunctions or is dropped or damaged in any manner. Return unit to the nearest authorized service center for examination, repair, or adjustment.
9. Do not use outdoors.
10. Do not let cord hang over edge of a table or counter, come into contact with sharp edges, or touch hot surfaces.
11. Do not pull on the power cord to disconnect.
12. Never plug in the appliance where water may flood the area.
13. Place the appliance on a firm and stable surface.
14. **NEVER PUT YOUR FINGERS NEAR THE BLADE WHILE IT IS IN OPERATION.**
15. Ensure that the appliance is not placed close to the edge of the table, worktop, etc. where it can be pushed off or fall.
16. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
17. Never use abrasive cleaning agents or abrasive cloths when cleaning the unit.
18. The Waring Pro® Food Slicer has a **sharp** blade. **To avoid injury, never hand-feed food to be sliced.** Always use the unit when completely assembled with food carriage and food press.
19. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit the outlet perfectly, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
20. Do not leave the Waring Pro® Food Slicer unattended while it is running.

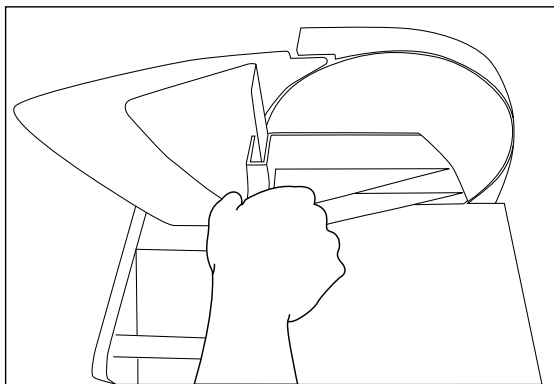

CORRECT HANDLING METHOD

21. Always place hand on food guide when slicing.
22. Never place hand behind food carriage.
23. Do not use this food slicer without food guide.
24. To avoid injury, never use hand to push food when slicing.
25. Unplug before cleaning.
26. Do not use for any other purpose than intended use.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

In case of any maintenance operations or repairs not specifically stated in this manual, please refer to a qualified service center recommended by Waring.

Always read the instructions for use carefully before using and keep them in a place where they can be referred to whenever necessary.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT UNPACKING INSTRUCTIONS

CAUTION: THE SLICING BLADE HAS A VERY SHARP EDGE.

To avoid injury when unpacking the unit, please follow these instructions:

1. Put the box on a large, sturdy flat surface.
2. Remove the instruction book and any other literature.
3. Position box on its side. Slide the packaged unit out of the box.
4. Remove the Styrofoam® inserts.
5. Carefully take the Waring Pro® Food Slicer out of the plastic bag. Please use extreme caution in removing the rubber guards from slicing blade area. We suggest you save all the packing materials in the event that future shipping of the machine is needed.

Keep all plastic bags away from children.

REPACKING INSTRUCTIONS

1. Put food slicer on a large, sturdy flat surface.
2. Put food slicer into plastic bag.
3. Position Styrofoam® inserts on each end of food slicer.
4. Put the packaged unit into the upright box.
5. Replace top corrugation, instruction book and any other literature.

CONTENTS

Important Safeguards	1
Unpacking and Repacking Instructions	3
Introduction	4
Tips	4
Parts	5
Use and Care.....	6
Cleaning and Maintenance	6
Technical Data	6

INTRODUCTION

ANY WAY YOU SLICE IT!

The Waring Pro® Food Slicer eliminates one of the most time-consuming jobs in food prep. This commercial-quality slicer adjusts from 1/32"(5mm) to 1/2"(15mm) to let you slice everything from paper-thin pepperoni to perfect servings of roast beef. It makes life a little more fun, and entertaining as easy as 1-2-3!

TIPS FOR USING YOUR WARING PRO® FOOD SLICER

The Waring Pro® Food Slicer does a great job on a variety of foods. Throwing a great dinner party is as easy as 1-2-3. Start with an easy and delicious antipasto appetizer of sliced cheese, salami and French bread. For best results, always use a hard cheese that has been refrigerated. Slicing the salami and then the French bread will allow for an easier cleanup. Then, move on to slice salad ingredients, potatoes for potatoes au gratin, and even roast beef.

Homemade apple pie can be fast and delicious when the Waring Pro® Food Slicer does all the slicing work for you.

 
A child's birthday party can be fun and easy. Just slice all your ingredients for pizza in advance, and the children can have a great time making their own pizzas.

Having a summer barbecue is effortless with the Waring Pro® Food Slicer. Tomatoes, onions, cheese and even lettuce take no time at all to prepare.

For all your slicing needs, from paper-thin to extra-thick, the Waring Pro® Food Slicer makes food preparation fast and easy.

PARTS

1. On-Off Switch
2. Slice Control Knob
3. Non-Slip Feet
4. 7.5" Stainless Steel Blade
5. Food Guide
6. Plastic Safety Guard
7. Removable Stainless Steel Slicing Carriage
8. Center Hub for Blade Removal

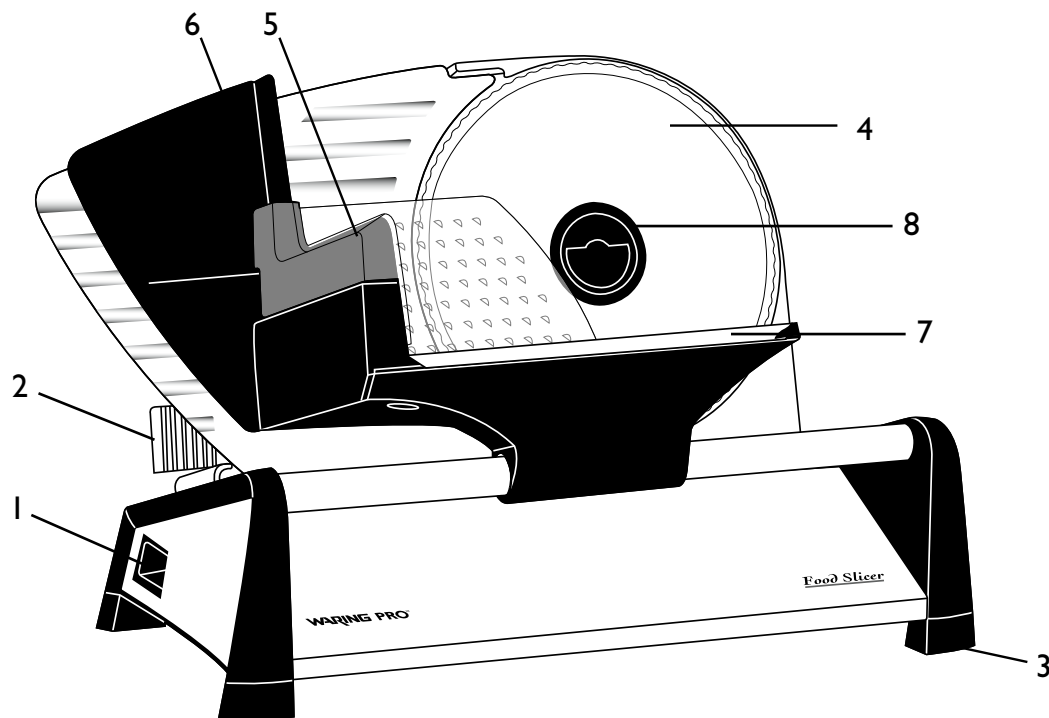

USE AND CARE

1. To use your Waring Pro® Food Slicer, place on a sturdy, flat surface.
2. Check that the switch is turned **OFF** before plugging in the appliance.
3. Adjust the slice control knob to desired slicing thickness ($\frac{1}{32}$ " 5mm to $\frac{1}{2}$ " 15mm).
4. Position food to be cut on the stainless steel carriage and secure with plastic safety guard.
5. Turn the Waring Pro® Food Slicer on.
6. Position hand on food guide handles and smoothly slide carriage backward and forward. **NEVER USE YOUR FINGERS.**
7. To ensure even slicing, do not press the food against the blade too firmly.
8. At this point, check for desired thickness and adjust accordingly with the slice control knob.
9. Continue to slide food carriage back and forth in an even and steady motion. NOTE: Food carriage is removable for cleaning. See #3 on page six.
10. After all your slicing is done, turn the slicer off and unplug.

The Waring Pro® Food Slicer has been designed to operate for short periods (maximum 10 minutes). Do not run for more than 10 minutes in constant use. Allow it to cool before using it again. If the power cord is damaged, a service center recommended by the manufacturer must repair it.

CLEANING & MAINTENANCE

Always unplug your Waring Pro® Food Slicer and turn the slice control knob back to zero before cleaning the appliance. **DO NOT PUT THE APPLIANCE IN WATER.** This could cause damage to electrical parts.

1. Clean and dry all parts immediately after use.
2. Fold out food carriage away from the base for easy cleaning of crumb, seeds, etc.
3. To remove food carriage for cleaning, hold food carriage with two hands and tilt frontward towards you. There is a button to release the carriage marked "Press to release." Press, release, and wash with warm soapy water. Dry thoroughly. To reassemble, align top part of food carriage to bottom part of food carriage and click into place.
4. To remove blade, press in tab where indicated in center hub; twist clockwise and carefully lift and remove blade.
5. With a soft sponge or cleaning cloth, clean both sides of blade with mild soap and water. Rinse and dry blade thoroughly.
6. To replace blade, hold tab, aligning the blade with the drive gears so it engages fully. Turn tab counterclockwise to tighten.
7. Any other servicing should be performed by an authorized service representative.

DO NOT WASH ANY PART OF THIS SLICER IN A DISHWASHER.

TECHNICAL DATA

CARRIAGE SURFACE:	Stainless Steel
Blade:	Stainless Steel
POWER:	130W 120V/60Hz



© 2011 Waring Consumer Products

150 Milford Road
East Windsor, NJ 08520
www.waringpro.com

11WRI21637

Any trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.

Printed in China

IB-10734
