


WARING PRO[®]

PROFESSIONAL TOASTERS 2-SLICE AND 4-SLICE



WT200

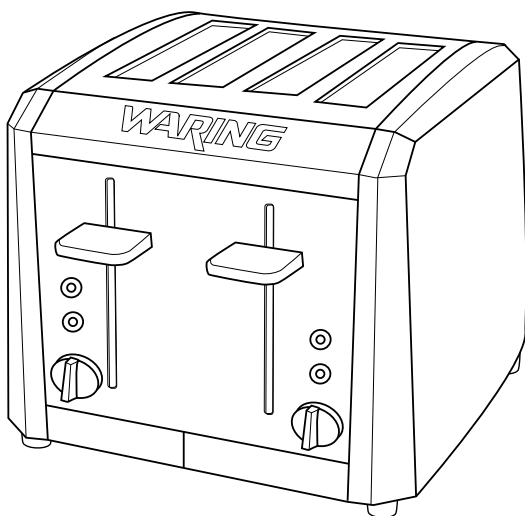

WT400

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. **Read all instructions.**
2. **Always unplug from outlet when not in use and before cleaning. Allow to cool before cleaning, handling, putting on or taking off parts.**
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against electrical shock, do not place any part of the toaster in water or other liquids. See instructions for cleaning.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or if it is not operating properly. Return the toaster to the nearest Waring Repair Center for examination, repair or mechanical or electrical adjustment.
7. The use of accessory attachments not recommended by Waring Pro may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or countertop or touch hot surfaces.
10. Do not place toaster on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster for other than intended use.
12. Oversize foods, metal foil packages or utensils must not be inserted in the toaster, as they may involve a risk of fire or electric shock.

13. A fire may occur if the toaster is covered or touching flammable materials such as curtains, draperies or walls when in operation. Do not operate under wall cabinets.
14. Do not attempt to dislodge food when the toaster is plugged into electric outlet.
15. To avoid possibility of fire, do not leave toaster unattended during use.
16. To disconnect, remove plug from wall.
17. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
18. **CAUTION: DO NOT IMMERSE IN LIQUID.**

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over.

NOTICE: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.


This appliance is for 120 volts only and should not be used with a converter.

CONTENTS

Important Safeguards.....	2
Features and Benefits.....	4
Before First Use	5
Cleaning and Maintenance.....	9

FEATURES AND BENEFITS

- Dual Toasting Slots**
1.3-inch slots toast a wide variety of breads.
- Extra-Lift Carriage Control Lever**
Brings the toast close to the top of the toaster, making it easy to remove smallest items.
- Browning Control and Cancel Knob**
Turn knob to desired toast color from light to dark. To cancel, turn knob counterclockwise.
- Bagel Button**
LED indicator light. Adds extra time to toasting cycle.
- Defrost Button**
LED indicator light. Defrost and toast frozen bread. Adds extra time to toasting cycle.
- Slide-Out Crumb Trays**
Pull out to clean crumbs that collect in bottom of toaster.

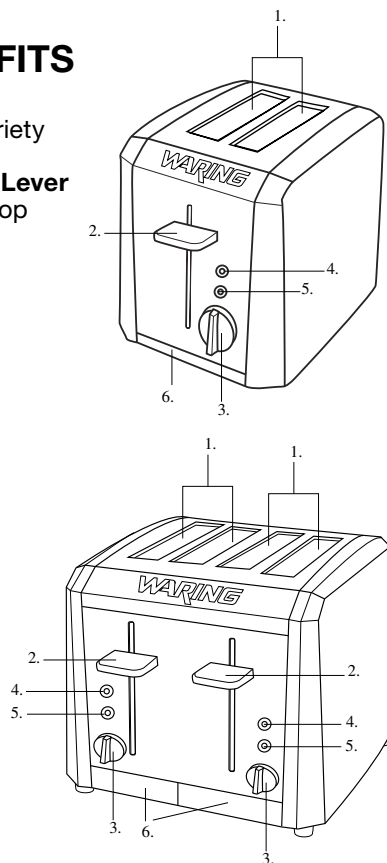

BEFORE FIRST USE

Unwind the power cord. Check that the crumb tray(s) are in place and that there is nothing in the toaster slot. Plug power cord into the wall outlet.

We recommend a trial run on the darkest setting to eliminate any protective substance or oil that may have been used for packing and shipping. A small amount of smoke and odor may be detected during this trial run. This is normal.

TIPS/NOTES ON BROWNING

- Never force foods into the toasting slot. Foods should fit freely between the guide wires.
- Do not place buttered breads or pastries with fillings or frostings in the toaster, as this could be a fire hazard.
- Uneven toasting is usually due to uneven thickness of bread slices.
- After use, unplug your toaster from the electrical outlet.
- Toasting is a combination of cooking and drying the bread. Therefore, differences in moisture levels from one bread to another can result in varying toasting times.
- For slightly dry bread, use a lower setting than you normally would.
- For very fresh bread or whole wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces (such as English muffins) will require a higher toast setting.

- Thickly cut pieces of bread (including bagels) will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose raisins, etc. from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slot.
- Before toasting bagels, slice each bagel into two equal halves.

To Toast

1. Insert slice(s) of bread.

Be sure that multiple slices do not overlap and that the carriage is in the Up position.

2. Set the browning control.

Turn browning control knob to desired setting from light to dark.

3. Press down carriage control lever.

Note: The carriage control lever will not stay down unless the toaster is plugged in.

4. To stop toasting:

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply turn the browning control knob counterclockwise to cancel. Do not use carriage control lever to cancel toasting.

Single-Slice Toasting

If you are toasting a single slice of bread, set the heat selector to a lighter setting than you normally would. The toaster is designed to heat the whole toasting chamber for two slices. By lowering the heat for a single slice, you won't overtoast.

Defrost Button

The Defrost button is designed to first defrost and then toast the bread, which extends the toasting cycle.

The following breads and pastries should be warmed using the Defrost button: frozen waffles, pancakes, French toast, frozen bagels and toaster pastries.

Exercise caution with toaster pastries; the filling can become quite hot, long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming.

1. Insert slice(s) of bread, frozen waffles, pancakes, French toast or frozen bagels. Be sure that multiple slices do not overlap and the carriage is in the UP position.
2. Press the carriage control lever until it locks into the down position.
3. Turn browning control knob to desired setting from light to dark.
4. Press the Defrost button with 10-second cycle time. LED indicates feature is activated (if you press the wrong function, simply press the button again to cancel that function).
5. When the defrost cycle is completed the toaster will raise the bread.

To stop cycle

If you wish to stop the cycle before it is finished, simply turn the browning control knob counterclockwise to cancel. Do not use carriage control lever to cancel toasting.

After use, unplug the toaster from the electrical outlet.

Bagel Button

1. **Insert bagel slice(s).**
2. **Turn browning control knob to desired setting from light to dark.**
3. **Press the carriage control lever until it locks into position.**
4. **Press the Bagel button with 10-second cycle time. LED indicates feature is activated. (If you press the wrong function button, simply press that button again to cancel that function).**

When the bagel cycle is complete, the toaster will raise the bagel. If you wish to stop the cycle before it is finished, simply turn the browning control knob counterclockwise to cancel. Do not use carriage control lever to cancel toasting.

CLEANING AND MAINTENANCE

Always allow the toaster to cool completely before cleaning.

1. Always unplug the toaster from the electrical outlet.
2. Do not use abrasive cleansers. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply any cleansing agent to a cloth, not to the toaster, before cleaning.
3. To remove crumbs, slide out the crumb tray(s) and discard crumbs. Wipe clean and replace. Never operate toaster without the crumb tray(s) in place. **CRUMB TRAY(S) SHOULD BE HAND WASHED ONLY.**
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slot, as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outside of the toaster.
6. Never place any food or objects on top of toaster, as this is a fire hazard.

Any other servicing should be performed by an authorized service representative.

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

NOTES

[illegible]

Any trademarks or service marks of third parties herein are the trademarks or service marks of their respective owners.

©2012 Waring Consumer Products
150 Milford Road
East Windsor, NJ 08520

www.waringpro.com

Printed in China

12WR128682

IB-9523B