

Ice Crusher

Automatic

Deni®

Model #6100

IMPORTANT!

Please keep these instructions and
your original box packaging.

www.deni.com



INSTRUCTIONS
FOR PROPER USE AND CARE


ICE CRUSHER

IMPORTANT SAFEGUARDS

When using this electrical appliance, safety precautions should always be observed, including the following:

- Read all of the instructions before using appliance.
- Make sure that the supply voltage is the same as the voltage marked on the ice crusher (see rating label).
- Do not leave appliance when plugged in.
- Do not use outdoors or on a wet surface.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual.
- Unplug from outlet when not in use, before cleaning and before attaching or taking off parts.
- Do not use with damaged cord or plug. If the appliance is not working properly, has been dropped, damaged, left outdoors, or dropped into water, return it to Keystone Manufacturing Company, Inc. for proper service, replacement or repair immediately.
- Do not do the following: pull or carry by the cord, use cord as a handle, close a door on cord or pull cord around sharp edges or corners. Do not operate appliance over cord. Keep cord away from heated surface. Do not let cord hang over edge of the table or counter.
- Do not place the ice crusher on or near a hot gas or electric burner or in a heated oven.
- Never place fingers or other utensils into feed or discharge areas. And never place your finger or other utensils into the ice crushing chamber.
- Prior to use, wash all parts that will be in contact with food.
- The ice crusher should be placed on a level and non-slippery surface, as the device vibrates while in operation.
- Make sure that the ice container is in place before operating crusher.
- To protect against electrical shock, do not put in water or other liquid.
- Only use the provided accessories for operation. We do not accept any liability for damage caused by using improper accessories.
- Do not use an extension cord with this unit. However, if one is used, it must have a rating equal to or exceeding the rating of this appliance.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord. Do not handle plug or appliance with wet hands.
- Check the ice crushing chamber for presence of foreign objects, make sure there are nothing inside the ice crushing chamber before using.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug will fit in a polarized outlet only one way. If the plug does not fit, contact a qualified electrician. Do not modify the plug in any way.
- This unit is recommended for household, indoor use only.

SAVE THESE INSTRUCTIONS

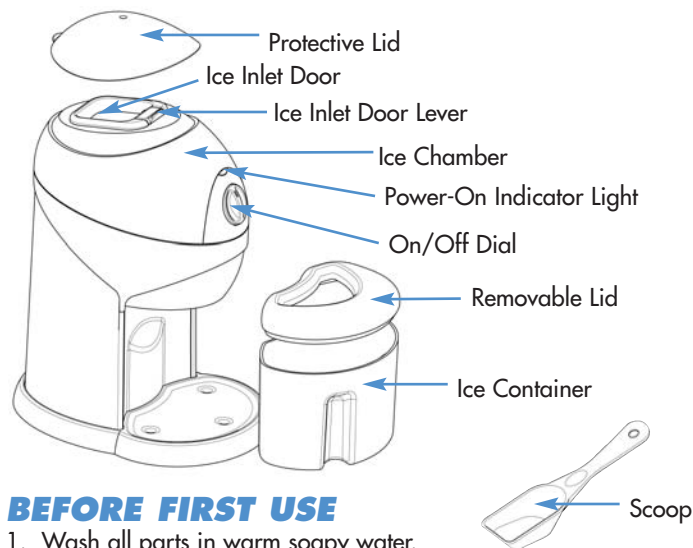

BEFORE FIRST USE

1. Wash all parts in warm soapy water.
2. Read all instructions.

USING THE ICE CRUSHER

1. Place the unit on a dry, flat surface. Plug the unit in. (The blue power indicator will illuminate. The light will stay on as long as the unit is plugged in.)
2. Place the ice container (with lid on) under the ice chamber.
3. Check the ice crushing chamber for presence of foreign objects, make sure there is nothing inside the ice crushing chamber before using.

4. Turn on the motor and let it run for a few seconds.
5. Take off the protective lid.
6. Place an ice cube on the metal ice inlet door. Push up on the ice inlet door lever until the ice cube falls into chamber.
7. Put the protective lid back into place and hold into position. Once, the ice cube is crushed repeat, steps 4-5.
NOTE: Ice Crusher crushes 14 oz. of ice per minute.
8. When complete, pull out the ice container and remove lid to retrieve ice.

CLEANING AND MAINTENANCE

- Unplug the ice crusher before cleaning it. **Never immerse this appliance into water or any other liquid.**
- Simply wipe the ice crusher exterior with a damp cloth.
- Wash ice container with lid and scoop with warm soapy water. Avoid the use of abrasives or steel wool.
- If crushing flavored ice cubes, the crushing chamber can be cleaned by crushing plain ice cubes, until clean. Do not attempt to clean the ice chamber with hands. The ice chamber houses the crushing blades. Use extreme caution.
- Do not disassemble the unit for cleaning purposes.
- All parts should be thoroughly dried before storing away.
- Cord storage is located beneath the base.

CUSTOMER SERVICE

If you have any questions or problems regarding the operation of your Deni Ice Crusher, call our customer service department toll free:

Monday through Friday
8:30 a.m. to 5:00 p.m.
(Eastern Standard Time)

1-800-DENI-822

or E-mail us at
custserv@deni.com

www.deni.com

Deni by Keystone Manufacturing Company, Inc.®

ONE-YEAR LIMITED WARRANTY

Your Deni Ice Crusher is warranted for one year from date of purchase or receipt against all defects in material and workmanship. Should your appliance prove defective within one year from date of purchase or receipt, return the unit, freight prepaid, along with an explanation of the claim. If purchased in Canada, please send to: Keystone Manufacturing Company, Inc., 151 Cushman Road, St. Catharines, Ontario L2M 6T4. If purchased in the U.S.A. or other country, please send to: Keystone Manufacturing Company, Inc. 33 Norris Street, Buffalo, NY 14207. (Please package your appliance carefully in its original box and packing material to avoid damage in transit. Keystone is not responsible for any damage caused to the appliance in return shipment.) Under this warranty, Keystone Manufacturing Company, Inc. undertakes to repair or replace any parts found to be defective.

This warranty is only valid if the appliance is used solely for household purposes in accordance with the instructions. This warranty is invalid if the unit is connected to an unsuitable electrical supply, or dismantled or interfered with in any way or damaged through misuse.

We ask that you kindly fill in the details on your warranty card and return it within one week from date of purchase or receipt.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state or province to province.