

# Owner's Manual

**QUIKSHADE<sup>®</sup>**  
**SUMMIT**

Please review the following instructions and make yourself familiar with the parts and function of your Quik Shade<sup>®</sup> canopy.

## Parts included:

### [1] assembled canopy frame

("L" Awning arm extensions; 4-double awning, 2-single awning)

### [1] fabric canopy top with awning

(Awning rod assemblies: 2-double half wall awning units)

### [1] storage bag



### [4] stakes

**Set-Up --Step 1:** Before opening the canopy, remove the sleeve covering the vents. Canopy will not open if this is not removed. Place your QUIK SHADE in the center of the set-up area. With a partner on the opposite side of the frame, hold onto the two outer legs and lift slightly for clearance. Take a few steps back until you extend the frame to a full arm's length- approx. 4 feet (Fig. A).

**Step 2:** Open the canopy to about 80% and place the top fabric on the frame. Make sure the long portions are on the two sides where the awning arms are located and that the vent fabric is on top of this piece (Fig. B).

**Step 3:** Attach the hook and loop straps around the legs at each corner to secure the top (Fig. C).

**Step 4:** Open the canopy the rest of the way by pressing on the top and bottom of the diamond on the eave (Fig. D). Be sure your partner is across from you diagonally.

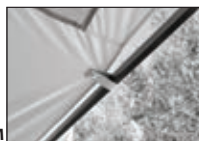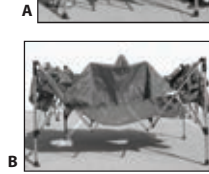

**Step 5:** Lock the Quik latch slider in place by holding the top of the leg and pushing up on the slider (Fig. E).

**Step 6:** Open vents to the desired size to provide additional air flow (Fig. F). Your opened canopy should resemble (Fig. G).

**Step 7:** Pull the inner leg out to extend the height of the canopy to the first level (Fig. H). The Quik latch will click into place. Extend the canopy to its desired height by pressing on the Quik latch and lifting the canopy until the latch clicks into place. Use the provided stakes to secure the canopy. Note: for the awning to work properly, the canopy needs to be at its highest position.

**Step 8:** Extend the awnings arms upward until they click into place at around 45 degrees (Fig. I).

**Step 9:** Form a straight assembly by attaching the corded awning rods. Insert the rod assembly through the sleeve at the end of the awning fabric (Fig. J).

**Step 10:** Snap the awnings wall in place by attaching the straight assembly to the awning extension arm (Fig. K).

**Step 11:** For units with a full wall, make another straight assembly. Insert this assembly into the sleeve at the bottom of the wall. Then, attach the provided awning extension to the awning arm by sliding it over the end (Fig. L). As before, attach the straight assembly to the arm extender (Fig. K).

**Step 12:** When the wall is closed, there is a dedicated snap tab that goes around the canopy leg to keep it snug with the frame (Fig. M).

**Step 13:** You can manipulate the awning five different ways by moving the arms until the lock into place. Make sure the other arm is at the same setting.

**Step 14:** Fill out the included warranty form. Product information can be found on the red sticker on the eaves of the frame (Fig. N). Staple a copy of your receipt to the warranty form and store in a safe place.

## Example



Go to [BravoSportsCorp.com/ServiceProductRegistration.aspx](http://BravoSportsCorp.com/ServiceProductRegistration.aspx) and register your new canopy. If you have any issues setting up your canopy, have questions, need parts or accessories call our toll free service line (800) 248-5327.

**Take Down --Step 1:** Remove stakes from the ground. Position the awning to its lowest setting and unbutton the fastening snaps (Fig. O).

**Step 2:** Disengage the awning rods from the arms by carefully pulling the rod out (Fig. P).

**Step 3:** Pull out the awning rod from the fabric (Fig. Q). Disassemble the awning rods in a similar way.

**Step 4:** Reduce each leg to its lowest position by pushing or pulling the Quik latch (Fig. R).

**Step 5:** At each corner of the canopy, push or pull the Quik latch. When all four corners are disengaged, the canopy should close slightly. Be careful not to pinch your hands by keeping your hands away from the bottom part of the slider- it may move fast once released. If the slider is hard to unlock, relieve the ceiling assembly by lifting the tubes attached to the canopy upwards (Fig. S). You can also relieve tension by undoing the hook and loop straps at each corner (Fig. T).



**Step 6:** Hold the top of the center frame section and lift slightly. Walk towards your partner as the frame folds in and continue walking until the frame is about halfway closed. Be sure to avoid pinching your hands or fingers.

**Step 7:** Hold the outside of the legs and continue closing the canopy as you walk towards your partner. The completely folded canopy should stand on its own (Fig. U).

**Step 8:** With the canopy standing, unzip the wheeled bag and slide the bag down until the entire canopy is in. Gently invert the canopy and zipper the bag shut (Fig. V).

**Note:** The canopy top may remain in place for easier subsequent set-up. However, to prolong the life of the fabric, we recommend that you remove the top when storing your canopy.

# DO NOT RETURN YOUR CANOPY TO THE PLACE OF PURCHASE

Please contact Bravo Sports for questions, comments, parts & accessories, or assistance with any warranty related issues.

E-mail: [consumer@bravosportscorp.com](mailto:consumer@bravosportscorp.com)

Toll free : (800) 248-5327

## Limited 1 Year Warranty

Subject to the following limitations, in addition to any imposed by virtue of applicable law, Bravo Sports warrants this QUIK SHADE® Canopy to be free of defects in material or workmanship for a period of one year from the date of original purchase. This warranty is limited to the replacement of defective parts only.

1. This Limited Warranty will apply only if the QUIK SHADE® and/or its parts are properly returned to the Bravo Sports customer service department listed below and are determined by Bravo Sports in its sole discretion, to be defective. In some cases, pictures of the unit may be requested in place of the unit itself.
2. This Limited Warranty applies only to QUIK SHADE® Multi-Purpose Canopies purchased from authorized dealers. This Limited Warranty is extended only to the original purchaser and is not transferable.
3. Be sure to retain your original purchase sales receipt for any warranty claim. All warranty claims must be accompanied by a copy of the original purchase receipt from the authorized dealer.
4. Before returning any QUIK SHADE® Canopy and/or parts to Bravo Sports for warranty inspection, the consumer purchaser must obtain prior authorization from Bravo Sports. Such authorization can be obtained by calling our customer service representatives at the toll-free numbers listed below, or writing to the Bravo Sports customer service department at the address listed below. Customer is responsible for shipping costs.

5. Certain regions of the country have environmental conditions that are extremely hard on canopy covers of any kind. If you live in Arizona, Florida, Nevada, New Mexico, Texas, OR in high altitudes [above 3000 feet], the warranty period for your canopy top will be limited to 6 months from the date of original purchase. [After expiration of that 6 month period and up to a period of one year following date of original purchase, you may purchase a replacement canopy top at a reduced price from our customer service department.]
6. This Limited Warranty does not cover damage or loss from: wind, rain, fire, snow, ice, or other forces of nature; accident; normal wear; improper assembly disassembly, or adjustment during set-up or take-down; or any abuse, neglect or misuse of this QUIK SHADE® Canopy and/or its parts.
7. To the extent allowed by applicable law, any implied warranty of merchantability or fitness applicable to this QUIK SHADE® Canopy is limited to the duration of this Limited Warranty. Bravo Sports does not warrant against, and in no event shall Bravo Sports or its authorized agents be liable for any personal loss, injury, or direct or indirect incidental or consequential damage resulting from the use of this product. Please note that some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.

8. Upon receipt of authorization from our customer service department, you must submit your warranty claim to the address below, shipped prepaid and accompanied by a copy of the original dated purchase receipt. Do not return this product to the place of purchase. For warranty service, or for missing parts, replacement parts or any other problems, call or write to our customer service department below. We will send any replacement parts via FedEx Ground.
9. Any alterations made to the canopy by the customer will void the warranty.

**WARNING:** KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

**WARNING:** Before storing your QUIK SHADE®, be sure the canopy top is not wet or damp. Storing your QUIK SHADE® while it is even slightly damp may cause mildew. Allow your canopy top to completely dry before taking it down. If you must take down your QUIK SHADE® while the canopy is damp, remove the canopy top from the frame by unfastening the hook and loop straps. Fold up the frame and lay the canopy top down, fully open, as soon as possible and allow it to completely dry.

## Please read completely before setting up your QUIK SHADE® Instant Canopy

1. It is your responsibility to read below and save these instructions before attempting to set up or take down your instant canopy.
2. The canopy is designed to provide shade protection only and caution must be used in any adverse weather conditions, including wind and rain.
3. Do not use or continue to use in any rain, wind, or storm conditions -- especially lightning storms. Damage to the canopy can occur and put you and others in potential danger.
4. Always take your time when opening or closing the frame to avoid pinching your fingers or hands or damaging the frame.
5. Do not set up the canopy on steep inclines or uneven surfaces.
6. Do not use your canopy for permanent shelter or leave unattended, it is intended for temporary use only.
7. Keep canopy away from heat and flame at all times. Do not BBQ or build fires under or near the canopy.
8. The fabric top may be hand washed using mild soap and water. Do not use harsh detergents, abrasives or bleach and do not machine wash.
9. Never fold or store the canopy when it is wet or damp, allow to dry completely to avoid mildew.

**QUIKSHADE®**  
INSTANT CANOPY

**BRavo**  
SPORTS

12801 Carmenita Rd.  
Santa Fe Springs, CA 90670  
©2012 Bravo Sports. All Rights Reserved