

LIMITED WARRANTY* ONE (1) YEAR
WARRANTY IS ONLY VALID WITH A DATED PROOF OF PURCHASE

1. Your small kitchen appliance is built with precision, inspected and tested before leaving our factory.
2. It is warranted, to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. This Warranty applies only to the original purchaser of this product.
3. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are past the stores allowed return policy period, please see the enclosed Warranty.
4. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service.
5. During the one-year warranty period, a product with a defect will be either repaired or replaced with a new or reconditioned comparable model (at our option) when the product is returned to our Service Center. (See the "Returns" section below).
6. The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.
7. **This limited warranty covers appliances purchased and used within the 50 contiguous states plus the District of Columbia and does NOT cover:**
 - Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
 - Damages caused in shipping.
 - Damages caused by replacement or resetting of house fuses or circuit breakers.
 - Defects other than manufacturing defects.
 - Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
 - Lost or missing parts of the product. Parts will need to be purchased separately.
 - Damages of parts that are not electrical; for example: cracked or broken plastic or glass.
 - Damage from service or repair by unauthorized personnel.
 - Extended warranties purchased via a separate company or reseller.
 - Consumer's remorse is not an acceptable reason to return a product to our Service Center.

*One Year Limited Warranty valid only in the **50 contiguous states plus the District of Columbia, excluding** Puerto Rico and the Virgin Islands.

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty.

For international warranty, please contact the local distributor.

**Any instruction or policy included in this manual may be subject to change at any time.

MAXI-MATIC, USA

18401E. Arenth Ave. City of Industry, CA 91748

Customer Service Dept: (626) 912-9877 Ext: 120/107 MON-FRI 8am-5pm PST

Website: www.maxi-matic.com email: info@maxi-matic.com

RETURN INSTRUCTIONS

RETURNS:

A. Any return of defective merchandise to the manufacturer must be processed accordingly by first contacting customer service (contact information shown below) to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #.

B. **IMPORTANT RETURN INSTRUCTIONS.** Your Warranty depends on your following these instructions if you are returning the unit to Maxi-Matic USA:

1. Carefully pack the item in its original carton or other suitable box to avoid damage in shipping.
2. Before packing your unit for return, be sure to enclose:
 - a) Your name, full address with zip code, daytime telephone number, and RA#,
 - b) A dated sales receipt or PROOF OF PURCHASE,
 - c) The model number of the unit and the problem you are having (Enclose in an envelope and tape directly to the unit before the box is sealed,) and
 - d) Any parts or accessories related to the problem.
3. Maxi-Matic USA recommends you ship the package U.P.S ground service for tracking purposes. We cannot assume responsibility for lost or damaged products returned to us during incoming shipment. For your protection, always carefully package the product for shipment and insure it with the carrier. C.O.D shipments cannot be accepted.
4. **All return shipping charges must be prepaid by you.**
5. Mark the outside of your package:

MAXI-MATIC USA
18401E. ARENTH AVE.
CITY OF INDUSTRY, CA 91748
6. Once your return has been received by our warehouse, Maxi-Matic USA will repair or replace the product if it is defective in material or workmanship, subject to the conditions in paragraph B.
7. **Maxi-Matic will pay the shipping charges to ship the repaired or replacement product back to you.**



4 Slice Toaster Oven Broiler



Model **EKA-9210B (Black Finish)**
EKA-9210W (White Finish)

Instruction Manual

IMPORTANT SAFEGUARDS



When using electrical appliance, basic safety precautions should always be followed, including following:

1. Read ALL instructions before operation.
2. Do not touch hot surfaces. Use handles or knobs.
3. Remove all packaging plastics and other materials from unit before operating.
4. Wash all removable accessories before using for the first time.
5. To protect against electrical shock, do not immerse cord, plug or appliance itself in water or any other liquids.
6. Close supervision is necessary when appliance is used by or near children.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
8. Do not operate this or any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer is not recommended and may cause injuries.
10. Do NOT use outdoors.
11. Do not let cord hang over edge of table or counter or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Always attach plug to the appliance first, then plug cord into wall outlet. To disconnect, turn any control to 'OFF' position, then remove plug from wall outlet.
14. Oversized foods or metal utensils must not be inserted in the appliance as they may cause a fire or risk of electrical shock.
15. A fire may occur if the appliance is covered or touching flammable material including curtains, draperies, walls and the like when in operation.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electrical shock.
17. Extreme caution should be exercised when using containers constructed of other material other than metal or glass.
18. Do not store any materials other than manufacturer's recommended accessories in this oven when not in use.
19. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
20. Do not place any of the following materials in the oven: paper, cardboard, plastic and the like.
21. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way.
22. Extreme caution must be used when removing tray or disposing of hot grease.
23. Do not use appliance for anything other than the intended use.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!

PARTS INDICATOR

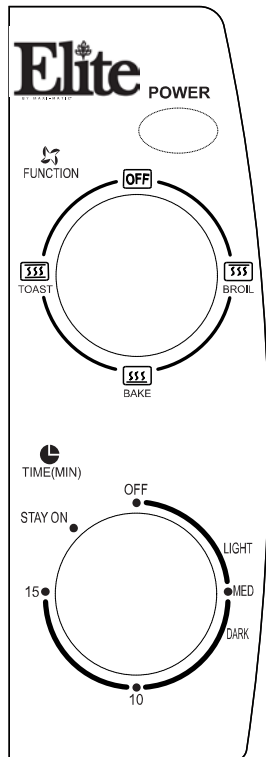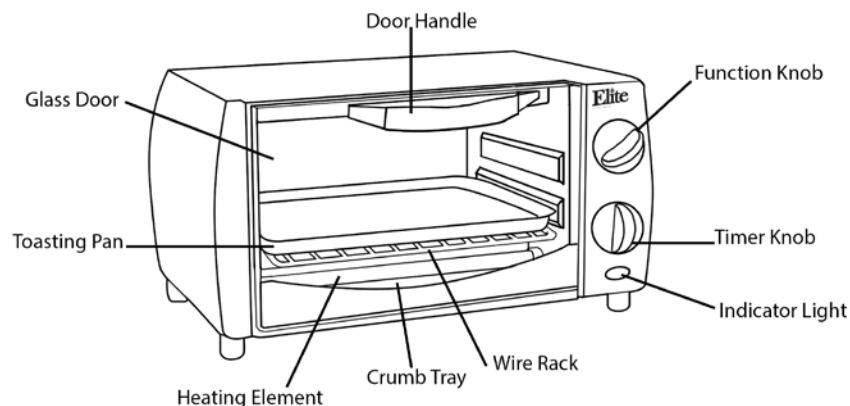

HOW TO USE

BEFORE USING FOR THE FIRST TIME

1. Remove all accessories and shipping materials packed inside the oven.
2. Wash the Rack and Pan in warm soapy water. Wipe the inside of the oven with a damp cloth or sponge. Dry the unit thoroughly before using.
3. Place oven on a flat counter or other flat stable surface.
4. Position the oven so that it is at least 2 inches (5cm) from any surrounding object. Ensure that nothing has been placed on top of the oven.
5. Make sure the Crumb Tray is properly inserted before using.
6. **For the first time only:** Turn the Function Knob to 'Toast' and the Timer Knob to 15 minutes. This will burn off any oils or manufacturing residue still inside the oven.

NOTE: The oven may smoke during this process. This is normal for a new oven and will not last more than 10-15 minutes.

HOW TO USE

TOASTING

1. Rotate the Function Knob clockwise to 'Toast' position
2. Open the Oven Door and place the bread slice on the Baking Rack. You may place slices of bread into baking rack, up to 4 slices side by side. When setting to "Toast", BOTH heating elements will turn on.

TIMER SETTING

3. Choose your Toast Darkness preference by adjusting the Timer Knob clockwise to select toasting time. To test the toasting of your type of bread, we suggest starting at short time, as bread varies according to humidity, thickness and texture. Each type of bread will toast differently according to these properties.

NOTE - When setting the Timer Knob for less than 5 minutes, always rotate timer to over 5 minutes and then rotate back to your chosen time. This will ensure a safe and accurate timer setting.

4. When the toast cycle is finished the bell will ring and the electrical power is automatically turned off. To stop the cycle at any time, rotate the Timer Knob **counter clockwise** to 'OFF' position and the bell will ring.

NOTE - The bread will burn if the toasting time is set for too long. Close supervision is always necessary during toasting.

Cooking Chart		
Food	Quantity	Time
Bagel	2 – 3 Slices	2 – 3 minutes
Toast	2 – 3 Slices	2 – 3 minutes
Hamburger	2 – 3 Patties	10 – 15 minutes
Pizza	2 Slices	6 – 8 minutes
Bacon	2cm cutlet	7 – 12 minutes
Sausage	3 – 4 pieces	8 – 10 minutes
Fish	1 – 2 slices	10 – 12 minutes
Steak	1cm cutlet	10 – 15 minutes

BROILING

- Slide in the Baking Tray under the rack. Always use the baking tray when broiling food like chicken wings or drumsticks which contain fat.
- Place food on the Baking Rack.
- When setting in 'Broil', only the TOP heating element will turn on.
NOTE – We always suggest preheating oven about 3-5 minutes before placing the food inside.
- Rotate the Function Knob clockwise to the 'Broil' position.
- The Timer Knob is the on/off switch:
 - For short time, rotate the Timer Knob **clockwise** (up to 15 minutes), when the cycle is finished, the bell will ring and the power is automatically turned off

OR

- For longer time, rotate the Time Knob **counter clockwise** to "stay on" setting. The cooking will continue until the Timer Knob is **manually** turned to "off" position and the bell will ring.

***NOTE** – Always monitor the food at this setting to prevent overcooking. Overturn the food during the process or add the flavoring if necessary. Always use oven mitts to prevent the risk of scalding.*

BAKING

- Slide the Baking Tray into the bottom rack level.
- Place food on the Baking Tray

When setting in 'Bake', only the BOTTOM heating element will work.

NOTE – We always suggest preheating oven 5 minutes at this setting before placing food inside.

- Rotate the Function Knob clockwise to 'Bake' position
- Set the time based on the food type and thickness. The heating element will be cycled on and off to maintain the set temperature.
- The maximum time that can be set by the timer is 15 minutes, for longer time, you must set the timer to the "stay on" position. You must stop the oven manually by turning the Timer Knob to 'OFF' position once the food is done.

NOTE – Always monitor the food at this setting to ensure that you are not overcooking.

**Please note that the following cooking times are approximate and included only for reference.*

CARE & CLEANING

- Before cleaning unplug the toaster oven and let it cool completely.
- Wash all the attachments with mild, soapy water including the Rack and the Baking Tray. Do NOT wash in dishwasher.
- Do not use abrasive cleansers, scrubbing brushes and chemical cleaners as this will cause damage to the non-stick coating of Baking Tray.
- Use a wet cloth to wipe the inside of the oven.
- To clean the door, you can use a wet cloth saturated with detergent or soap.
- Never immerse the unit in water or any other liquid.
- This appliance has a drop open Crumb Tray at the bottom of the baking chamber. First unplug the appliance and allow to completely cool.
- To clean out the crumbs, simply tilt the unit backwards and push the Crumb Tray Slide Fastener towards the rear, down allow dropping on counter top.
- Wipe interior of crumb tray with a damp cloth. After cleaning, slide the 'Crumb Tray Slide Fasteners' into the tabs to lock the crumb tray.
- Washing of the interior of the crumb tray is accomplished by placing unit on its back side and allow crumb tray to fall forward for easy cleaning.

SHORT CORD PURPOSE

NOTE: A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

Longer power-supply cords or extension cords are available and may be used if care is exercised in their use. If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should be arranged so that it will not drape over the countertop or tabletop where it can unintentionally be pulled on or tripped over by children or pets.

POLARIZED PLUG

If this appliance is equipped with a **polarized plug** (one blade is wider than the other), please follow the below instructions:

To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If you are unable to fit the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the product or any extension cord being used with this product. Do not attempt to defeat the safety purpose of the polarized plug



Horno Tostador Dorador



**Modelo EKA-9210B (Negro)
EKA-9210W (Blanco)**

Manual del Usuario

Antes de operar su nuevo aparato, por favor lea cuidadosamente las instrucciones y guarde para referencia futura

Importantes medidas de seguridad

Cuando use aparatos eléctricos, precauciones básicas de seguridad deberán seguirse, incluyendo las siguientes.


NOTA: Para evitar daños a sus muebles, mesa, mostrador o cualquier superficie laminada o delicada siempre coloque el aparato sobre un mantel, colchoneta de cocina o un plato de cerámica resistente al calor, especialmente cuando utilice aparatos eléctricos que generen mucho calor

1. Lea todas las instrucciones cuidadosamente, antes de usar el aparato
2. No toque las superficies calientes, use el mango o las agarraderas.
3. Remueva todo material de empaque, antes de usar el aparato
4. Lave todas las partes o accesorios removibles, antes de usar por vez primera.
5. Para protegerse, de una descarga eléctrica, no sumerja el cordón, enchufe eléctrico o aparato en agua o ningún otro líquido.
6. Cercana supervisión es necesaria, cuando el aparato sea usado por o cerca de niños
7. Desconecte el aparato, cuando no esté en uso y antes de limpiarlo. Permita que enfríe completamente para remover las partes o accesorios.
8. Nunca use ningún aparato con el enchufe dañado. Si el cordón de alimentación es dañado este debe ser remplazado por el fabricante, personal capacitado o su agente de servicio, para evitar riesgos
9. El uso de accesorios no recomendados por el fabricante, pueden causar daños personales o al aparato.
10. No lo use a la intemperie o en lugares húmedos.
11. No deje que el cordón eléctrico cuelgue de la orilla de la mesa o mostrador, alguien podría enredarse con el cordón y causar un tropezón
12. No lo ponga sobre o cerca de superficies calientes como estufas y hornos
13. Siempre deberá conectar el cordón eléctrico al aparato y después al toma corriente eléctrica, si aplica.
14. Siempre deberá de apagar el aparato antes de desconectar del toma corriente.
15. Nunca introduzca utensilios de metal en el aparato, podría causar fuego, descarga eléctrica o daños personales
16. Fuego podría ocurrir, si el aparato es cubierto o toca material inflamable como: Cortinas alfombras y paredes cuando esté en uso.
17. Extrema precaución deberá tener cuando use depósitos contruidos de otro material que no sean de metal o vidrio, si aplica.
18. Para reducir el riesgo de una descarga eléctrica, este Aparato tiene una ploga polarizada (un lado de las navajas de la ploga es mas ancha que la otra) y esta diceñada para entrar en un reseptáculo polarizado de una sola manera.

19. No ponga dentro o en la superficie exterior del aparato los siguientes materiales, papel, cartón, plásticos, algún otro material inflamable o artículos similares que no sean comestibles
20. PRECAUCION. Par evitar daños a la superficie de sus muebles. Algunas superficies de mesas o mostradores hechos y recubiertos de laminado de CORIAN, MADERA FINA O FORMICA. No están diseñados para soportar calores prolongados generados por ciertos aparatos eléctricos de cocina.

GUARDE ESTAS INSTRUCCIONES ESTE PRODUCTO ES PARA USO DOMÉSTICO ÚNICAMENTE.

Descripción de partes

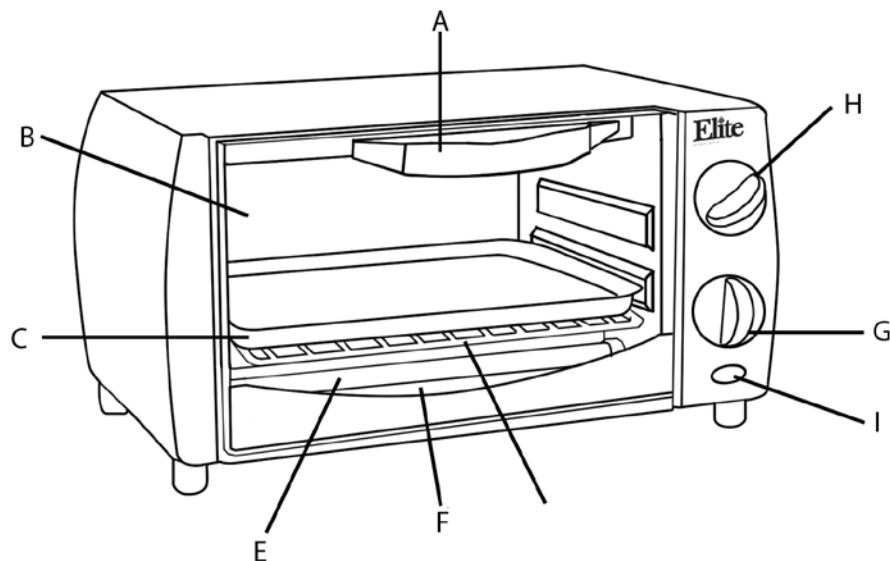

- A) Agarradera
- B) Puerta de vidrio templado
- C) Charola para tostar
- D) Parrilla de acero inoxidable
- E) 2 Elementos térmicos de cuarzo
- F) Charola para residuos
- G) Temporizador de 15 minutos con función de encendido todo el tiempo
- H) Botón selector de funciones
- I) Luz indicadora de encendido

Instrucciones

Este horno tostador dorador es muy económico y versátil, el modelo presenta un control selector especial, permitiéndole un mayor control y rendimiento para cocinar. Puede seleccionar los elementos térmicos de arriba, abajo o los dos al mismo tiempo.

Disfrute cocinando en su nuevo horno tostador/dorador.

Aquí se muestran algunas sugerencias muy útiles para cocinar en su horno:

Antes de conectar el horno al toma corriente

- Asegurese de que el suministro de fuerza sea la misma que las especificaciones eléctricas del horno.
- Este horno cumple con las normas de calidad y seguridad eléctricas (UL) que rigen en Los Estados Unidos de Norte América.

Antes de usar su horno por vez primera

- Precaliente el horno de 3 a 5 minutos para cocinar perfectamente.
- Algunas veces durante el primer uso algo de humo y olor a quemado podría ser notado, esto es normal y desaparecerá.

Como cocinar

- Coloque los alimentos a cocinar dentro del horno, alimentos no grasosos podrán colocarse directamente en la charola. Alimentos grasosos deberán de envolverse en hojas de aluminio.
- Salpicaduras de aceite en la charola provocarán que haga humo, queme y se manche.

Temporizador

- Mantenga la puerta cerrada, utilice el temporizador para seleccionar la temperatura deseada, Si su elección a sido de menos de 5 minutos, avance el temporizador a más de 5 minutos y luego regreselo al tiempo deseado.
- Si su selección a sido a mas de 5 minutos coloque el temporizador directamente al tiempo deseado.
- Después de que ciclo de tiempo de cocinar haya terminado, el temporizador emitirá un sonido de alarma indicando la finalización del ciclo de cocinar y automáticamente se apagará.
- *Cuando el horno este funcionando y usted desee remover los alimentos antes del tiempo seleccionado, coloque el temporizador en la posición (0) para apagar la unidad antes de remover.
- Después de usar asegurese de apagar la unidad y desconéctelo del toma corriente

TABLA DE TIEMPOS

Alimento	Cantidad	Tiempo
Sandwich	2-3 Rebanadas	2 - 3 minutos
Pan	2 Rebanadas	2 - 3 minutos
Hamburguesa	2-3 Rebanadas	3 - 5 minutos
Pizza	2 Piezas	6 - 8 minutos
Tocino	2 Cortes	7 - 12 minutos
Salchicha	3 - 4 Piezas	8 - 10 minutos
Pescado	1-2 Rebanadas	10 - 12 minutos
Bistec de res	1 Un corte	10 - 15 minutos

Mantenimiento y Limpieza

- Para limpiar el horno
- Limpie con una toalla húmeda con agua y jabón seque perfectamente.
- Para limpiar dentro del horno.
- Si el interior del horno a sido salpicado de aceite y no puede limpiarse use una toalla con agua y jabón seque perfectamente.
- Se recomienda limpiar la charola de residuos regularmente, asegurese de que este completamente fría antes de limpiar.