

PORTFOLIO®

Portfolio® is a registered trademark
of LF, LLC. All Rights Reserved.


ITEM #0394128

5-LIGHT CHANDELIER

MODEL #34624

Français p. 9

Español p. 17

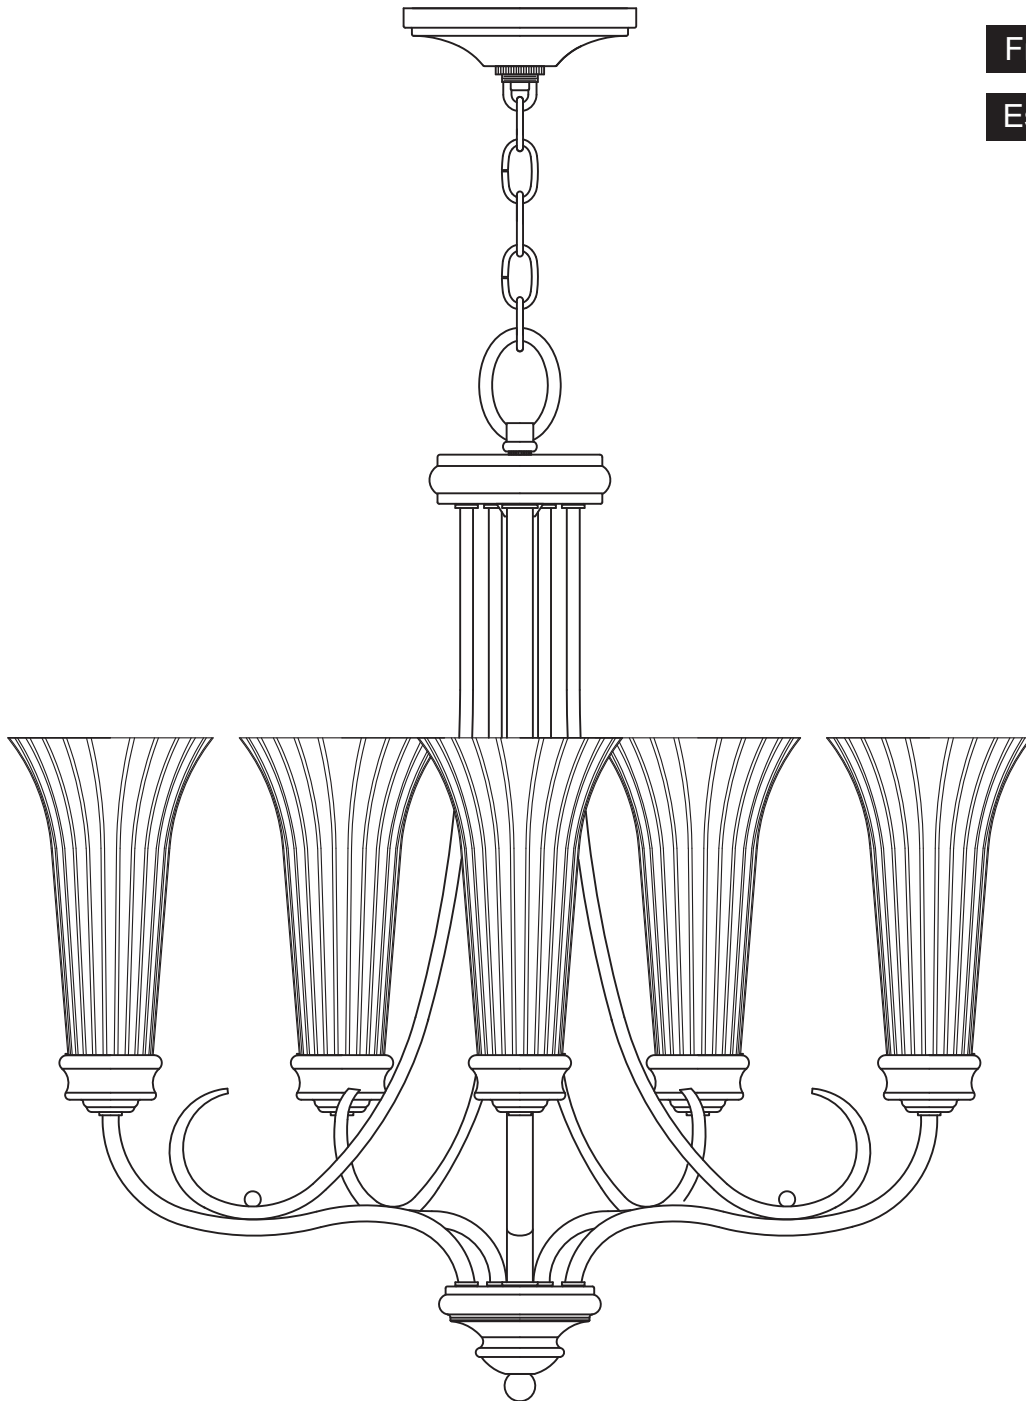


ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____




Questions, problems, missing parts? Before returning to your retailer, call our
customer service department at **1-800-643-0067**, 8 a.m. - 6 p.m., EST, Monday - Thursday,
8 a.m. - 5 p.m., EST, Friday.

PACKAGE CONTENTS

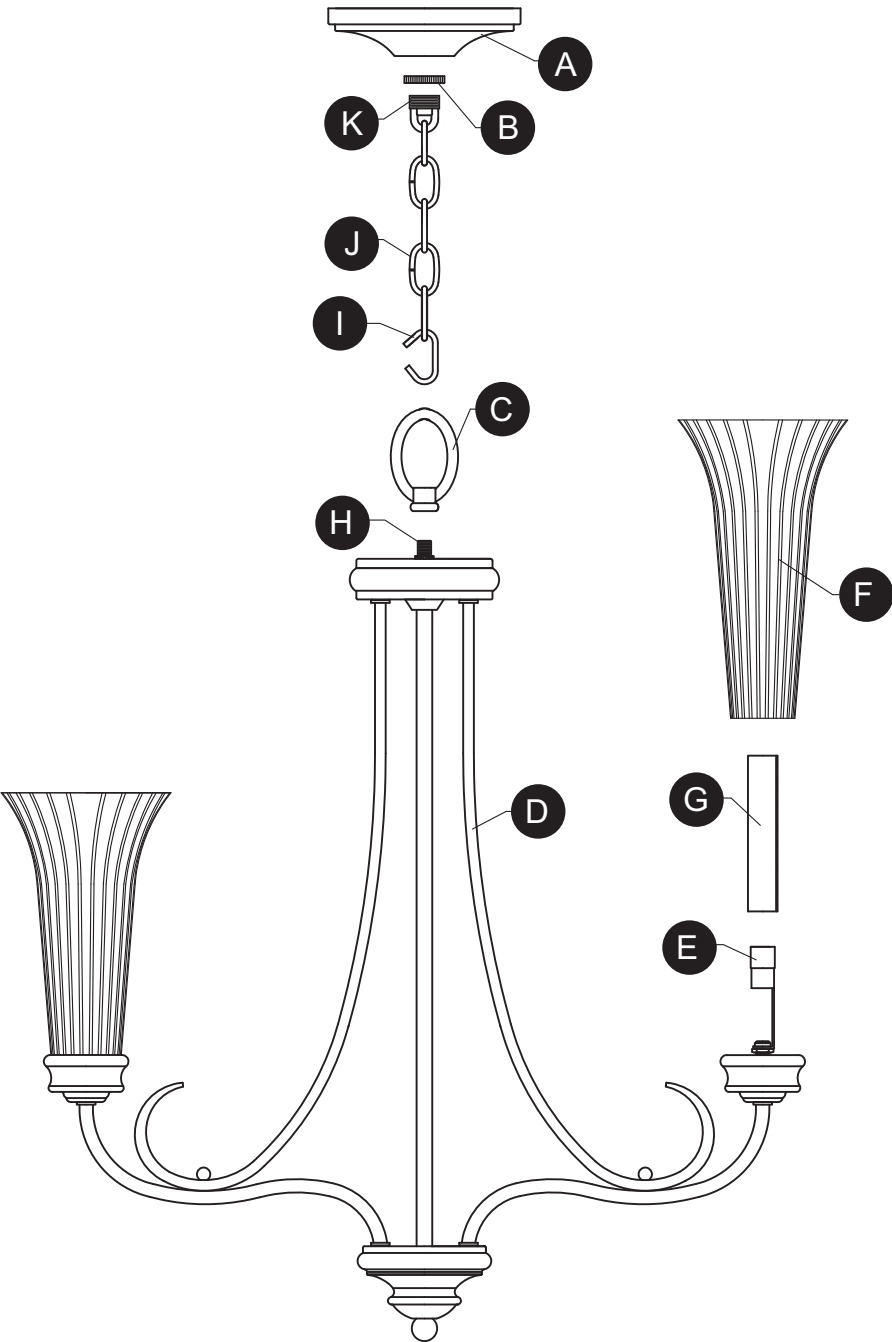

PART	DESCRIPTION	QUANTITY
A	Canopy	1
B	Screw Collar Ring (Preassembled to screw collar loop (K))	1
C	Fixture Loop (preassembled to threaded nipple (H))	1
D	Arm (preassembled to threaded nipple (H))	5
E	Socket (Preassembled to arm (D))	5
F	Glass Shade	5
G	Socket Cover (Preassembled to socket (E))	5
H	Threaded Nipple (Preassembled to arm (D))	1
I	Open Chain Link (Preassembled to chain (J))	2
J	Chain	1
K	Screw Collar Loop (Preassembled to canopy (A))	1

HARDWARE CONTENTS (shown actual size)

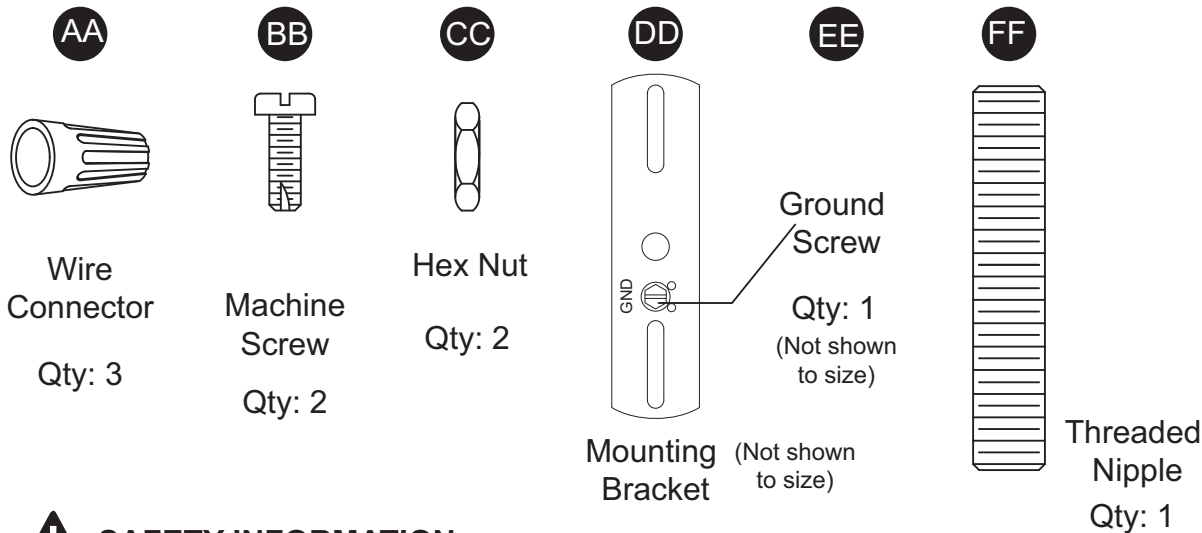

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING:

- **IMPORTANT:** NEVER attempt any work without shutting off the electricity.
- Go to the main fuse box, or circuit breaker, in your home. Place the main power switch in the "OFF" position.
- Unscrew the fuse(s), or switch "OFF" the circuit breaker switch(es), that control the power to the fixture or room that you are working on.
- Place the wall switch in the "OFF" position. If the fixture to be replaced has a switch or pull chain, place it in the "OFF" position.
- Do not use bulbs with wattage greater than specified on this fixture.
- **WARNING:** California Prop 65: This lighting fixture contains chemicals known to the state of California to cause cancer, birth defects, and/or other reproductive harm. Wash hands after use.

CAUTION:

- Read and understand all instructions and illustrations completely before proceeding with assembly and installation of this fixture.
- If you have any doubts about how to install this lighting fixture, or if the fixture fails to operate completely, please contact a qualified licensed electrical contractor.
- All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken. Failure to obey this instruction could invalidate the ETL listing and/or C.S.A. certification of this fixture.

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

Estimated assembly time: 30 minutes to 1 hour.

Tools Required for Assembly (not included): Phillips screwdriver, flathead screwdriver, wire strippers, electrical tape, chain pliers, safety glasses, ladder.


ASSEMBLY INSTRUCTIONS


1. Screw fixture loop (C) onto threaded nipple (H).

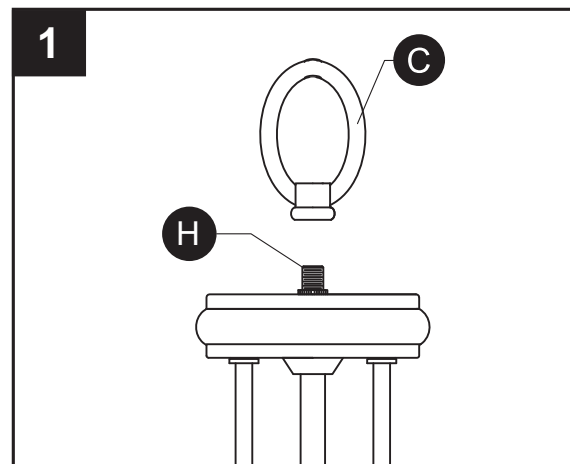

2. Connect mounting bracket (DD) to the outlet box with machine screws (BB). Orient mounting bracket (DD) so the raised center portion protrudes into the outlet box. Screw threaded nipple (FF) into screw collar loop (K) a minimum of 1/4 in. Lock in place with hex nut (CC). Screw second hex nut (CC) to the center of threaded nipple (FF) and screw into mounting bracket (DD).

 Hardware Used


BB	Machine Screw		x 2
CC	Hex Nut		x 2
DD	Mounting Bracket		x 1
FF	Threaded Nipple		x 1

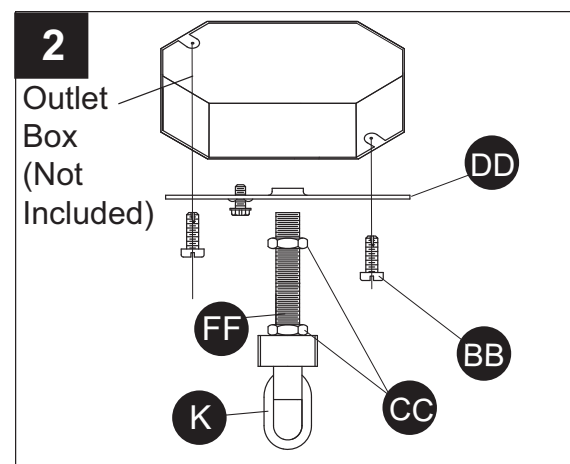


ASSEMBLY INSTRUCTIONS


3. Pass canopy (A) over the screw collar loop (K). Turn the screw collar loop (K) in or out of the mounting bracket (DD) until 1/2 of the screw collar loop (K) exterior threads are exposed. After a desired position is found, lock threaded nipple (FF) in place by tightening the second hex nut (CC) up against the mounting bracket (DD). Attach screw collar ring (B) to screw collar loop (K).

 Hardware Used

CC	Hex Nut		x 2
DD	Mounting Bracket		x 1
FF	Threaded Nipple		x 1

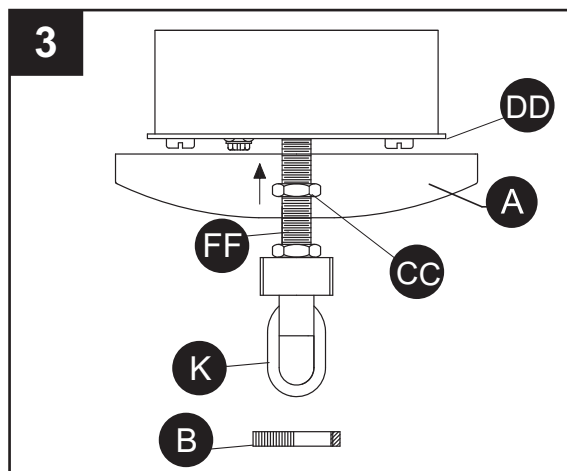


4. Attach end of chain (J) to screw collar loop (K) and fixture loop (C) with open chain link (I). Weave the fixture electrical and ground wires through every other chain link and pass through threaded nipple (FF) into outlet box. Lower the screw collar ring (B) and canopy (A) over the chain (J).

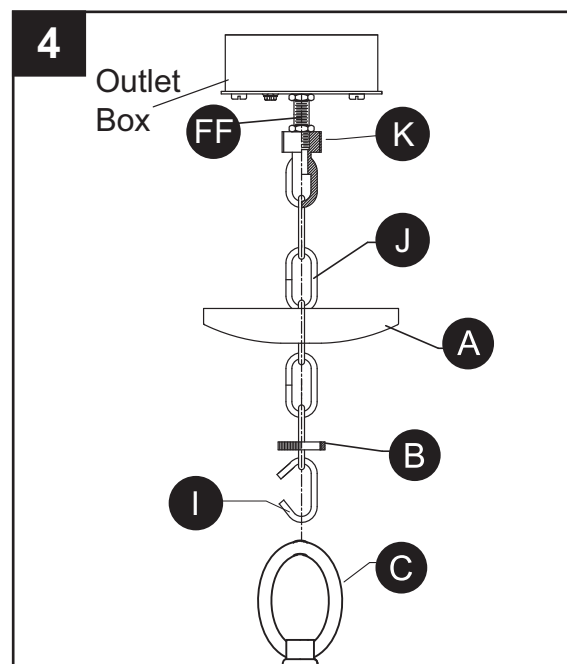

ASSEMBLY INSTRUCTIONS

5. Ground wire connection guide:

- For installation in the United States:
Wrap ground wire from outlet box around ground screw (FF) on mounting bracket (EE), no less than 2 in. from wire end. Tighten ground screw (FF). If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector (AA).
- For installation in Canada:
If fixture is supplied with ground wire, wrap ground wire around ground screw (FF) on mounting bracket (EE). Tighten ground screw (FF).

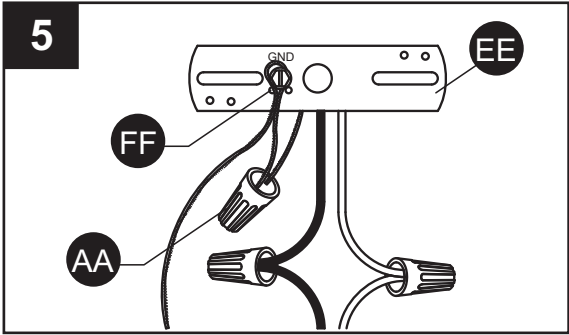

Hardware Used

AA Wire Connector  x 1


6. Supply wire connection guide: Make wire connections, securing with wire connectors (AA), following the reference chart listed below.

CONNECT, HOT, BLACK OR RED OUTLET SUPPLY WIRE TO:	CONNECT, NEUTRAL, WHITE OUTLET SUPPLY WIRE TO:
Black	White
* Parallel Cord (round & smooth)	* Parallel Cord (square & ridged)
Clear, Brown, Gold or Black without Tracer (colored stripes)	Clear, Brown, Gold or Black with Tracer (colored stripes)
Insulated Wire (not green) with copper metal conductor	Insulated Wire (not green) with Silver metal conductor

*NOTE:
When parallel wire (SPT I & SPT II) is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.


Hardware Used

AA Wire Connector  x 2

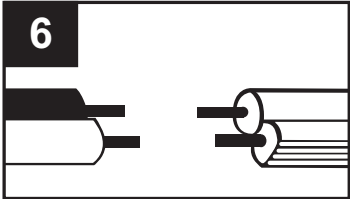


ASSEMBLY INSTRUCTIONS

7. Pass socket cover (G) and glass shade (F) over threaded socket (E).

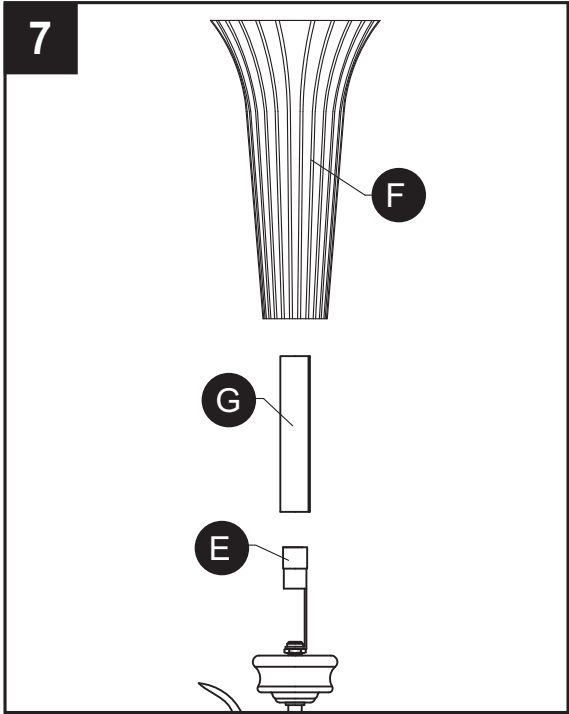

8. Screw two 60-watt max. candelabra-base bulbs (not included) into threaded socket (E).

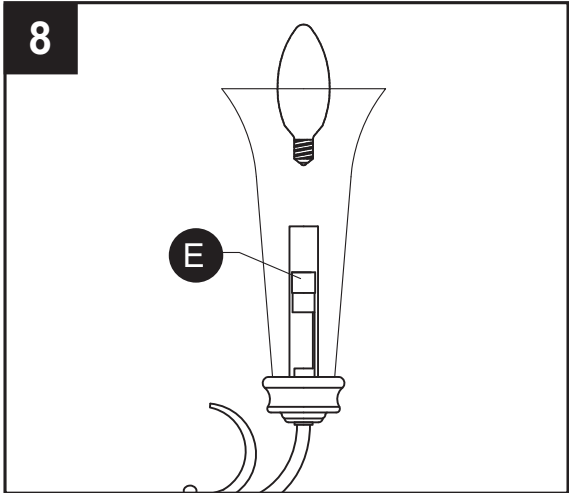

CARE AND MAINTENANCE

- Always be certain electric current is turned off before cleaning this item.
- Use a soft, moist cloth with mild non-abrasive soap to clean fixture. Never use glass cleaner on fixture, as it will damage the metal finish.
- All glass shades may be washed in a towel-lined sink with warm water and mild soap. Do not wash shades in an automatic dishwasher.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Fixture does not light.	1. Fixture may be wired incorrectly.	1. Check wiring.
	2. Worn or broken bulb.	2. Replace bulb.

WARRANTY

Distributor warrants products manufactured by it will be free from defects in material and workmanship for three (3) year following the date of shipment. This warranty does not cover bulbs or finish on outdoor product. If any of the warranted products are found by Distributor to be defective, such products will, at Distributor's option, be replaced or repaired at Distributor's cost. The parties hereto expressly agree that Buyer's sole and exclusive remedy against the Distributor shall be for the repair or replacement of defective products as provided herein, or, at the Distributor's sole option, Distributor may refund the purchase price of the products. THE FOREGOING WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THOSE OF MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR INFRINGEMENT. No affirmation of Distributor, by words or action, other than set forth in this paragraph shall constitute a warranty. Goods which may be sold by Distributor but which are not manufactured by Distributor are not warranted by Distributor, but are sold only with the warranties, if any, of the manufacturer thereof. This warranty does not cover labor or other costs or expenses to remove or install any defective, repaired or replaced product. Distributor's warranty does not apply to any products that have been subjected to misuse, mishandling, misapplication, neglect (including, but not limited to improper maintenance), accident, improper installation, modification (including, but not limited to use of unauthorized parts or attachments), or adjustment or repair.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
A	Canopy	CANOPY02-AP
B	Screw Collar Ring	SCG-AP
F	Glass Shade	G34624
G	Socket Cover	SC34624
I	Open Chain Link	LINK-AP
J	Chain	CHAIN-AP
K	Screw Collar Loop	SCR-AP
AA	Wire Connector	WC001
BB	Machine Screw	SCR832X050
CC	Hex Nut	NUT18
DD	Mounting Bracket	XBAR01
FF	Threaded Nipple	TN18200

