

Galanz

1.7L CORDLESS KETTLE HERVIDOR INALAMBRICO DE 1.7L

Customer Care Line:

USA/Canada
1-866-257-3336



MODEL/MODELO

⊗ DH1015-17037

Please Read and Save this Use and Care Book.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all Instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment. or, call the appropriate toll-free number on the cover of this manual.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to OFF (o) then remove plug from wall outlet.
- Keep lid on kettle when in use.
- do not use this appliance for other than intended use.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

TAMPER-RESISTANT SCREW

 
Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used,
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

Product may vary slightly from what is illustrated.

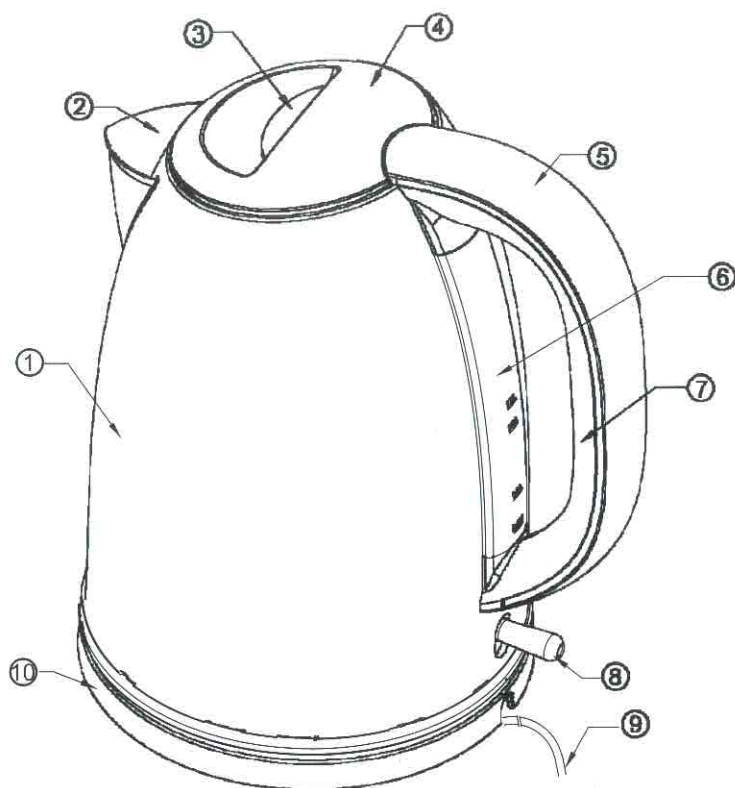

1. 1.7L (60-oz.) Kettle
2. Pour spout
3. Lid release
4. Lid
5. Handle cover
6. Water window with level markings
7. Handle
8. On/Off(I/O) switch
9. Power cord
10. 360° swivel power base

How to Use

This appliance is for household use only and is for boiling water only.

GETTING STARTED

- Remove all packing material and any stickers from the product.
- Before first use, wash the interior of the kettle and removable filter with hot soapy water and rinse well until water is clear.
- Select a level surface where this unit is to be used, allowing enough space for steam to escape without damage to counters, cabinets and walls.
- Uncoil power cord from cord storage under the base.
- Plug cord into standard electrical outlet.
- Bring to a full boil (follow steps 4– 6 in BOILING WATER) then discard the water.

Note:

 
The kettle will only operate when the on/off (I/o) switch is in the on (I) position.

The kettle will automatically switch off once the water has boiled.

The kettle will also automatically shut off if there is no water in the kettle.

Warning: This product is protected by a boil/dry safety device. If the kettle is accidentally left plugged in without being filled or is allowed to boil to a very low level, it will automatically repeat a cycle of turning off, cooling down and coming back on unless unplugged.


FILLING THE KETTLE

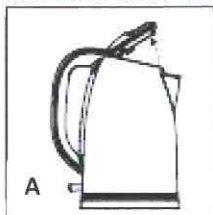


1. Press lid release button to lift the lid of kettle (A).
2. Fill the kettle to desired level. Be sure not to exceed the MAX line on the water level markings.
3. Firmly press down on the lid until it is securely in the kettle.

IMPORTANT: NEVER operate the kettle without water; NEVER overfill the kettle – keep water level lower than the Max 1.7L level marking; NEVER open the lid while water is heating.

 BOILING WATER

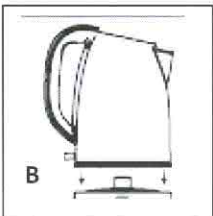

 4. Place the 360°swivel base on a flat surface then place the kettle onto the base. Plug onto a wall outlet.(B).
5. To turn on the kettle, press the I/O(ON/OFF) switch, located at the bottom of body to the I(ON)position, the indicator light is illuminated.

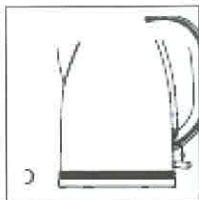

6. A concealed heating element designed to boil water and reduce lime scale is located at the bottom of the kettle. When the water has boiled, the kettle shuts off automatically. And the indicator light turns off.

Warning: After boiling water, the outside of the kettle is hot. Use only the handle to pick it up. Do not grasp kettle body with both hands.

Note: The swiveling base remains at regular room temperature. Both the kettle and the swiveling base are safe to place on dry surfaces.

BOIL/DRY PROTECTION

This unit has a boil/dry protection safety feature that automatically turns off the kettle and indicator light when finished boiling or when there is no water inside.

- If you desire another kettle of hot water, simply repeat steps 1-6.
- Unplug the kettle when not in use.

Care and Cleaning

This appliance contains no user-serviceable parts. Refer service to qualified service personnel.

CLEANING

1. Before cleaning, be sure the base is unplugged and the kettles has cooled completely. Empty any remaining water from the kettle.
2. Pull out the removable filter for cleaning. Wash the filter in hot, soapy water, and rinse or place it in the utensils holder of the dishwasher.
3. Wash the inside of the kettle with soapy water and rinse.

Important: NEVER IMMERSE THE KETTLE IN WATER OR OTHER LIQUID or place in a dishwasher.

4. Wipe the exterior of the kettle and base with a damp cloth or sponge and dry. The concealed heating element at the bottom of the interior may discolor. This will not affect performance. Do not use abrasive soaps, cleansers, or scouring pads
5. Over time, the kettle may heat up but will not boil, depending on your use and the hardness of the water in your area. When this happens, it is time for descaling. Use a scale/lime remover and follow its manufacturer's directions.

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Kettle is not heating.	<ul style="list-style-type: none">• Kettle is not plugged in.• Kettle is not properly placed on power base.	Check to be sure appliance is plugged into a working outlet, the on/off (I/O) switch is in the on (I) position and the kettle is securely placed on the power base.
Kettle has boiled dry.	Kettle was accidentally turned on without water.	Kettle was accidentally turned on without water. Unplug kettle and allow to fully cool down before refilling.
Kettle heats but does not boil or works intermittently.	Appliance may need descaling.	Use a scale/lime remover and follow its manufacturer's directions.
The on/off (I/O) switch will not stay on.	The kettle is too hot.	Allow the kettle to cool down at least 5 to 10 minutes. Make sure there is enough water in the kettle.

Need HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center.

One Year Limited Warranty
(Applies only in the United States)

What does it cover?

- Any defect in material or workmanship provided; however, Galanz's liability will not exceed the purchase price of product.

For how long?

- One year after date of purchase

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Call toll-free 1-866-257-3336 for general warranty service.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.