




ITEM #0069996

# SLATE-TOP FIREPIT

MODEL #OFW012SB

Français p. 8

Español p. 15

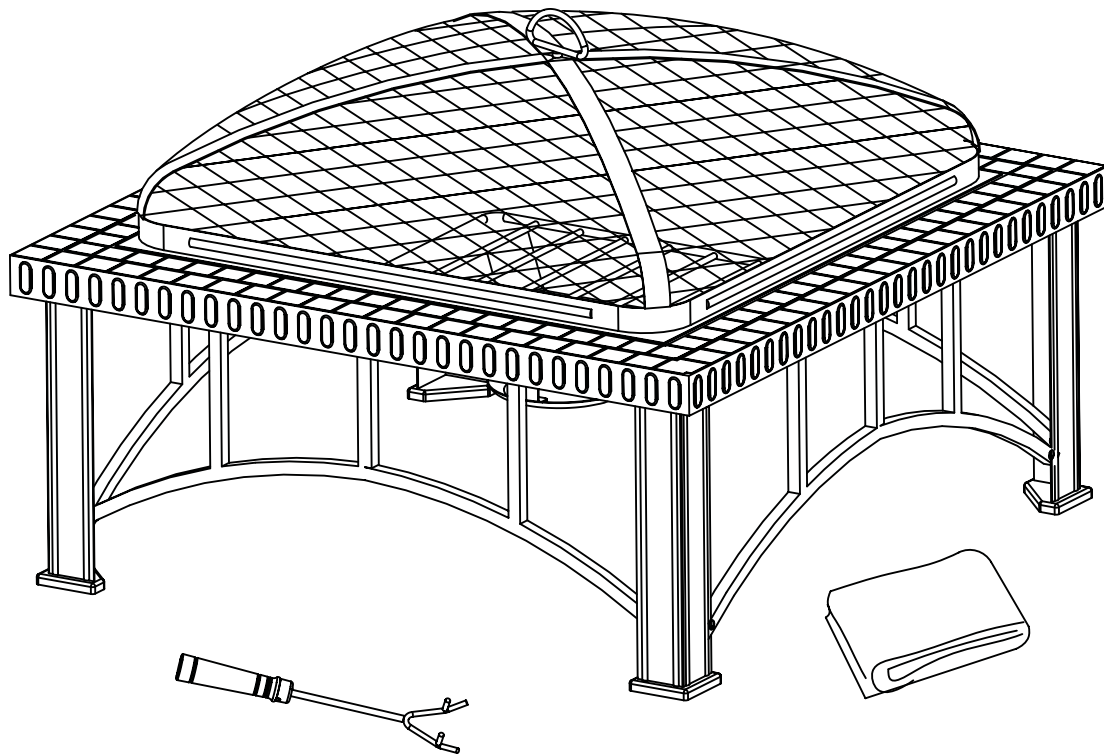


**ATTACH YOUR RECEIPT HERE**

Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_



**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 8 p.m, EST, Monday – Friday.

PACKAGE CONTENTS

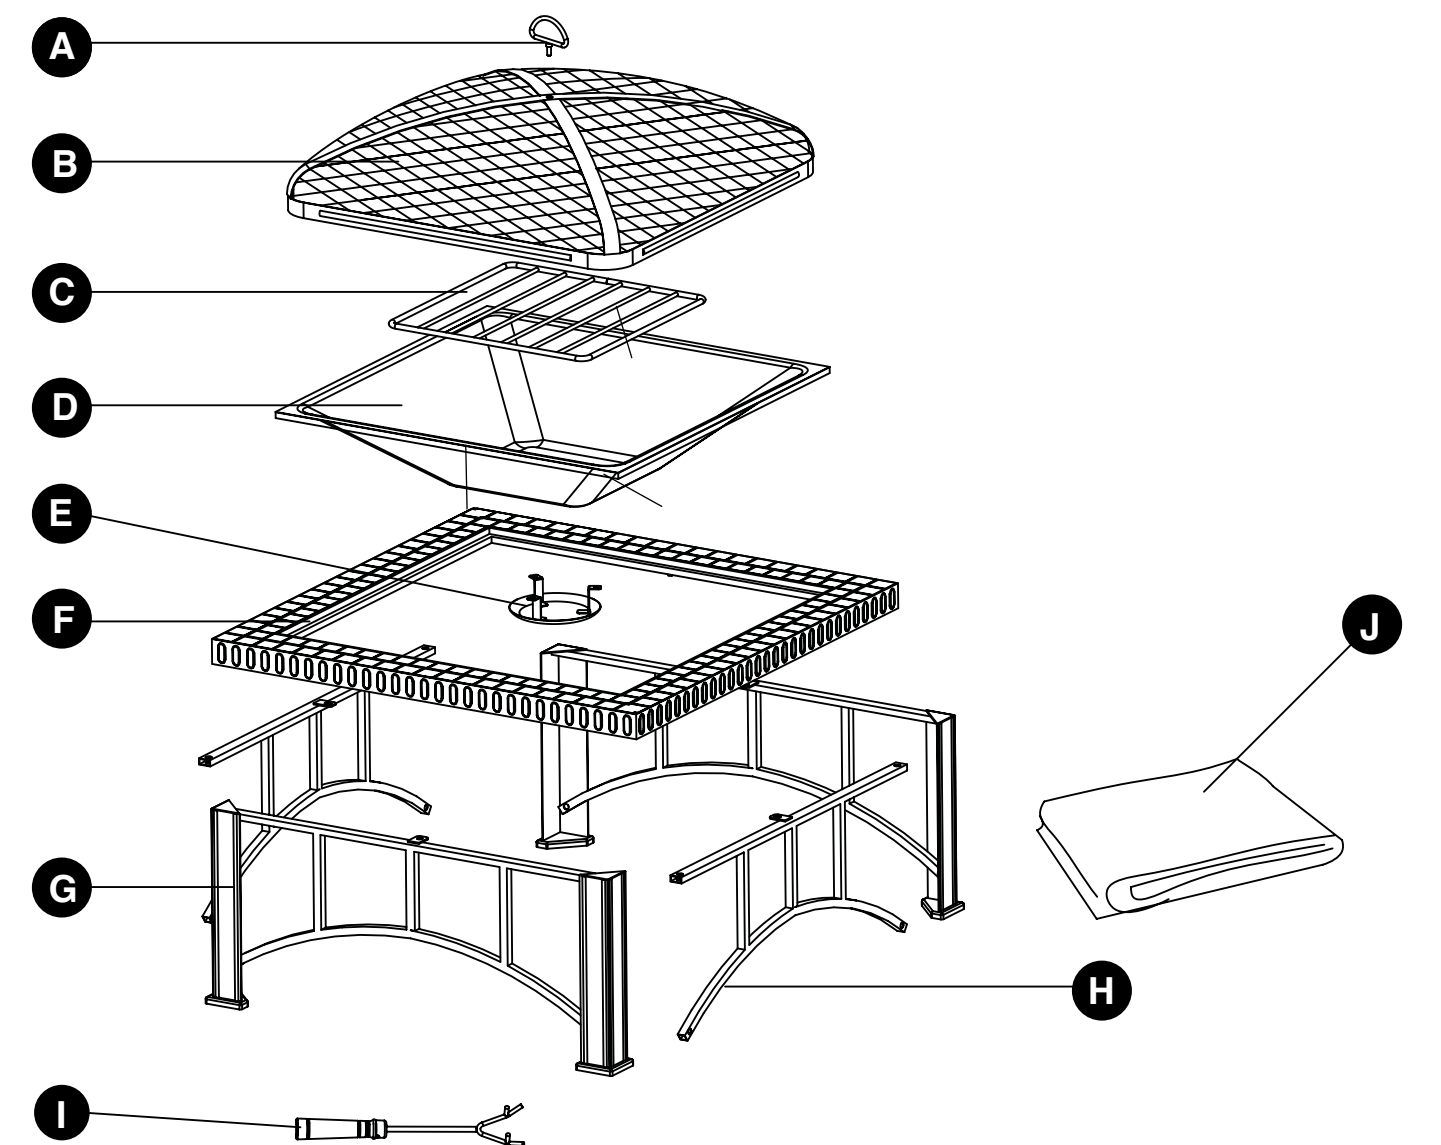


PART	DESCRIPTION	QUANTITY
A	Handle	1
B	Mesh Wire Cover	1
C	Wood Grate	1
D	Fire Bowl	1
E	Ash Catcher	1

PART	DESCRIPTION	QUANTITY
F	Slate Top	1
G	Leg	2
H	Leg Frame	2
I	Poker	1
J	Vinyl Cover	1

## HARDWARE CONTENTS

 ---

AA



M6 x 8 mm Bolt

Qty. 8


BB



M6 Nut

Qty. 5

 CC



M5 x 10 mm Bolt

Qty. 3

DD



M5 Nut

Qty. 3

EE



M6/M5 Wrench

Qty. 1

## SAFETY INFORMATION

---

Please read and understand this entire manual before attempting to assemble, operate or install the product.

### WARNINGS:

- **FOR OUTDOOR USE ONLY! NEVER LEAVE FIRE UNATTENDED!**
- **DO NOT USE THE FIREPIT TO COOK FOOD!** The firepit is not designed for grilling food.
- **DO NOT** allow children or pets near the firepit without supervision.
- **DO NOT** touch surface of iron fire grate or fire bowl while in use as it may cause burns.
- **NEVER** burn in vehicles, tents or indoors. **CARBON MONOXIDE HAZARD.**
- **NEVER** place cover on firepit when in use. Ensure firepit and mesh wire cover have cooled before placing cover over firepit.
- Lift mesh wire cover by using poker when in use.

### CAUTIONS:

- Burn only wood or fire logs in the firepit.
- **DO NOT** use gasoline or kerosene to start the fire in the firepit.
- **DO NOT** use this unit on a wood deck, long or dry grass and/or leaves, or on combustible surfaces.
- **DO NOT** attempt to move the firepit while it is hot or in use.
- Place the firepit no closer than 8 feet from walls or combustibles during use.
- Adequate fire extinguishing material should be readily available.
- Always ensure the mesh wire cover is secured over fire bowl while in use.
- Poker handle may become hot during and after use.
- Use heat-resistant gloves to handle hot tools.

**CALIFORNIA PROPOSITION 65 WARNING:** Fuels used in wood and charcoal burning appliances and the products of combustion of such fuels contain chemicals known to cause cancer, birth defects or other reproductive harm.

Consumers should check State and Provincial, in addition to local codes and regulations regarding the use of the product.

## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.



**Estimated Assembly Time: 15 minutes**


Tools Required for Assembly: Wrench (included), Phillips Screwdriver (not included)

## ASSEMBLY INSTRUCTIONS

1. Insert handle (A) into hole in mesh wire cover (B). Secure with M6 nut (BB) from underside of mesh wire cover (B). Tighten with wrench (EE).




### Hardware Used

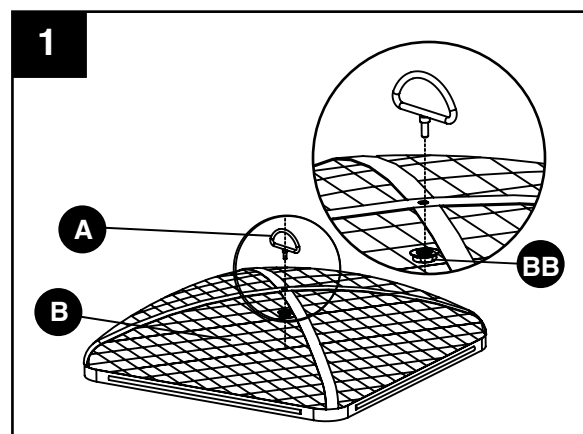
<b>BB</b>	M6 Nut		x 1
<b>EE</b>	Wrench		x 1



 2. Attach ash catcher (E) to fire bowl (D) using M5 x 10 mm bolt (CC) and M5 nut (DD). Tighten with wrench (EE) and screwdriver (not included).

### Hardware Used

<b>CC</b>	M5 x 10 mm Bolt		x 3
<b>DD</b>	M5 Nut		x 3
<b>EE</b>	Wrench		x 1

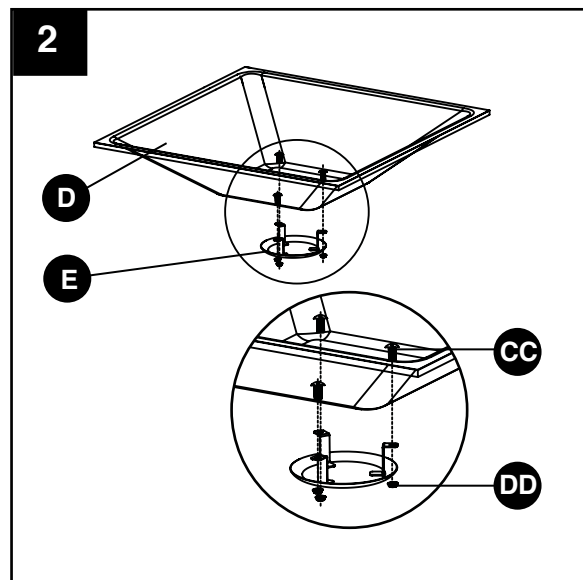


## ASSEMBLY INSTRUCTIONS

3. Attach legs (G) to leg frame (H) using M6 x 8 bolt (AA). Do not tighten at this time.

### Hardware Used

**AA** M6 x 8 mm Bolt  x 8

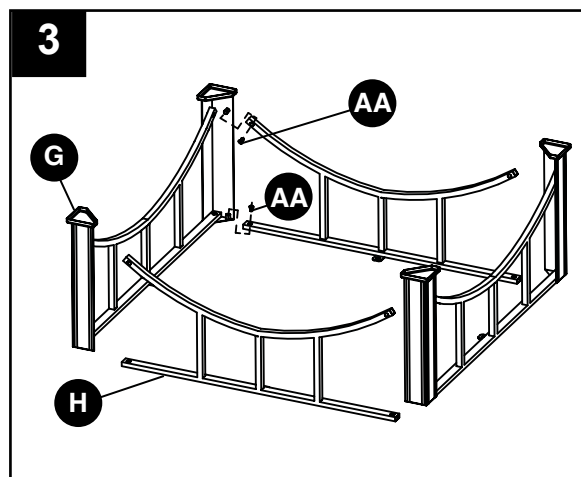


4. Attach legs (G) and leg frame (H) to slate top (F) using M6 nut (BB). Tighten all hardware with wrench (EE) and screwdriver.

### Hardware Used


**BB** M6 Nut  x 4

**EE** Wrench  x 1

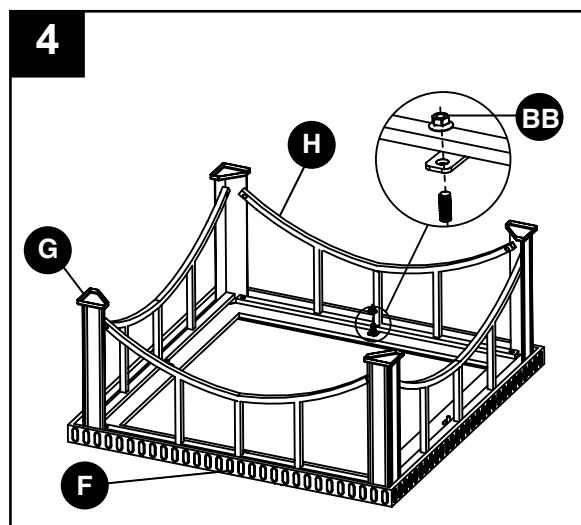

5. Turn assembly right side up. Place fire bowl (D), wood grate (C) and mesh wire cover (B) into base assembly.


Your firepit is now ready for use.  
Keep poker (I) near firepit for use anytime.

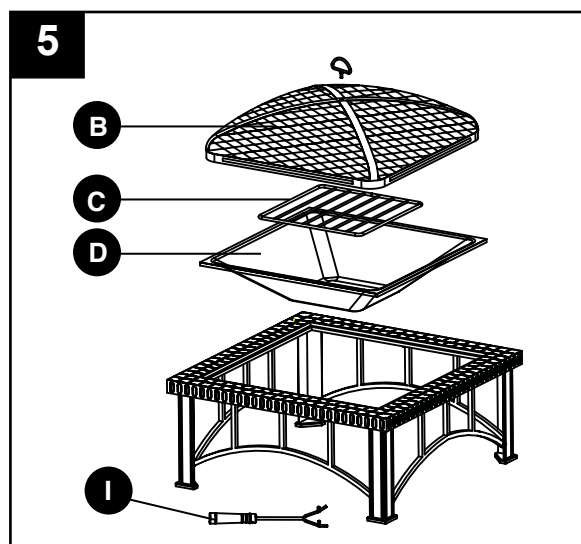

## CARE AND MAINTENANCE

---

- To extend the life of your firepit, clean it after each use and use vinyl cover (J) to protect the unit from the elements.
- To protect firepit finish, use a soft cloth to wipe firepit and poker.
- Do not attempt to clean while hot.
- Clean ash catcher after each use once ashes have cooled.
- Store in a cool, clean, dry place.

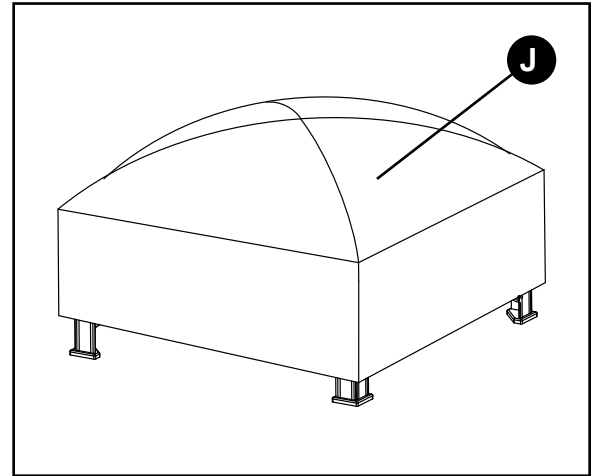

## ONE YEAR LIMITED FRAME WARRANTY

---

If within one year from the date of original purchase, this item fails due to a defect in material or workmanship, we will replace or repair at our option, free of charge. To order parts or to obtain warranty service, call 1-800-643-0067, 8 a.m. - 8 p.m., EST, Monday - Friday. This warranty does not cover defects resulting from improper or abnormal use, misuse, accident, or alteration. Failure to follow all instructions in the owner's manual will also void this warranty. The manufacturer will not be liable for incidental or consequential damages, or common erosion of outdoor products. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

GHP Group, Inc. • 8280 Austin Avenue • Morton Grove, IL • 60053

## REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 8 p.m., EST, Monday - Friday.

PART	DESCRIPTION	PART #
A	Handle	40-07-453
B	Mesh Wire Cover	40-08-113
C	Wood Grate	40-08-114
D	Fire Bowl	40-08-115
E	Ash Catcher	40-08-116
F	Slate Top	40-08-117
G	Legs	40-01-133
H	Leg Frame	40-01-134
I	Poker	40-04-409
J	Vinyl Cover	40-08-118

PART	DESCRIPTION	PART #
K	Hardware Kit	40-09-923

