

# PT Series

## Ultraviolet Disinfection Systems



**MODEL:**

**PT-8**

**PT-12**

**PT-20**

It is important that those responsible for the installation of this equipment, as well as the owner / operator, read this manual and carefully follow the instructions and guidelines.

### Installation, Operation and Maintenance Manual

**CAUTION:** Read and Follow all safety rules and operating instructions before first use of product.

During normal operation, the Green LED will flash every 5 - 10 seconds.

# PurTest®

**Ultraviolet Light Disinfection**

American Water Service  
104 Associates Lane  
Indian Trail, NC 28079  
704-821-3200 Phone  
704-821-3232 Fax

# What's Included in your UV System

1. UV Chamber
2. Electronic Control Box
3. Lamp Connector Cable with Lamp Shroud Cover
4. UV Lamp
5. Quartz Sleeve
6. Black O-Ring (packaged with manual & O-Ring)
7. End Nut (located on UV Chamber under UV Lamp Shroud Cover)
8. Bottom Mounting Bracket
9. Flow Restrictor (packaged with manual & O-Ring)

## General Safety Instructions

**WARNING - to guard against injury, basic safety precautions should be observed, including the following:**

### **1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**

**2. DANGER -** To avoid possible electric shock, special care should be taken since water is present near electrical equipment. Unless a situation is encountered that is explicitly addressed by the provided maintenance and troubleshooting sections, do not attempt repairs yourself, refer to an authorized service facility.

**A dedicated electrical circuit rated with GFI protection is recommended.**

**3.** Carefully examine the disinfection system after installation. It should not be plugged in if there is water on parts not intended to be wet.

**4.** Do not operate the disinfection system if it has a damaged power cord or plug, if it is malfunctioning or if it is dropped or damaged in any manner.

**5.** Always shut off water flow and unplug the disinfection system before performing cleaning or maintenance activities. Never pull on the power cord to remove it from an outlet. Grab the plug and pull to disconnect.

**6.** Do not use this disinfection system for other than the intended use (potable water applications.) The use of attachments not approved, recommended or sold by the manufacturer / distributor may cause an unsafe condition.

**7.** Intended for indoor use. Do not install this disinfection system where it will be exposed to the weather. Do not store this disinfection system where it will be exposed to temperatures below freezing unless all the water has been drained from it and the water supply has been disconnected.

**8.** Read and observe all the important notices and warnings on the water disinfection system.

**9.** If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less Amperes or Watts than the disinfection system is rated for may cause over heating. Care should be taken to arrange the cord so that it will not be tripped over or accidentally pulled from the outlet.

### **1. SAVE THESE INSTRUCTIONS.**

**2. WARNING:** The light given off by this unit can cause serious burns to unprotected eyes and skin. Never look directly at a lit UV lamp. When performing any work on the UV Disinfection System, always unplug the unit first. Never operate the UV system while the lamp is outside of the UV chamber.

**3. WARNING:** The UV lamp inside of the disinfection system is rated at an effective life of approximately 9,000 hours. To ensure continuous water treatment, replace the UV lamp annually with the appropriate Aqua Treatment Services UV lamp. Failure to comply may present a fire hazard.

# Function

The function of this ultraviolet disinfection unit is to provide in excess of 99% reduction / inactivation of all water borne pathogenic (disease causing) bacteria.

Model PT series have a number code designation correspondent to the maximum gpm (gallons per minute) flow rate of the unit. I.E.- PT-8 has a maximum flow capacity of 8 gpm.

**Applications:** PT Units are designed for reduction / inactivation of micro-organisms in water supplies. The Ultraviolet lamp peak radiation of 254 nanometer wavelength (nm) reduces or inactivates the D.N.A. (deoxyribonucleic acid) which absorbs the Ultraviolet radiation. PT units meet minimum dosages of 30,000 microwatt second per square centimeter.

## MAXIMUM CONCENTRATION LEVELS BEFORE ULTRAVIOLET:

Turbidity.....	5 NTU	Hardness.....	7 gpg
Color.....	None	Iron.....	0.3 ppm
Manganese.....	0.05 ppm	pH.....	6.5 - 9.5ppm

Important Note - Pre-filtration equipment may be required if these parameters cannot be maintained. Flow rate must not exceed rated capacity of the unit.

# Description

The PT series has an unique design with an ultraviolet germicidal lamp housed within a single quartz sleeve surrounded by a stainless steel pressure chamber. The chamber is fabricated out of 304 Stainless Steel.

These units come with an ultraviolet lamp designed with four pins at one end and a domed end quartz sleeve to protect the UV lamp from direct contact with the water and a control box.

The quartz sleeve is intended to be placed through the disinfection chamber and will slightly protrude through the threaded nipple. The ultraviolet lamp is placed within this quartz sleeve. The U.V. light shines through this specially designed hard quartz sleeve for maximum disinfection efficiency to meet the requirements for bacteria reduction in potable water.

The inlet is located on the bottom of the chamber and the outlet can be located on the top side of the UV chamber dependent upon the installation option selected. A sight Port is provided for safe and easy view of UV operation. A bracket is secured to the wall and the chamber is held in place by tightening the lock nut to both mounting bracket and chamber. A UV Control Box operates and monitors the UV Lamp status and provides visual and audible alarms when the UV lamp is out or requires Lamp replacement.

# Installation

## GENERAL CONSIDERATIONS FOR ALL DISINFECTION UNITS:

1. When installing the equipment, it is necessary that the unit be isolated from vibration, heavy equipment, and poorly connected piping.
2. Incoming water temperature to the unit should not exceed 35° minimum to 110° maximum degrees Fahrenheit.
3. The operating pressure should not exceed 100 psi.
4. Before putting the unit into final operation follow sanitation procedures as outlined in this manual for proper disinfection. Sanitizing all discharge piping and fittings with household bleach from disinfection unit to point of use removes existing contaminants and gives the unit a "clean start." Be sure to rinse with U.V. treated water.
5. A flow control, included with the unit, must be installed to insure only the designated flow through the unit for proper disinfection.

## GENERAL PRECAUTIONS TO BE FOLLOWED AT ALL TIMES:

Only qualified persons or licensed professionals should be involved in the installation or service maintenance of this system. Contact PurTest with any questions prior to working on this system.

1. Always disconnect electrical power to any U.V. unit before servicing.
2. Under no circumstances should personnel look at a U.V. lamp in operation (EXCEPT through an external sight Port lens located on the outside of the unit).
3. U.V. disinfection units must always be properly grounded. The PT series are always placed after the pressure tank and any other type of treatment devices (i.e. softeners, filters).

These units are normally installed in a vertical position in an enclosed area with good ventilation. Allow clearance of at least the unit's length at one end for quartz sleeve and lamp replacement. Two (2) anchor bolt holes are provided for proper wall support. Use wall plugs with screws for sufficient support (not included). A lock nut secures the mounting bracket to the U.V. chamber.

If your piping system is subject to impulse pressure resulting in a "water hammer" condition, a surge tank or other means must be provided to remove this condition; otherwise, this extreme shock pressure condition may rupture or fracture the quartz sleeve.

Make all plumbing connections to allow for ease of service. Be sure to follow all local plumbing codes and U.V. restriction requirements where specified by local authorities.

## UV CHAMBER & CONTROL BOX MOUNTING

The UV Chamber and Control Box design allows for several mounting configurations. The Control Box comes standard mounted to the UV Chamber as shown in Option

A Installation Diagram on Page 5.

The Control Box may be removed and mounted on the wall, with optional second mounting bracket, right next to the UV Chamber as shown in Option B or C on the installation diagram. (Wall mount screws are not included).

## STEP BY STEP INSTALLATION:

1. Turn off the water before cutting into the water line.
2. Assess the installation (i.e. type of pipe, size of lines, etc.) and obtain necessary plumbing fittings for installation. Inlets and outlets on PT units are 3/4" FNPT and 1" MNPT. Use Teflon tape on all threaded connections and avoid over tightening.

Note: The flow control is a press in type. All UV chambers come standard with a 3/4" FMP/T connection and a 1" MNPT connection on the Inlet / Outlet nipple. Make sure the rubber part of the flow control is facing outward from the bottom inlet. Simply hand press or slightly tap in the flow control until it sits on the inside ledge of the machined bottom inlet. (see Installation Diagram on page 5)

3. Using the mounting bracket provided, secure unit to wall, or other surface. Make sure to allow enough room to install, replace, and clean the quartz sleeve and lamp. Installing a water shut-off valve before and after the unit is recommended to make servicing easy.
4. After mounting, install quartz sleeve, and O-Ring, per Quartz Sleeve instructions on. Turn on the water slowly, check for leaks, and repair as needed prior to full service operation.

## QUARTZ SLEEVE:

Installation of the Quartz Sleeve:

Always handle quartz sleeves carefully to prevent breaking or chipping. The quartz sleeves are to be clean and free of fingerprints before installing.

After unplugging the unit, remove the brass dust cap and electrical connection. Then remove brass end nut. Install the quartz sleeve through the stainless steel threaded nipple until it is centered in the Quartz spring. Use a small amount lubricant and install the O-Ring around the Quartz Sleeves until it touches the S.S. nipple on the UV Chamber. Avoid riding the O-Ring on any threaded part of the nipple. Hand-tighten the brass end-nut to form a compression seal around the quartz sleeve. Tightening the end nut will lower the quartz sleeve into the spring assembly compressing the O-Ring and providing a water tight seal. When installed properly there is a small amount of space left between the top of the quartz sleeve and the inside top of end nut. Avoid overtightening the nut, which may cause a fracture on the end of the quartz sleeve. Under normal operation conditions, hand-tightening will provide a 100 psi seal. Do not use any devices to tighten end nut.

After you have tightened the brass end nut and all other plumbing connections, open the outlet valve. Slowly open the inlet valve and flush out all remaining air. Then close

# Installation Continued

the outlet valve and slowly open the inlet valve fully. Check the unit for leaks. If you find a leak at the brass end-nut, tighten the brass end-nut further. If the leak continues, drain the unit and inspect the quartz O-Ring and quartz sleeve for proper seal. Once you complete checking the unit, reassemble O-Ring and tighten brass end-nut. Re-pressurize the unit and check again.

## U.V. LAMPS:

### INSTALLATION OF THE ULTRAVIOLET LAMPS:

**\*\*DO NOT PUT POWER ON AT THIS TIME!\*\***

**CAUTION: Never operate or look directly at U.V. lamp outside the disinfection chamber.**

Make sure unit is unplugged when installing or servicing ultraviolet lamp. Avoid allowing fingerprints and other debris to deposit on UV lamp. Carefully place the lamp inside the quartz sleeve leaving enough space to connect the socket connector to the lamp pins. Then gently slide the brass dust cap over the end nut, securing the lamp and protecting it from dust.

### ULTRAVIOLET LAMP MAINTENANCE

**REQUIREMENTS:** The U.V. lamp is rated for 9,000 hours of continuous use. After this period of time, the U.V. lamp has undergone a photochemical change. While the lamp will not normally be burned out, the lamp quartz may no longer emit the 254-nm shortwave U.V. to effectively reduce / inactivate bacteria. Failure to replace the U.V. lamps every 9,000 hours may cause bacteriological breakthrough. Should the use of the disinfection unit be intermittent, in no case should the U.V. lamp be used for more than 24 months regardless of the number of hours of operation due to normal shelf life degradation of the U.V. bulb. Changing the quartz sleeve should be done at the same time U.V. lamp replacement is scheduled.

It is recommended that your water supply be tested periodically (yearly) through your local health department or approved certified laboratory.


## Mounting Options:



Option A  
Standard Control Box  
& UV Chamber Mounting



Option B  
Remote Control Box  
& UV Chamber Mounting  
With Optional Bracket

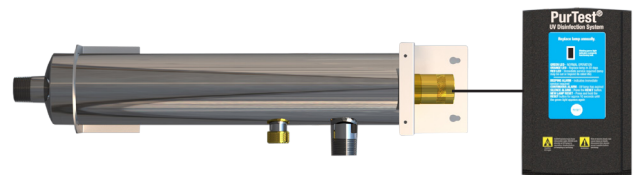


Option C  
Remote Control Box  
& UV Chamber Mounting  
With Optional Bracket



# Assembly Of Quartz Sleeve & UV Lamp




1) Locking Nut  
(fasten top bracket onto UV Chamber)

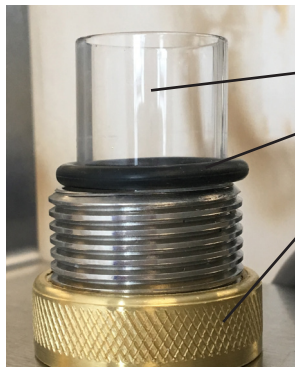

2) Quartz Sleeve inserted into UV Chamber  
Quartz Sleeve Black O-Ring  
Locking Nut



4) Slowly slide lamp down into Quartz Sleeve  
Brass End Nut  
(screws down onto Stainless Steel Nipple)  
Locking Nut

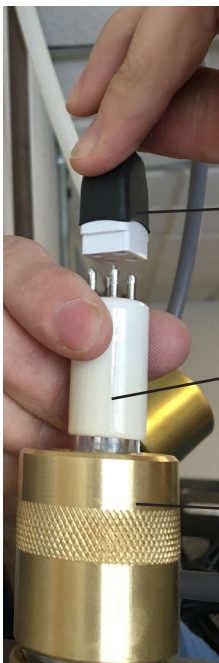


3) UV Lamp Harness Cable  
with Lamp Connector  
UV Lamp inserted into Quartz Sleeve  
with 4 Pin  
Brass End Nut




5) UV Lamp Shroud  
(slides down over Brass End Nut)  
End nut under shroud

# Installation Diagram

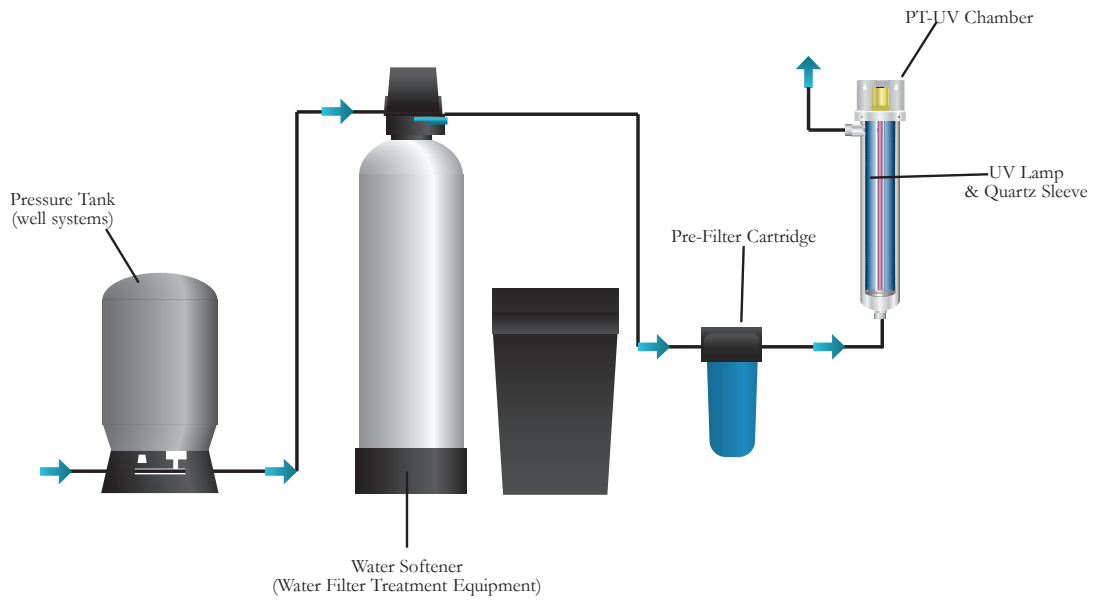

## Parts Breakdown:

1. Mounting Bracket
2. Outlet
3. Site Port
4. Quartz Sleeve
5. UV Lamp
6. Inlet
7. Quartz Sleeve Stabilizer
8. Optional Bottom Mounting Bracket

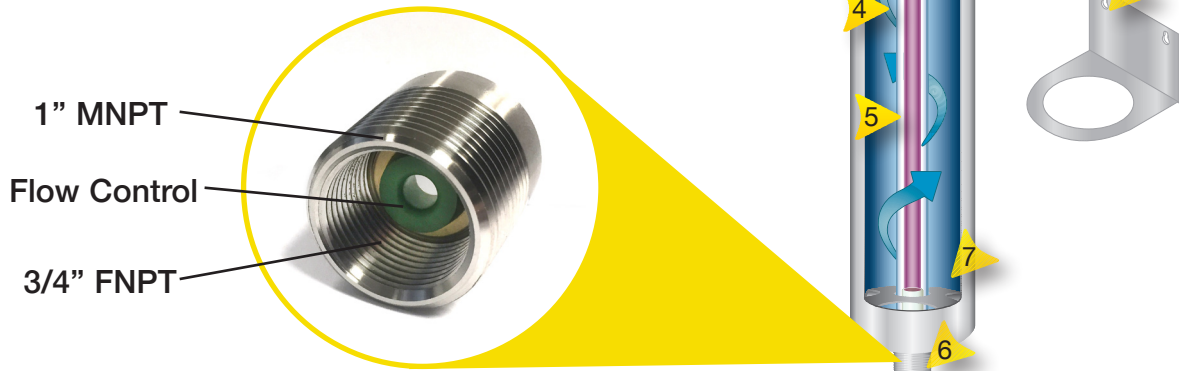

# Sanitation Procedure

## HOW TO DISINFECT A WATER SYSTEM:

Every new well, or existing water supply system that has been disrupted for service or repair, should be disinfected before it is returned to use. Water in the well and storage tank should be treated with a strong chlorine solution to destroy disease organisms. All pipelines and fixtures in the distribution system should be rinsed and flushed with chlorinated water. Upon installation of a U.V. disinfection unit or yearly bulb replacement service, disinfection with chlorine to initially flush the system is recommended to assure line sanitation prior to U.V. start up.

The source of chlorine can be ordinary household liquid laundry bleach (about 5.25% available chlorine). The quantity required depends on the volume of water to be treated. The United States Environment Protection Agency (EPA) indicated that about 100 parts of chlorine, by weight, mixed in a million parts of water will destroy essentially all water-borne disease organisms. Table 1 shows the quantity of liquid bleach required to disinfect wells of various diameters and depths.

## DISINFECTION PROCEDURE:

1. Remove the cap or seal from the casing and measure the depth of the water in the well, then refer to Table 1 to determine how many chlorine pellets should be used. In some instances removing the seal to measure the water can be a difficult task, and it is easier to estimate well and water depth from well log or other records.
2. Remove well cap and determine if there is an unobstructed path from the top of the well to the water level. If it is not possible to remove the well cap, remove vent or sanitation access plug.
3. Drop one pellet into the well and listen to hear if it hits the water. If the pellet hits the water, drop one-half the number of pellets determined to be needed into the well. These will sink to the bottom and sanitize the lower part of the well.
4. Mix the remaining pellets in a few gallons of water in a CLEAN plastic container and pour the solution into the well.
5. In order to mix the chlorine thoroughly throughout the entire water system, it is necessary to recirculate the water in the well. This can be accomplished by connection a hose to an out side faucet that is located after the pressure tank. Use hose to run water back down the well (this also rinses upper portion of well). After about 15 minutes of recirculation the water, a strong chlorine odor should be apparent. Turn off hose.
6. Bypass water softener and filters and open each water outlet in the water system until chlorine is present in water. This procedure assures that all the water in the system is chlorinated.
7. Allow the chlorinated water to stand in the system for at least one (1) hour, and preferable overnight. After this, open an outside faucet system until water runs chlorine free. Repeat flush operation on each faucet in system.

## NOTE:

**A.** Chlorine may break loose iron deposits, slime and organic material. This material will make the water discolored. The material broken loose may plug pump screens. Do not continue to run pump if water doesn't flow.

**B.** The high level of chlorine required to sanitize a water system is corrosive to most metals and chlorine solution must not be allowed to remain in water system more than 36 hours before being completely flushed from system.

8. After system has been completely flushed, perform a bacteriological analysis on the water following all applicable procedures.

**NOTE:** Always follow the sanitizing procedure required by applicable state or local laws.

EPA Registered: Well sanitizer pellets are EPA Registered for sanitizing potable water. EPA Registration No. 50510-1

**LARGE DIAMETER WELLS:** Dug or bored wells should be disinfected in the same way as a drilled one. Lower the water level as much as possible, remove the sand, silt and debris, and then treat with the chlorine solution. Mix thoroughly by circulating the water back into the well and use the hose to rinse the interior lining of the well. Do not try to disinfect an unprotected, unlined well because new seepage or surface contamination will flow into the water about as fast as you can disinfect it. Disinfect the pipeline distribution system as indicated for drilled wells.

**SPRINGS AND CISTERNS:** Mix about 1/2 cup of household bleach in 5 gallons of water and use this to scrub the walls of the spring box or holding tank. With a constant flow of fresh water from the spring, there is probably no way of detaining the chlorine solution in the reservoir for more than a few minutes. However, the chlorinated water should flow through the pipeline to disinfect the distribution system. Cisterns can be disinfected in the same way but a source of clean water will be needed to flush the dirty waste out of the system.

For additional information about how to protect wells and springs and keep them from becoming contaminated, call or visit your local Cooperative Extension office, or your nearest certified water treatment specialist.

**TABLE 1 \*\*** Quantity of solution mixed - 5.25% available chlorine (laundry bleach) for disinfecting wells, or 52,500 P.P.M..

WQA recommends 50mg/l or ppm chlorine concentration.

Formula -  $C2 \times V2 / C1 = V1$

C1= Household Bleach (52,500 P.P.M.)

V1= Chlorine Amount Needed

C2= 50 mg/L      V2= 80 gallons holding time

I.E. 50-ml/g X 80 gal= 4000/52,500= .08 gallons of chlorine (5.25%)

.08 gal chlorine (5.35%) X 128 (oz/gal) = 10.24 oz (5.25%)

Dug Wells - 3 to 4 feet diameter - 4 cups per foot of water

Drilled Wells - 3 to 8 inch diameter - 1 cup per foot of water



# Sanitation Procedure Continued

**TOO MUCH CHLORINE IS BETTER THAN TOO LITTLE:** \*\*In situations where it is inconvenient to determine depth of water or diameter of a drilled well, a minimum of 1/2 gallon of household bleach may be used for wells up to 8 inches in diameter with estimated to be less than 80 feet deep; 1 gallon should be used for similar size wells with water deeper than 80 feet. In case of a well yielding more than 50 gallons per minute, special procedures are required. Seek the advice of a certified water treatment specialist.

Wait a day or two before you have another sample tested. Do not take a sample for testing if the odor of chlorine is still present in water.

**REMEMBER** - To make your water supply safe:

- Locate your well properly.
- Protect it from surface contamination.
- Test water periodically for coliform bacteria. (Home-yearly, Farm-2X yearly)
- Chlorinate, or filter and disinfect the water if necessary.

**Plumbing Line Sanitation Only:**

When installing an ultraviolet disinfection system, a prefilter with sump may serve as a source to sanitize the water lines only. For whole system disinfection follow procedure as outlined above.

**Source:** The Pennsylvania State University College of Agriculture Cooperative Extension.

**NOTE:**

Pellets Weight = 1.14 gram each, 25 pellets/oz., 400 pellets/lb.

1 cup of pellets = 1/2 lb., or 200 pellets, or 8 oz.

To produce a 400 P.P.M. chlorine concentration, to sanitize a water system, use one-half (1/2) pound chlorination pellets for each 100 gallons of water in the system (1/2 lb/100 gal= 8 oz/100 gal= 200 pellets/ 100 gal= 1 cup pellets/100 gal). Table 1 shows how many pellets to use per 100 feet of water in various diameter wells.

**How to Sanitize a Water System Using Well Sanitizer Pellets**

**Table 1**

Well Diameter Inches	Weight of Pellets lbs. - oz.	Cups of Pellets	Number of Pellets
2	0 - 1.5	1/4	40
3	0 - 3.0	2/5	80
4	0 - 6.0	3/4	140
5	0 - 8.0	1	200
6	0 - 12.0	1-1/2	300
8	1 - 5.0	2-1/2	500
10	2 - 0	4	800
12	3 - 0	6	----
24	12 - 0	24	----
36	26 - 0	---	----

# Installation and Maintenance

## REQUIREMENTS FOR CLEANING THE QUARTZ SLEEVE:

As water passes through the U.V., minerals, debris and other matter in the water may deposit onto the quartz sleeve. After sufficient film has formed on the quartz sleeve, the ability of the ultraviolet germicidal rays to pass through the quartz sleeve and into the water may be impaired. Therefore, it is necessary to determine a cleaning schedule for the quartz sleeve. The frequency will depend on the specific type of water conditions. If the water has been processed through deionization, reverse osmosis, or is distilled, cleaning may be required only once per year. If untreated water is used, the cleaning frequency will vary. A minimum of once yearly is standard recommendation for cleaning and lamp replacement. Contact your local dealer for scheduling this service. Your specific situation will vary the frequency time according to the water quality of the home or facility application.

## QUARTZ SLEEVE CLEANING PROCEDURES:

To clean the quartz sleeve, turn off the water flow to the disinfection unit, turn power off, and at a separate faucet or valve relieve the water pressure from the UV. Then disconnect the electrical service to the lamp pins. Carefully remove the U.V. lamp. Loosen the end nut and remove the O-Ring and quartz sleeve. The quartz sleeve may then be washed with a mild soap and hot water solution and rinsed clean with hot water. Should this be insufficient to clean the quartz sleeve, a mild acid may be used (i.e. vinegar). Be certain to follow all recommended safety and handling procedures on the acid container. It is important to handle the quartz sleeve with care to prevent breakage. Make certain that all finger prints are wiped clean before reinstalling (see installation of the quartz sleeve). Replace O-Ring [PT8-544(1)] every time a quartz sleeve is cleaned or replaced. We recommend replacing the quartz sleeve once a year.

## ELECTRICAL:

The PT series are furnished with 6' line cord that will plug into a 110V outlet. Electrical receptacles must be properly grounded for safe operation. Improper grounding will void any warranty.

When possible use a separate breaker to minimize voltage fluctuations and avoid accidental shut off and a dedicated electrical circuit rated with GFI protection is recommended. After unit is installed and water is turned on, plug the unit into 110V wall receptacle. View lamp operation through safety Sight Port lens. NOTE: Avoid exposing your eyes to U.V. light.

## UV CONTROL BOX START UP PROCEDURE

Make sure the UV lamp is inserted per instructions into the quartz sleeve and UV chamber. Then plug the UV lamp into the lamp connector. Plug the electrical control box into a 120volt wall plug outlet.

Upon start up the UV lamp Detector and Timer circuit board will perform a self diagnostic test. When power is applied the UV lamp will go on and a circuit board output check is performed as follows:

Quick Beep

Red, Yellow and Green LED lights will flicker as the lamp warms up.

Solenoid / Relay connection on, then off

Pause with beeps

Green LED on = System Check OK, UV System is operational.

Set the 1 Year Lamp Timer – WITH NEW UV LAMP –

Make sure the control box is plugged into the wall outlet and the UV lamp is on. Press and hold the reset push button. A tone that descends in frequency once per second will be heard. Hold the reset button down for approximately 5-8 seconds until the green light appears. At this point release the button. The 1 year lamp timer has just been reset.

The above procedures are followed for the 1 year UV lamp replacement interval to reset the control box 1 Year Lamp Timer.

## UV lamp Detector and Timer circuit board Lamp Operation and Alarm features:


- UV System OK – Green LED will flash every 5 - 10 seconds During Normal Operation.
- 30 Days remaining on Lamp Life – Flashing Yellow LED with an intermittent audible tone.
- End of Lamp Life- Flashing Red LED with an intermittent audible tone.
- Lamp Out- Continuous Red LED with a continuous audible tone.
- If your UV System has a 120Vac Normally Closed Solenoid Valve or Remote Alarm connected to the UV Unit plug-in connection, this will activate at End of Lamp Life or Lamp Out alarm conditions.

## To Silence the Audible Alarm with Snooze Button:

1. 30 Days remaining on Lamp Life Alarm - Push reset button – Silences the audible tone for two weeks while the Yellow Led continues to Flash. (You can Silence audible alarm 2 times Max.) You have up to 30 days to replace the lamp. Service Unit - Replace the UV Lamp within 30 Days.
2. End of Lamp Life Alarm - Push reset button- Silences the audible tone for one week while the RED LED continues to flash. (You can Silence audible alarm 4 times Max.)
3. Service Unit Immediately - Replace the UV Lamp.
4. Lamp Out Alarm- Push reset button- Silences the audible tone for one week while the continuous Red LED stays on. (You can Silence audible alarm 1 time only.)
5. Service Unit Immediately - Replace the UV Lamp.


# Parts Breakdown Control Box

ITEM NO.	PART NO.	Description	QTY.
1	ATS-281P	RLC Circuit Board with Fuse and Holder	1
2	ATS1-421P-GDS	Ballast	1
3	ATS-4003	Electrical Cord	1
4	ATS-6L2	Strain Relief	2
5	03-SA-015	Molded Lamp Cord	1
6	562-738W-CX2-01	110 Outlet	1
7	ATS-GDSF	Plastic Control Box for GDS units	1
8	Pure Test Overlay	Pure Test Overlay	1

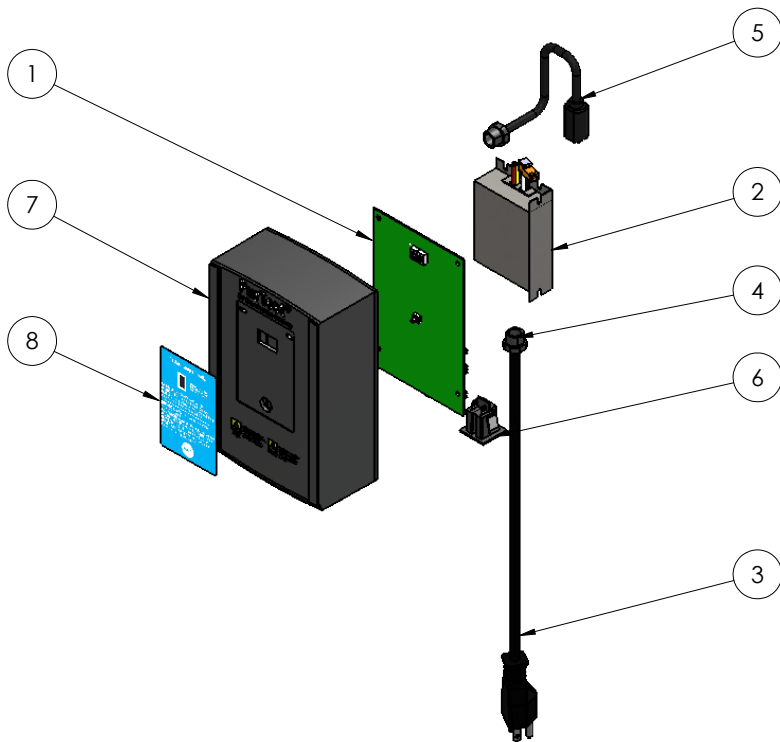


# Parts Breakdown PT-8

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	ATS-476D	Domed Quartz	1
2	ATS4-450	UV Lamp	1
3	ATS-5172	Sightport Lens	1
4	ATS-5173	Orange .7" OD Viewport O Ring	1
5	ATS-5171	Sightport Nut	1
6	ATS5-410	Lock Nut	1
7	ATS-269	(OPTIONAL)Bottom Mounting Bracket	1
8	STS-8GPM	8 Gallon Per Minute Bottom Feed Assembled Chamber	1
9	ATS-8GPM	Flow Control	1
10	ATS-268	Top Mounting Bracket	1
11	ATS5-414	Brass End Nut	1
12	ATS8-544	Quartz Sleeve Black 1.2" OD ORing	1
13	ATS-PT	GDS Control Box	1
14	Pure Test Overlay	Pure Test Overlay	1

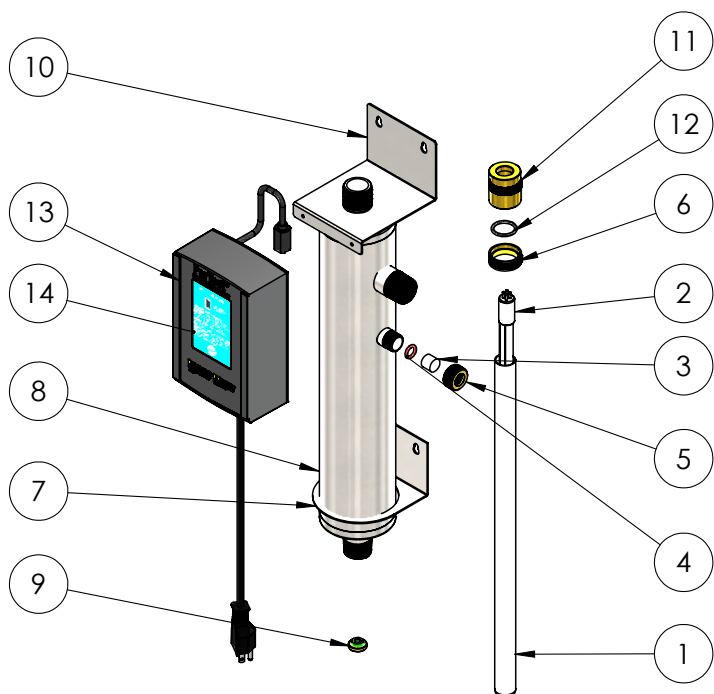

# Parts Breakdown PT-12


ITEM NO.	PART NO.	Description	QTY.
1	ATS1-759D	Domed Quartz	1
2	ATS4-739	UV Lamp	1
3	ATS-5173	Orange .7" OD Viewport O Ring	1
4	ATS-5172	Sightport Lens	1
5	ATS-5171	Sightport Nut	1
6	ATS5-410	Lock Nut	1
7	ATS-12GPM	12 GPM Flow Control	1
8	STS-12GPM	12 Gallon Per Minute Feed Assembled Chamber	1
9	ATS5-414	Brass End Nut	1
10	ATS8-544	Quartz Sleeve Black 1.2" OD ORing	1
11	ATS-PT	GDS Control Box	1
12	ATS-4000	Power Cord	1
13	ATS-269	Bottom Mounting Bracket	1
14	ATS-268	Top Mounting Bracket	1

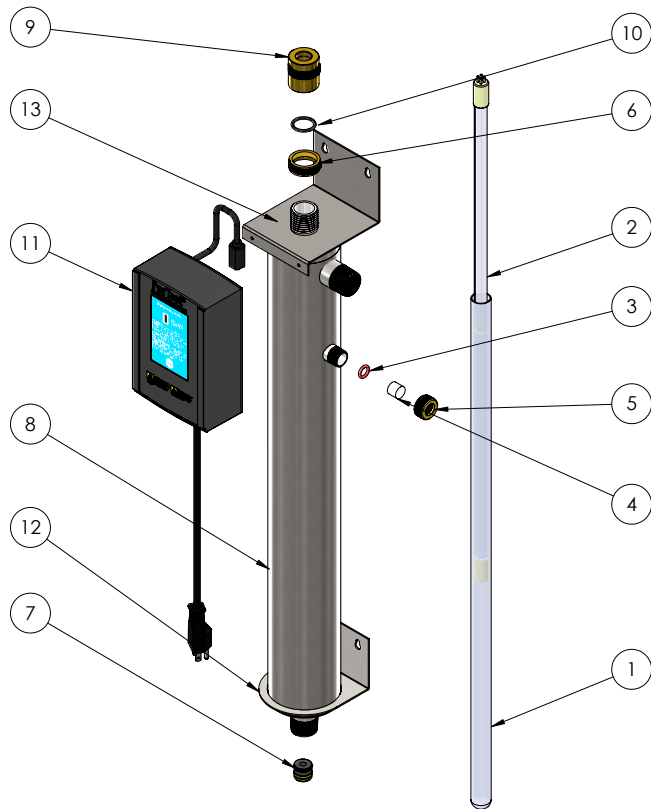




# Parts Breakdown PT-20

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	ATS-832D	Domed Quartz	1
2	ATS4-810	UV Lamp	1
3	ATS-5173	Orange .7" OD Viewport O Ring	1
4	ATS-5172	Sightport Lens	1
5	ATS-5171	Sightport Nut	1
6	ATS5-410	Lock Nut	1
7	ATS8-544	Quartz Sleeve Black 1.2" OD ORing	1
8	STS-20GPM	20 Gallon Per Minute Bottom Feed Assembled Chamber	1
9	ATS-20GPM	20 GPM Flow Control	1
10	ATS-PT	GDS Control Box	1
11	Pure Test Overlay	Pure Test Overlay	1
12	ATS5-414	Brass End Nut	1
13	ATS-268	Top Mounting Bracket	1
14	ATS-269	Bottom Mounting Bracket	1

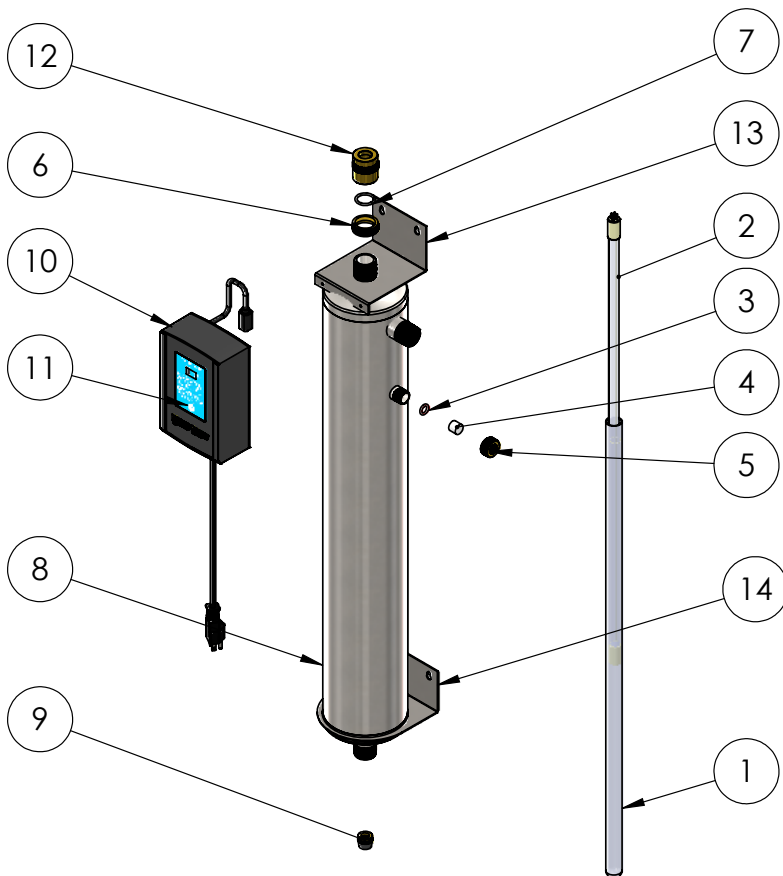

# Wiring Diagram

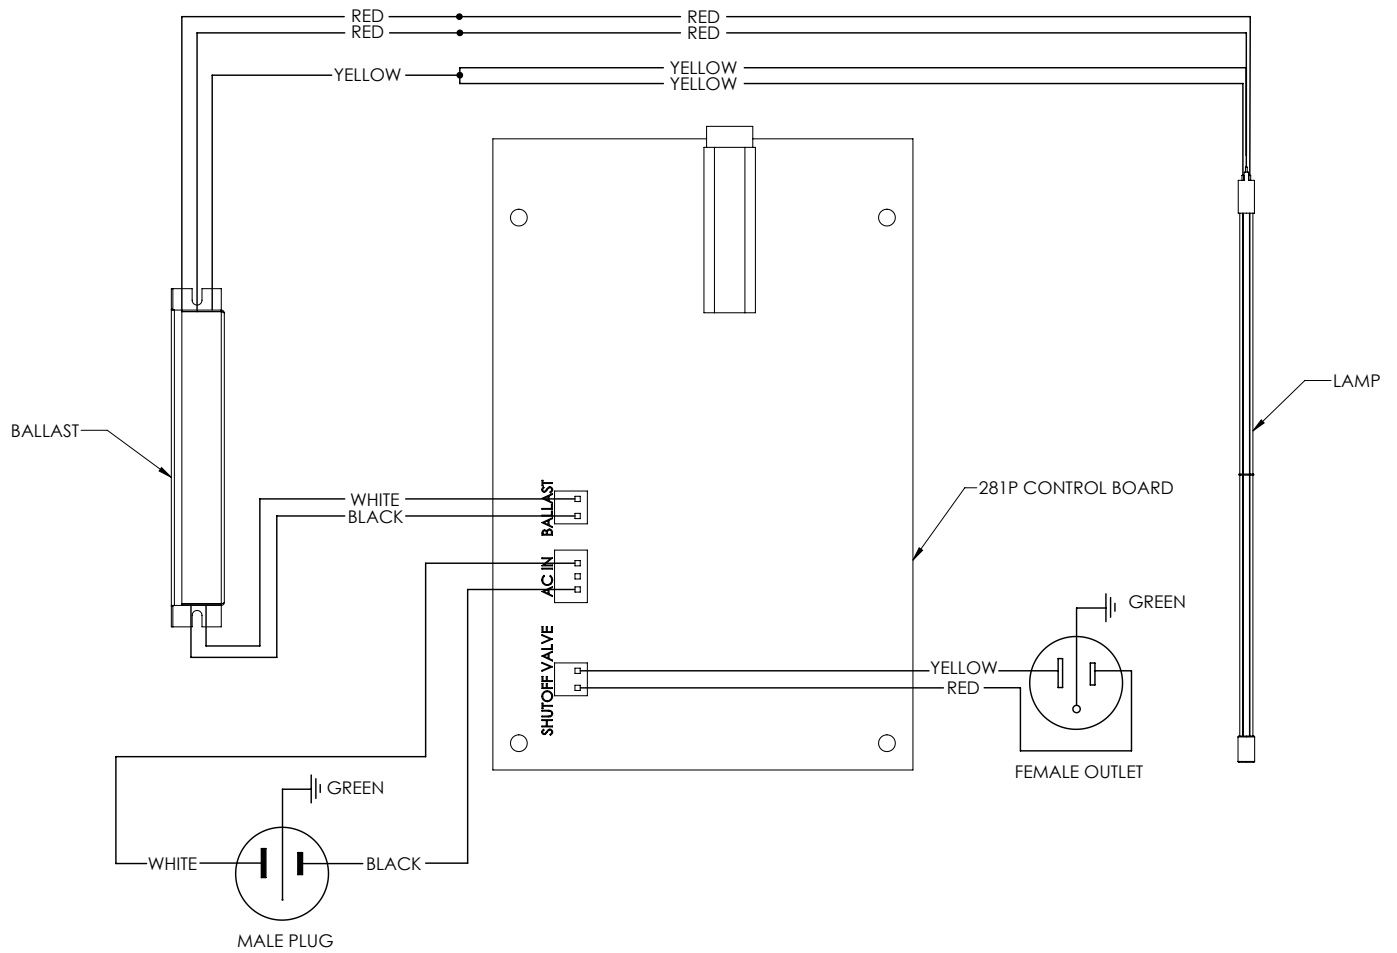

# Troubleshooting

## TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	CORRECTION
U.V. lamp will not light	Check input voltage if below or above 120 volts	Install a voltage regulator
	Line cord disconnected or outlet defective	Check, replace
	Defective U.V. lamp	Replace
	Defective lamp ballast	Check output voltage Replace ballast
	Loose open-circuit wire	Trace out and repair
Leak at quartz nipple	Defective or cracked O-Ring	Replace O-Ring
	O-Ring not seated properly	Reposition O-Ring
	Cracked Quartz Sleeve	Replace Quartz Sleeve
Display not on	Blown fuse	Replace 3 amp fuse (fuse located at bottom of box)
	Water damage	Replace Box

### Control Box LED Operation Status

- 30 Days remaining on UV Lamp Life – Flashing Yellow LED with an intermittent audible tone. Correction Replace UV Lamp
- End of UV Lamp Life- Flashing Red LED with an intermittent audible tone. Correction Replace UV Lamp
- UV Lamp Out- Continuous Red LED with a continuous audible tone. Correction Replace UV Lamp

# Sterile Water Sample Procedures

## **SUGGESTED PROCEDURE FOR OBTAINING STERILE WATER SAMPLES:**

Prior to taking the water sample, be sure to have on hand an adequate supply of sterile bottles. These sterile bottles should be obtained from a reputable laboratory and should have been autoclaved and contained within a plastic outer wrapping.

1. Prior to taking the sample, it is imperative that the sample valve, faucets, etc. be opened at full force for a complete three and a half minutes.
2. After the valve has been left wide open for three and one half minutes, reduce the flow to a reasonable stream of water. Flow to drain an additional three minutes.
3. Open the sterile bottle or sterile container being used. Holding the cap in a down position, the operator should then hold his breath while taking the sample so as to avoid oral contamination of the sample. The operator must not allow his finger to touch the inside of the cap or the neck of the bottle.
4. After the sample has been taken, the cap should immediately be tightly placed on the sample container.
5. The sample container should be placed in a plastic wrapping, kept cool, and should be taken to the laboratory for plating as soon as possible following the above procedure.

We recommend duplicate samples be taken at each test station during each specific test so as to avoid loss of sample through laboratory error and to insure reasonable validity through comparison.

Check with your local laboratory to assure proper sampling and submittal procedure.

Contact PurTest for any water sampling questions or requirements.

# Specifications

## SPECIFICATIONS:

Model#	Max. Flow GPM	No. Lamps	KW @ 120V	AMP @ 120V	Pipe Size	Overall Dimensions L x W x D	Wetted Material	Shipping Weight
PT - 8	8	1	0.03	0.25	3/4" FNPT / 1" MNPT	21" x 3.5" x 3.5"	304 SS	9 lbs.
PT - 12	12	1	0.03	0.25	3/4" FNPT / 1" MNPT	32" x 3.5" x 3.5"	304 SS	18 lbs.
PT - 20	20	1	0.03	0.25	3/4" FNPT / 1" MNPT	35" x 5" x 5"	304 SS	21 lbs.

**NOTES:** 220V Specs are available upon request





REV. April, 2016

**MANUFACTURER'S  
LIMITED WARRANTY**

In accordance with the Manufacturer's warranty, and subject to the conditions hereinafter set forth, American Water Service will repair or replace to the original user or consumer, equipment, parts or components found to be defective in manufacturing or workmanship.

**WARRANTY PERIODS:**

UV Chambers	10 yrs.
Electrical Components (excludes UV lamp)	2 yr.
UV Lamp, Quartz Sleeve	90 days prorated

**WARRANTIES NOT APPLICABLE:** To defects or malfunctions resulting from failure to properly install, operate or maintain the unit in accordance with printed instructions; failure to use PurTest authorized replacement parts, to failures resulting from shipment or handling, abuse, accident, negligence, freezing, fire or heat, direct exposure to weather or sunlight, water temperatures and pressures exceeding specifications, flooding or other acts of God not considered normal operating condition; to normal maintenance services and the parts used in connection with such service; to units which are not installed in accordance with applicable local codes, ordinances and good trade practices; if the unit is moved from its original installation location; or if unit is used for purposes other than for what it was designed and manufactured.

**LABOR COSTS, LIABILITY:** American Water Service, LLC, shall ***IN NO EVENT*** be responsible or liable for the cost of field labor or other charges incurred by any customer in installing, removing and/or reaffixing any American Water Service product, part or component thereof, or be liable for any injury, loss or damage, direct or indirect, special or consequential, arising out of the use of, misuse, or the inability to use such product. Before use, Distributor, Dealer or User shall determine the suitability of the product for his/her intended purposes, and shall assume all risk and liability in connection therewith.

**RETURNS:** A ***RETURN MERCHANDISE AUTHORIZATION NUMBER (RMA #)*** is required on ***ALL RETURNS***. Contact American Water Service to obtain this number. The RMA # ***MUST*** be clearly written on the outside of the package. Address shipments to the Return Department, American Water Service, LLC, 104 Associates Lane, Indian Trail, NC 28079, and freight prepaid. All returns should be accompanied with a written description of mode or reason of failure.

The customer must order PurTest replacement parts if required as a standard purchase until the defective part is received and evaluated by the factory. PurTest will inspect, test, and determine the cause of defective components or parts. PurTest at its sole discretion will make necessary repairs to or replace components. PurTest will determine the extent of the warranty coverage and the proper warranty credit to be applied.

For your warranty protection, the warranty card must be completed and returned to American Water Service within 10 days of installation. In the absence of other suitable proof of installation date, the effective date of this warranty will be based on the date of manufacture plus 30 days.

This warranty gives you specific legal rights and you may also have other rights, which vary, from state to state.