

These instructions describe installation on a large opening patio door. The screen has been sized to precisely fit the opening dimension printed on the box label. For help installing, or for replacement parts contact **Genius Retractable Screens at 1-866-523-9511 or visit [www.geniusscreens.com](http://www.geniusscreens.com)**.


### DOOR SCREEN COMPONENTS

- Power Screw Driver
- Long Phillips Bit
- 2mm Allen Wrench (Provided)
- Tape Measure
- Flat Head Screw Driver
- Square
- Pencil
- Scissors
- Flashlight (Recommended)
- Step Ladder (Recommended)
- Appropriate Personal Protective Equipment



### F-4500 DOOR SCREEN COMPONENTS

- |          |                   |         |          |                          |          |
|----------|-------------------|---------|----------|--------------------------|----------|
| <b>A</b> | Top Guide         | (Qty 1) | <b>F</b> | Cord Lock Tensioner      | (Qty 2)  |
| <b>B</b> | Side Guide        | (Qty 2) | <b>G</b> | #8 x 3/4" Phillips Screw | (Qty 11) |
| <b>C</b> | Bottom Guide      | (Qty 1) |          |                          |          |
| <b>D</b> | Cassette Assembly | (Qty 1) |          |                          |          |
| <b>E</b> | Magnet Profile    | (Qty 2) |          |                          |          |

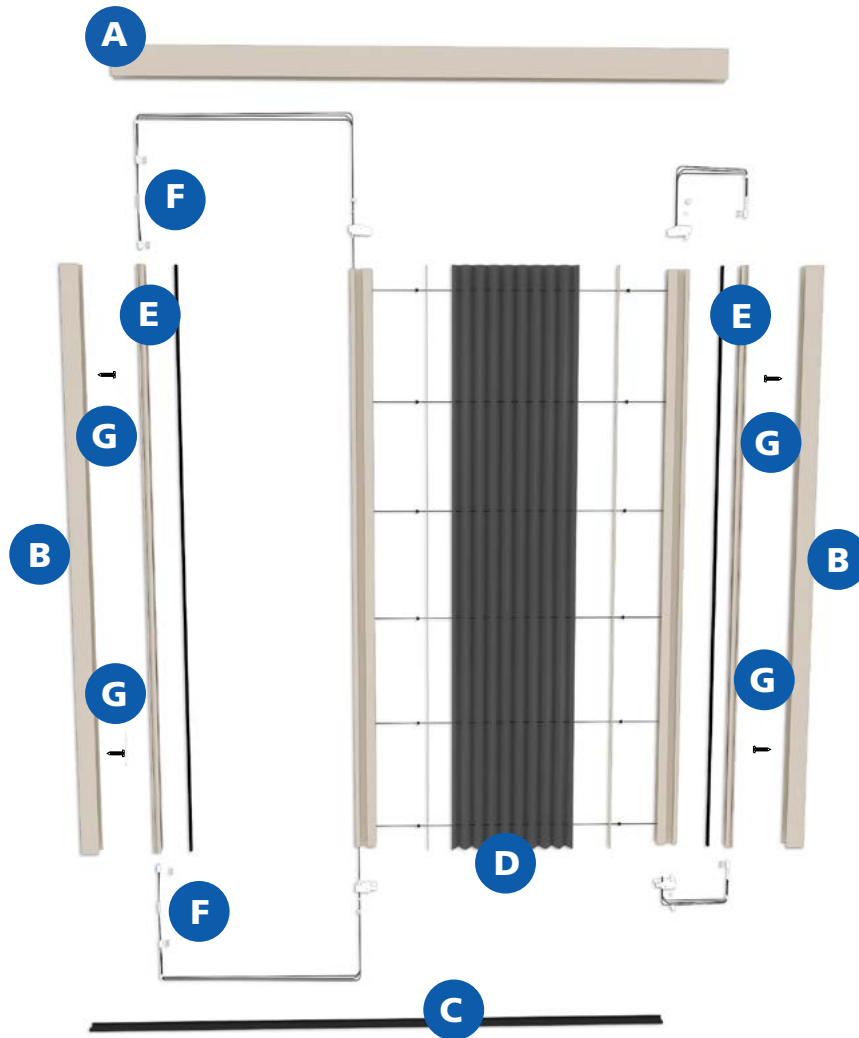


### INSTALL SILL SCREEN ADAPTER


#### NOTICE

The sill screen adapter may be installed. If not, follow the installation steps below:

1. Dry-fit the sill screen adapter to the interior threshold of the wall system.
2. Using a 1/8" drill bit, pre-drill through the fastener holes located on the sill screen adapter.

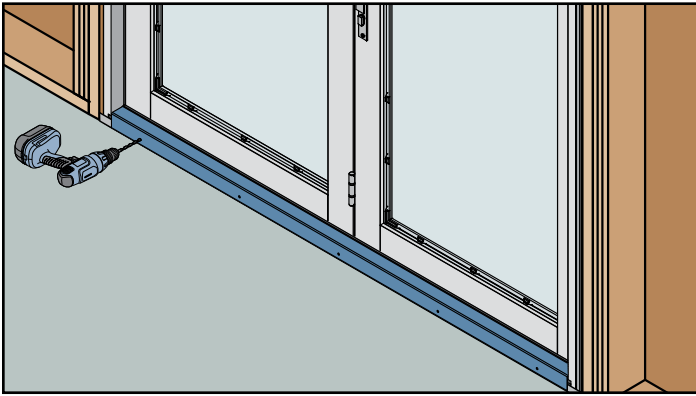

3. Remove and apply a 1/8" bead of sealant to the backside of the sill screen adapter where it will contact the top of the threshold.

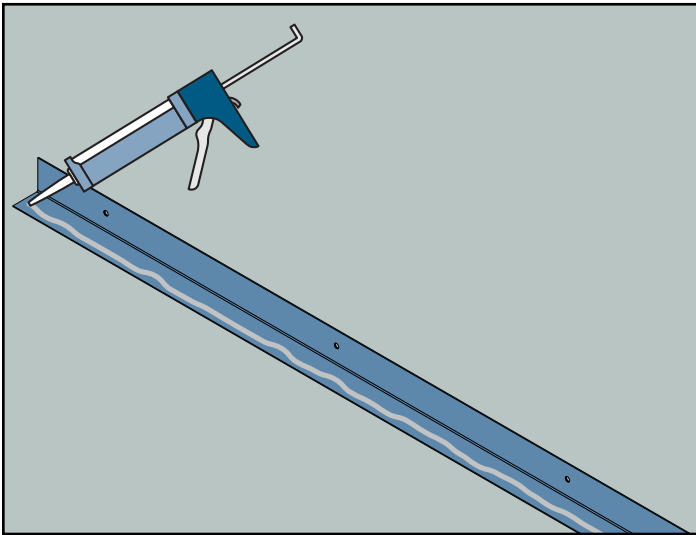

4. Apply the sill screen adapter to the interior threshold of the wall system and fasten using the provided #8 x 1/2" pan-head screws. **NOTE:** To avoid stripping, **ONLY** tighten until snug.



### F-4500 DOOR SCREEN INSTALL

Before beginning ensure the opening is plumb, level, square and the bottom sill has a flat, stable, and smooth mounting surface. The screen is intended to be mounted inside the door frame.



### 1 INSTALL SIDES AND TOP GUIDES

Begin by locating the Side Guides (B on page 2). Install one on each side of the door frame and push to the top. Secure using #8 x 3/4" Phillips Screws in the pre-drilled holes on each side (1A below).



Next, install the Top Guide (A on page 2) by tucking each end into the Side Guides and centering it in the frame. Secure with # 8 x 3/4" Phillips Screws in the pre-drilled holes (1B below).



### NOTICE

**Install the side guides flush with the interior face of the frame.**

**Recessing the screen into the wall system frame may cause operational issues and/or conflict with the door components.**

### 2 INSTALL BOTTOM GUIDE

Clean the door threshold surface and ensure it is level before install. Locate the Bottom Guide and position it so it is centered in the frame and tucked into the Side Guides. The white paper backing should be facing down. **NOTE:** The adhesive is very sticky. Use care when positioning.



Remove the paper backing from the Bottom Guide and adhere it to the bottom sill.





### 3

#### INSTALL CASSETTE ASSEMBLY

During Step 3, **DO NOT open the Screen Cassette Assembly and expose the screen fabric.** Position the Screen Cassette Assembly in the Top Guide and on the Bottom Guide with the sticker towards the top and the inside. Remove the top and bottom outer wrapping. Push the Screen Cassette Assembly all the way to the right of the frame as viewed from the


inside and snap it into the Side Guide (3A below). Next, remove the tape from the cords and grasp the left Magnet Profile and carefully pull it to the left side of the frame. Ensure none of the cords are tangled, twisted, or pass over each other, then snap it into the left Side Guide (3B below).

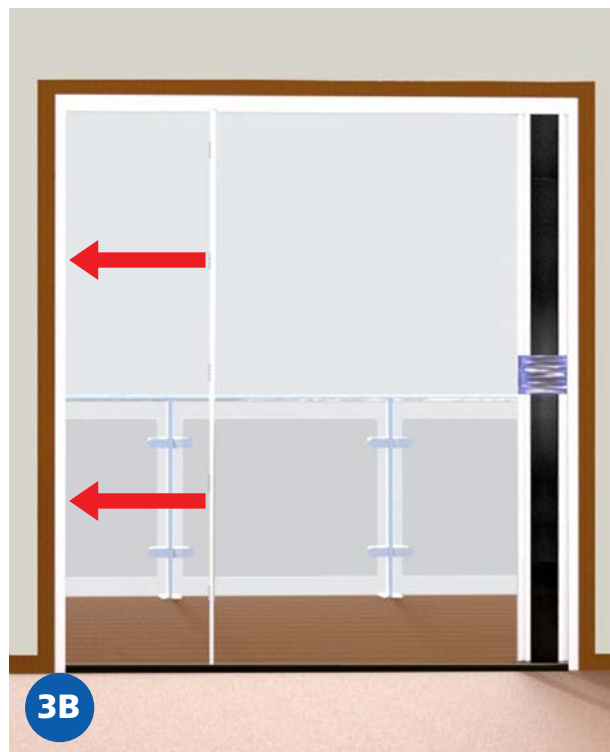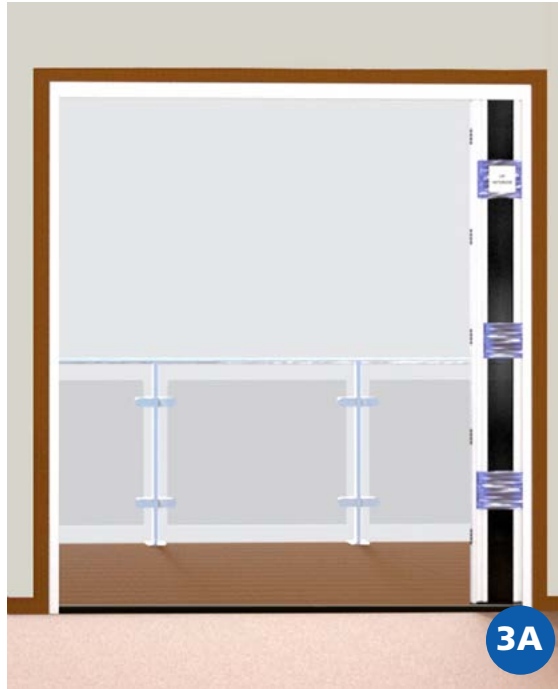

### 4 ADJUST TENSION AND TEST OPERATION

Remove the magnet strip to expose the Cord Lock Tensioners. Ensuring the screen is fully collapsed, adjust the tension by sliding the top and bottom Cord Lock Tensioners in even increments until there is slight tension and no slack in the cords (4A & 4B below). Secure the Cord Lock Tensioner using the 2mm Allen wrench provided. Cut the remaining wrapping and

test the operation of the screen. Separate the pleats with your fingers as needed. If necessary, fully collapse the screen and readjust the tension. Push the magnet strip back in the groove of the Magnet Profile (4C below). Refer to the troubleshooting guide (page 7) if the operation continues to be unsatisfactory.

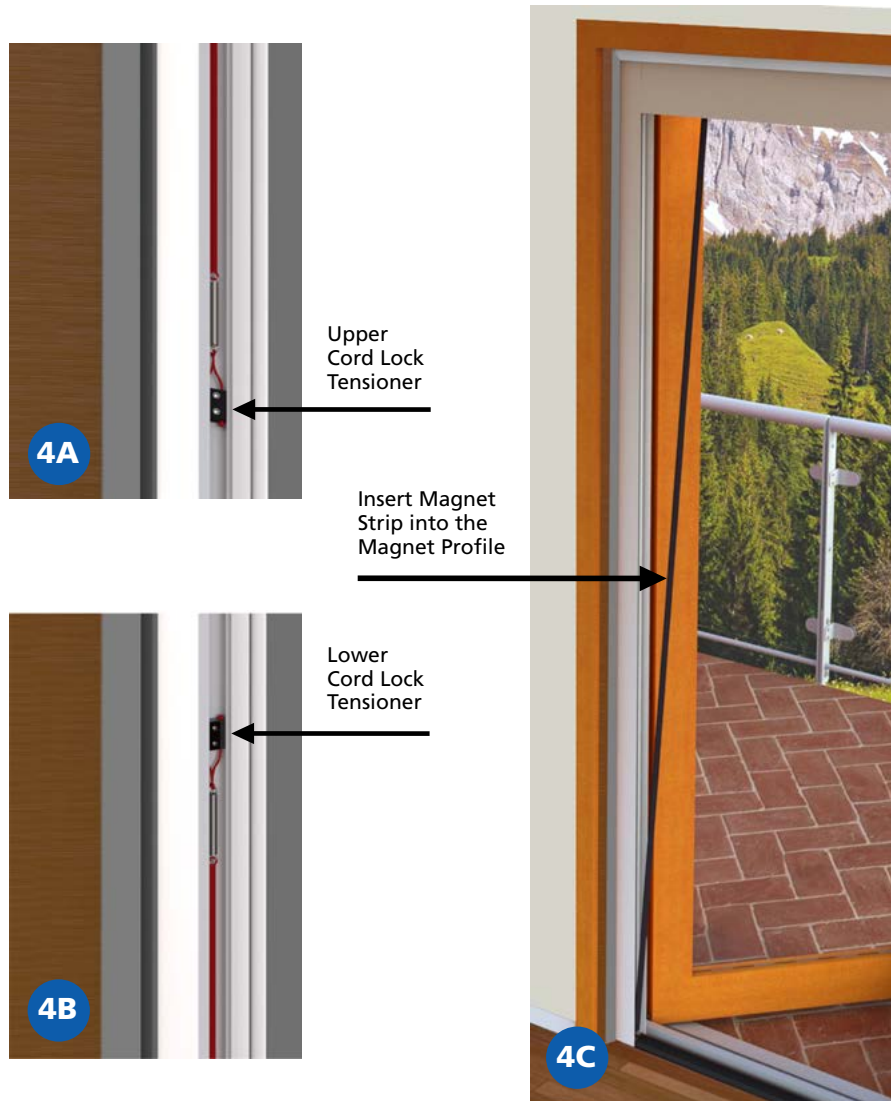

**TROUBLESHOOTING GUIDE**

Problem	Solution
<p><b>One of the cords is longer or shorter than the others.</b></p>	<p>A. Ensure there are no snags, tangles, or pinched cords.                      B. Remove the Magnet to reveal the Cord Hold and Cord Lock Tensioner.                      C. Loosen the hex screws in the Cord Lock Tensioner(s). To adjust the top cords, adjust the top Tensioner and to adjust the bottom cords, adjust the bottom Tensioner.                      D. Untie the knot and gently pull the cord(s) that have any slack until the slack is gone.                      E. Retie the knot and re-tension the cords using the Cord Lock Tensioners. Then snap the Magnet Profile back into position and test the operation.</p>
<p><b>The cords sag into the opening when operating the Screen.</b></p>	<p>Try increasing the tension on the corresponding cord tensioner and verify one or more of the cords is not longer than the others. If so, see <i>One of the cords is longer or shorter than the others</i>.</p>
<p><b>The Screen doesn't close all the way.</b></p>	<p>Verify there are no snags in the cords, particularly at the top and bottom of the Cassette Assembly, also ensure there are no pinched cords in and around the notch and track of the Top Guide. You may have to loosen the Cord Lock Tensioners to adjust the cords.</p>
<p><b>It is difficult to slide the Cord Lock Tensioners.</b></p>	<p>Lubricate the track inside the Side Guides with a silicone spray.</p>

**For Installation or Warranty Assistance please call Genius Retractable Screens at 1-866-523-9511 OR VISIT [WWW.GENIUSSCREENS.COM](http://WWW.GENIUSSCREENS.COM)**

The following information is necessary to process your warranty:

1. Registration Number
2. Proof of Purchase