


CD-S029

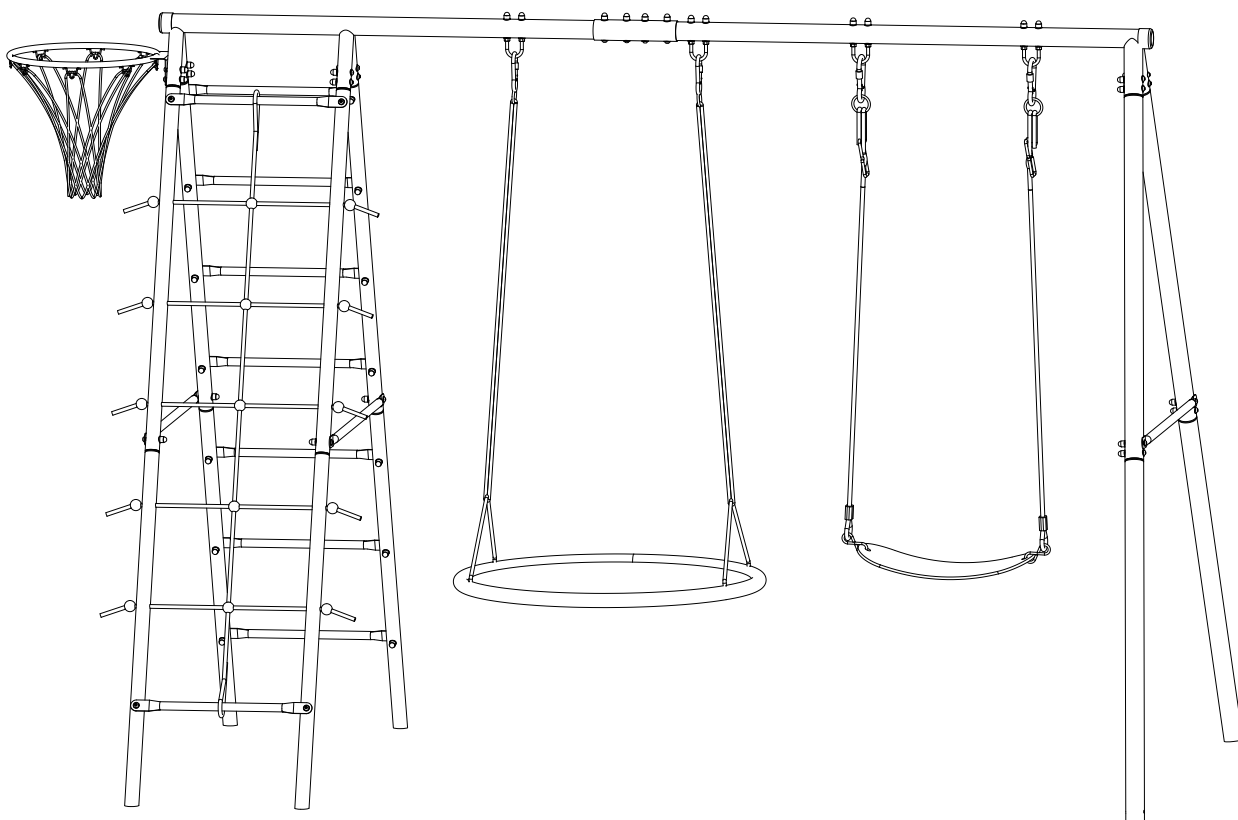

EN: WARNING: Certification Age:3+ years old; Max weight: 40 kg/seat.

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.


















WARNING:

1. CHOKING HAZARD—Small parts. Not for children under 3 years.
2. Only allowed for adults to install, keep children away.
3. To be used under the direct supervision of an adult.
4. Check all the parts are well connected before use.
5. Regularly check and maintain the main components (suspenders, fasteners, fixings, etc.), otherwise it may tip over or cause a fall.
6. Installation area should be as wide as possible, flat and avoid dampness.
7. Keep away from fire.
8. Place the activity toy on a level surface at least 2 m from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
9. Check all nuts and bolts for tightness and tighten when required.
10. Check all coverings for bolts and sharp edges and replace when required.
11. To replace defective parts in accordance with the manufacturer's instructions.





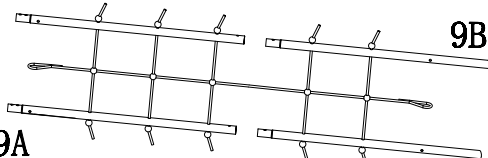



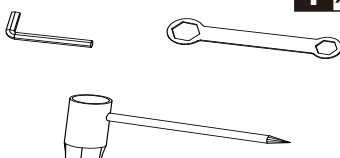
MAINTENANCE

1. Please wipe the surface stains of product with a dry cloth. If necessary, use mild soap or detergent to clean them. After wiping with a soft wet cloth, wipe them with a dry cloth. Do not use a strong acid-alkaline cleaning solution to clean them.
2. If not used for a long time, please put it in a cool and dry place and cover it with clean cloth or blanket.


PARTS

	① x 1		② x 1		
	③ x 1		④ x 1		⑤ x 1
	⑥ x 2		⑦ x 2		⑧ x 3
	9A 9B		9A x 1 9B x 1		⑩ x 2
	⑪ x 2		⑫ x 9		⑬ x 1
	⑭ x 2		⑮ x 1		⑯ x 4

HARDWARE

 A x 4 M8*70	 B x 6 M8*63	 C x 2 M8*63
 D x 26 +3(spare) M8*50	 E x 4 M8*50	 F x 4
 G x 4	 H x 50 +5(spare)	 I x 3


A*4

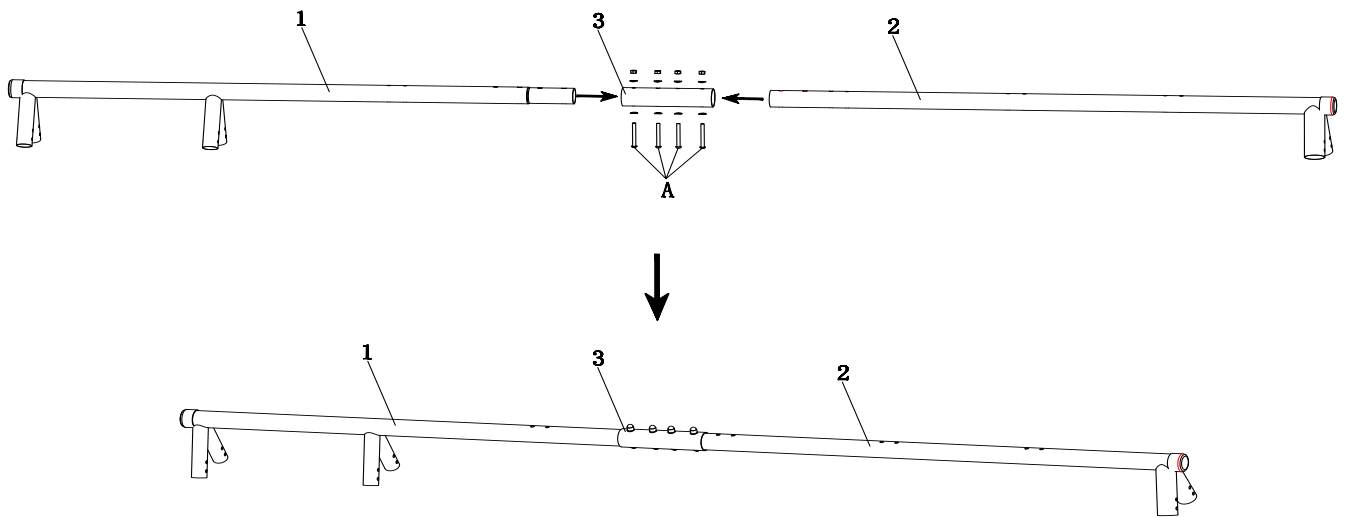




B*4

D*4



E*4

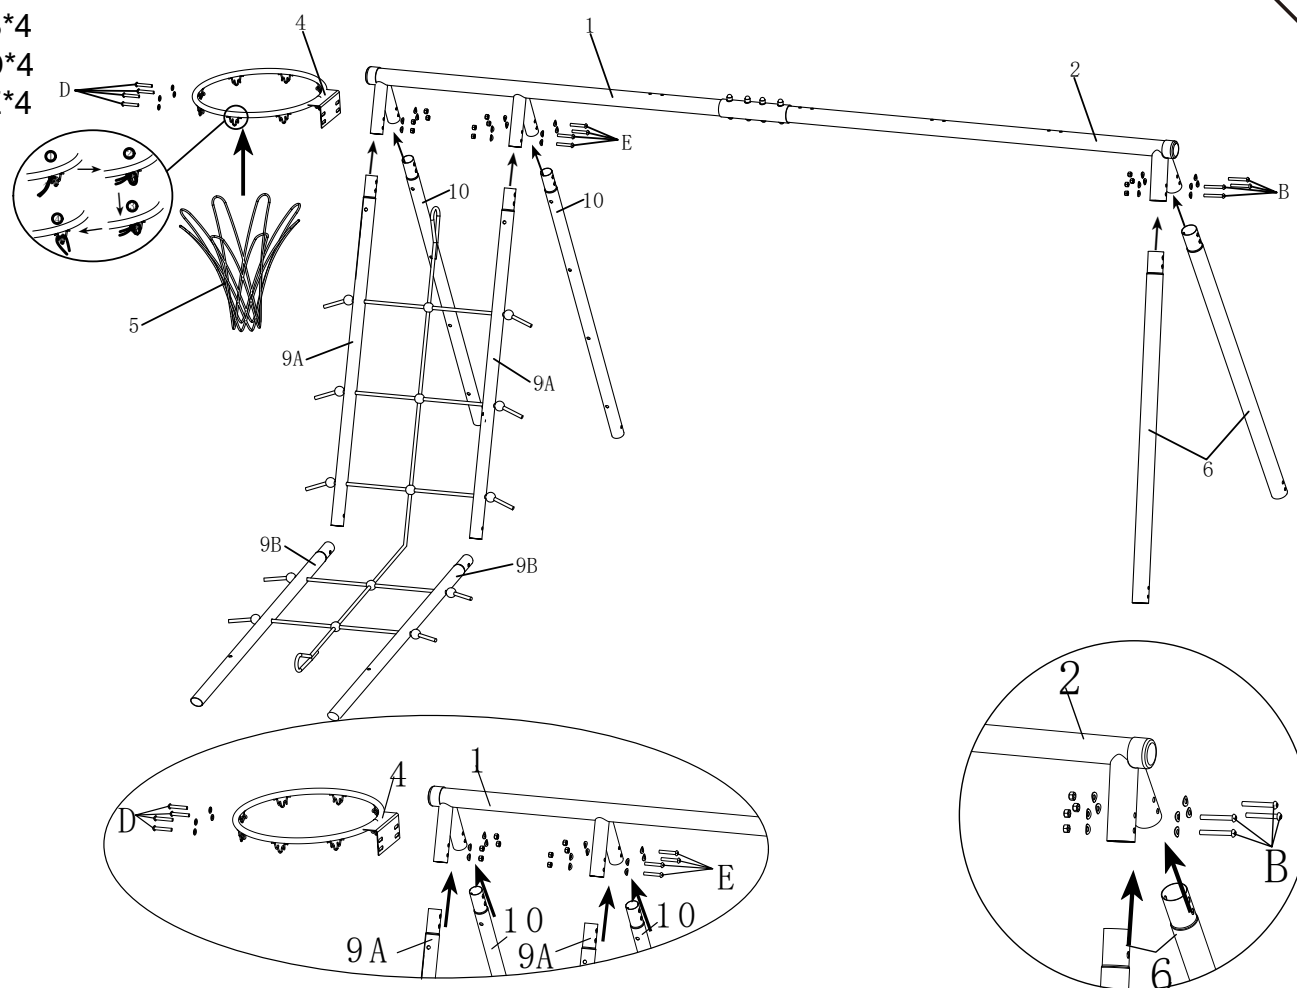



B*2
C*2
D*4

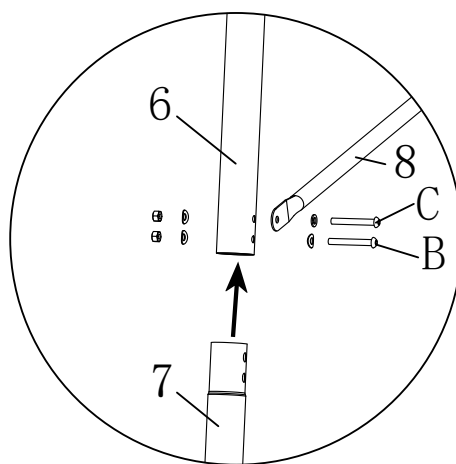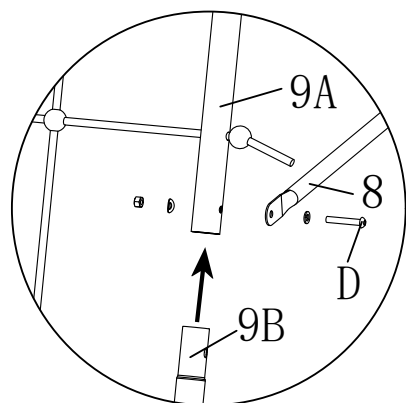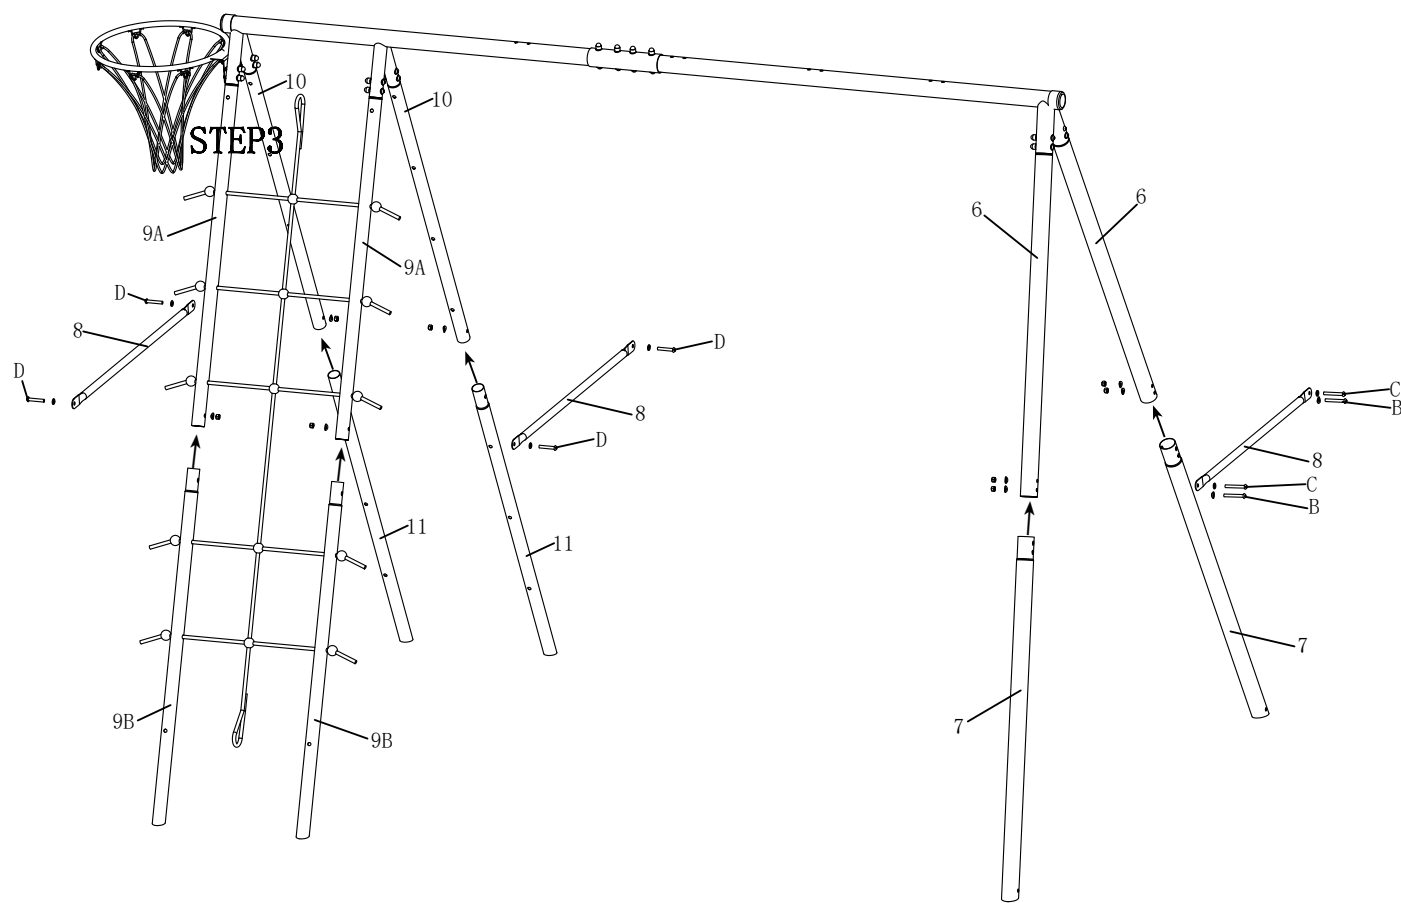







D*14

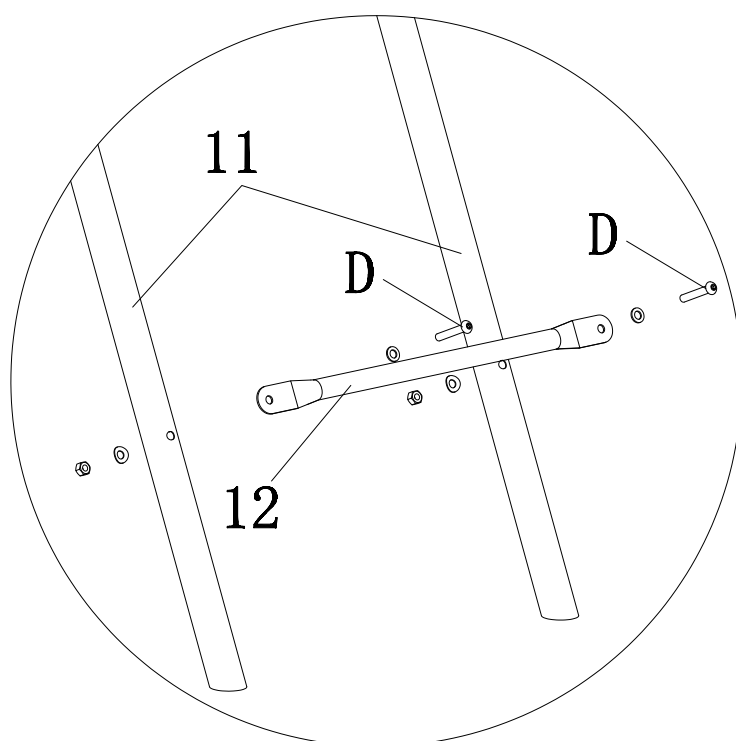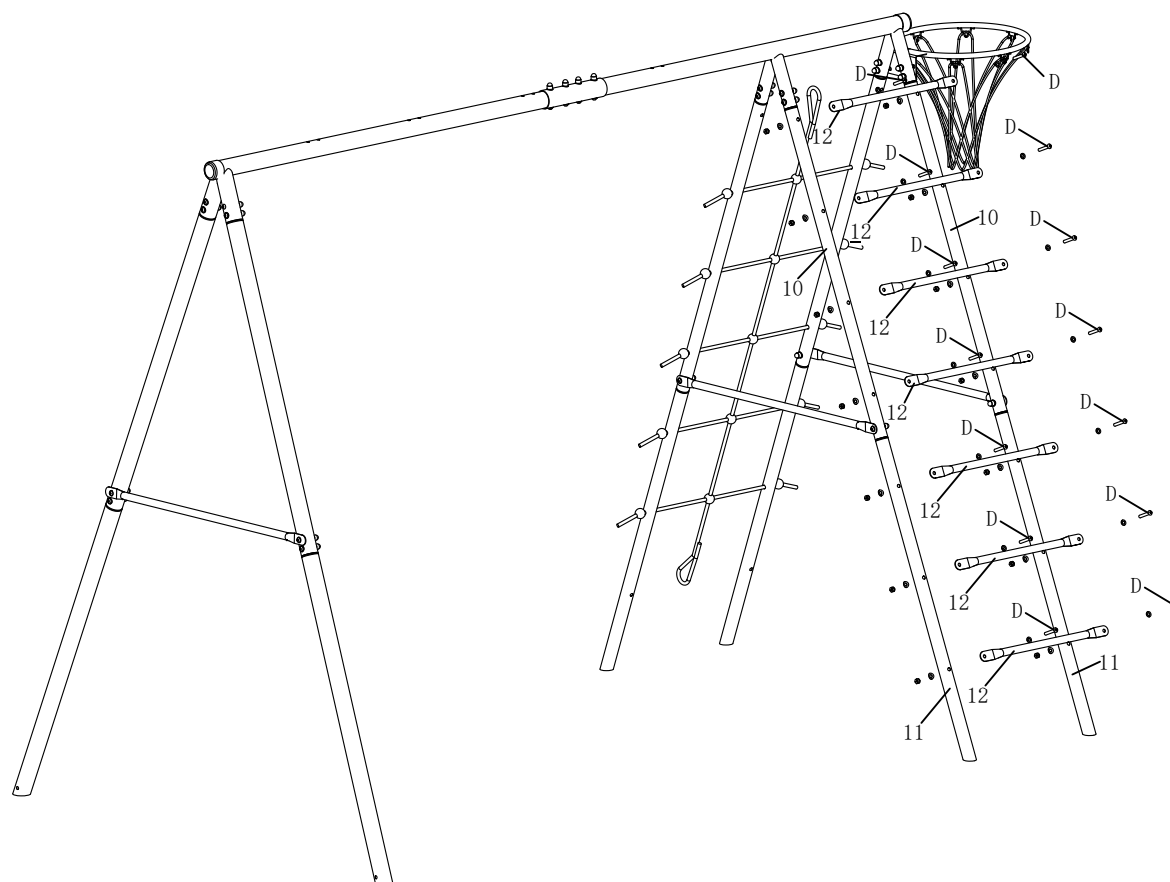

D*4

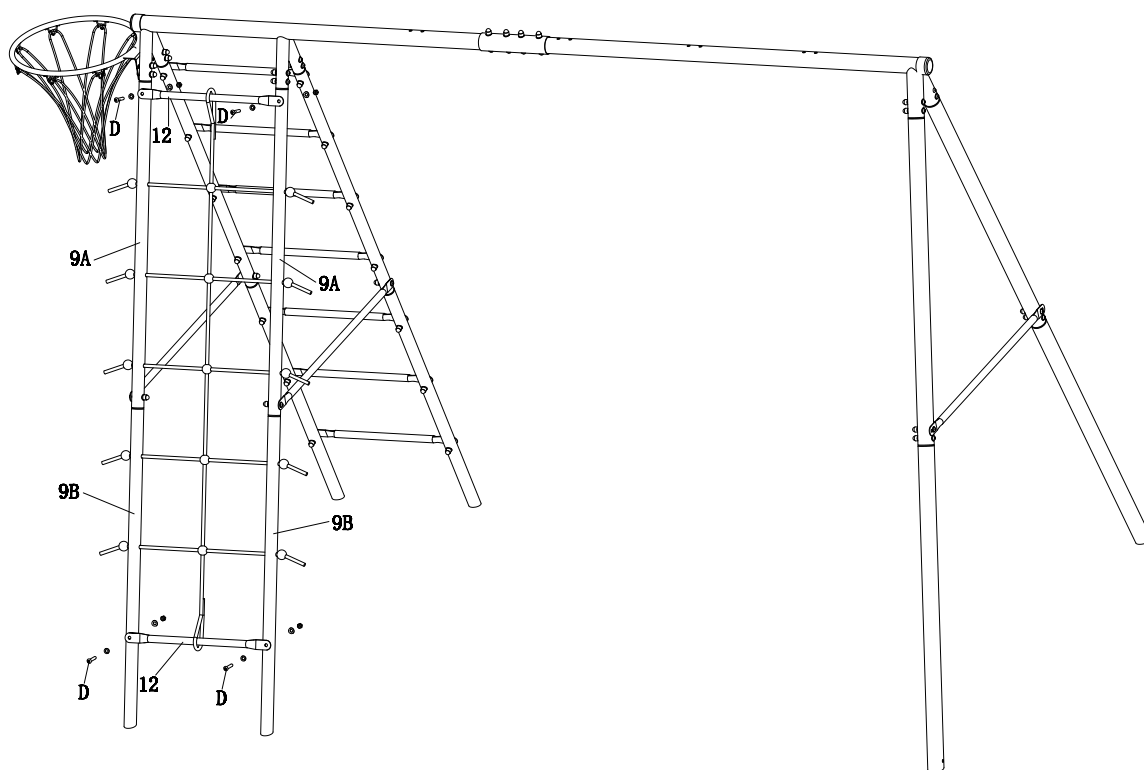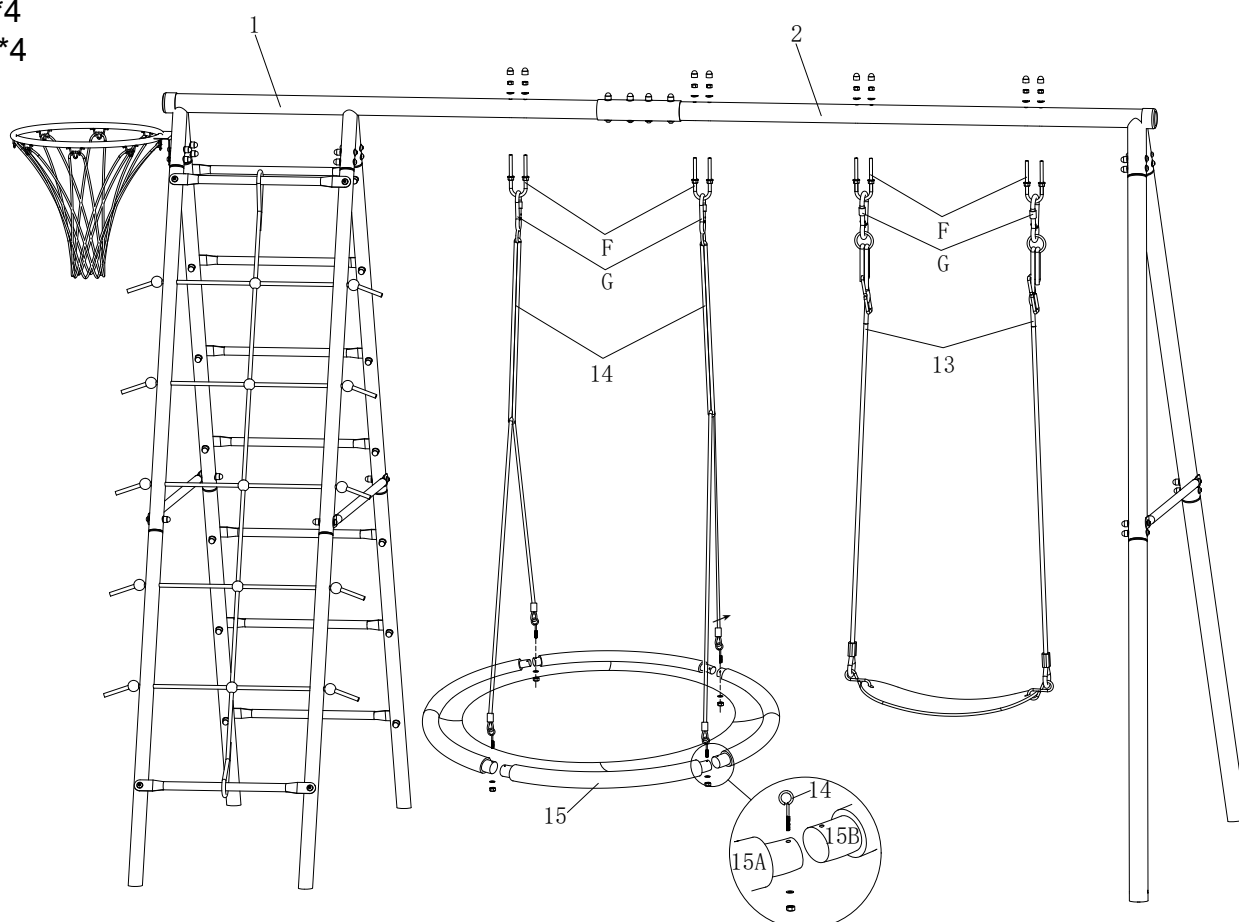F*4
G*4

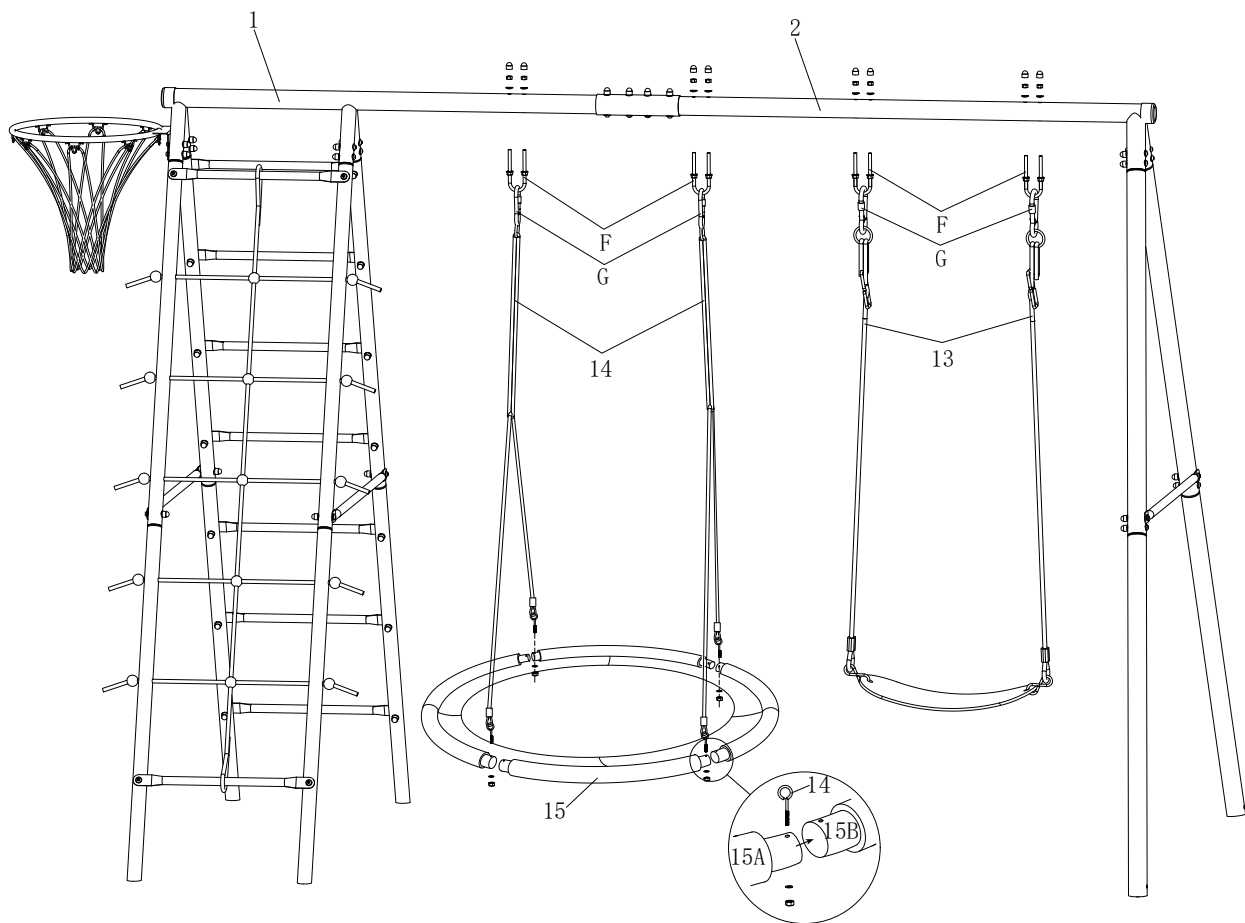

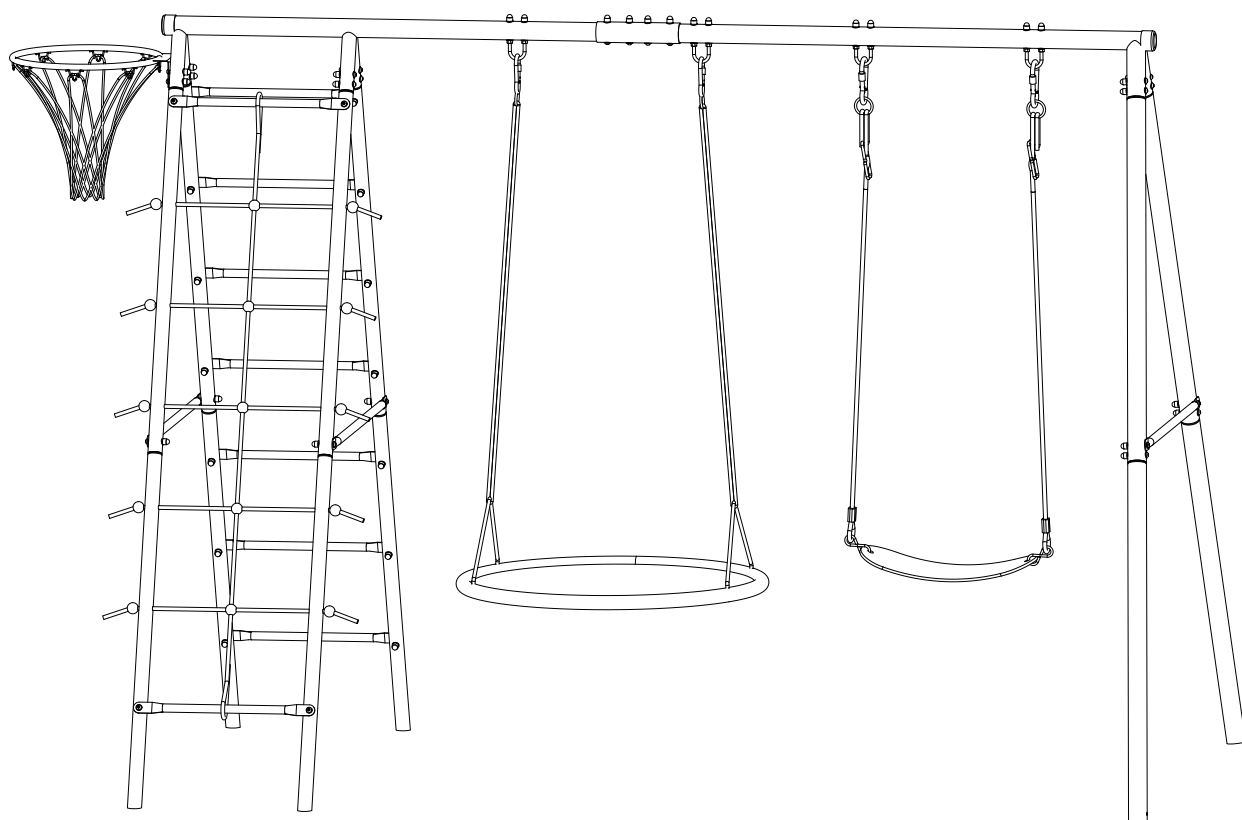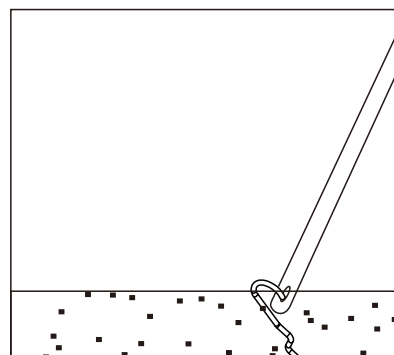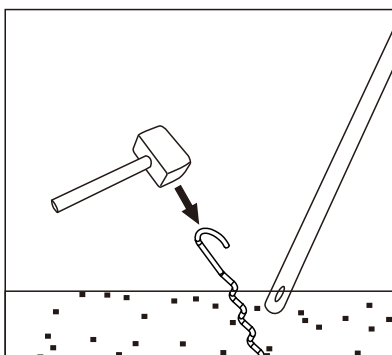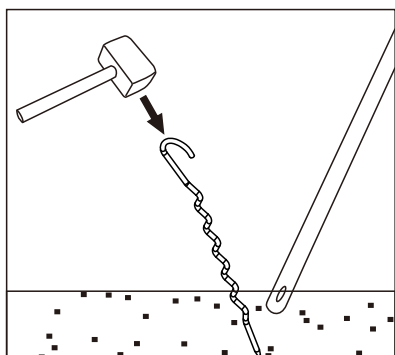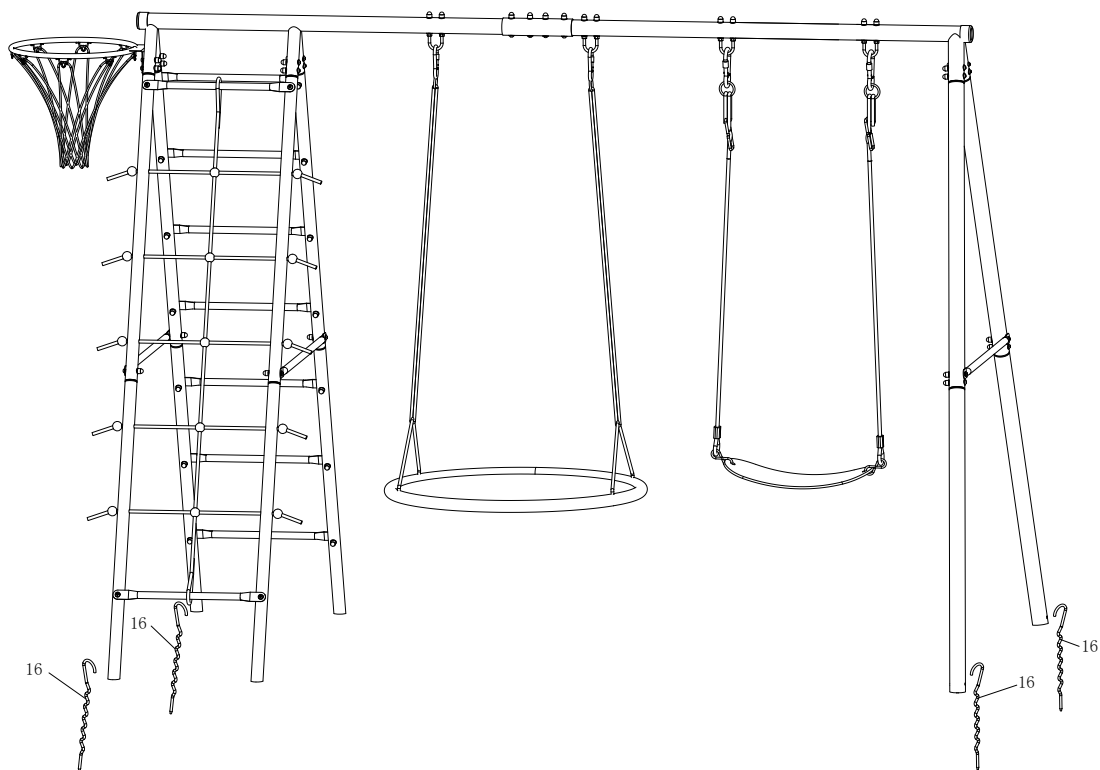

NOTE: ANCHORING

- If the swing set is set up on grounds with sandy soil condition, it must be anchored with concrete footing(concrete not included).
- Be sure the swing set is located in level ground.
- Dig holes around swing leg tube as shown below in drawing. As you dig down and create a cylindrical hole, you should use shovel to crave out the hole, to create a large diameter hole bottom.
- Place 2 inches brick or gravel bed as shown in drawing below.
- Use about 45lb of concrete per leg.
- Cover concrete with dirt and protective surface material.

