
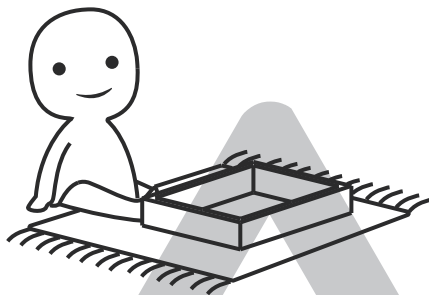



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

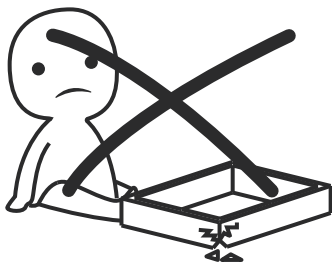



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

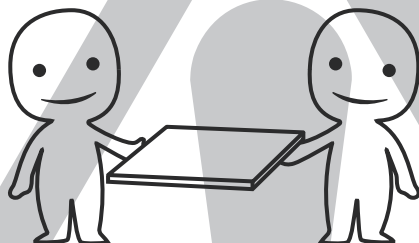

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

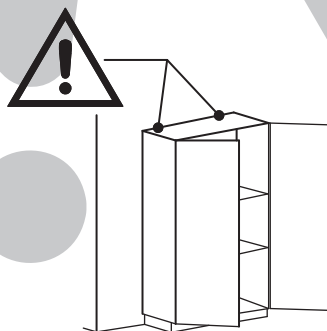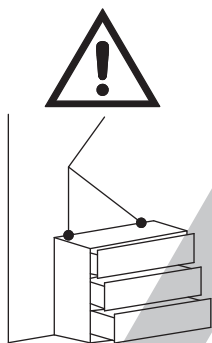

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

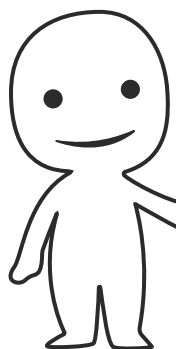


Please prepare the following tools

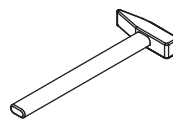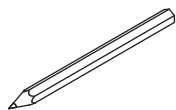

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 108+2




Ø 6 x 35 mm

B x 108+2




Ø 15 x 10 mm

C x 120+2



Ø 6 x 30 mm

D x 12+2




Ø 4 x 40 mm

E x 180+2




Ø 4 x 12 mm

F x 26



G x 4




H x 20+2



Ø 3 x 12 mm

J x 4

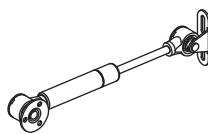

K x 16



M6 x 18 mm

L x 16




M6 x 16 mm

M x 3



M6 x 15 mm

N x 6



M6 x 50 mm

P x 8




Q x 32+2



Ø 3 x 16 mm

R x 32+2



S x 2



Ø 4 x 14 mm


T x 2






U x 2



PS: "+2" IS SPARE PARTS

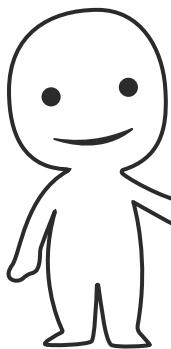

Please prepare the following tools




When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

① x 2



② x 1




③ x 1



④ x 2



⑤ x 4



⑥ x 2




⑦ x 2




⑧ x 1



⑨ x 1




⑩ x 1




⑪ x 1




⑫ x 1




⑬ x 1



⑭ x 1




⑮ x 1




⑯ x 4




⑰ x 2




⑱ x 2



⑲ x 1




⑳ x 1




㉑ x 1



㉒ x 1




㉓ x 1



㉔ x 2






㉕ x 2






Please prepare the following tools

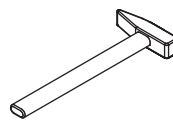


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size


②⑥ x 2



②⑦ x 4



②⑧ x 2




②⑨ x 4




③① x 1




③① x 1



③② x 1



③③ x 1



③④ x 1



③⑤ x 1



③⑥ x 1



③⑦ x 1



③⑧ x 3




③⑨ x 1




④① x 1




④① x 2




④② x 1



④③ x 1



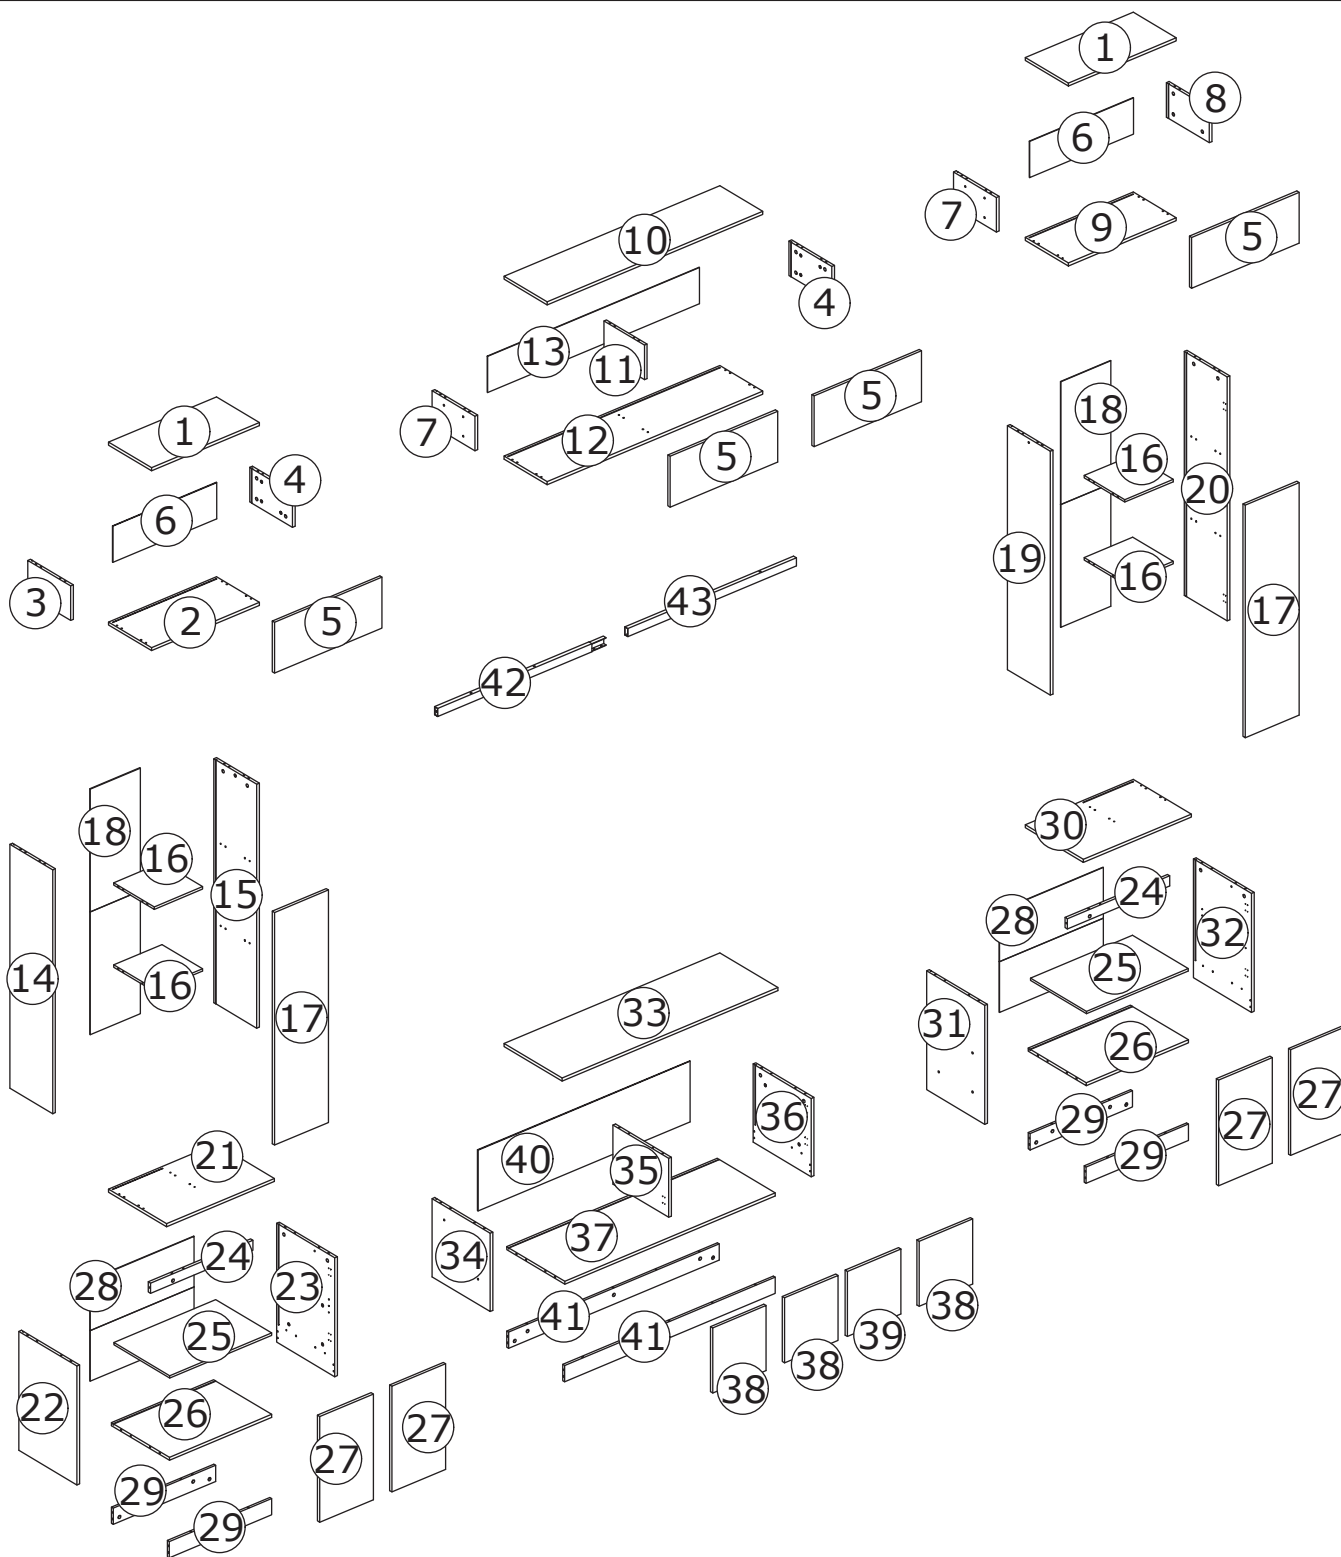

⚠ WARNING





Children have died from furniture tipover. To reduce the risk of furniture tipover:






- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*




1

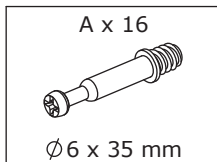






Screw eccentric rod(A) into board 1, 2 and 9 with a screwdriver as shown.

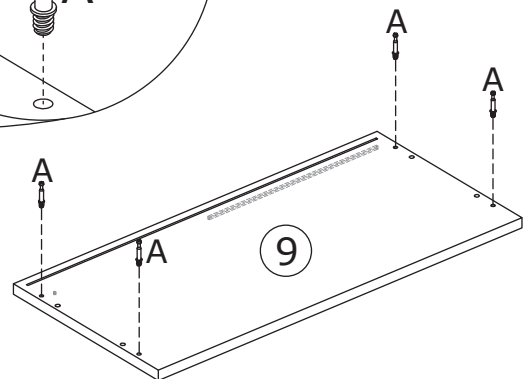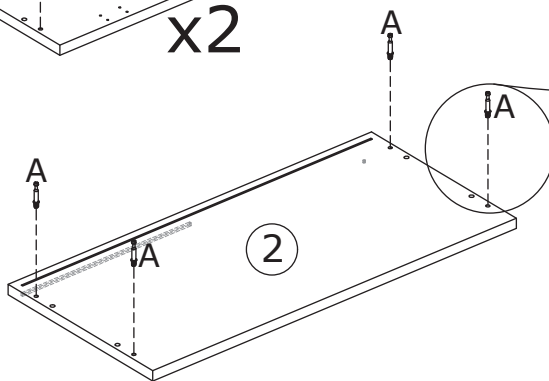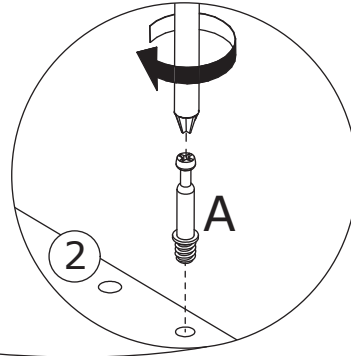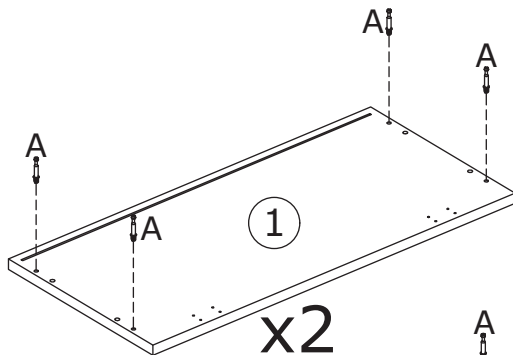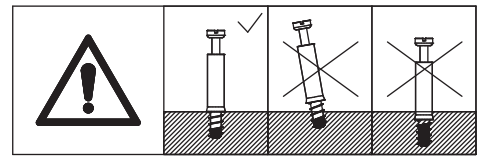

2

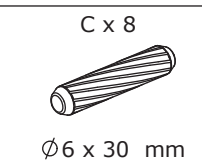
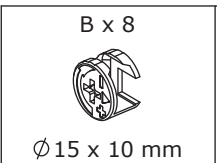


Attach board 2 to board 3 and 4 using wooden dowel(C), add cam lock(B) into board 3,4 and turn clockwise to tighten as shown.
Attach board 9 to board 7 and 8 using wooden dowel(C), add cam lock(B) into board 7,8 and turn clockwise to tighten as shown.

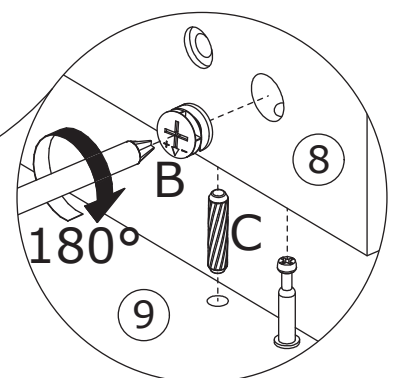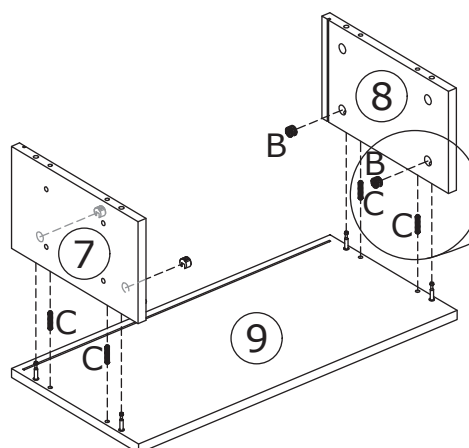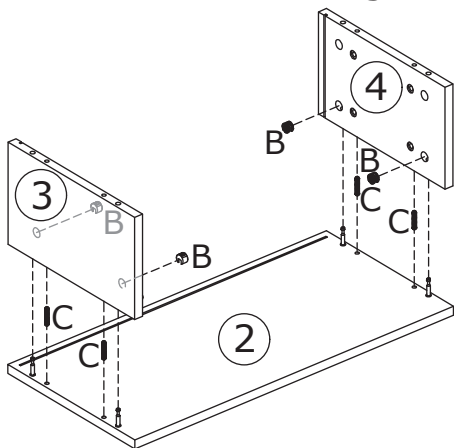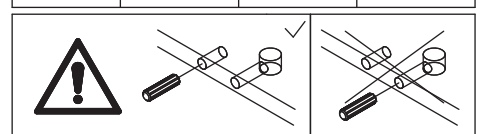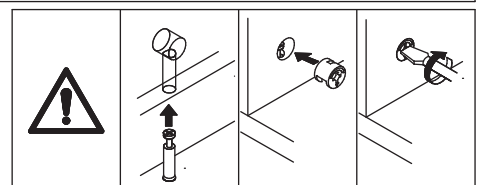

3

Insert back board 6 along available grooves as shown.

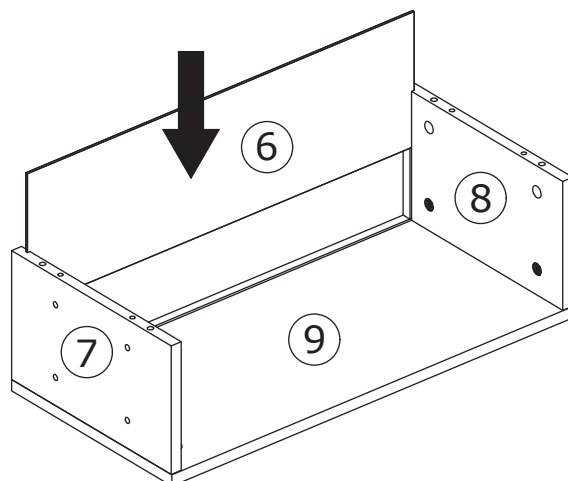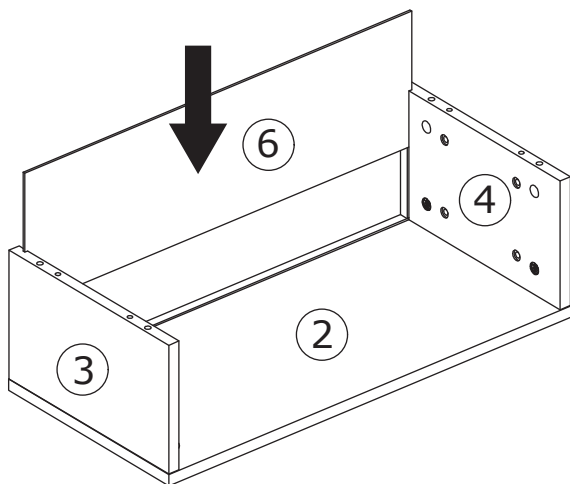


4

B x 8




Ø 15 x 10 mm

C x 8







Ø 6 x 30 mm






Attach board 1 to board 3 and 4 using wooden dowel(C), add cam lock(B) into board 3,4 and turn clockwise to tighten as shown.



Attach board 1 to board 7 and 8 using wooden dowel(C), add cam lock(B) into board 7,8 and turn clockwise to tighten as shown.

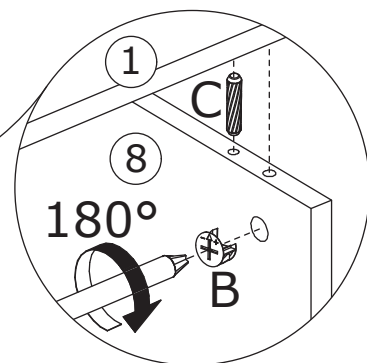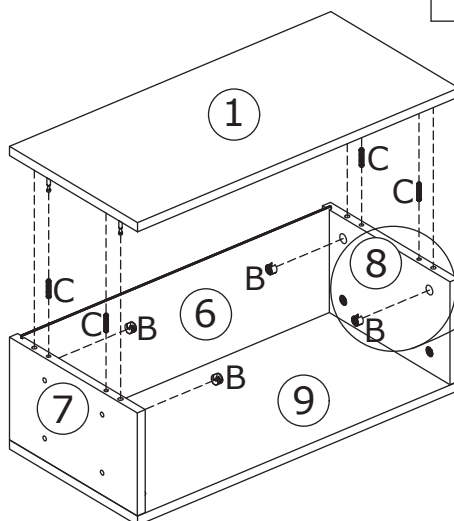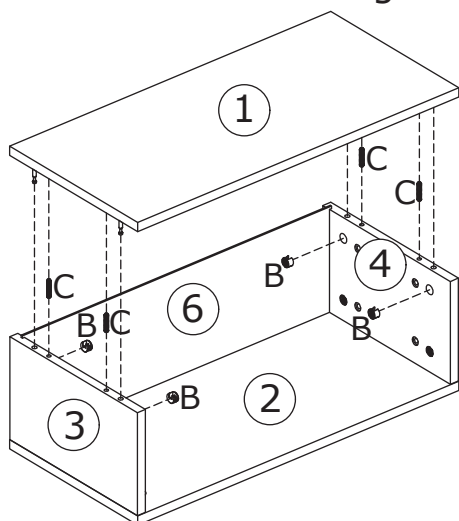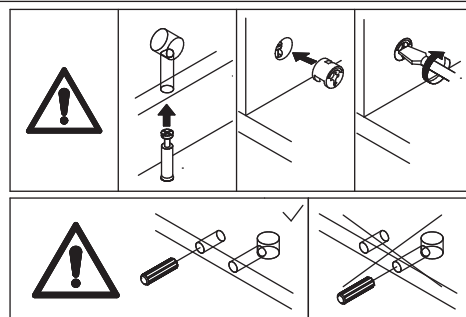




5

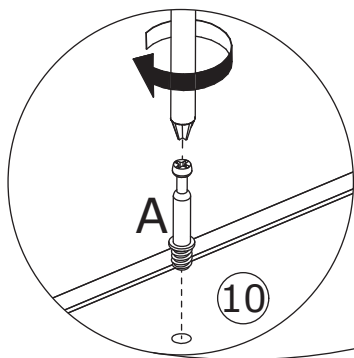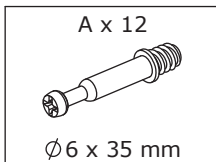




Screw eccentric rod(A) into board 10 and 12 as shown.

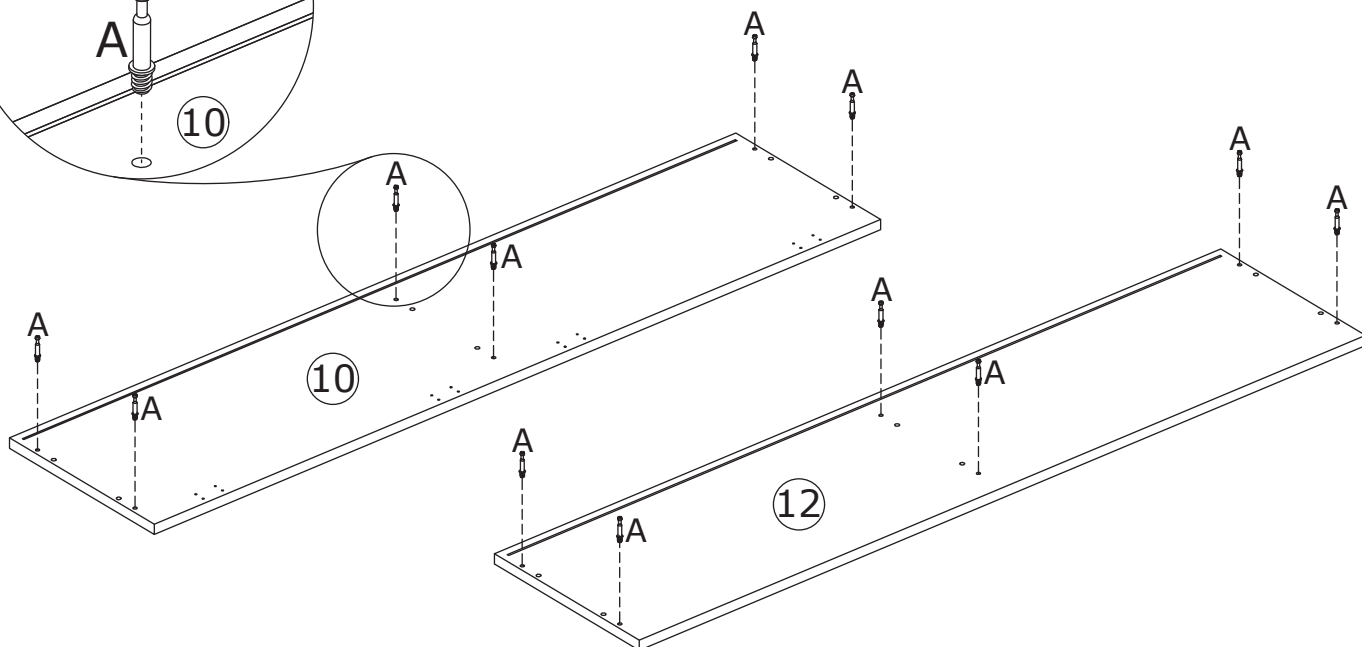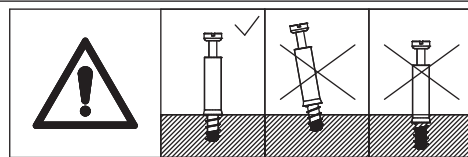

6

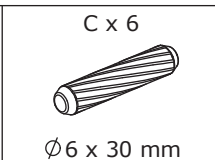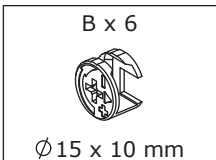


Attach board 12 to board 7, 11 and 4 using wooden dowel(C), add cam lock(B) into board 7,11,4 and turn clockwise to tighten as shown.

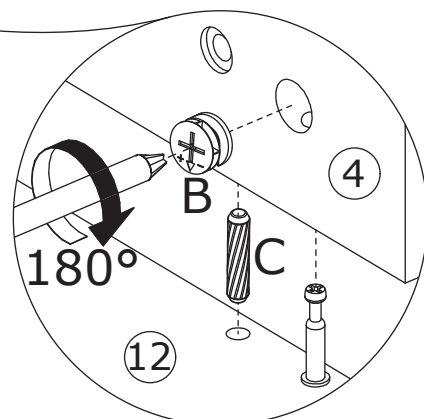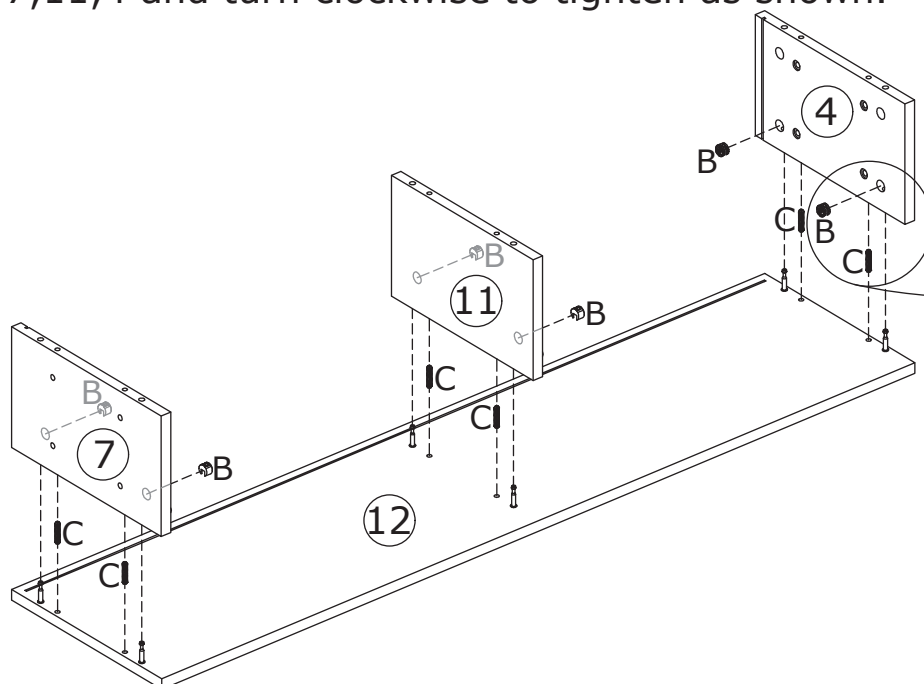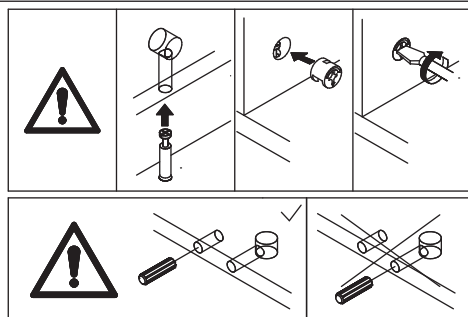

7

Insert back board 13 along available grooves as shown.

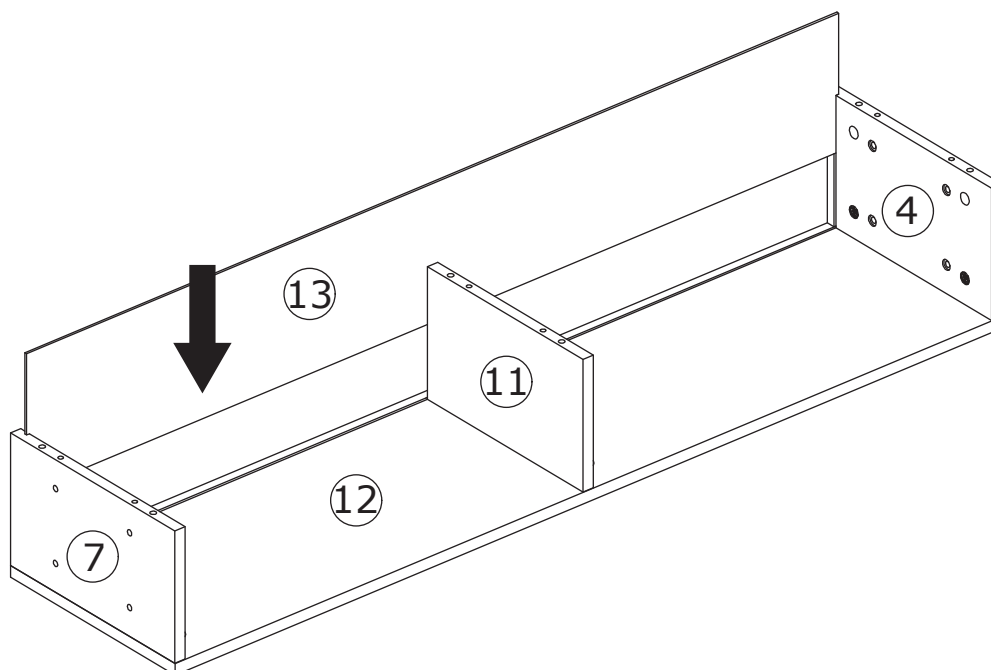


8

B x 6



Ø 15 x 10 mm




C x 6



Ø 6 x 30 mm




Attach board 10 to board 7, 11 and 4 using wooden dowel(C), add cam lock(B) into board 7,11,4 and turn clockwise to tighten as shown.

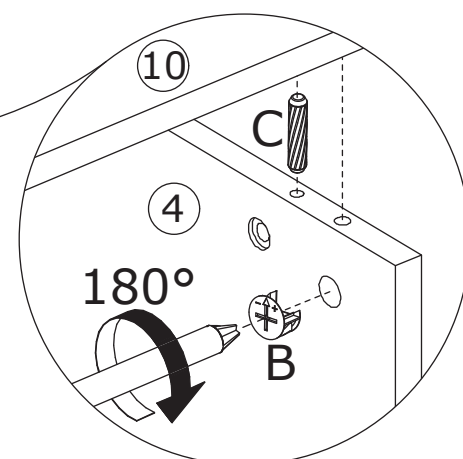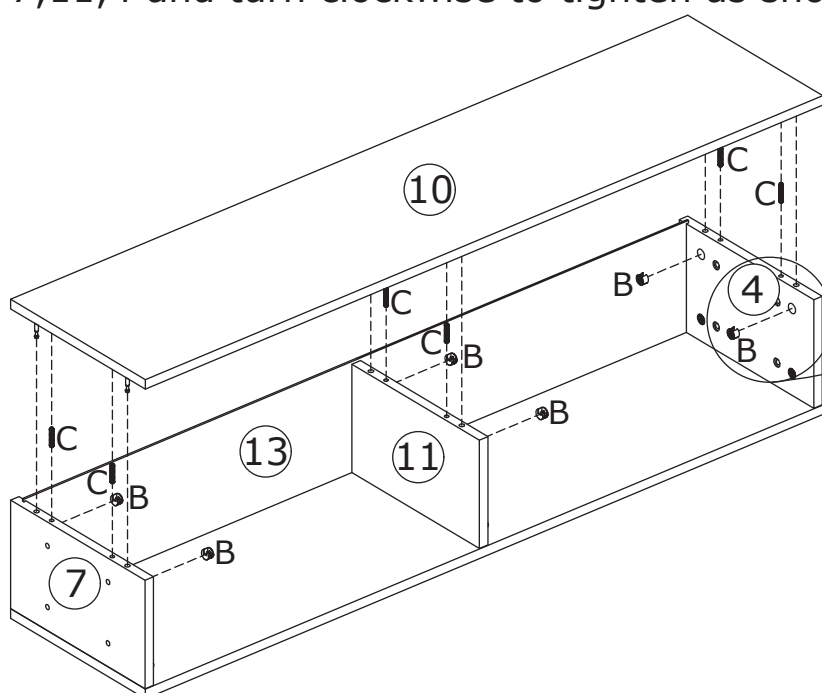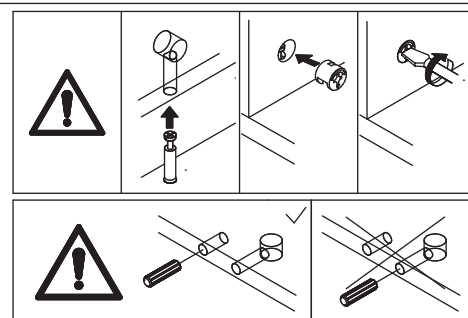


9




Connect the three components using nut(K) and screw(L) as shown.

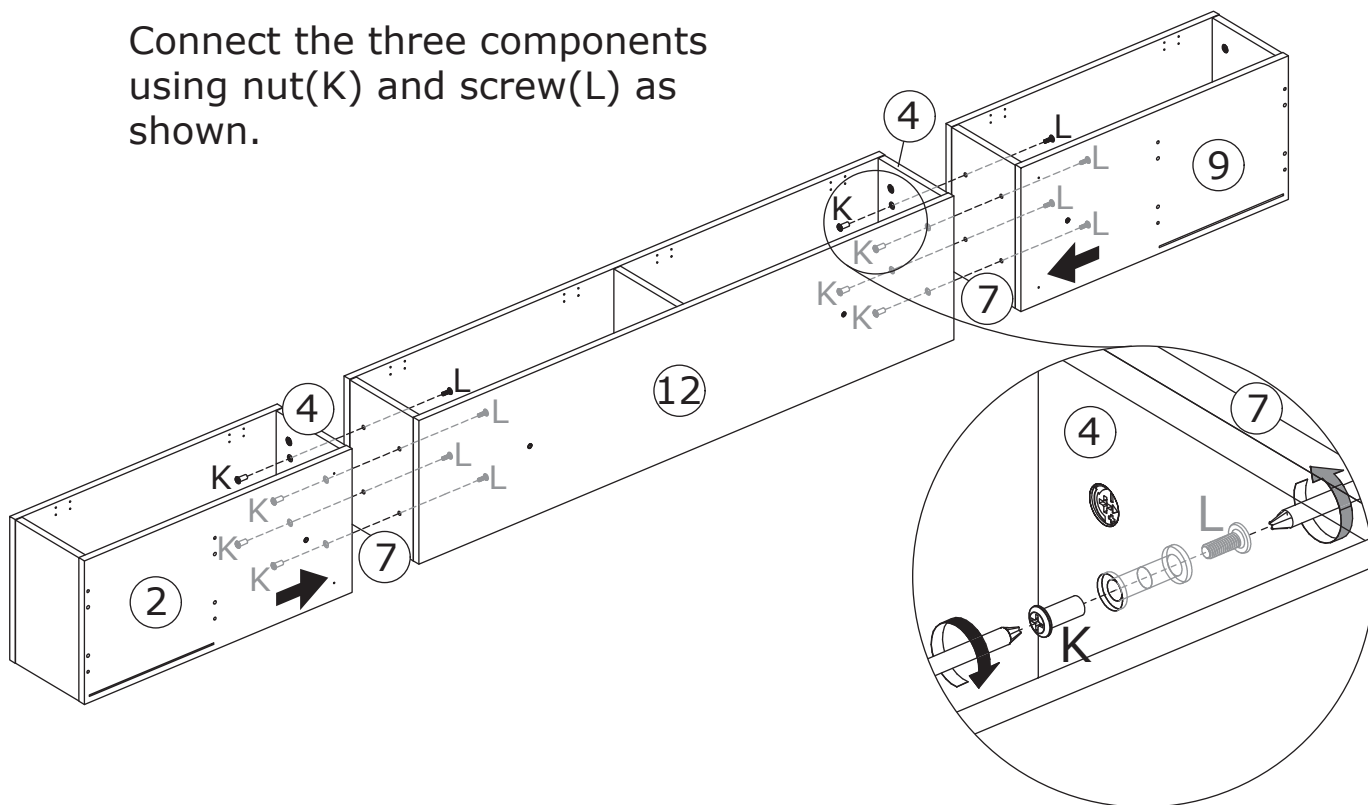



10

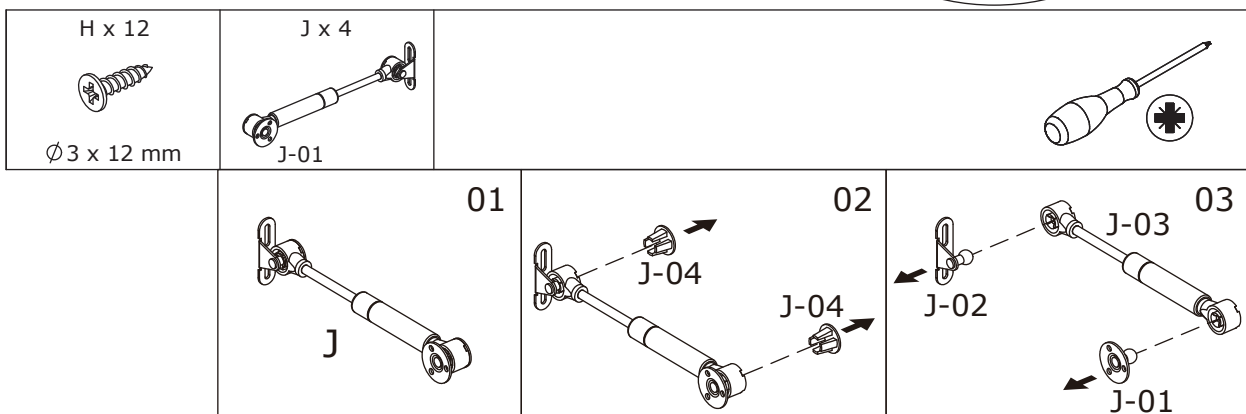


Fix part(J-01) to board 3, 7 and 11 with screw(H) as shown.

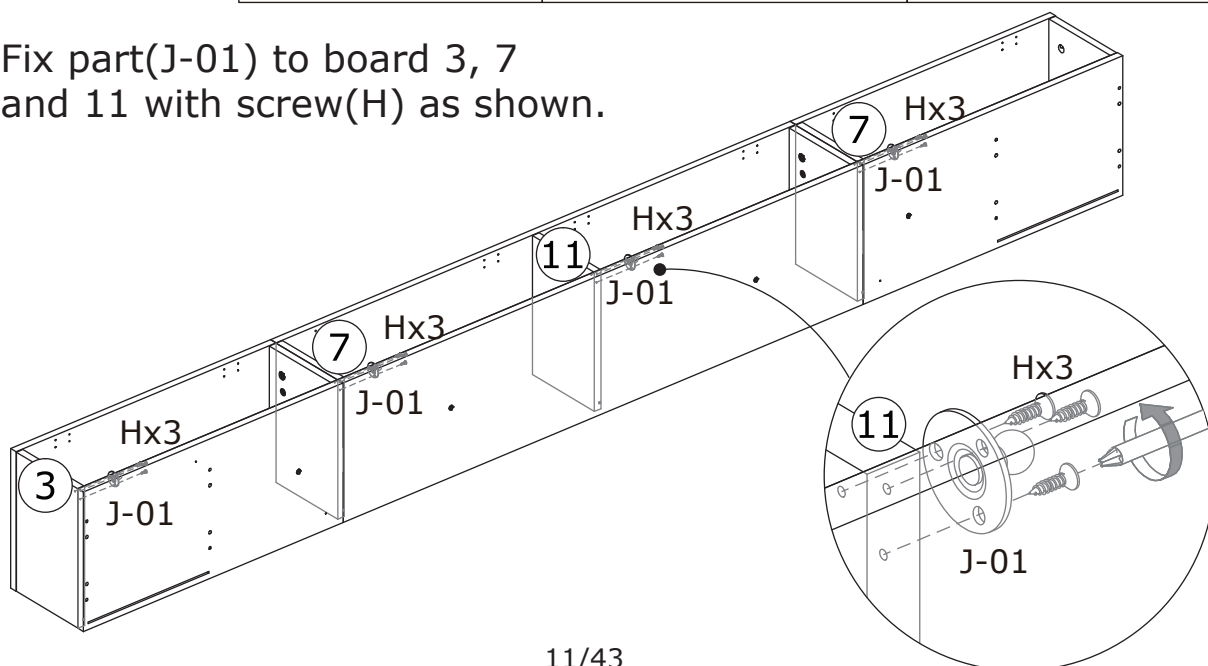



11

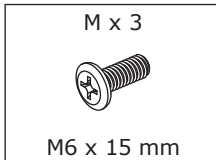


Fix tube 42 to tube 43 with screw(M) as shown.

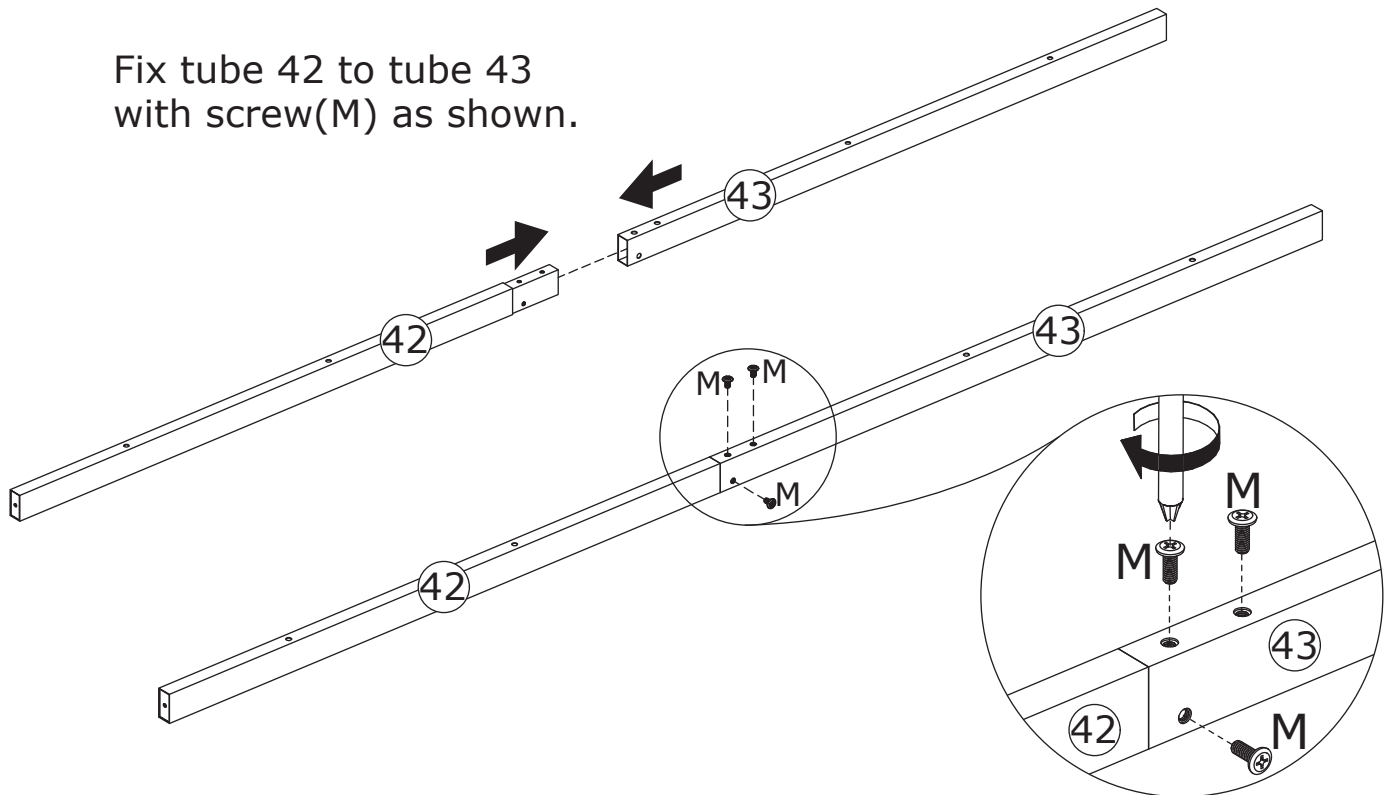





12

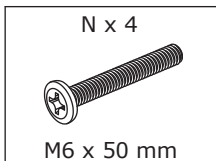




Fix tube 42 and 43 to board 2, 12 and 9 with screw(N) as shown.

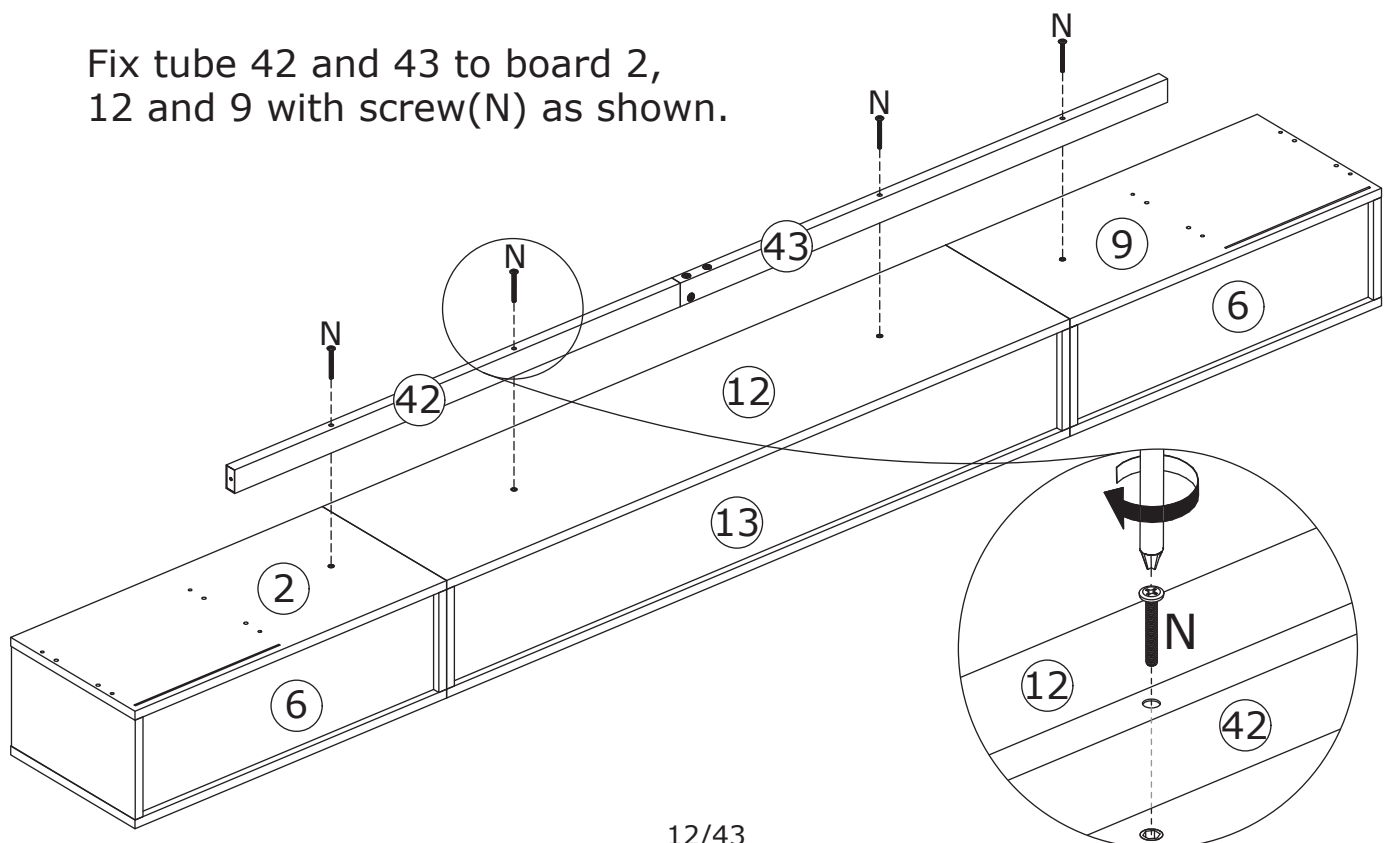



13

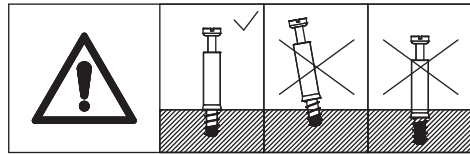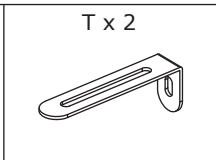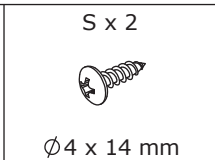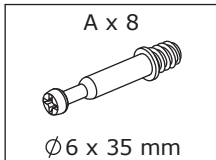





Screw eccentric rod(A) into board 2 and 9 as shown.
Fix part(T) to board 9 and 12 with screw(S) as shown.

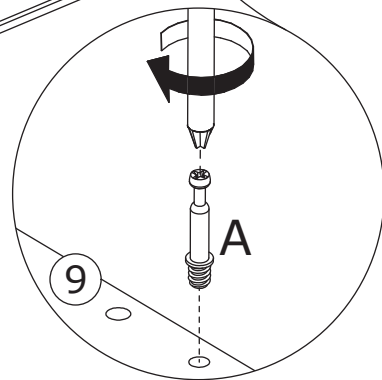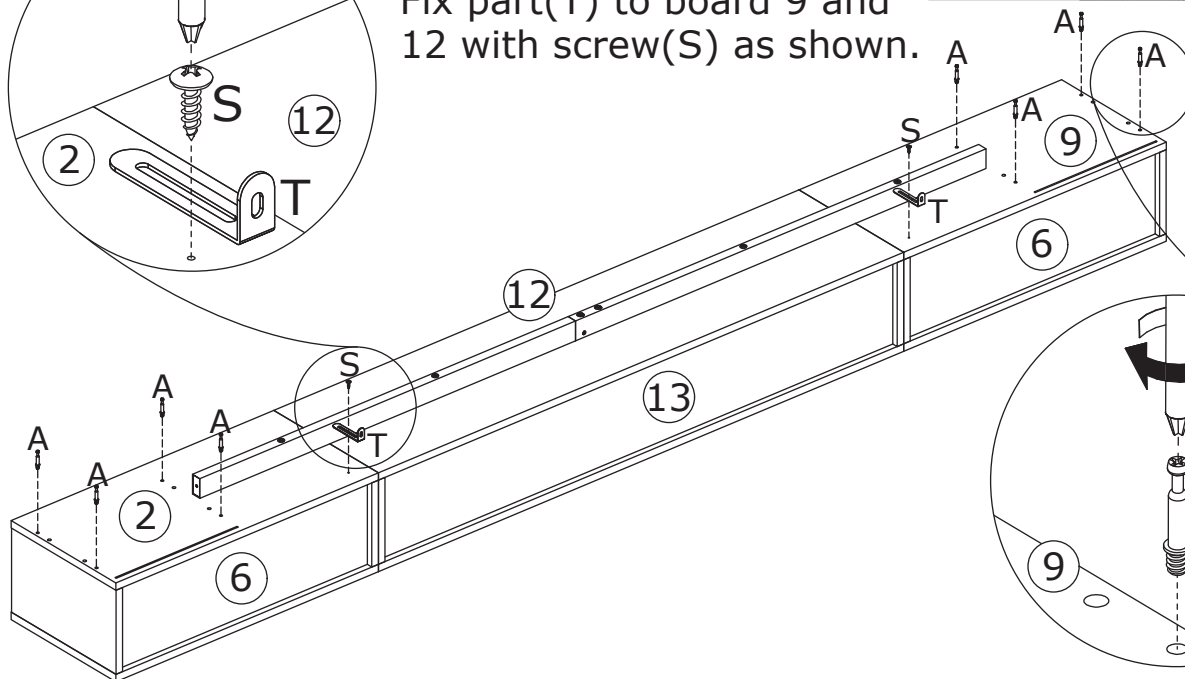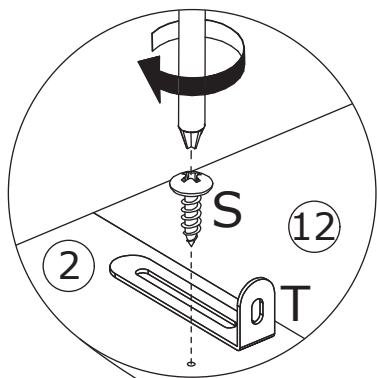

14


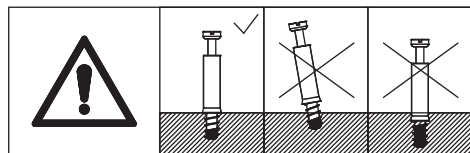
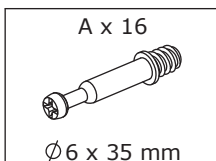


Screw eccentric rod(A) into board 22, 23 and 26 with a screwdriver as shown.

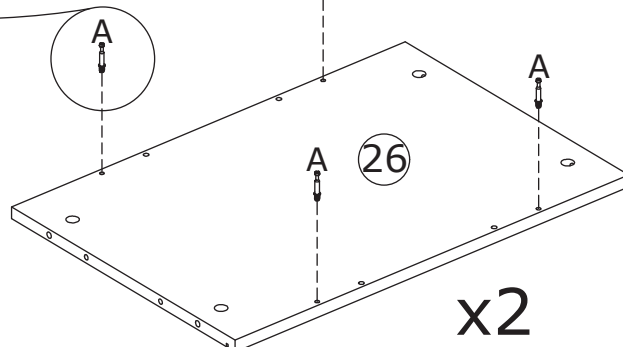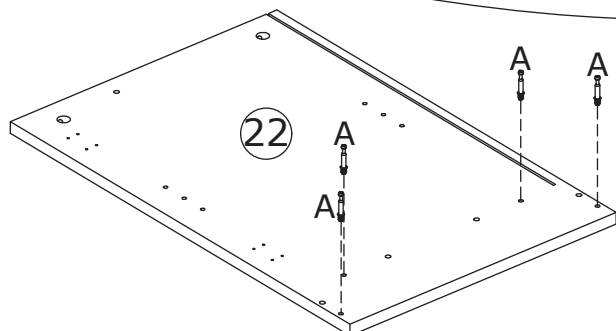
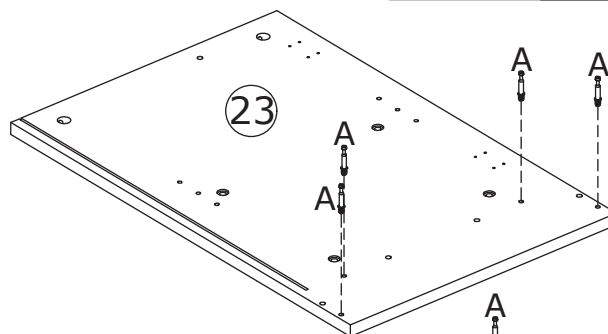
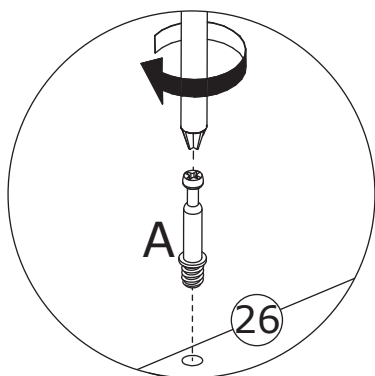


x2




15

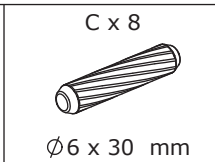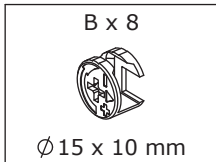




Attach board 29 to board 26 using wooden dowel(C), add cam lock(B) into board 29 and turn clockwise to tighten as shown.

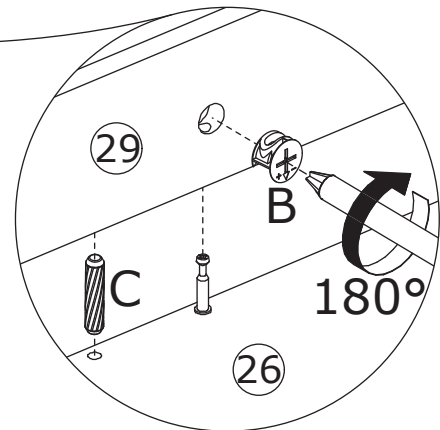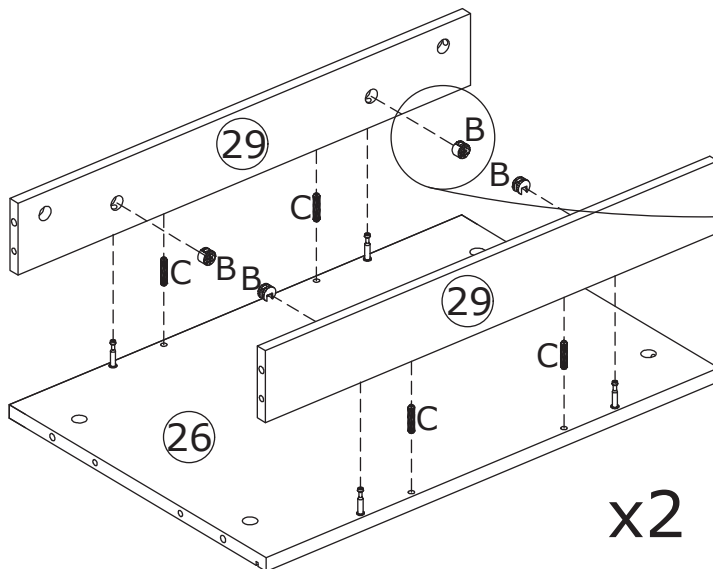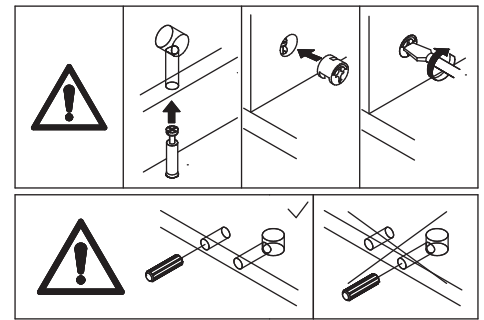




16

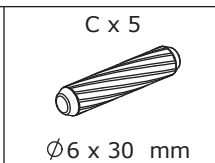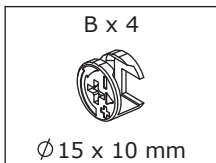




Attach board 22 to board 24, 26 and 29 using wooden dowel(C), add cam lock(B) into board 24,26,29 and turn clockwise to tighten as shown.

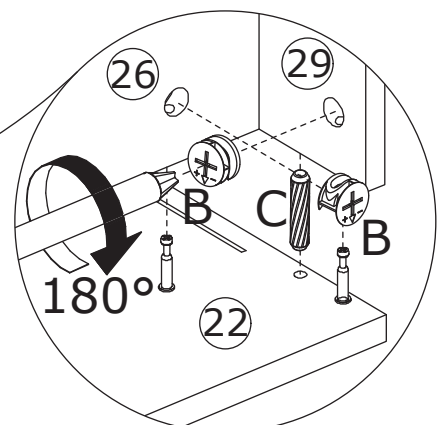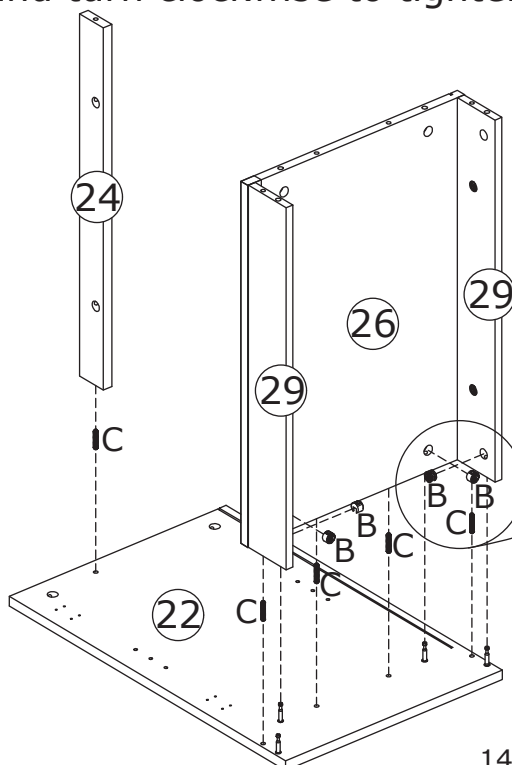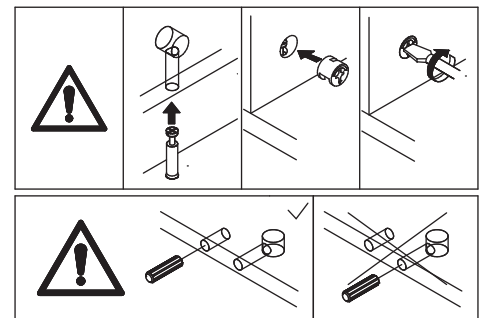


17

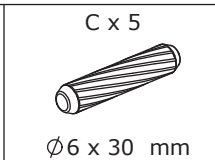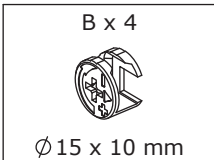

Attach board 23 to board 24, 26 and 29 using wooden dowel(C), add cam lock(B) into board 24,26,29 and turn clockwise to tighten as shown.

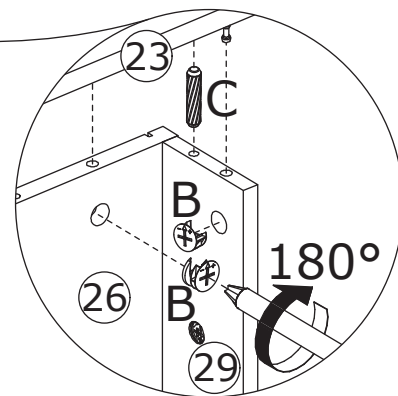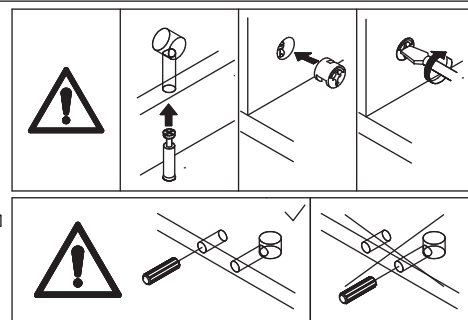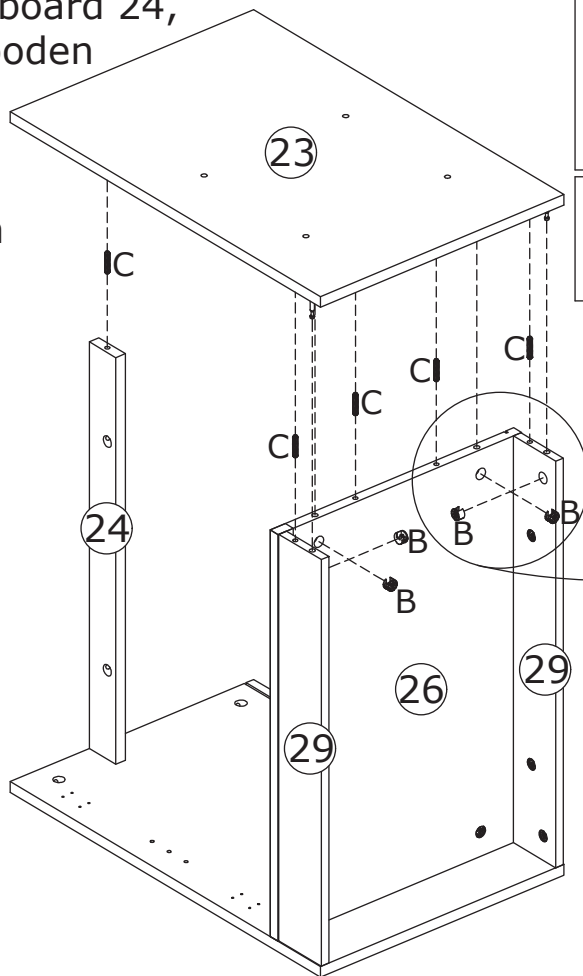


18

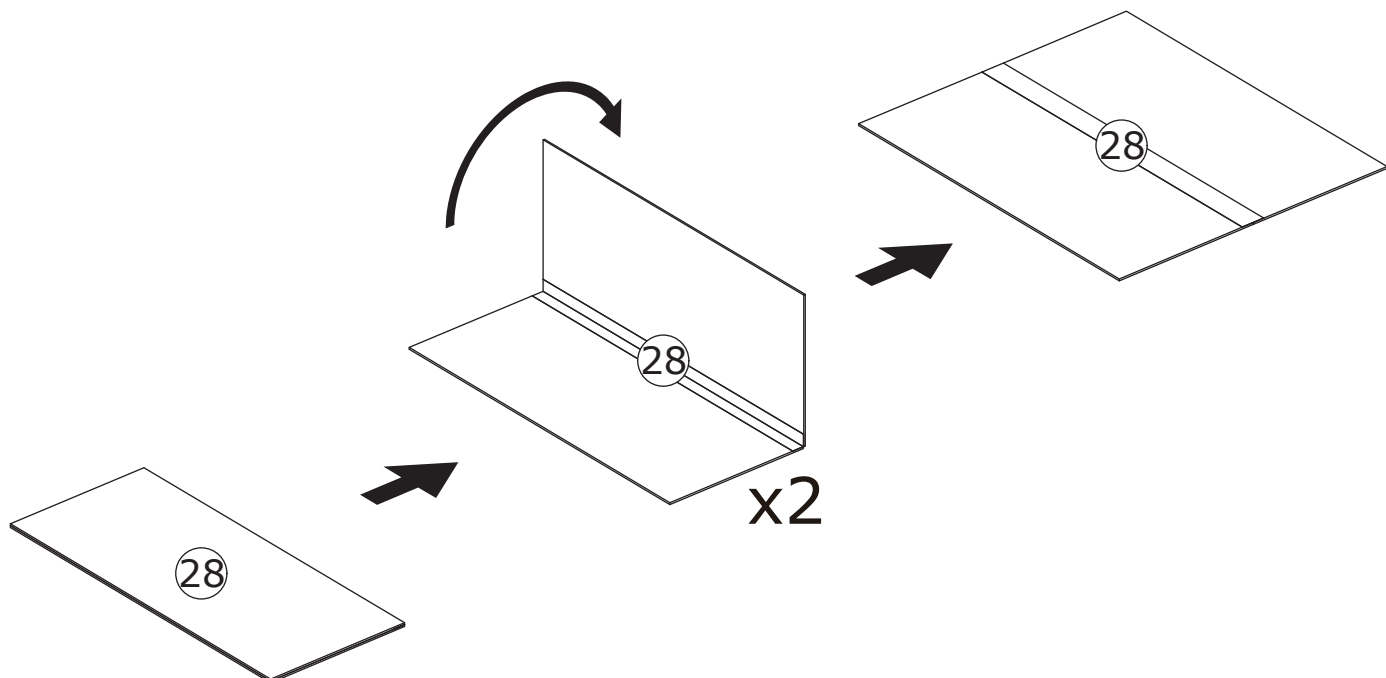


19



Insert back board 28 along available grooves as shown.

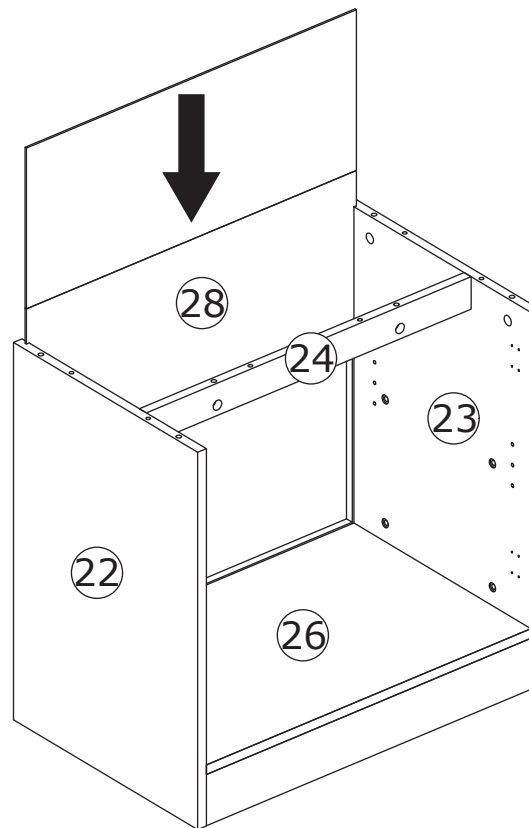




20






Screw eccentric rod(A) into board 31 and 32 as shown.

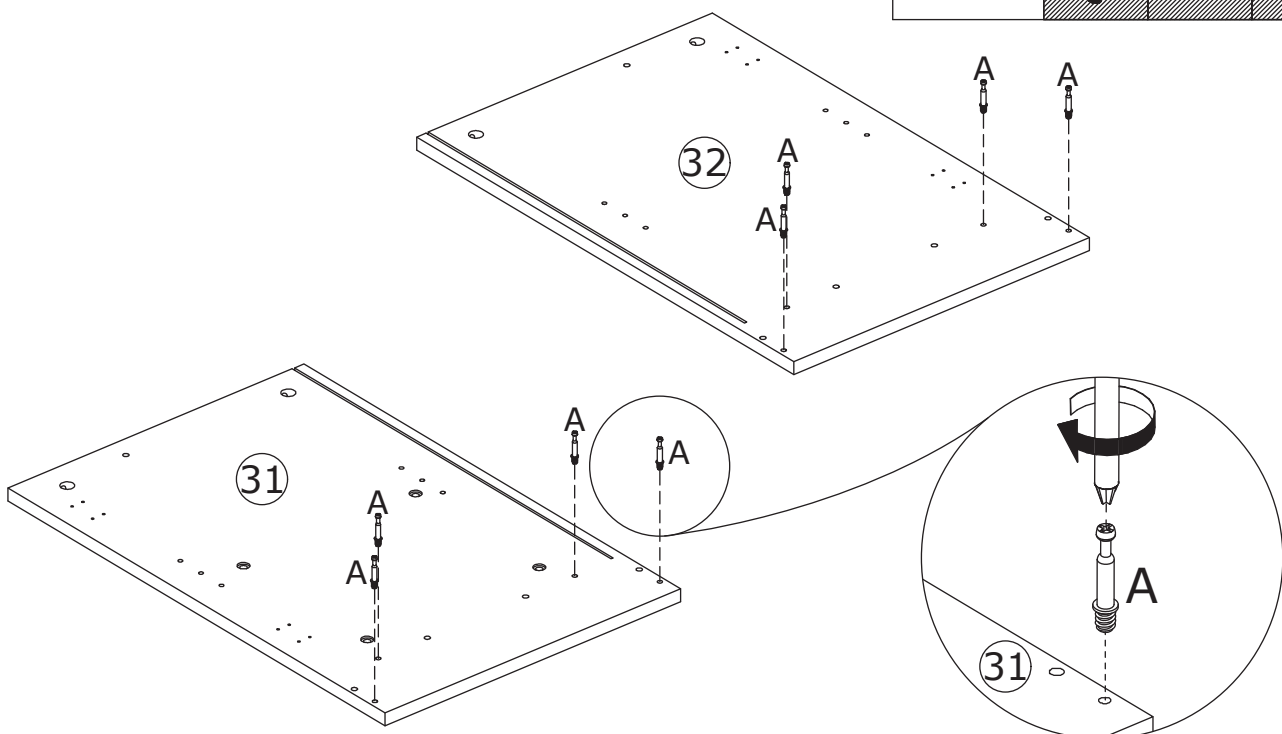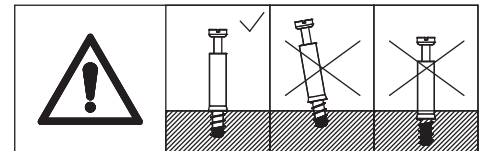




21

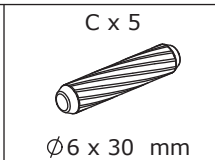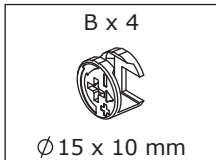




Attach board 31 to board 24, 26 and 29 using wooden dowel(C), add cam lock(B) into board 24,26,29 and turn clockwise to tighten as shown.

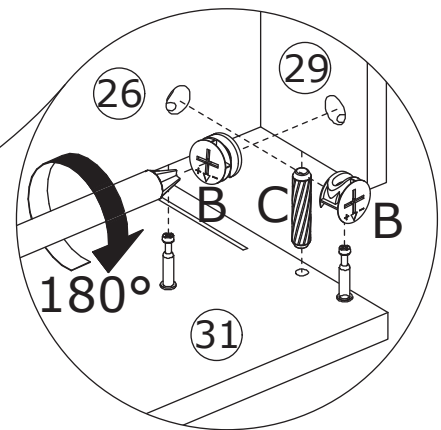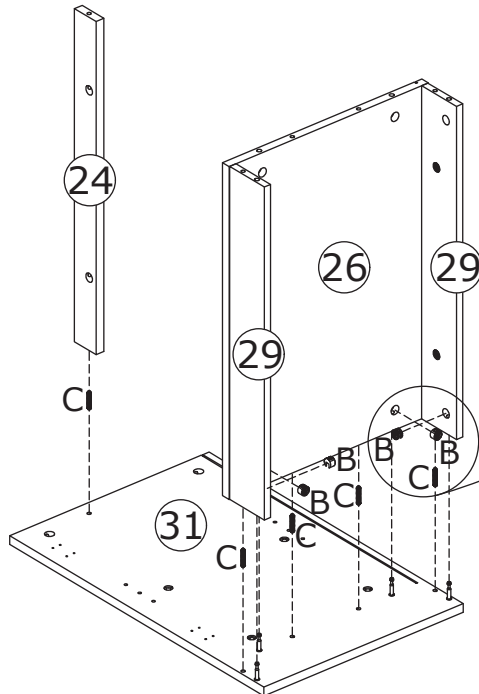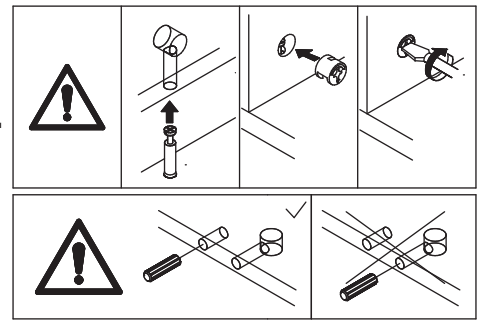

22

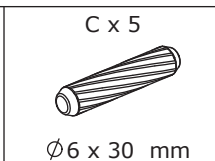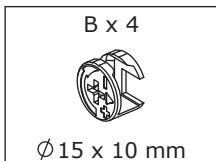


Attach board 32 to board 24, 26 and 29 using wooden dowel(C), add cam lock(B) into board 24,26,29 and turn clockwise to tighten as shown.

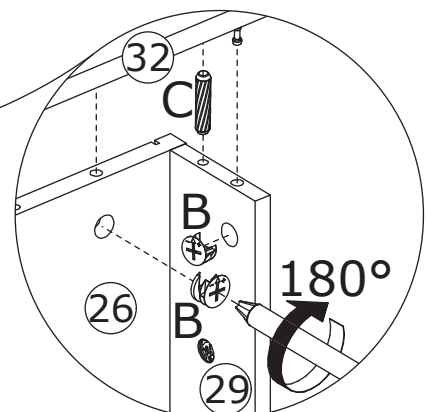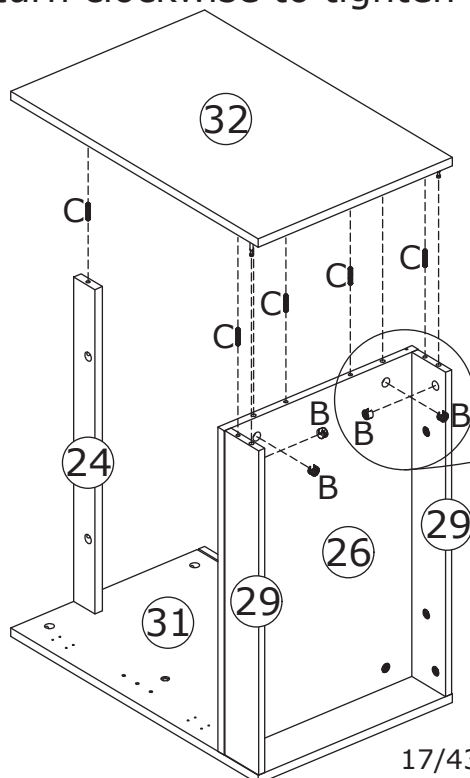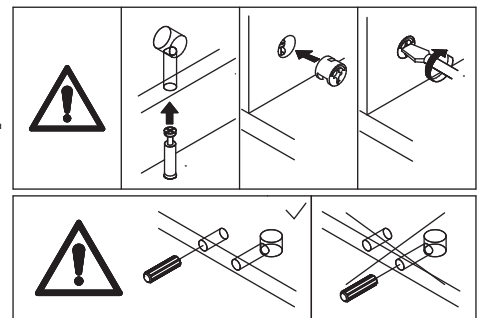



23

Insert back board 28 along available grooves as shown.


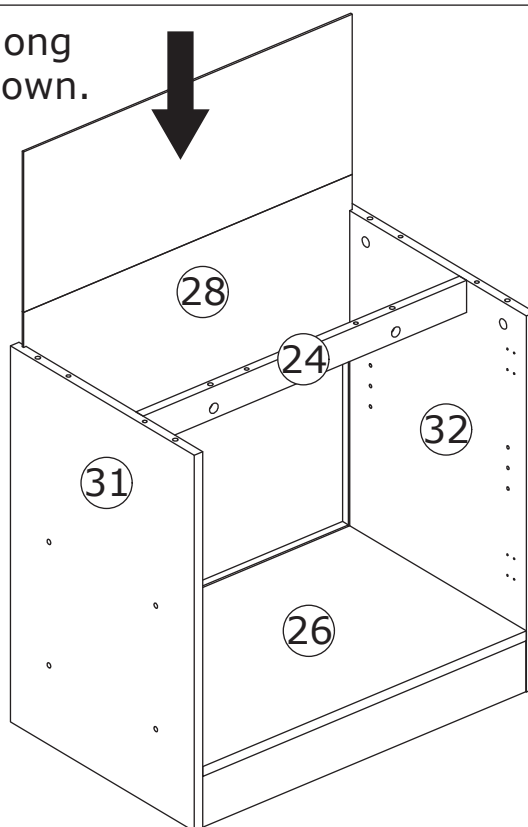


24



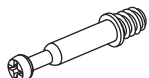
A x 16

 Ø 6 x 35 mm

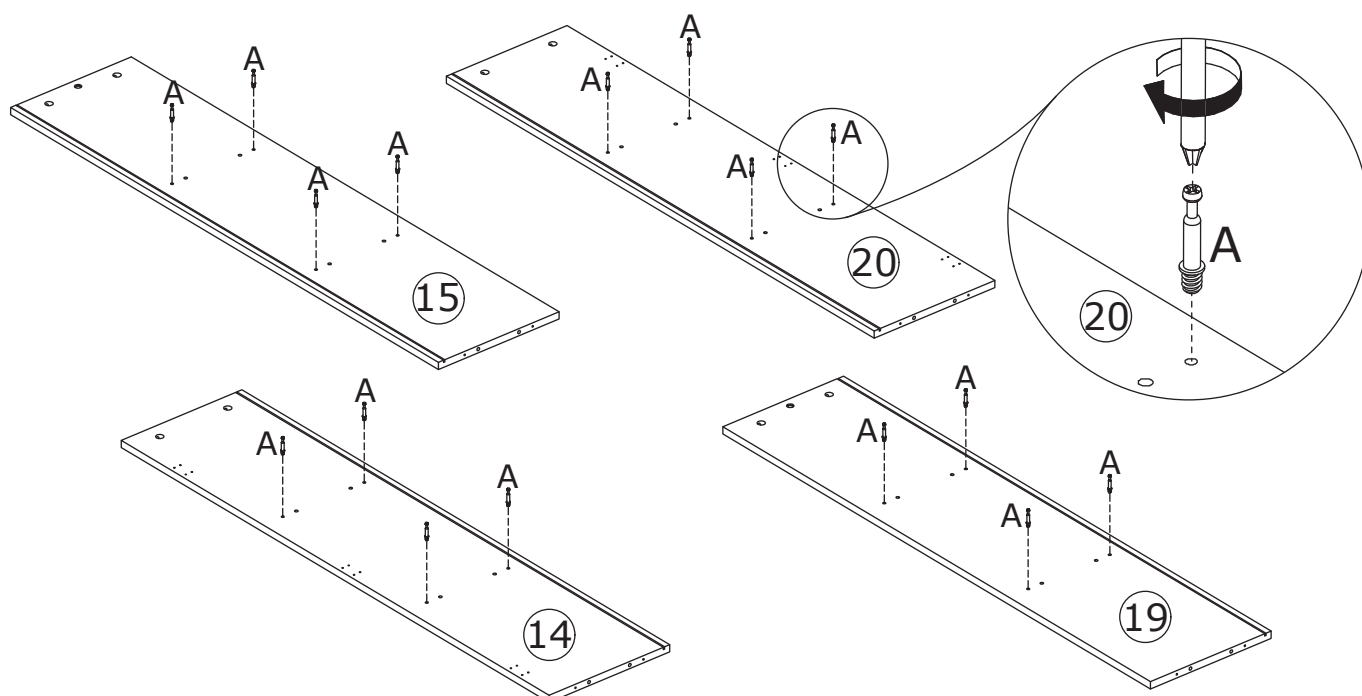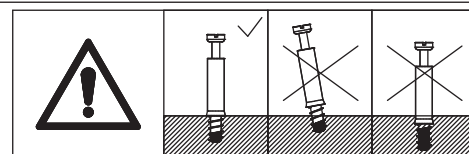





Screw eccentric rod(A) into board 14, 15, 19 and 20 as shown.

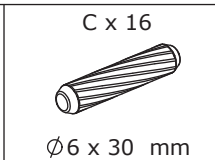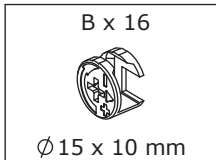




25



Connect board 14 and 15 to board 16 using wooden dowel(C), add cam lock(B) into board 16 and turn clockwise to tighten as shown. Connect board 19 and 20 to board 16 using wooden dowel(C), add cam lock(B) into board 16 and turn clockwise to tighten as shown.

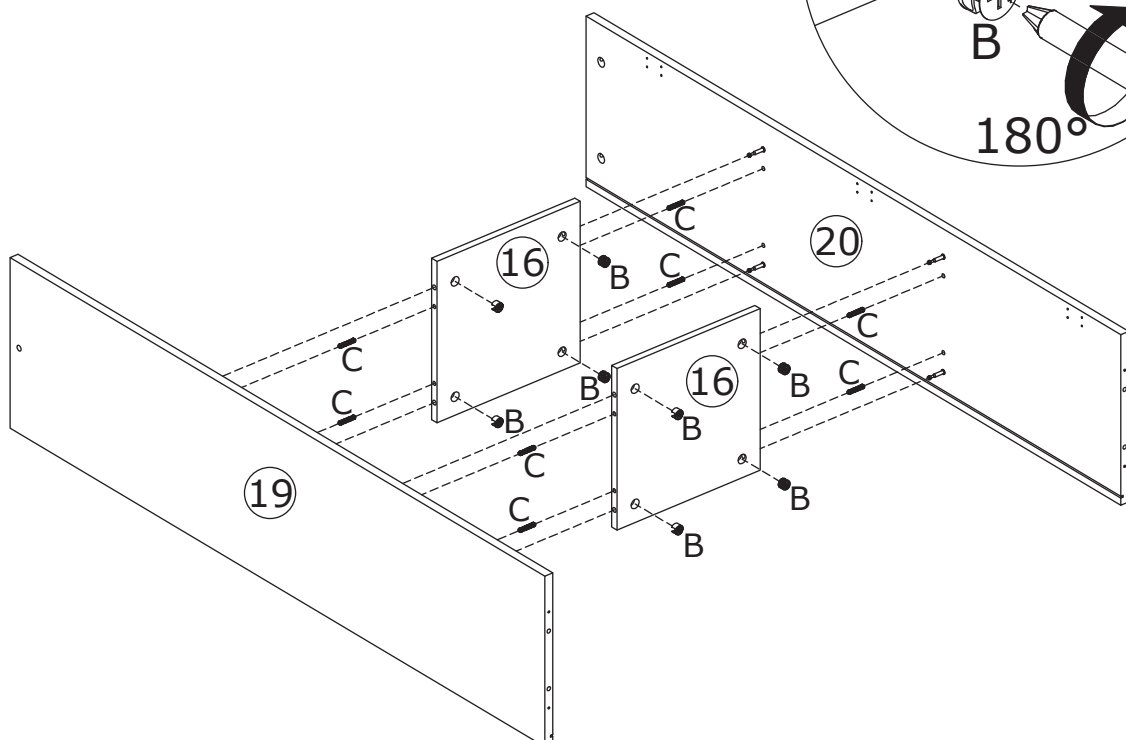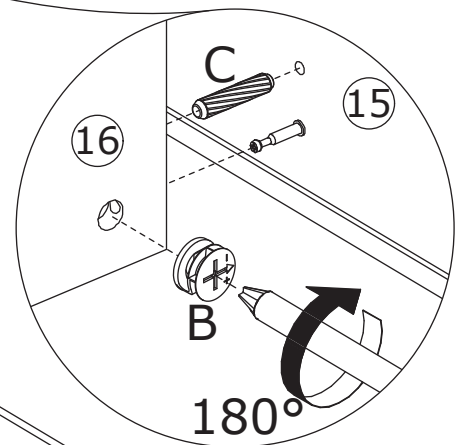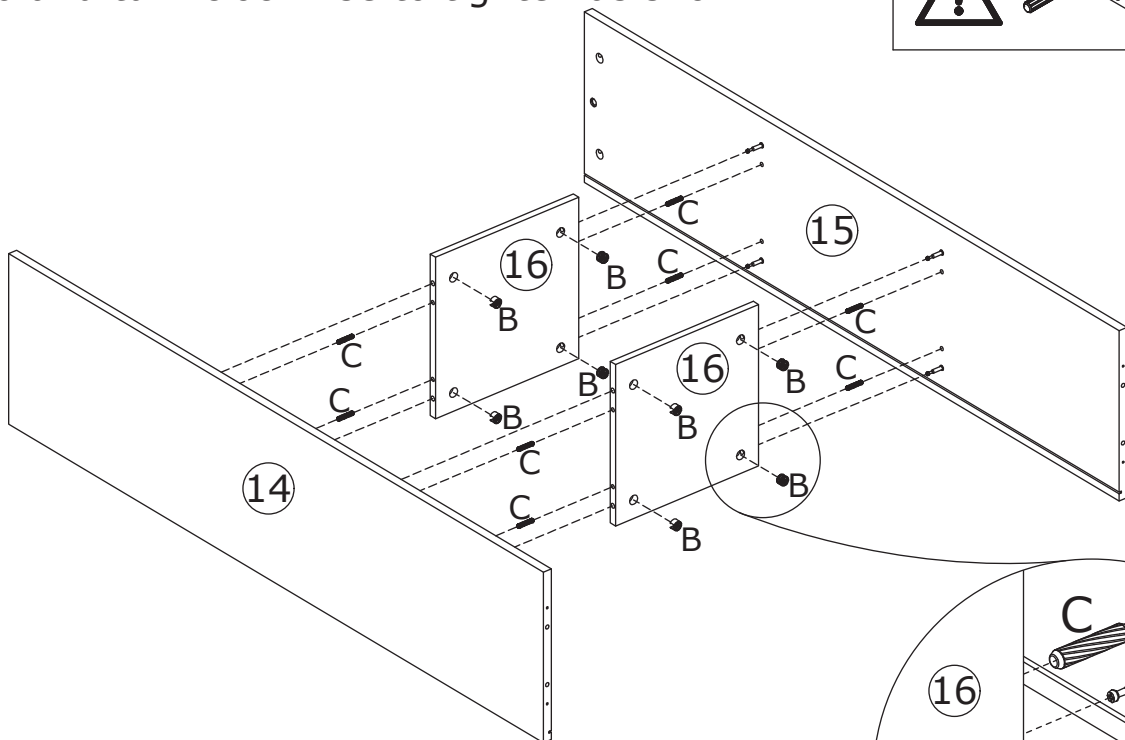
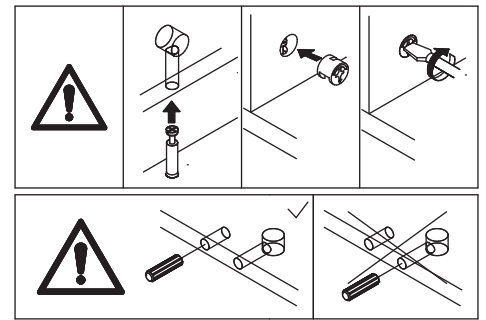


26

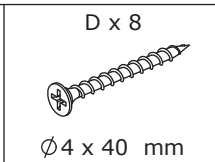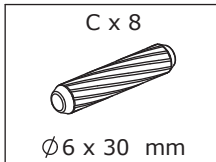


Attach board 21 to board 14 and 15 using wooden dowel(C), and fix with screw(D) as shown.


Attach board 30 to board 19 and 20 using wooden dowel(C), and fix with screw(D) as shown.

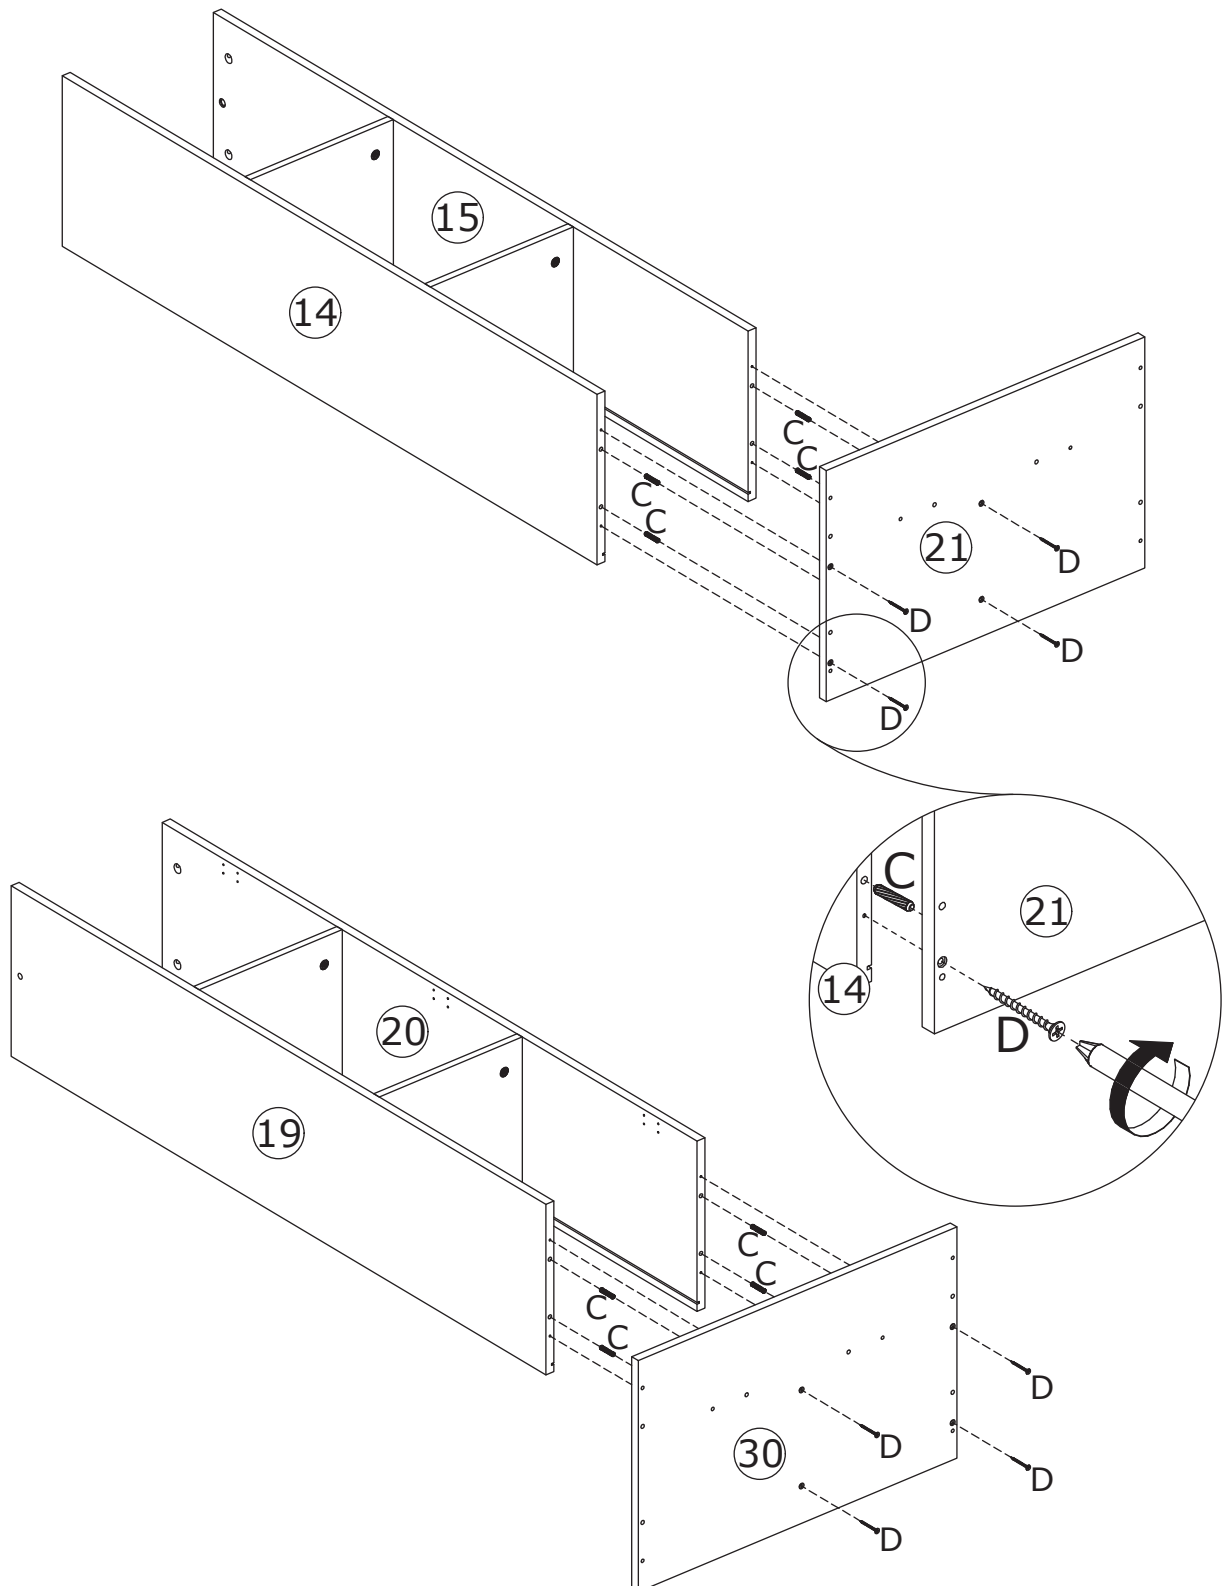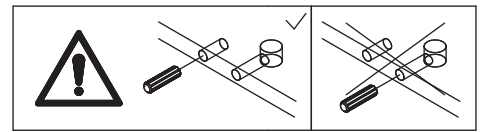


27

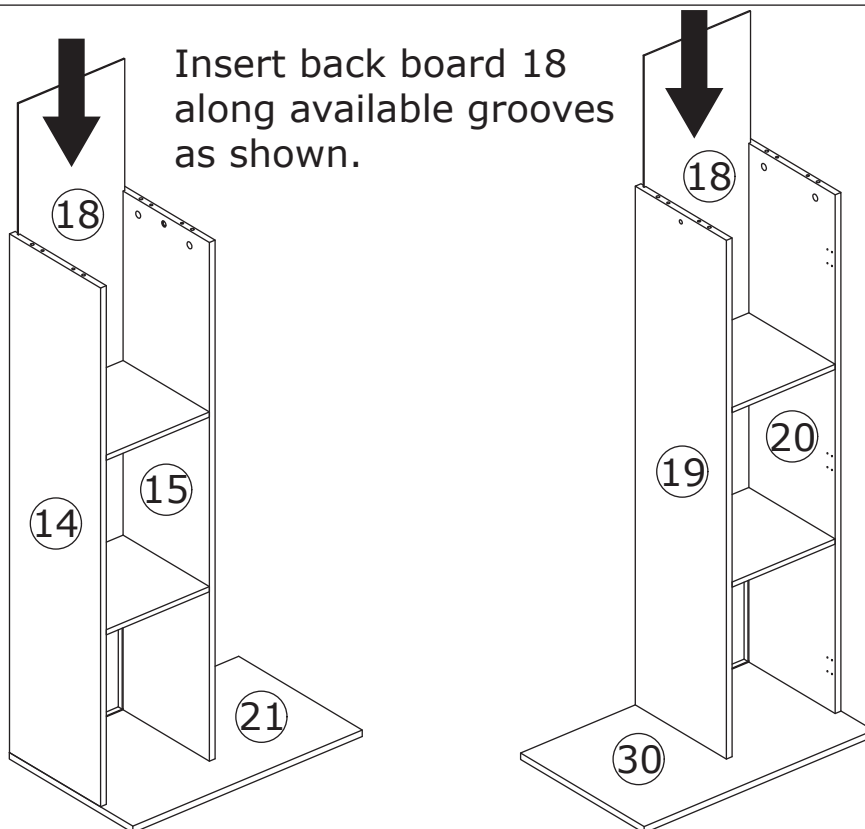


1.





2.

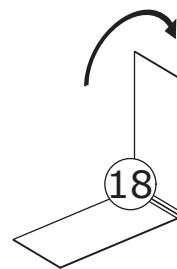



3.

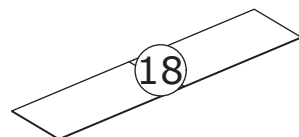




28

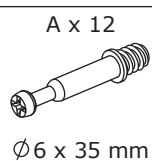

Screw eccentric rod(A) into board 21 and 30 as shown.


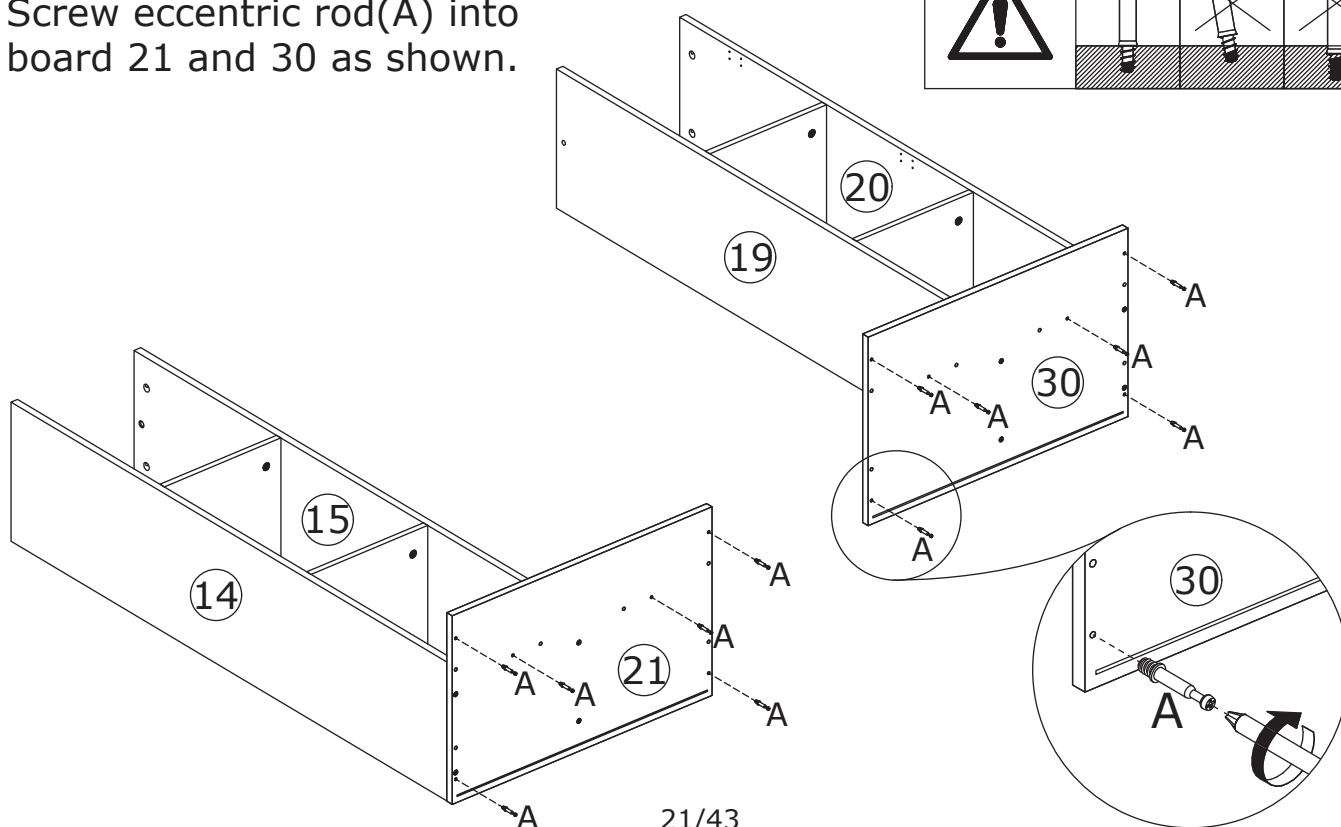
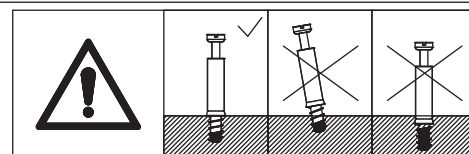


29

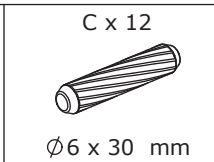
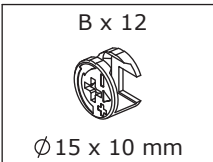


Attach the component (assembled in step 19) to board 21 using wooden dowel (C), add cam lock (B) into board 22, 24, 23 and turn clockwise to tighten as shown.






Attach the component (assembled in step 23) to board 30 using wooden dowel (C), add cam lock (B) into board 31, 24, 32 and turn clockwise to tighten as shown.

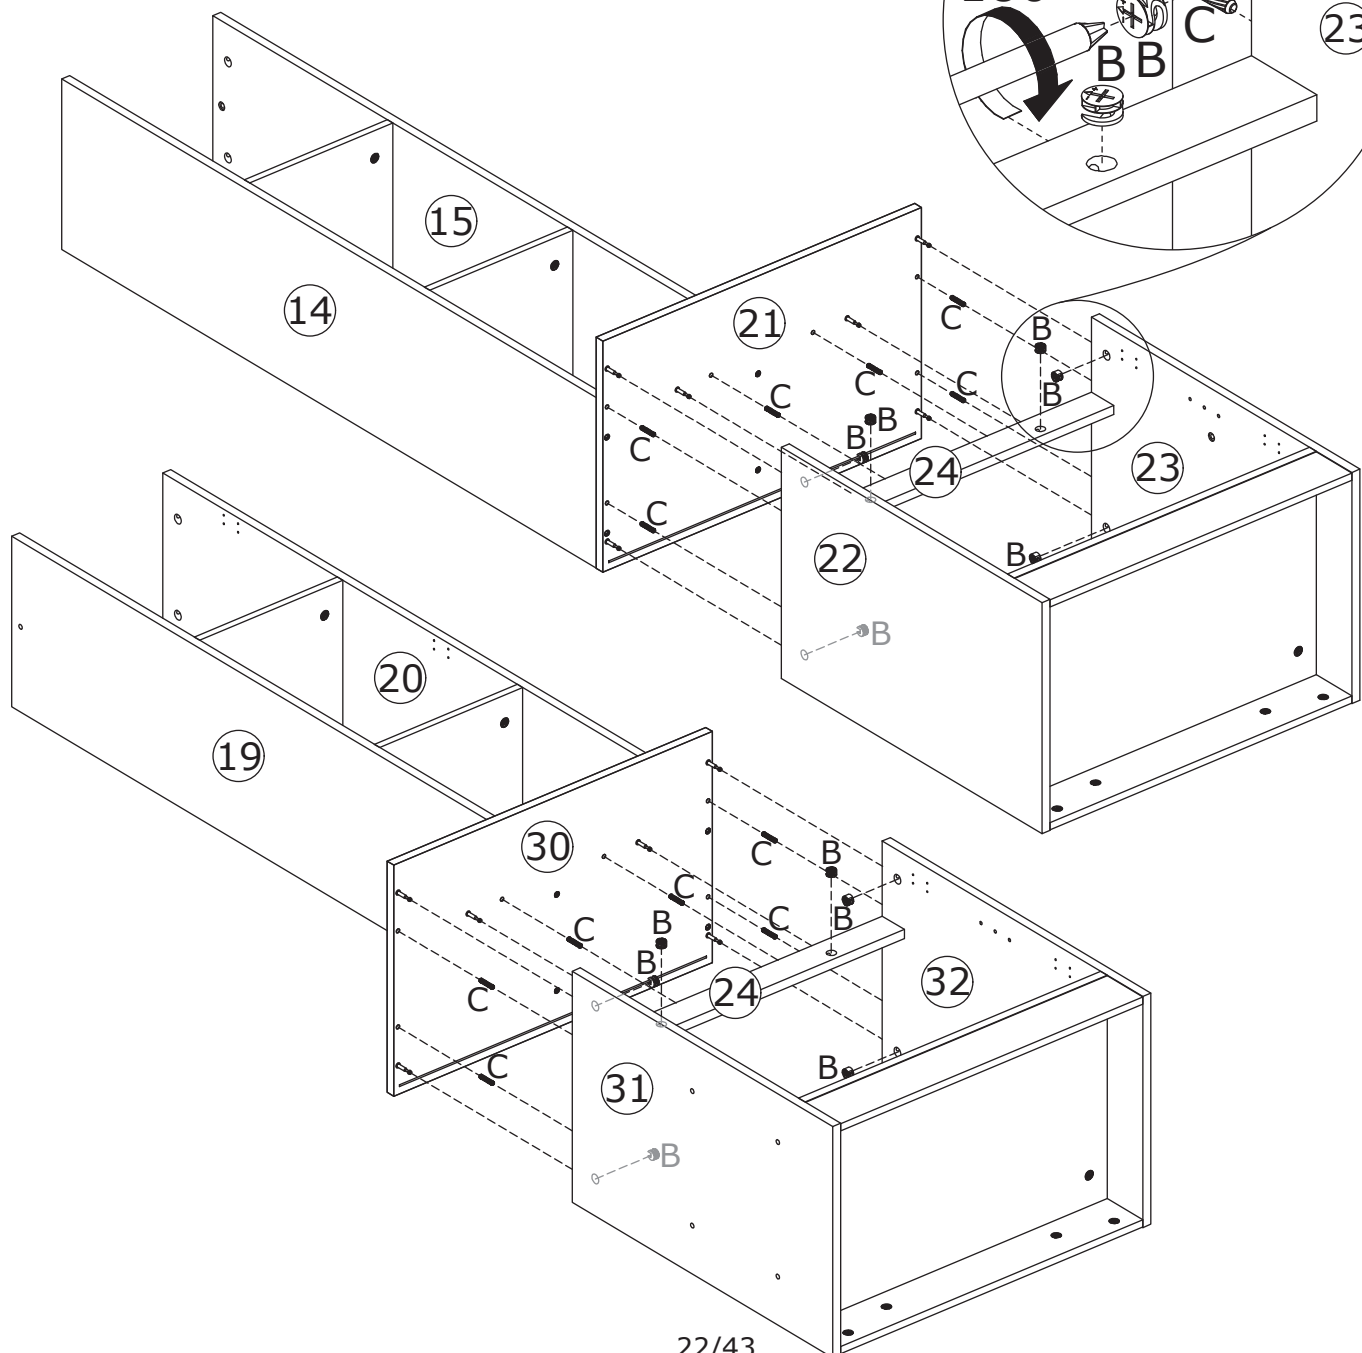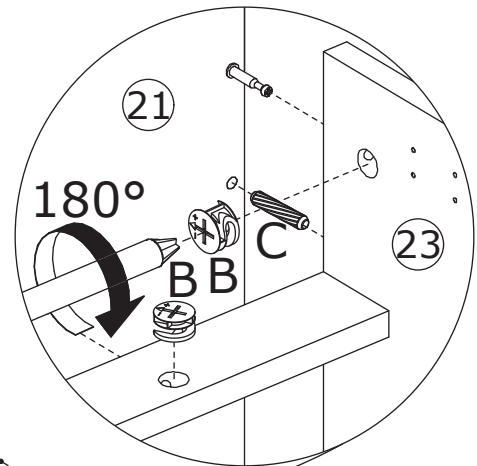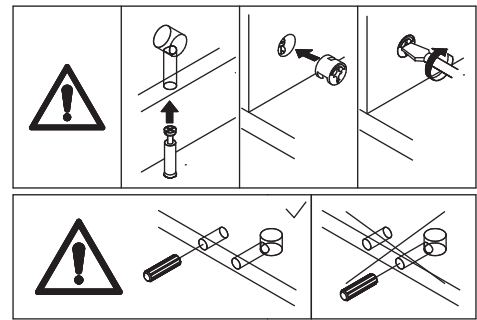




30

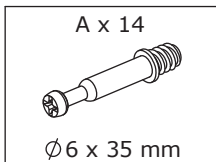






Screw eccentric rod(A) into board 34, 36 and 37 as shown.

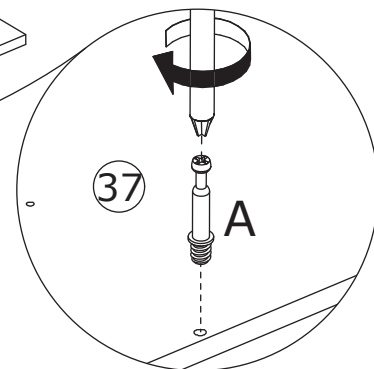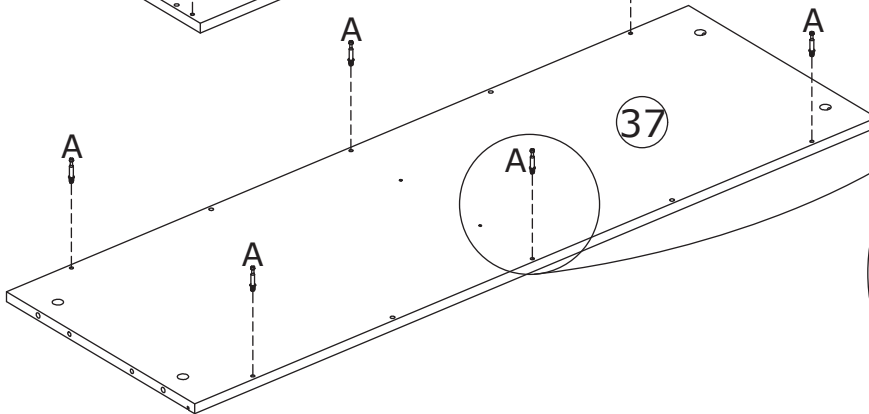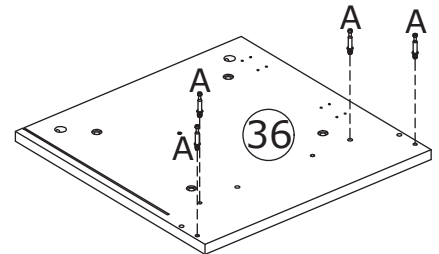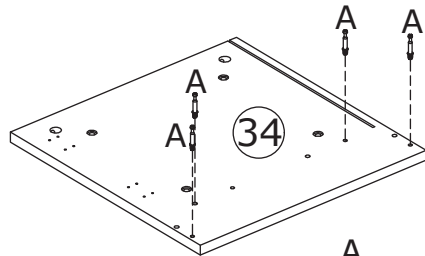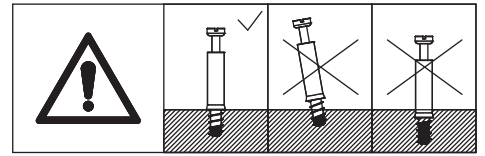




31

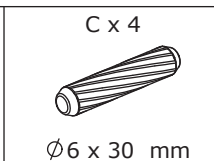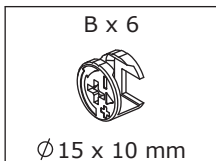



Attach board 41 to board 37 using wooden dowel(C), add cam lock(B) into board 41 and turn clockwise to tighten as shown.

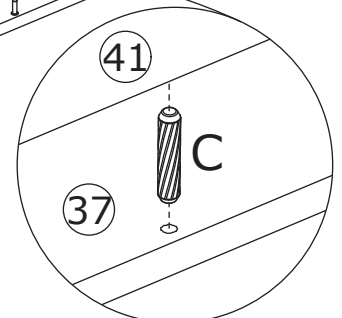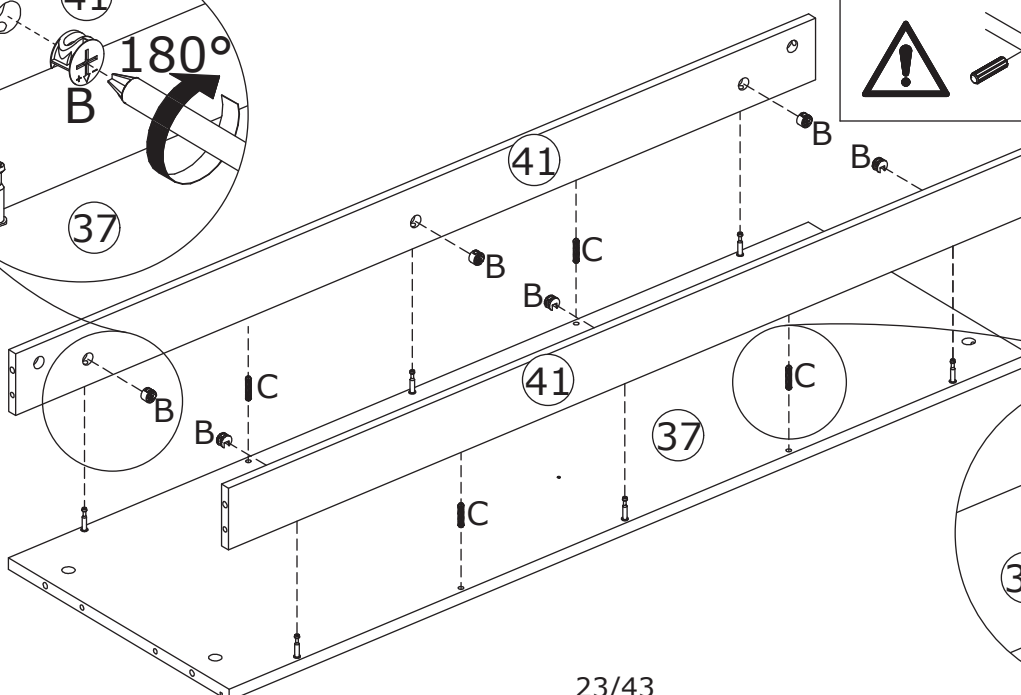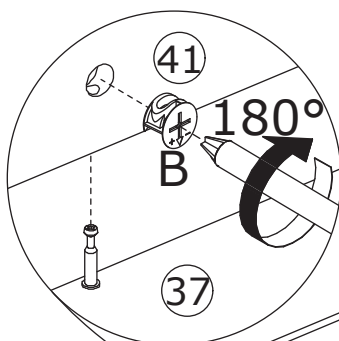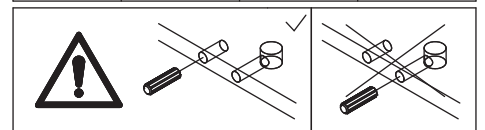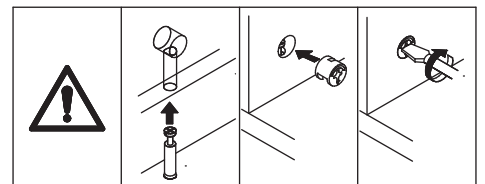




32

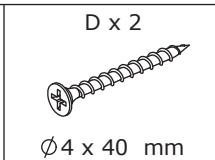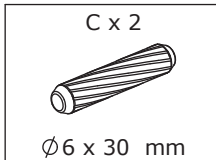



Attach board 35 to board 37 using wooden dowel(C), and fix with screw(D) as shown.

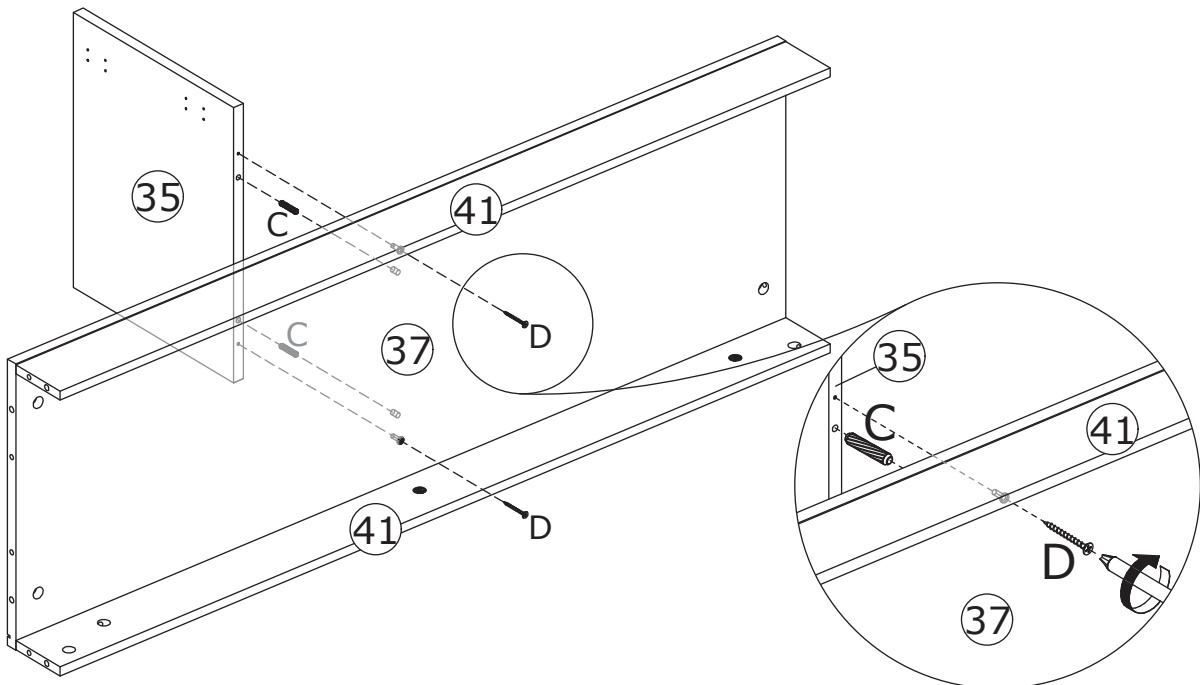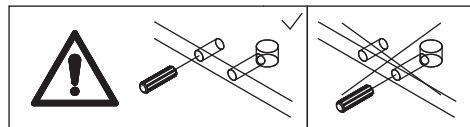

33

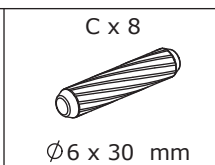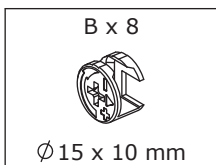


Connect board 34 and 36 to board 41 and 37 using wooden dowel(C), add cam lock(B) into board 41,37 and turn clockwise to tighten as shown.

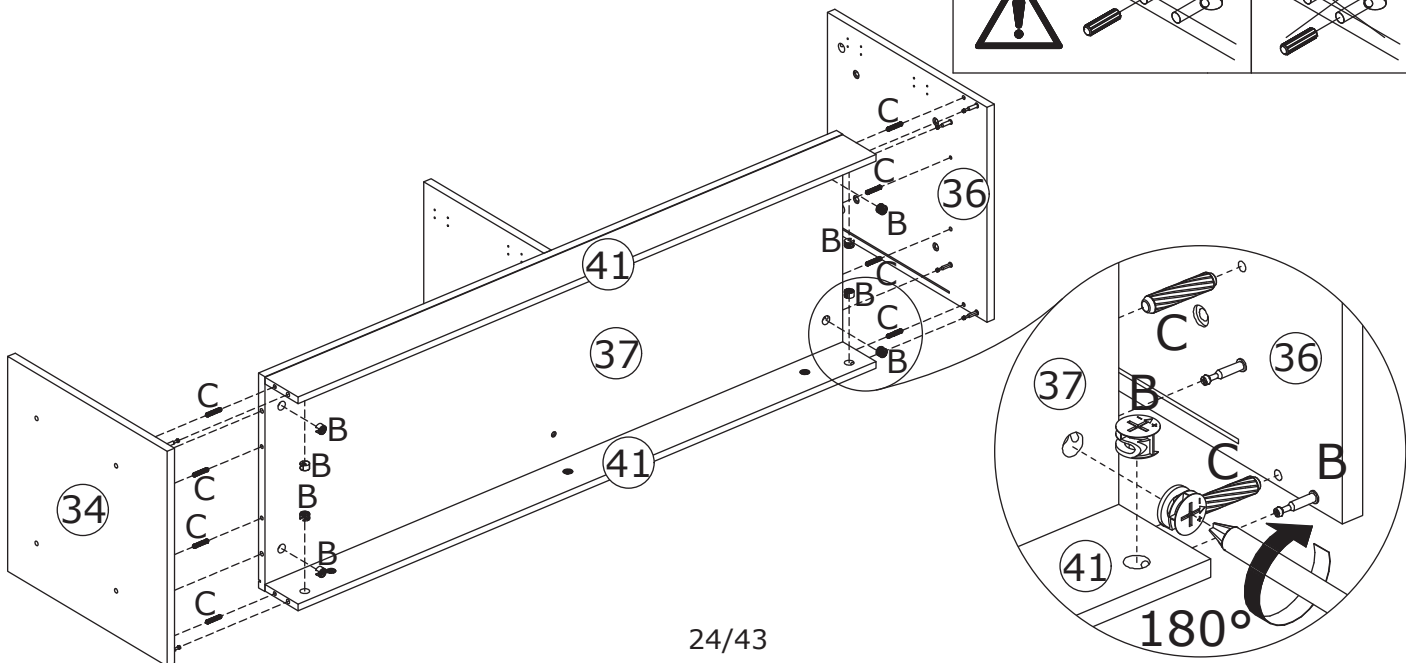
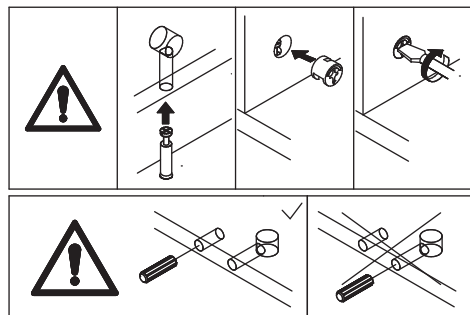


34



Insert back board 40 along available grooves as shown.

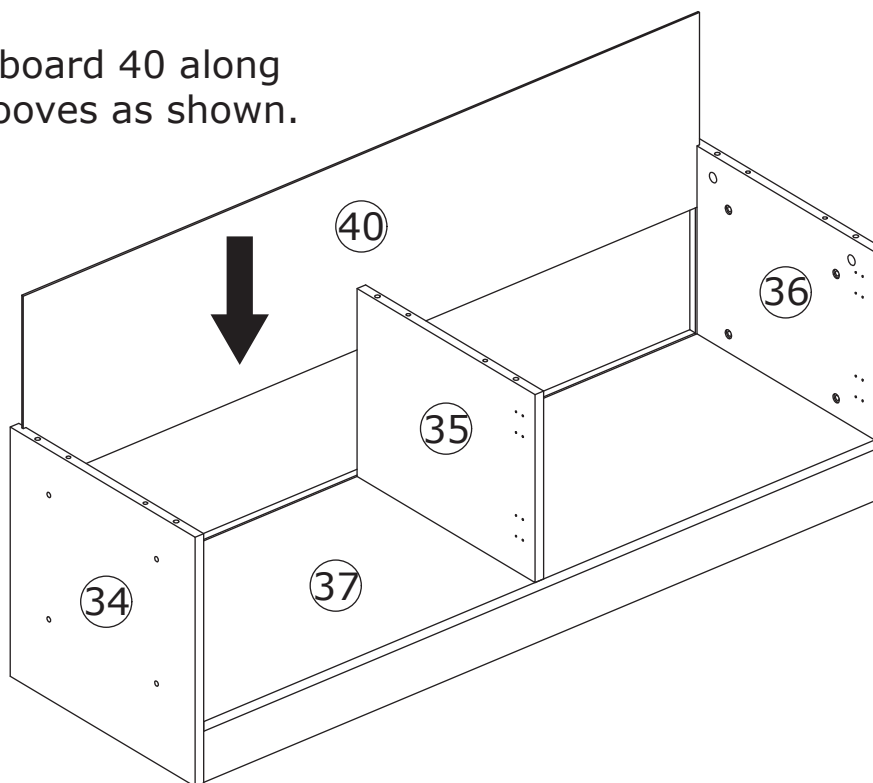

35

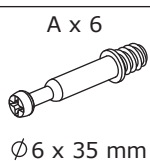

Screw eccentric rod (A) into board 33 as shown.

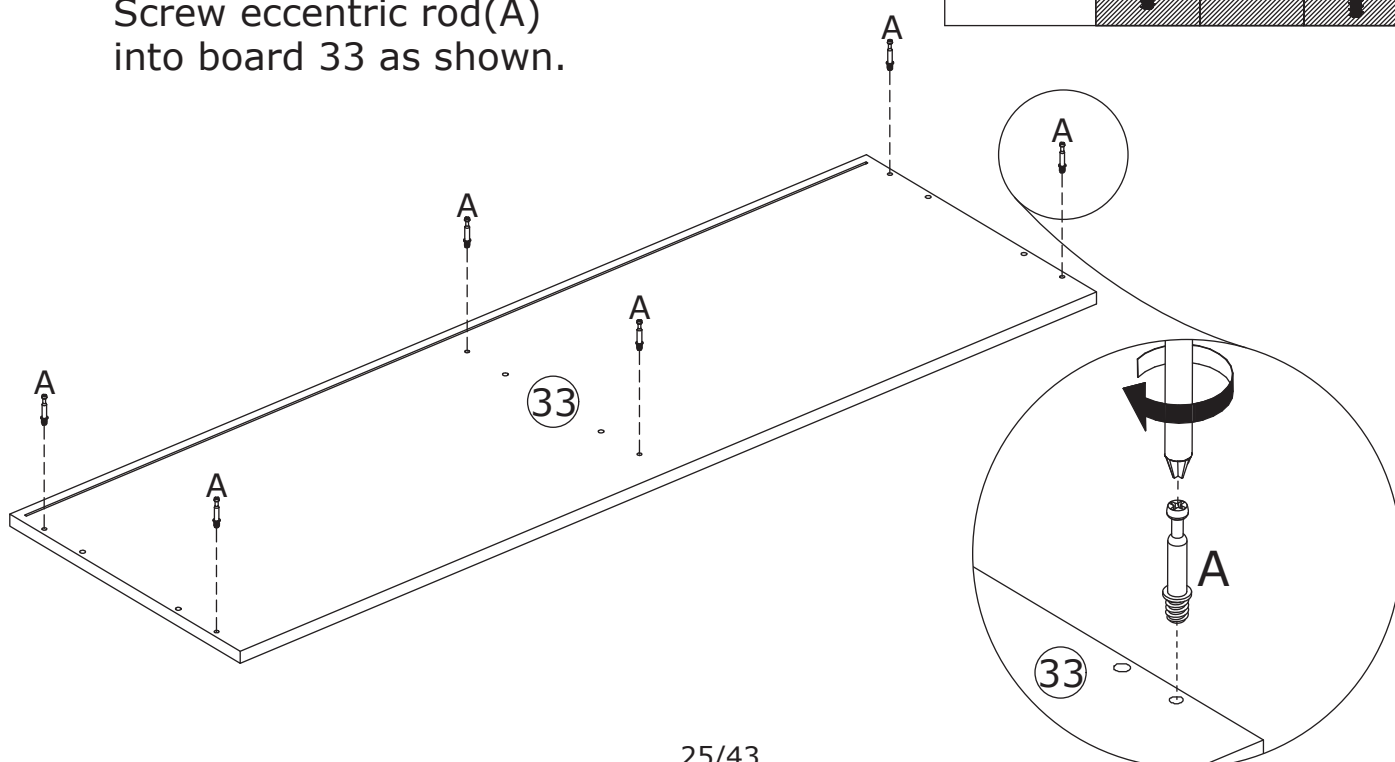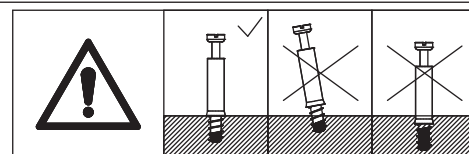

36

B x 6




Ø 15 x 10 mm




C x 6



Ø 6 x 30 mm



Attach board 33 to board 34, 35 and 36 using wooden dowel(C), add cam lock(B) into board 34,35,36 and turn clockwise to tighten as shown.

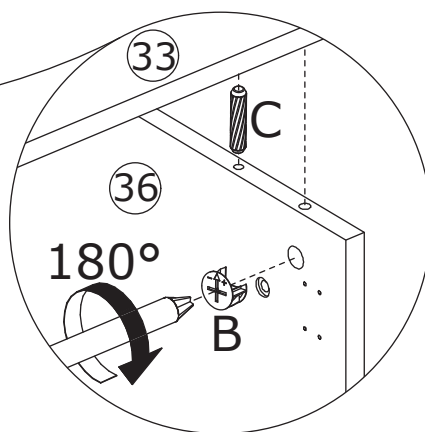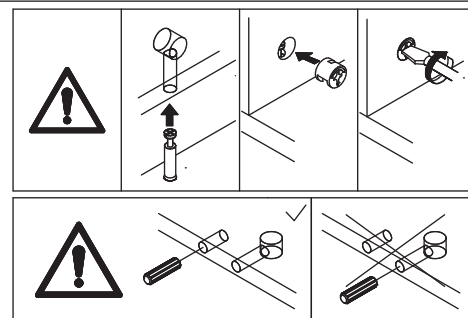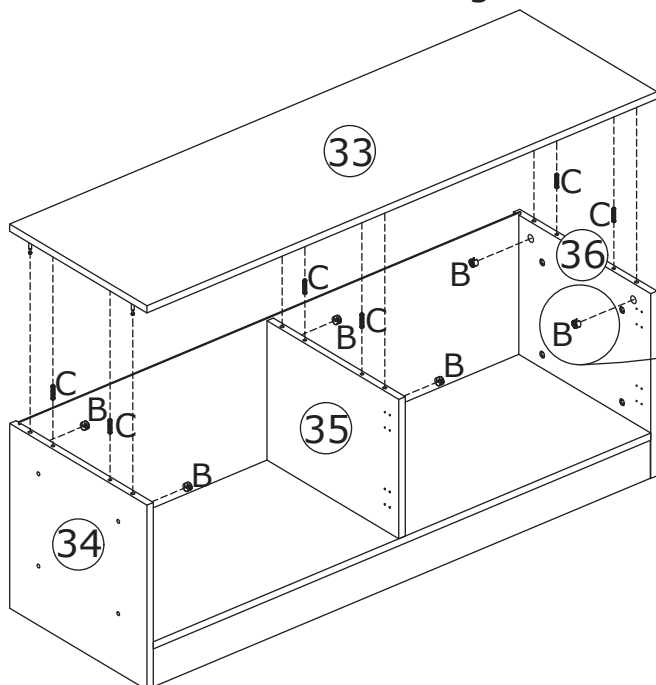

37

K x 8




M6 x 18 mm



L x 8



M6 x 16 mm



Attach the components(assembled in step 29) to board 34 and 36 using nut(K) and screw(L) as shown.

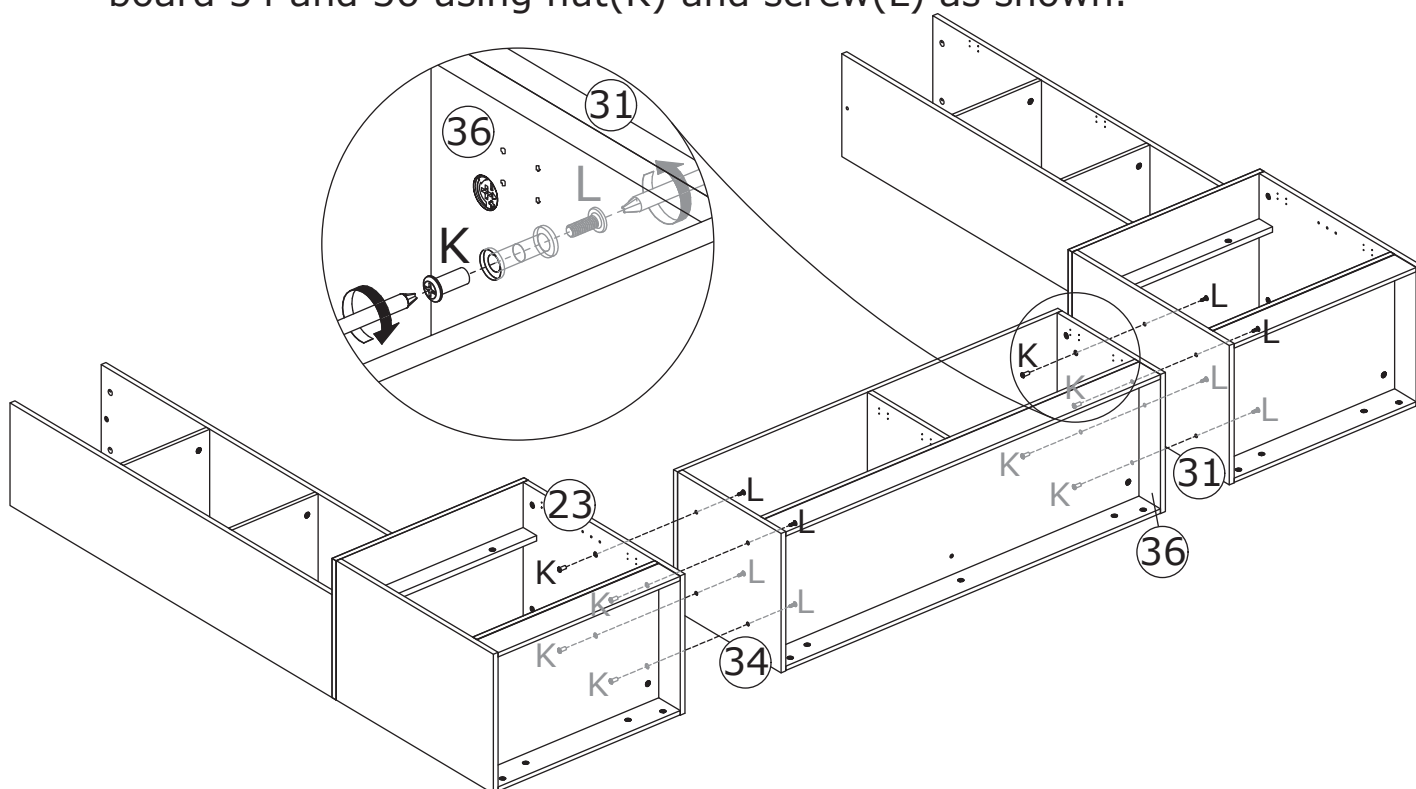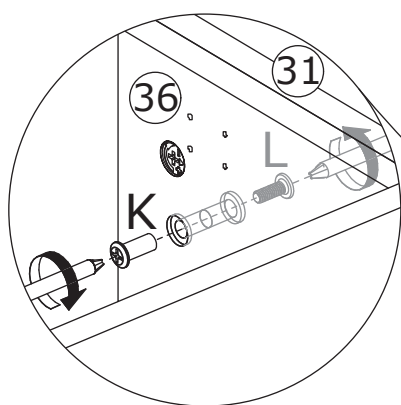

38

B x 8




Ø 15 x 10 mm




C x 8





Ø 6 x 30 mm




Attach the component(assembled in step 12) to board 14, 15, 19 and 20 using wooden dowel(C), add cam lock(B) into board 14,15,19,20 and turn clockwise to tighten as shown.

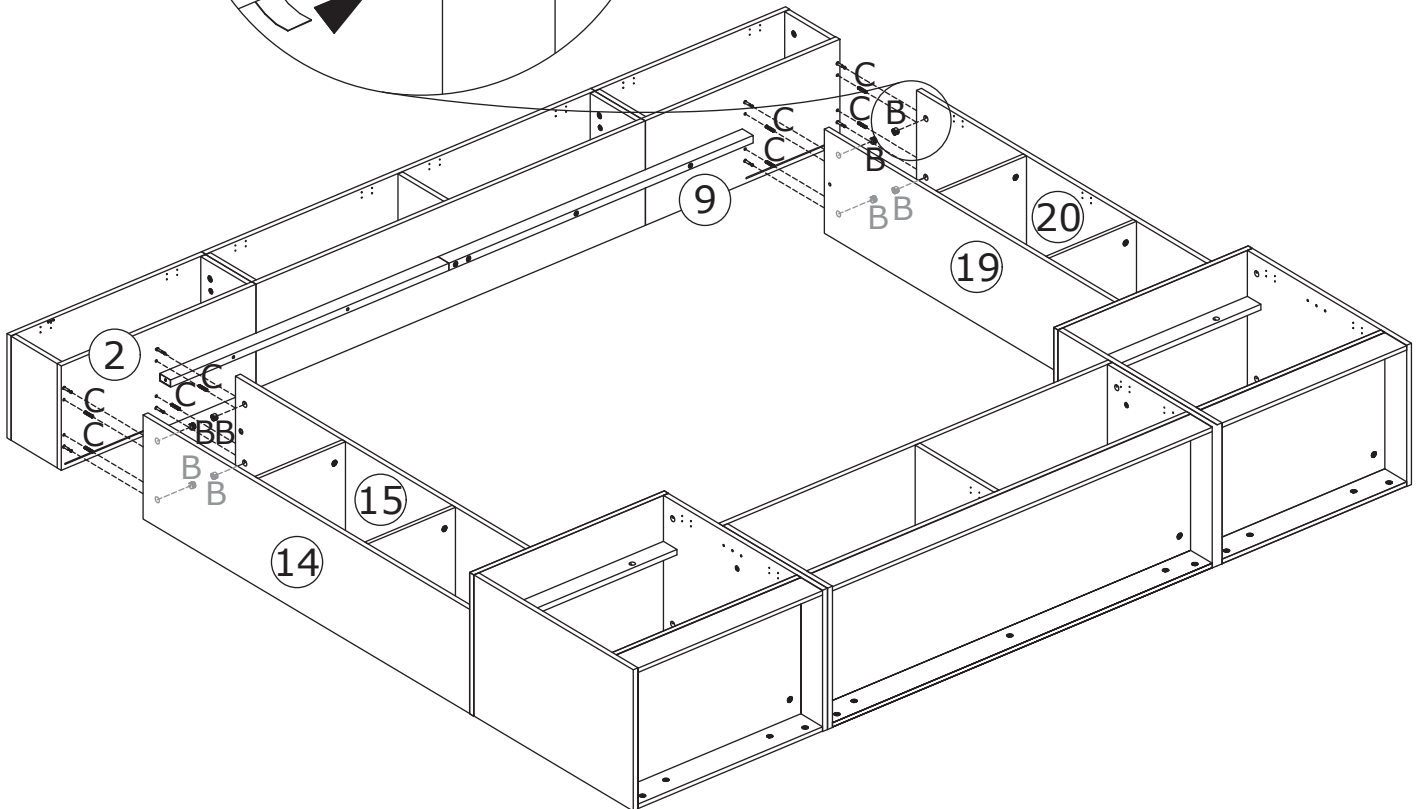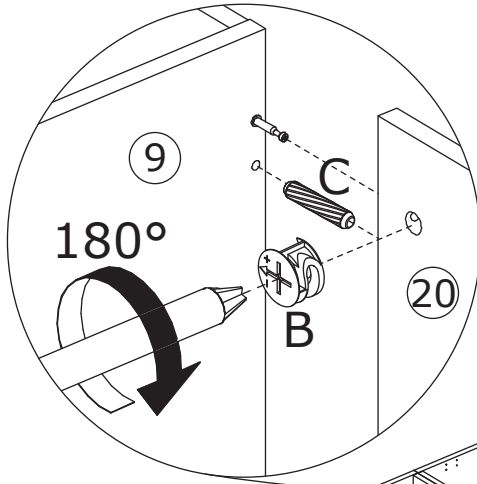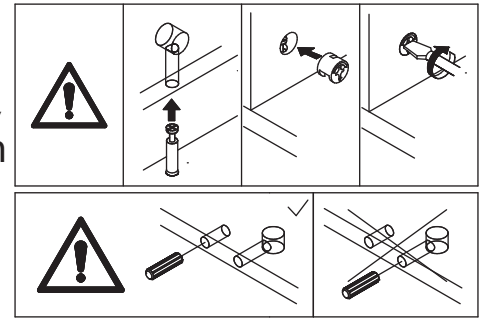


39

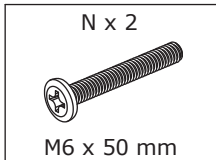



Fix board 15 and 19 to tube 42 and 43 with screw(N) as shown.

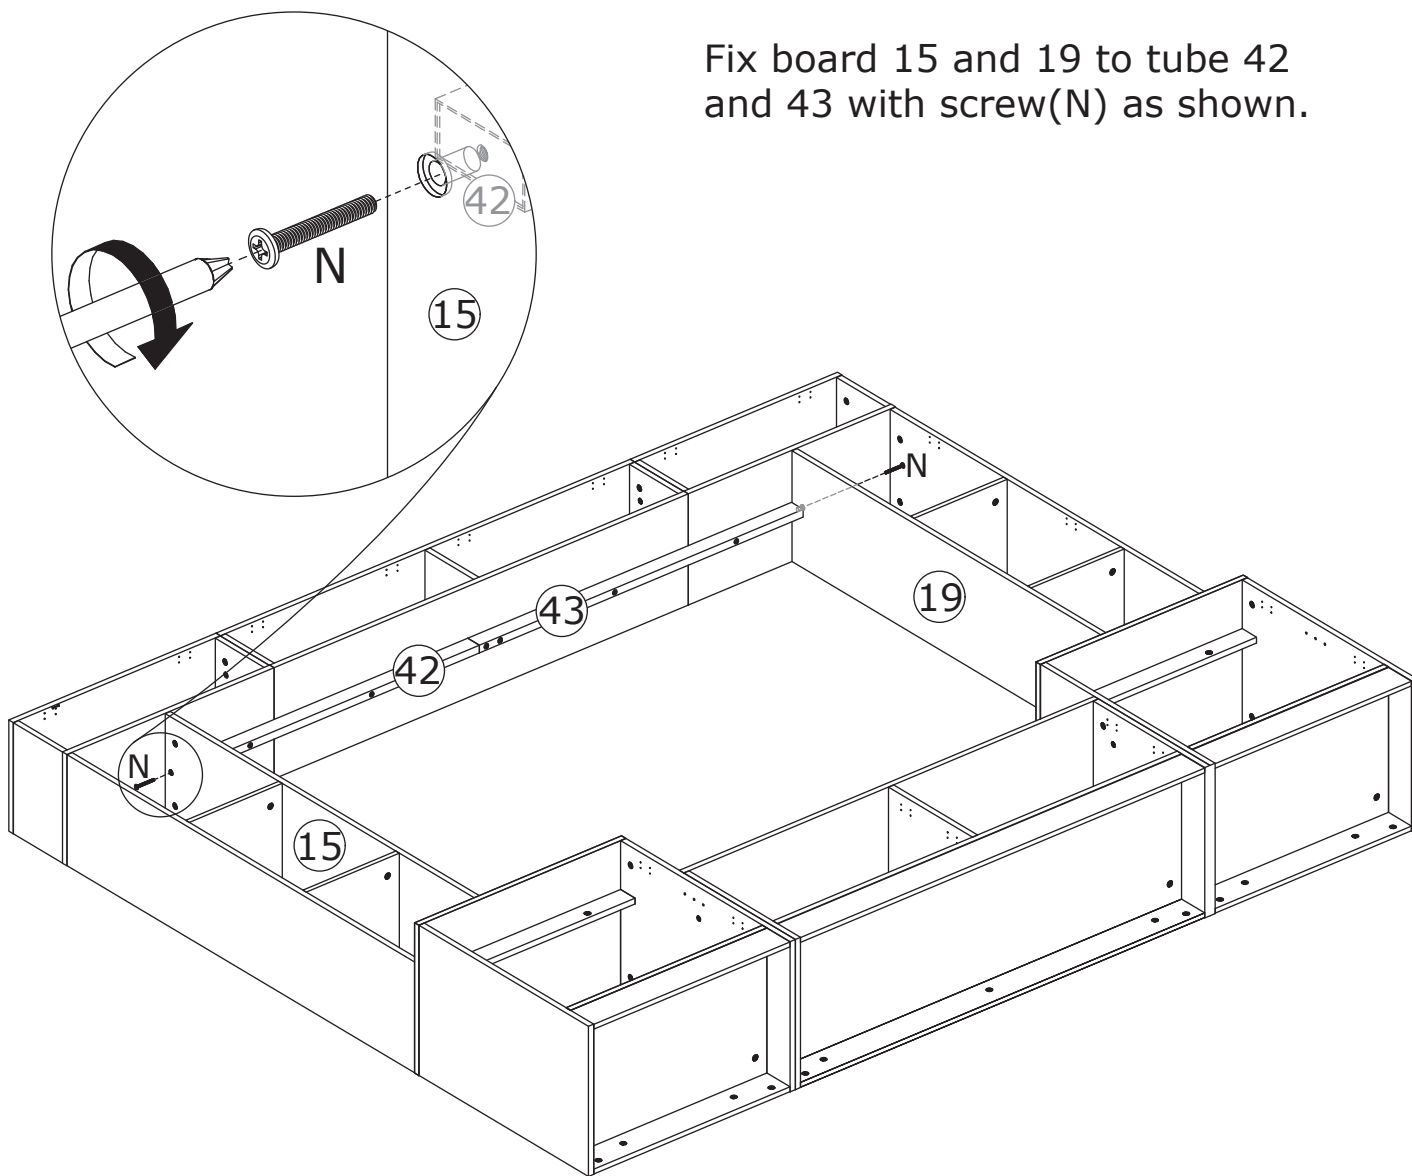


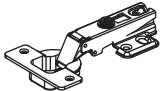

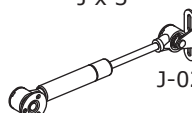
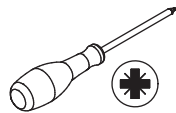







Pay attention to the difference between the middle parts of the two types of door hinges.

- The curved door hinges(G) are used on the middle door plates
- And the full coverage door hinges(F) are used on the outmost door panel.

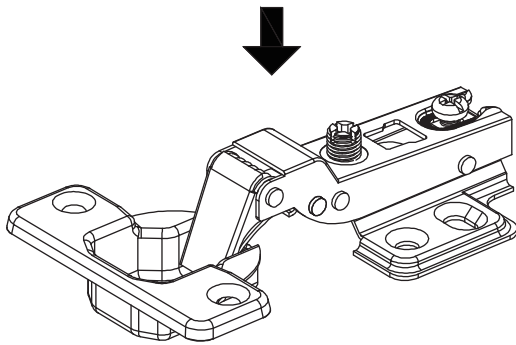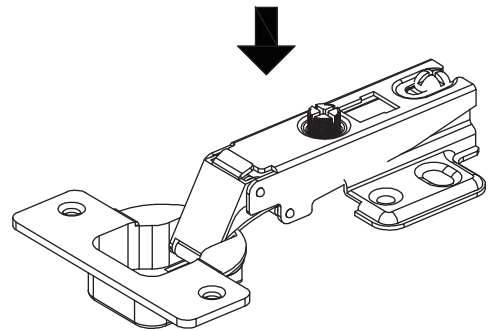**G****F**

41

<p>E x 12</p>  <p>Ø 4 x 12 mm</p>	<p>F x 6</p> 	<p>H x 6</p>  <p>Ø 3 x 12 mm</p>	<p>J x 3</p>  <p>J-02</p>	
--	--	---	---	---

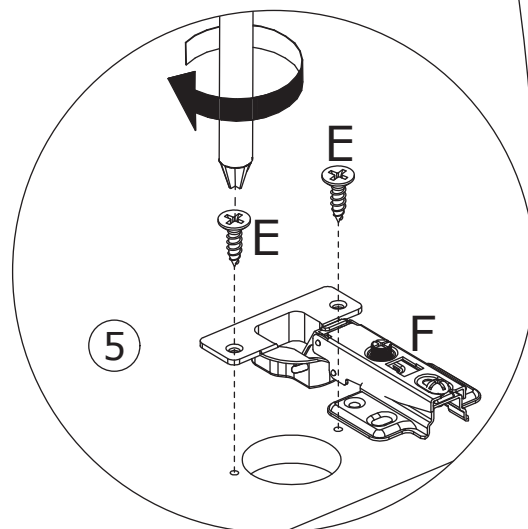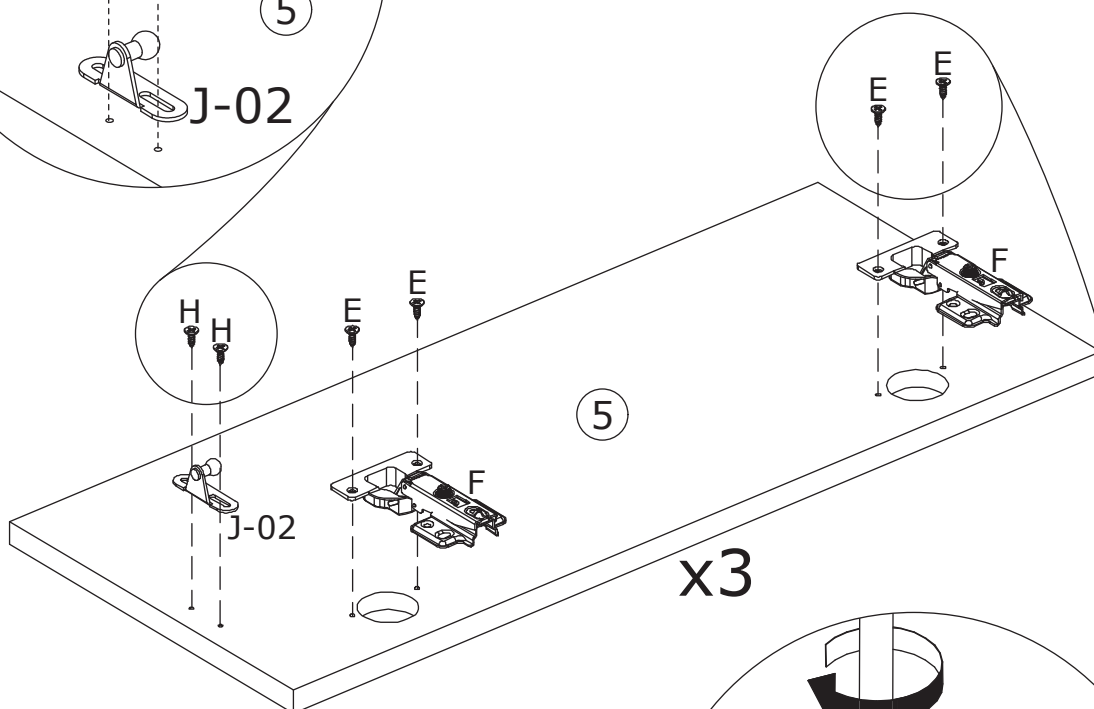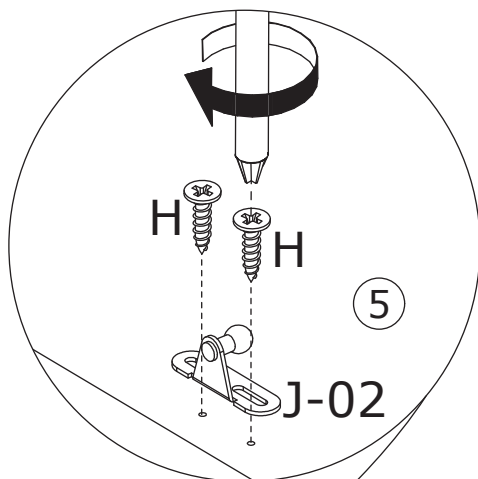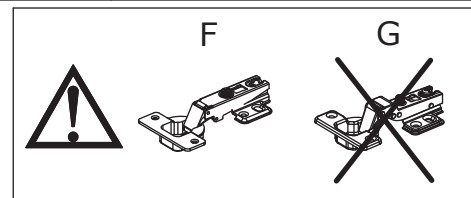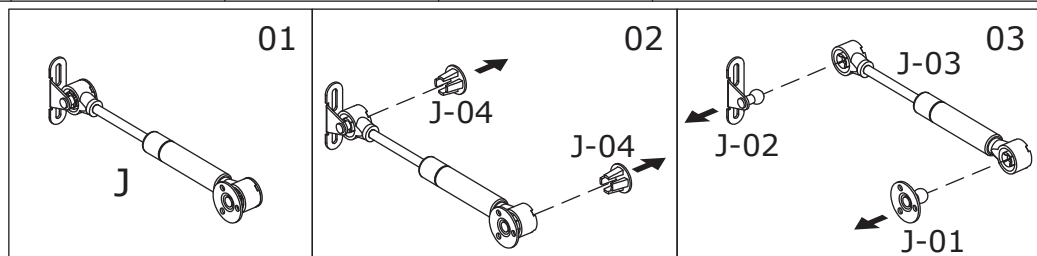


Fix part(J-02) to board 5 with screw(H) as shown.
Fix hinge(F) to board 5 with screw(E) as shown.

42

E x 24




Ø4 x 12 mm




F



G


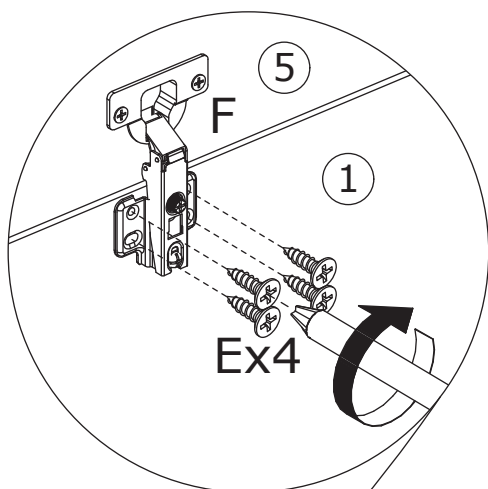


Assemble door 5 to board 1 and 10 by fixing hinge with screw(E) as shown.

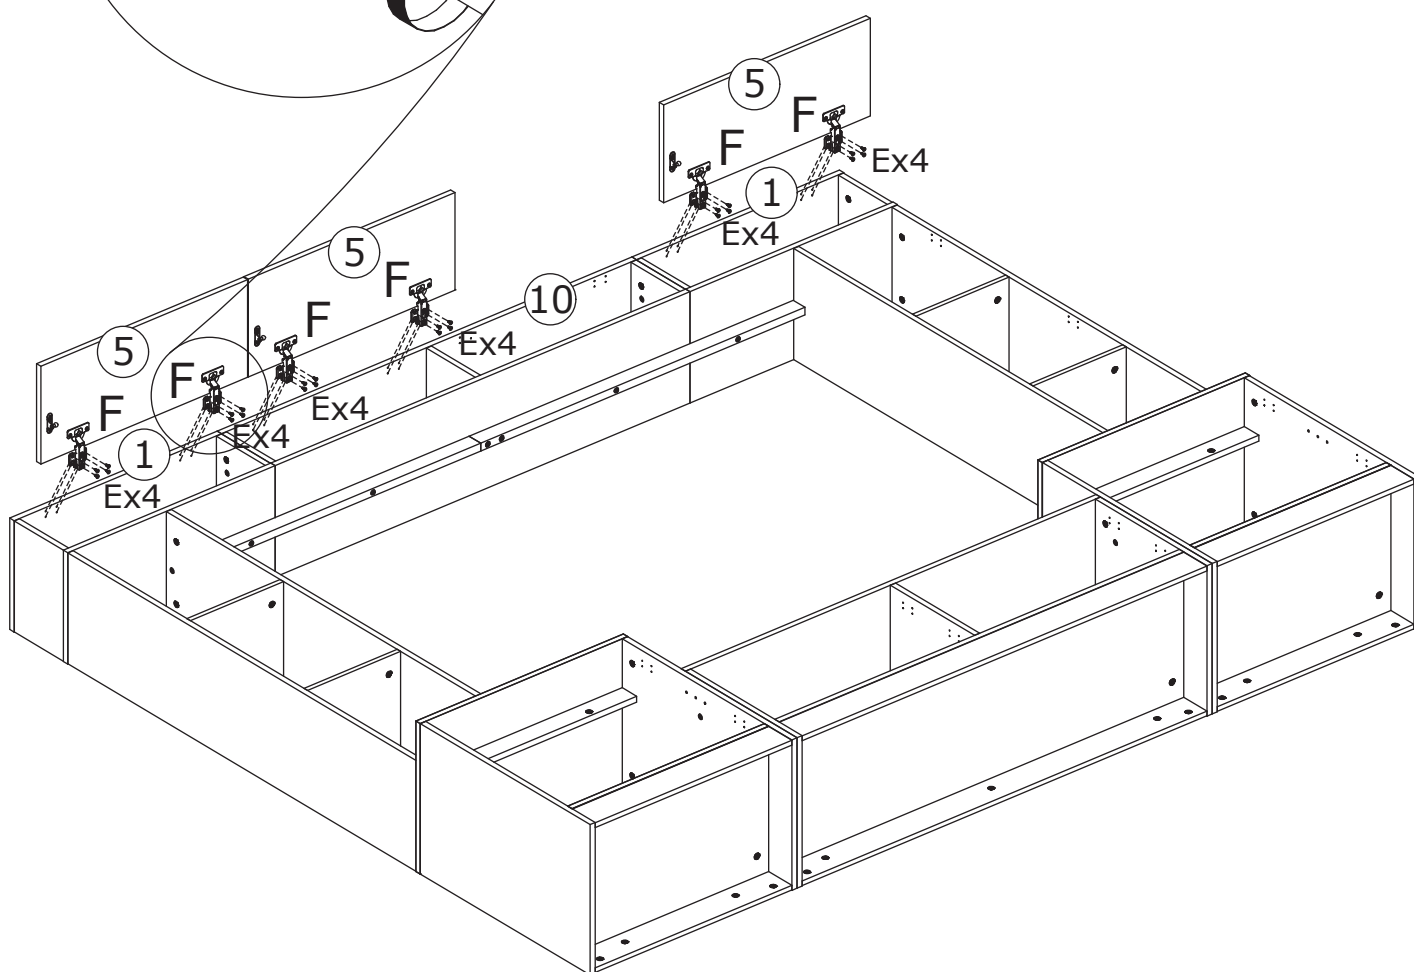


43

J x 3

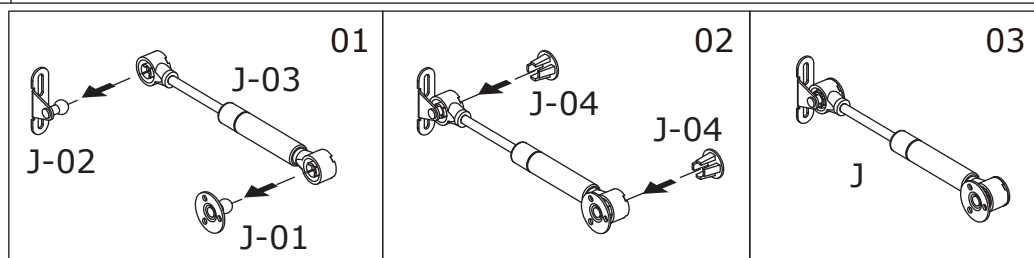

Connect part(J-03) to part(J-01), (J-02) and (J-04) as shown.

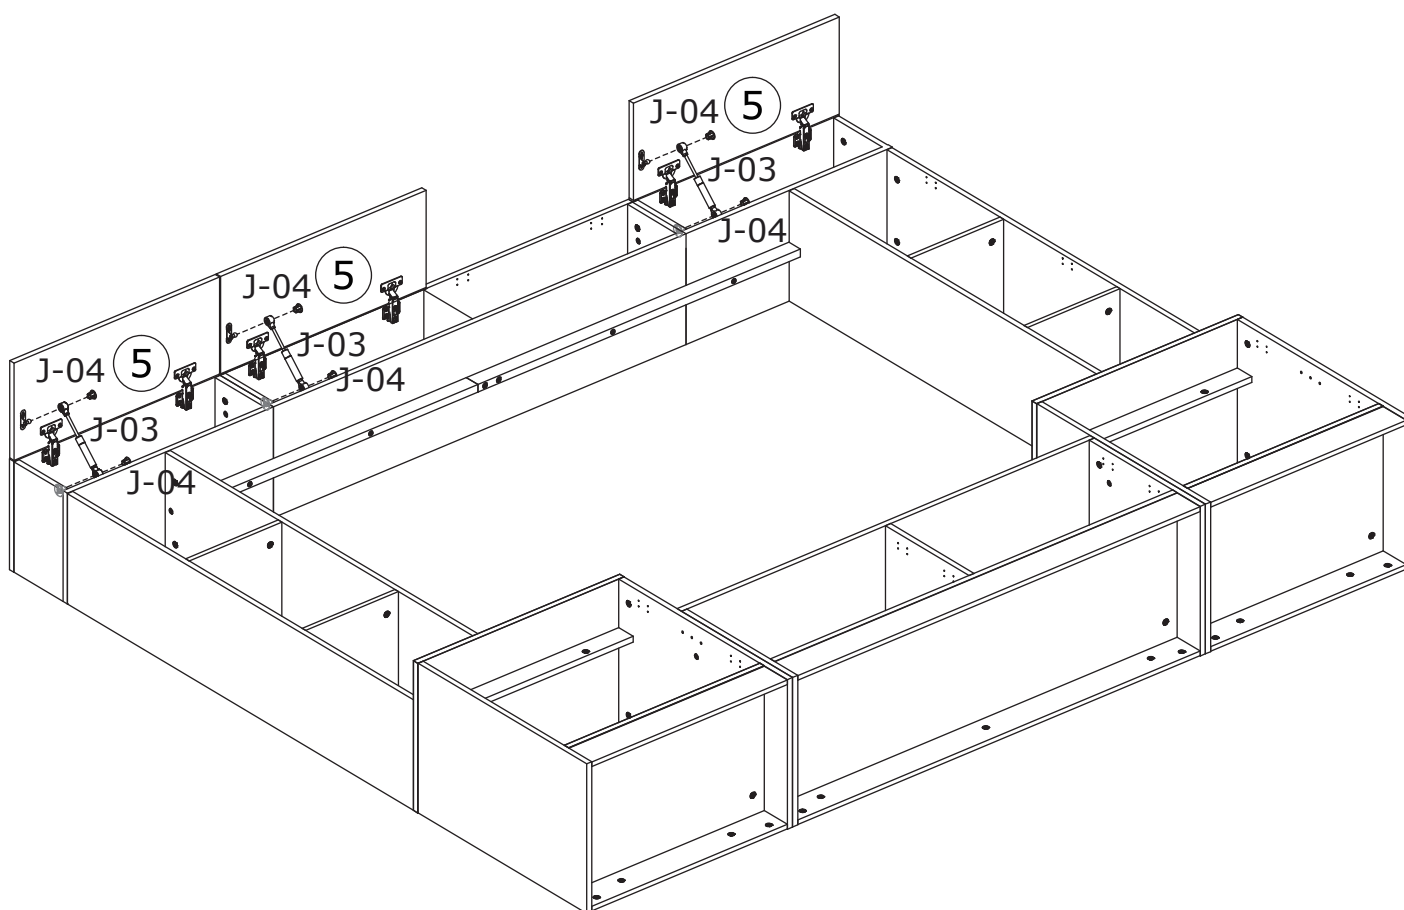


44

E x 4



Ø4 x 12 mm

F x 2




H x 2




Ø3 x 12 mm

J x 1






J-02




Fix part(J-02) to board 5 with screw(H) as shown.

Fix hinge(F) to board 5 with screw(E) as shown.

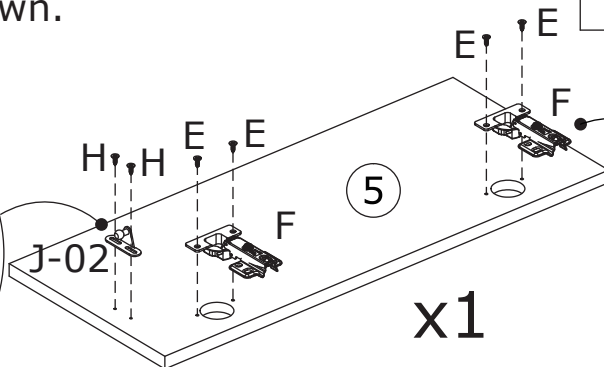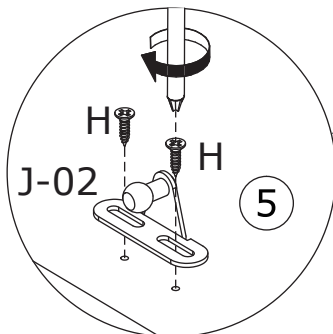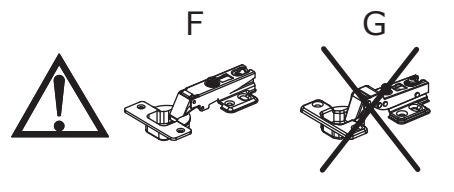

x1

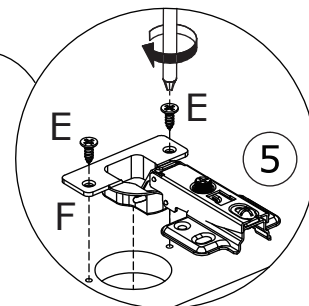

45




E x 8




Ø4 x 12 mm




Assemble door 5 to board 10 by fixing hinge with screw(E) as shown.

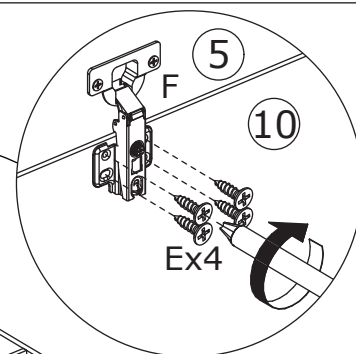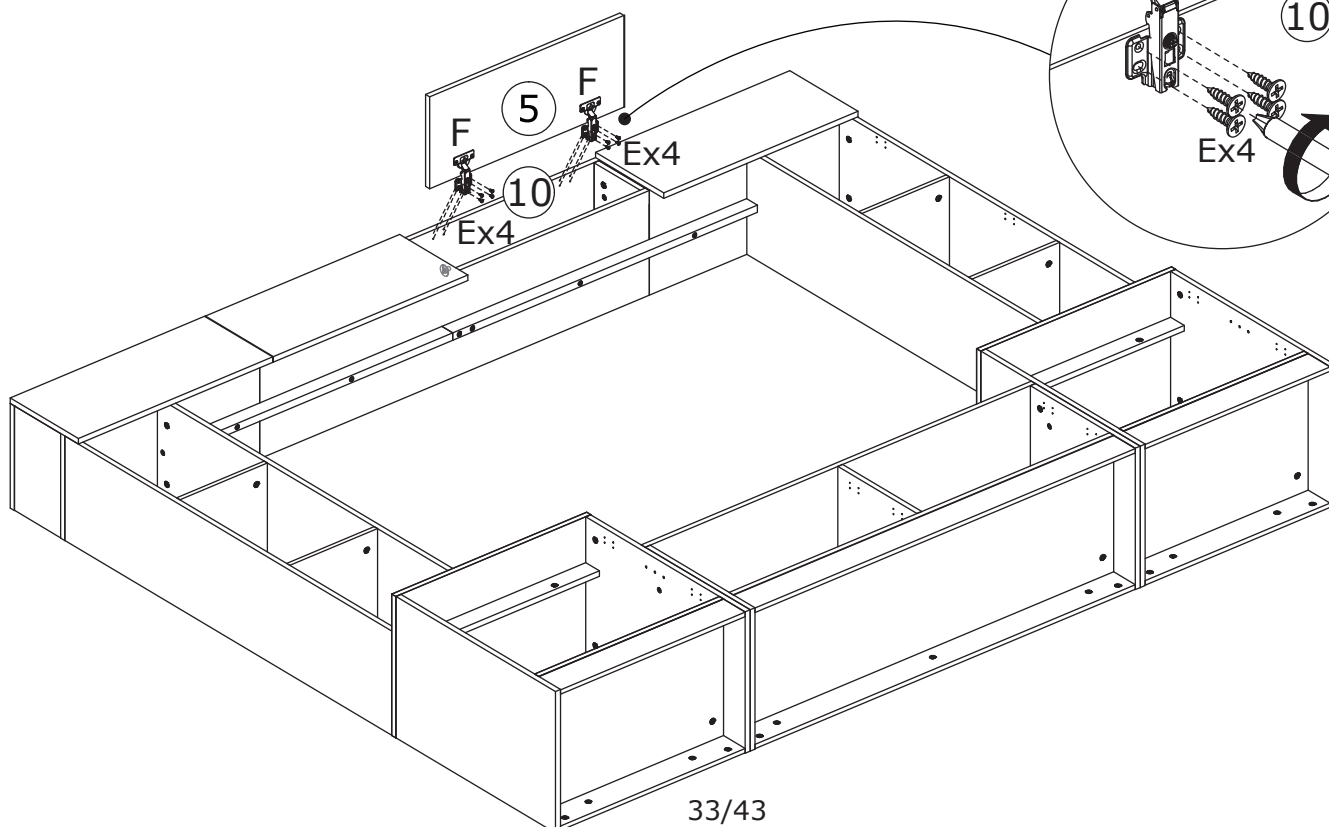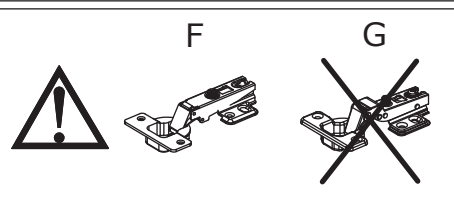


46

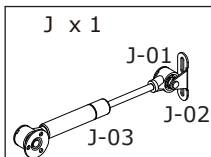


Connect part(J-03) to (J-02) and (J-04) as shown.

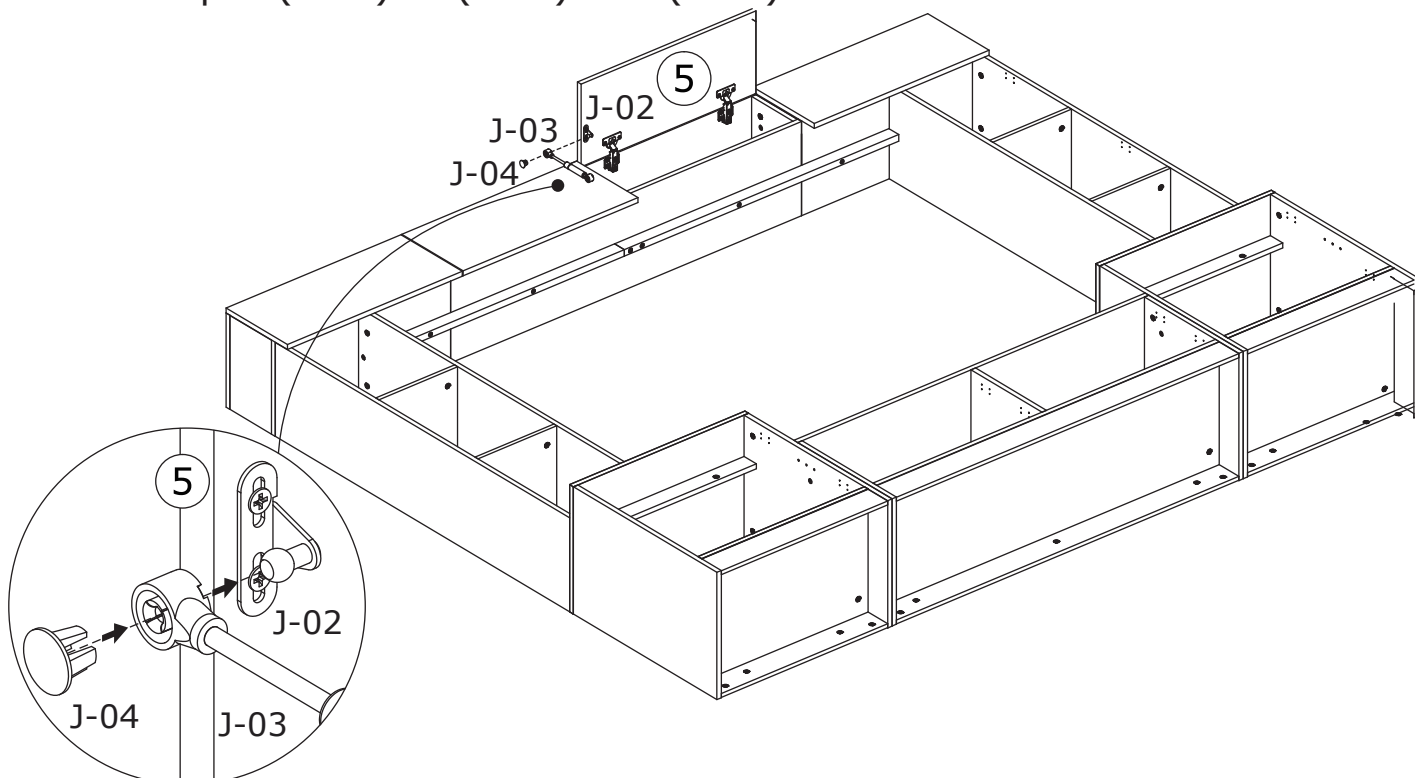

47

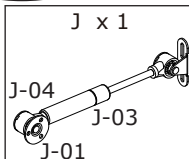




Connect part(J-03) to (J-01) and (J-04) as shown.

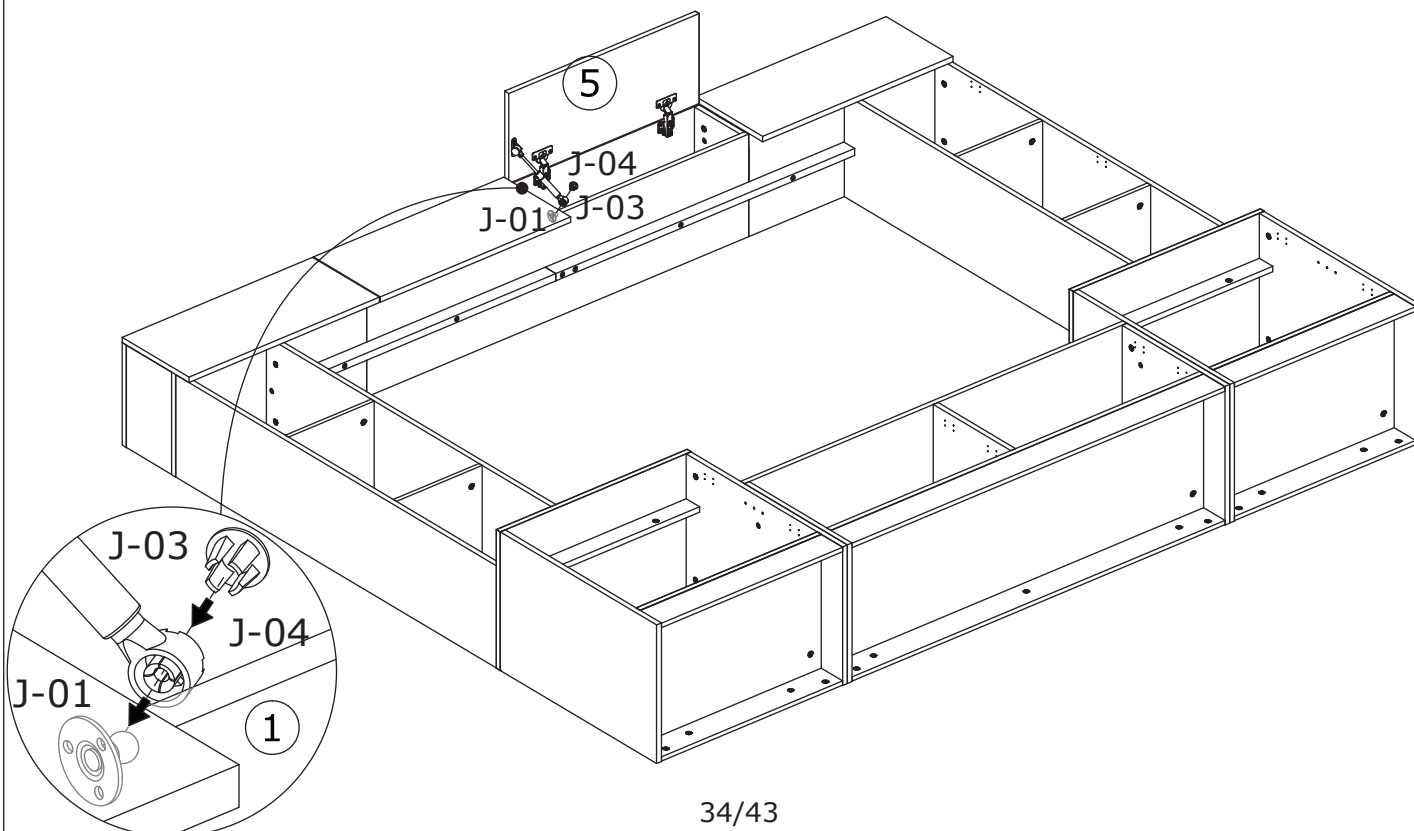

48






Fix hinge(F) to board 17 with screw(E) as shown.

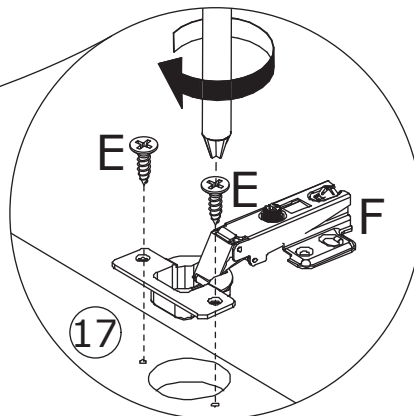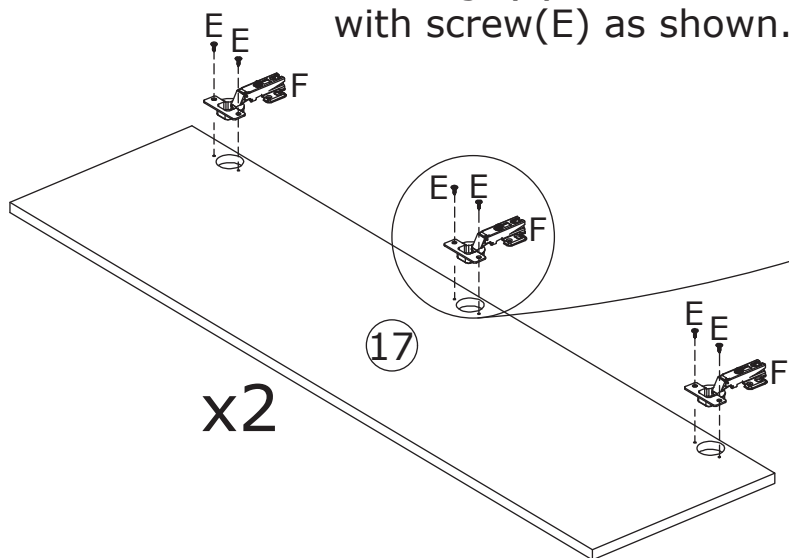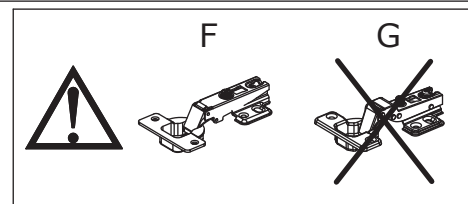

49





Assemble door 17 to board 14 and 20 by fixing hinge with screw(E) as shown.

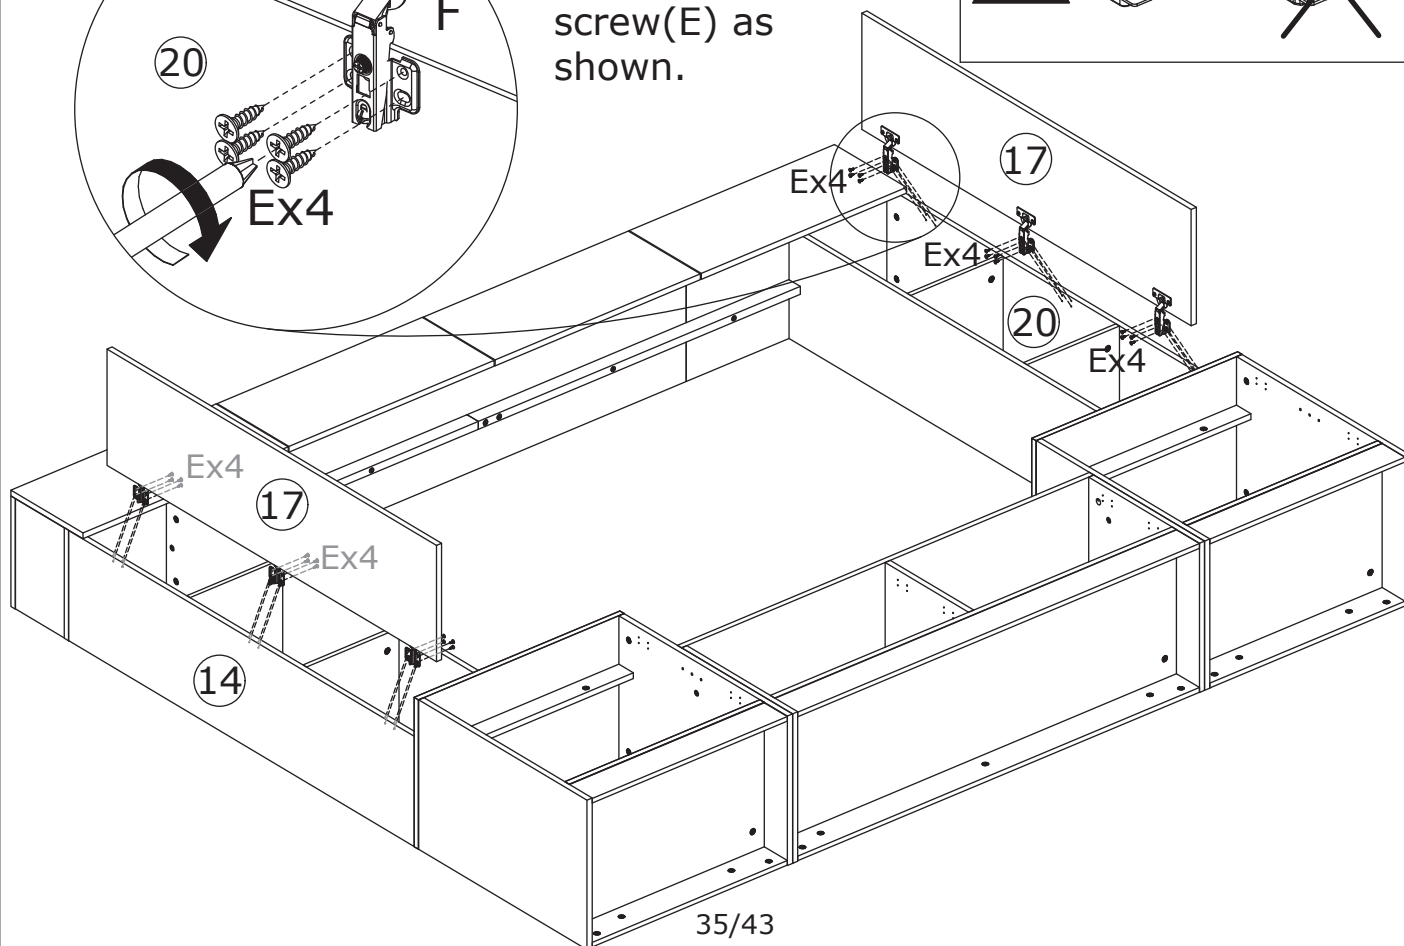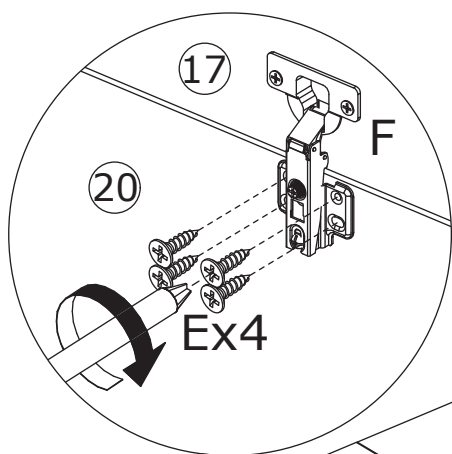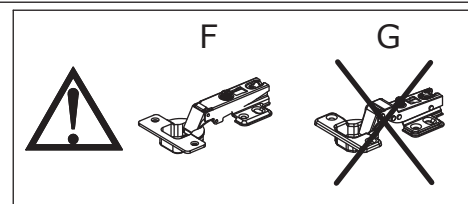


50





Fix hinge(F) to board 27 with screw(E) as shown.

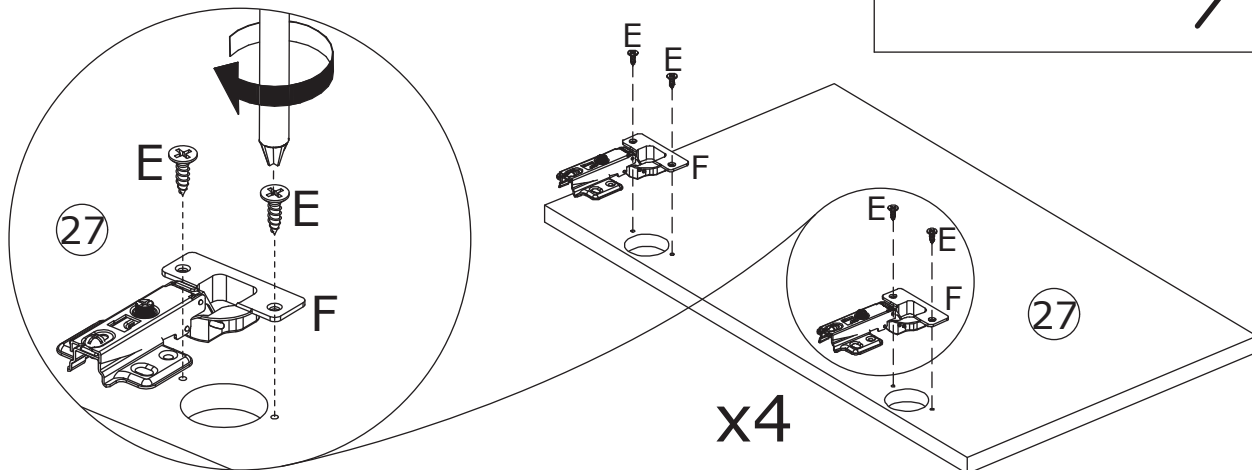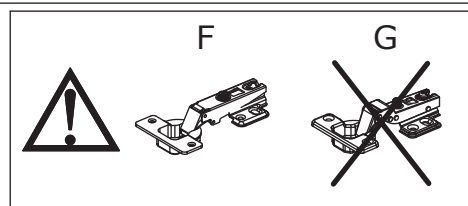



51

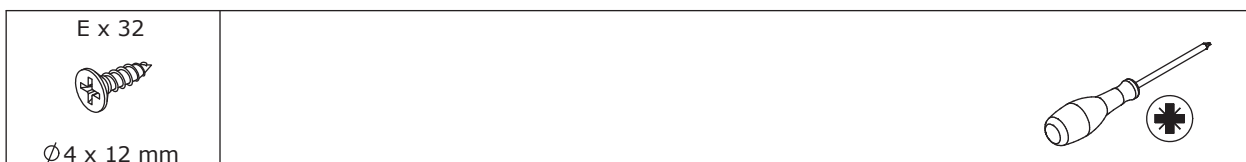




Assemble door 27 to board 22, 23, 31 and 32 by fixing hinge with screw(E) as shown.

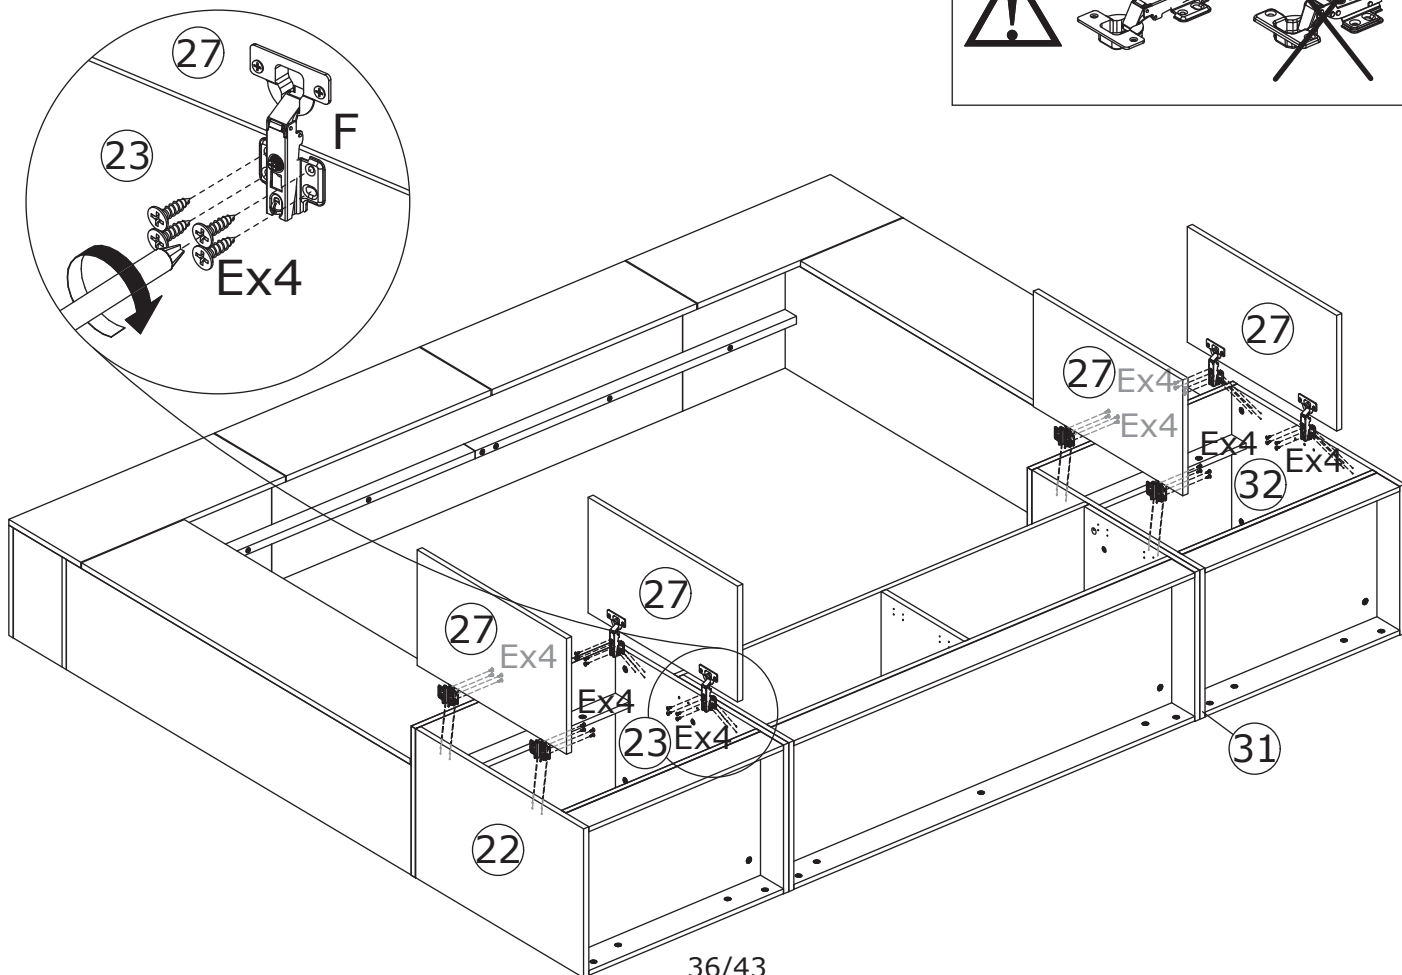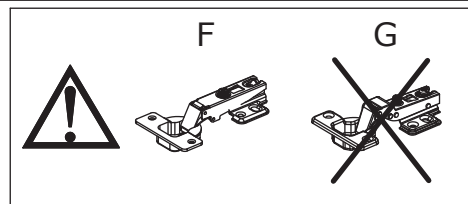


52

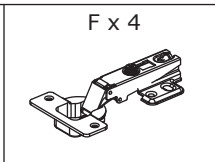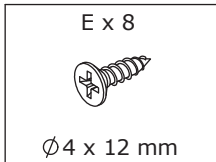




Fix hinge(F) to board 38 with screw(E) as shown.

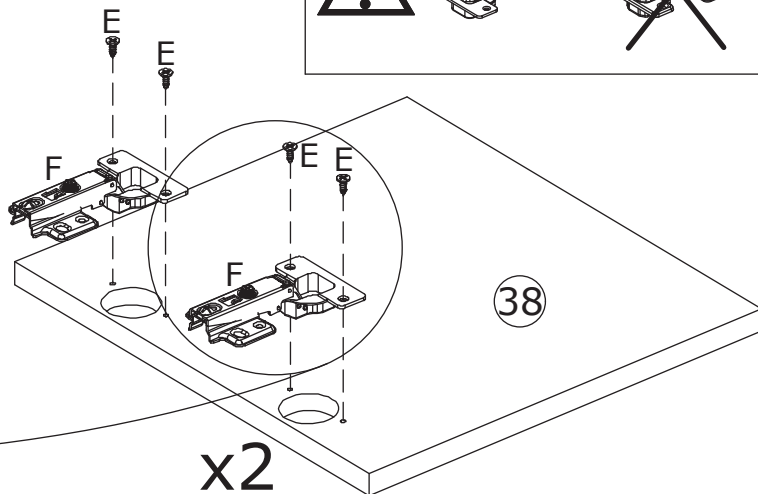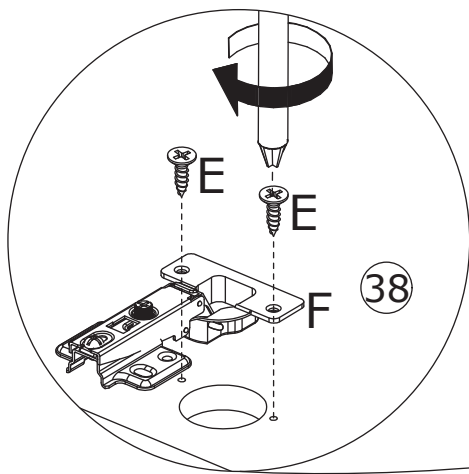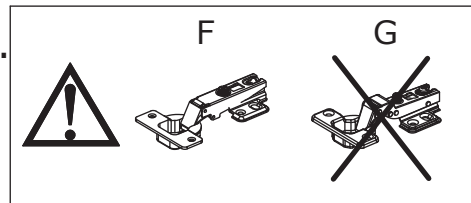

53

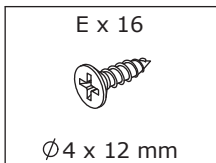

Assemble door 38 to board 34 and 36 by fixing hinge with screw(E) as shown.

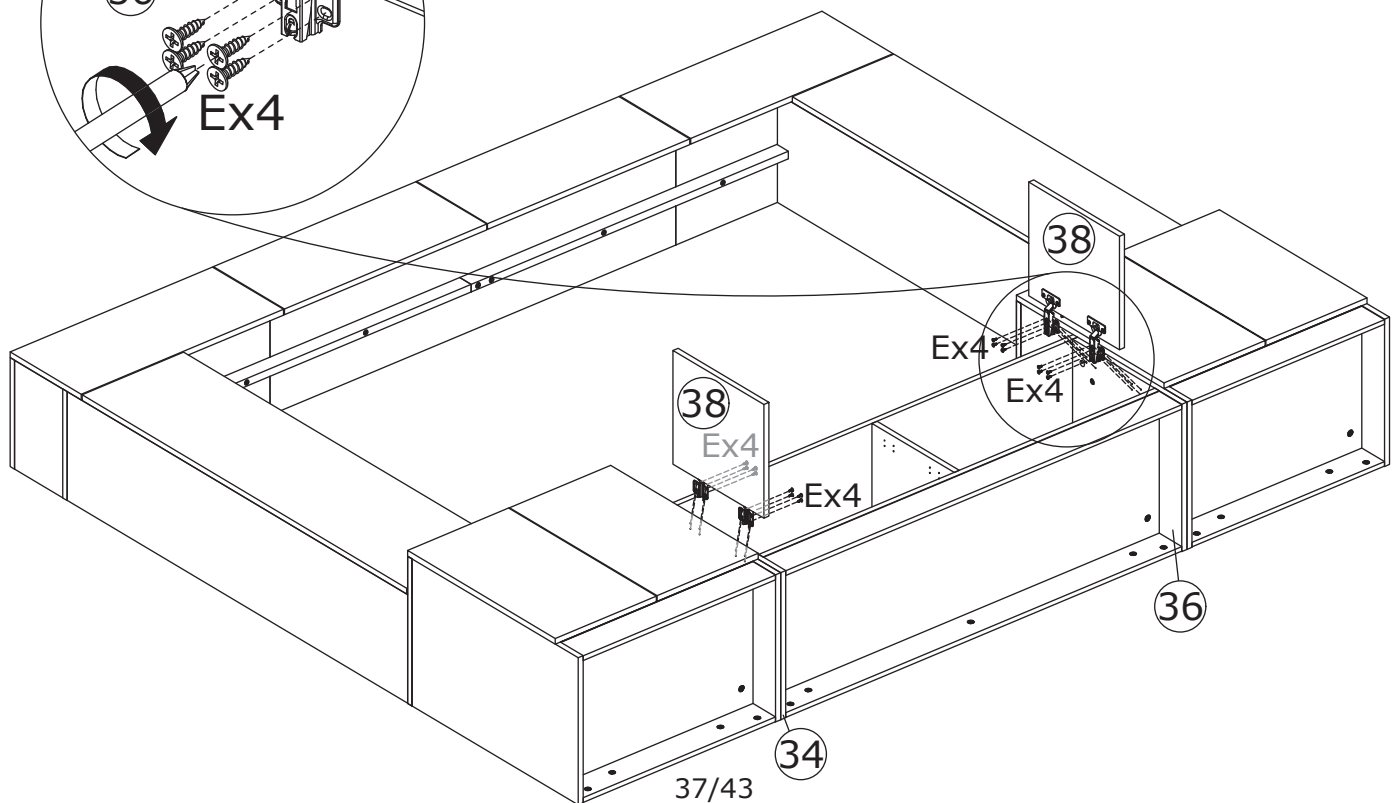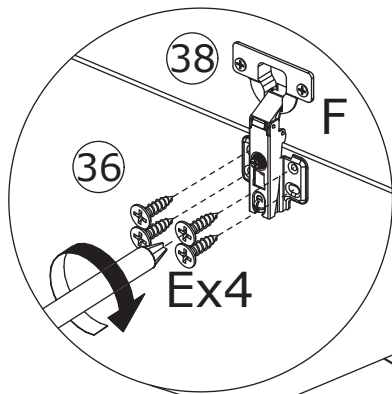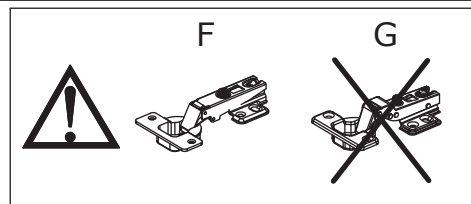


54

E x 8





Ø 4 x 12 mm

G x 4



Fix hinge(G) to board 38 and 39 with screw(E) as shown.

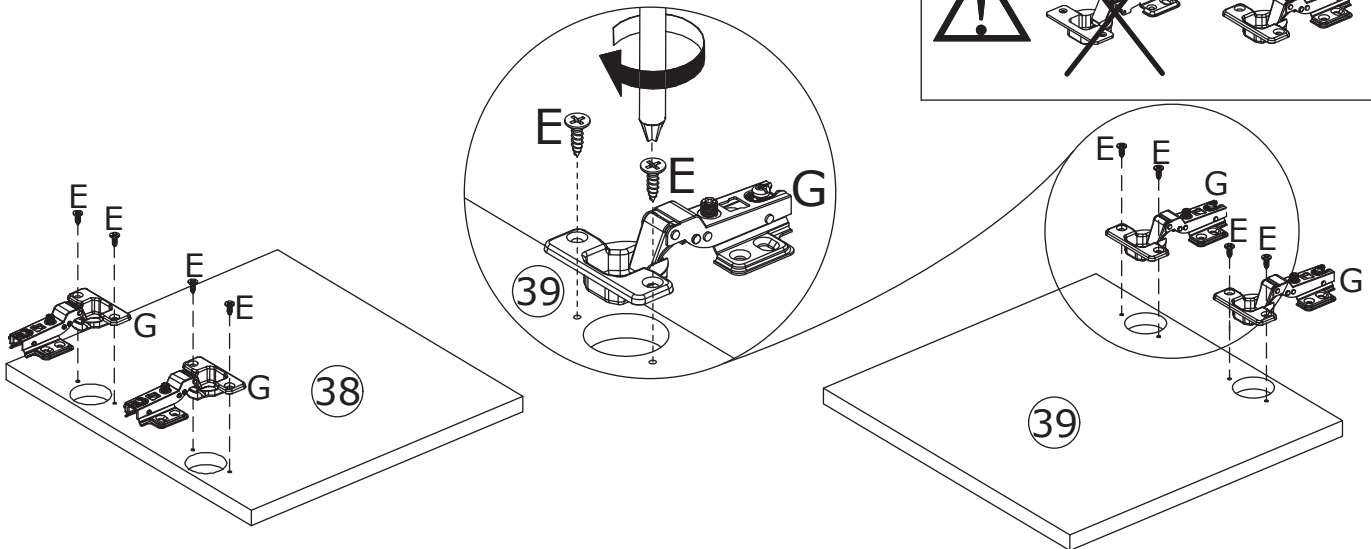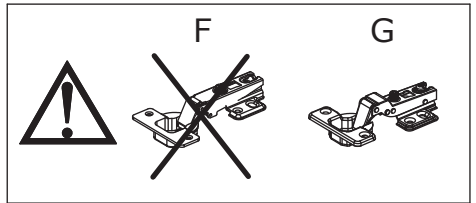


55



E x 16



Ø 4 x 12 mm




Assemble door 38 and 39 to board 35 by fixing hinge with screw(E) as shown.

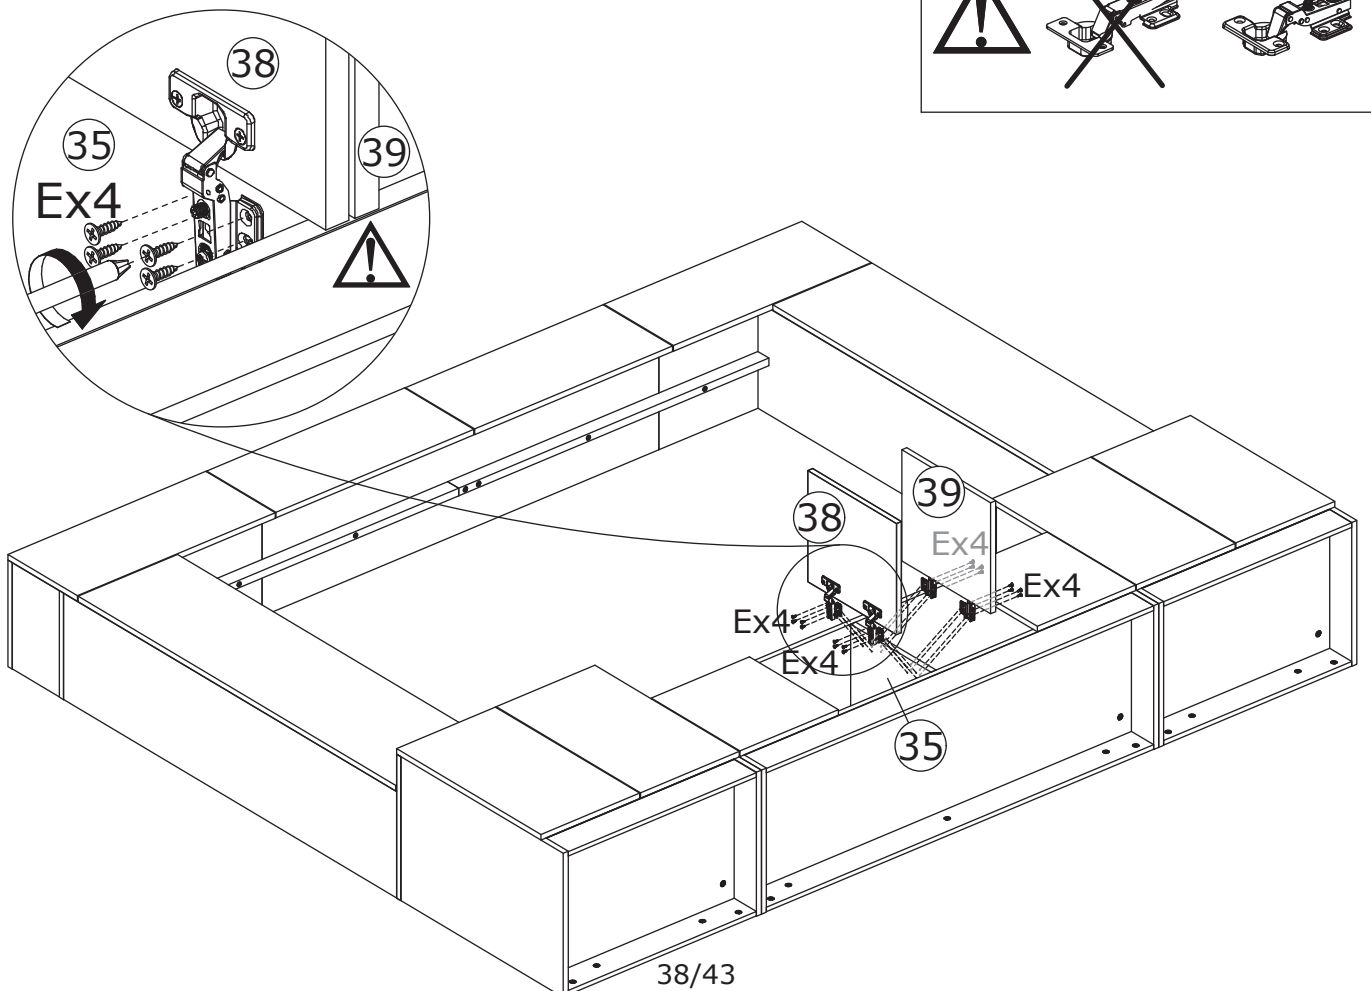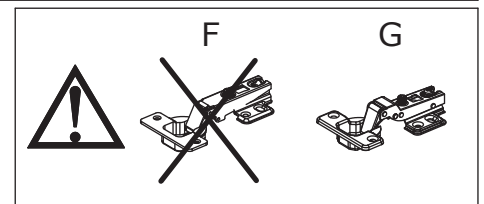


56

P x 8




Insert layer pin(P) into board 22, 23, 31 and 32, then place shelf board 25 in as shown.

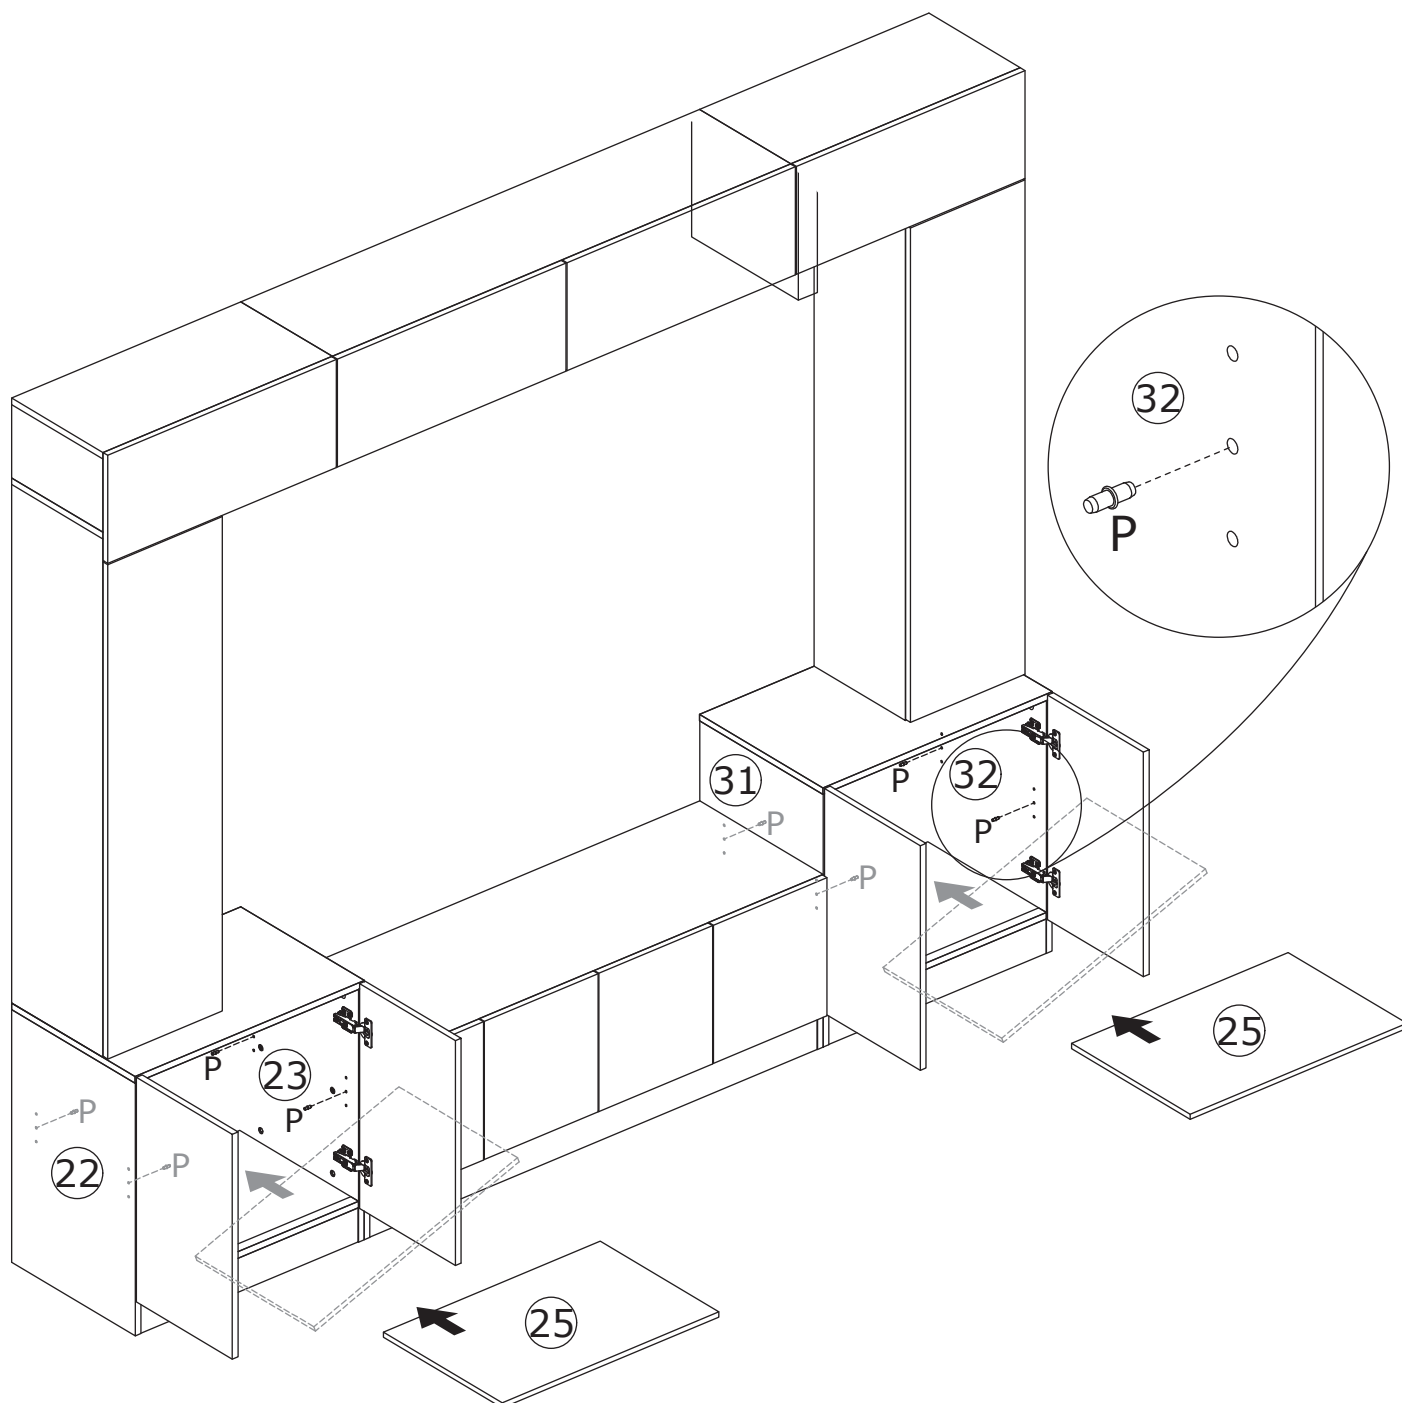



57

Q x 32






Ø3 x 16 mm

R x 32




Insert buckle(R) into back slots
and fix with screw(Q) as shown.






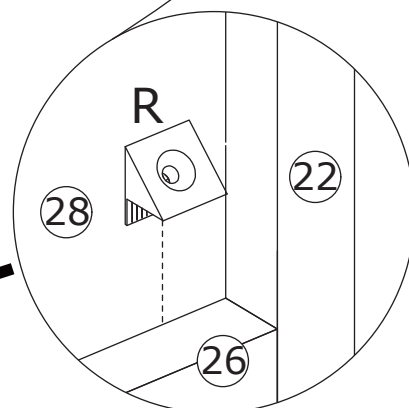
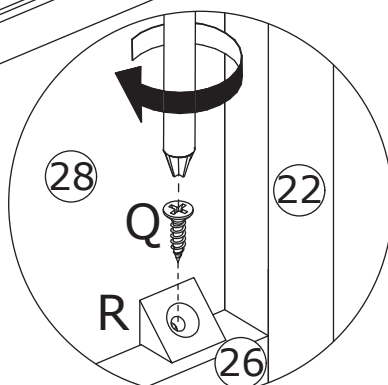
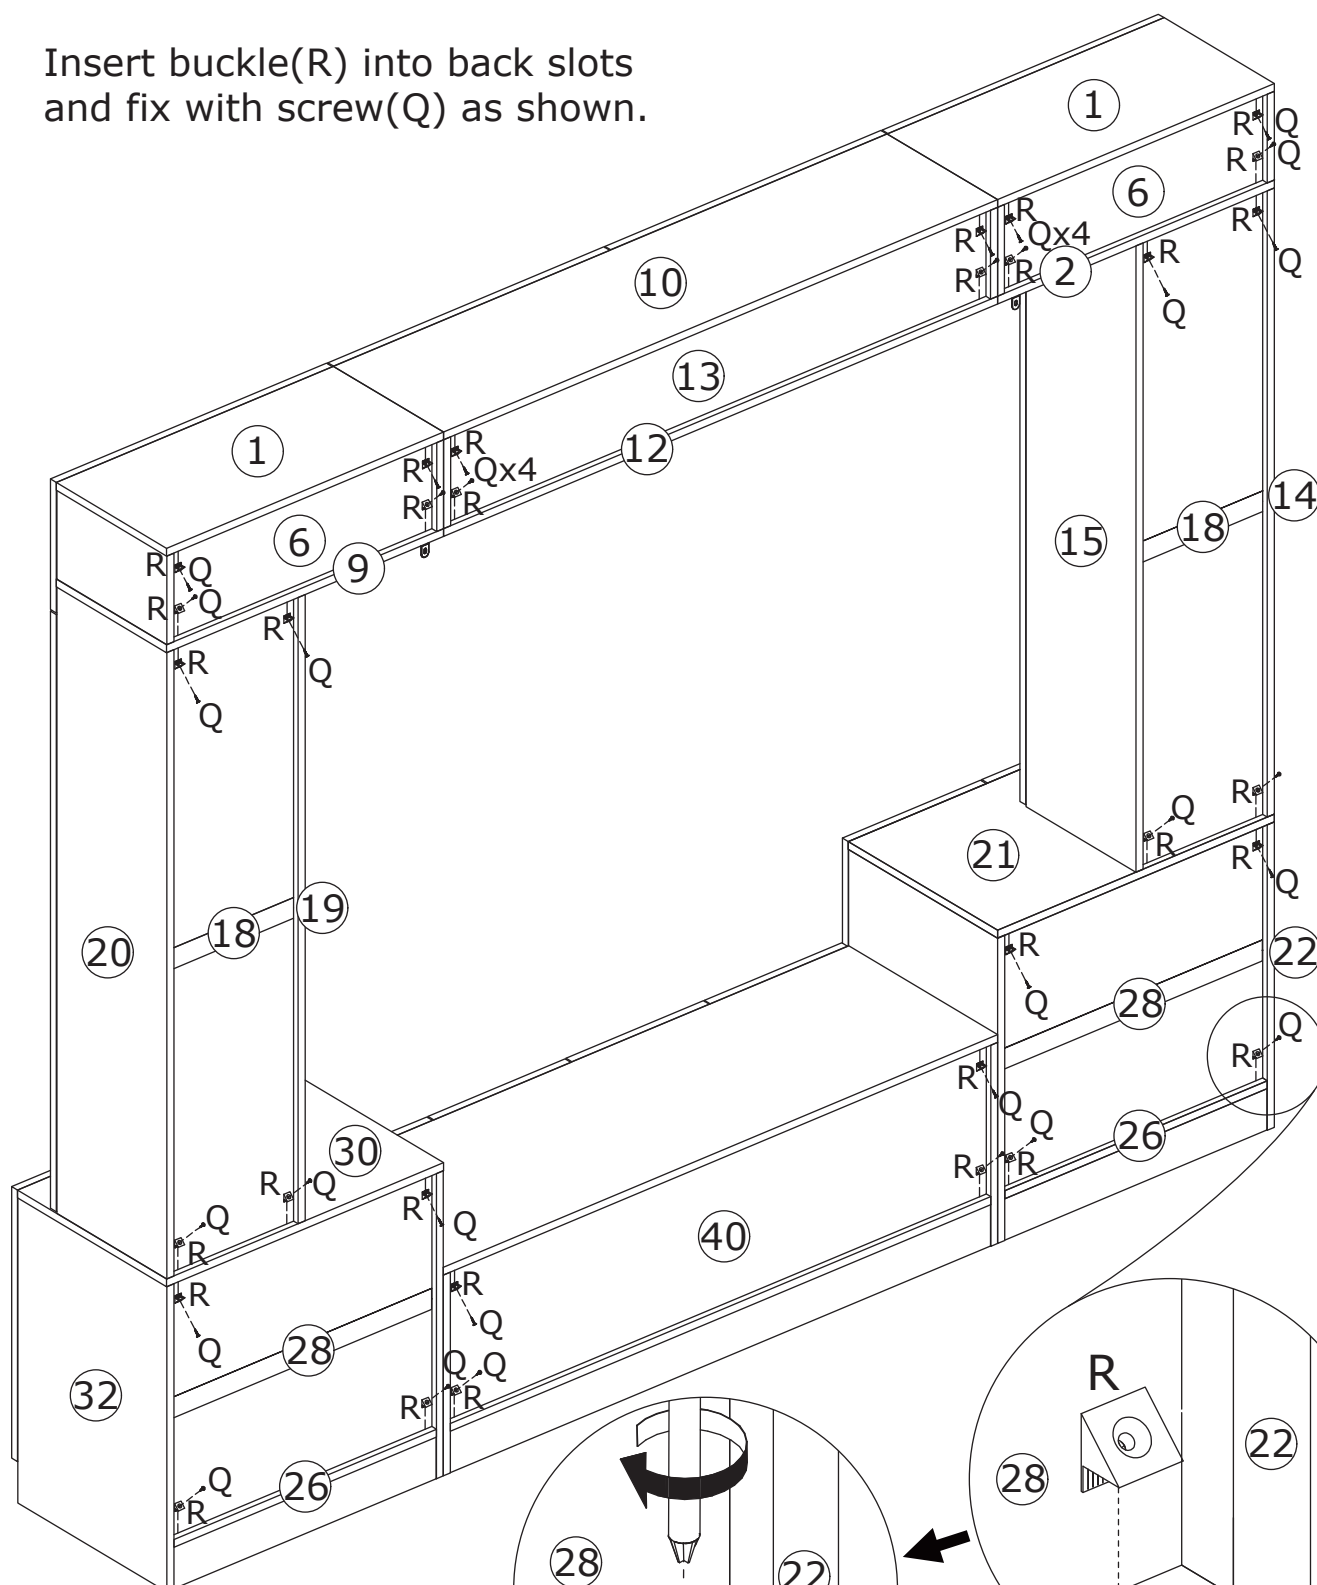


58


D x 2

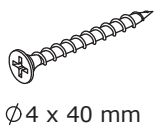


U x 2

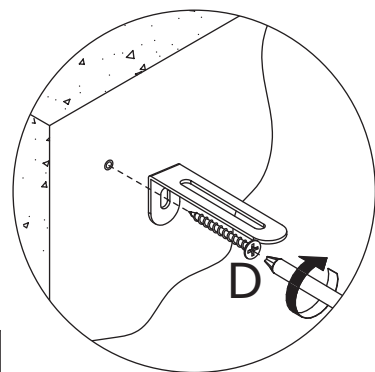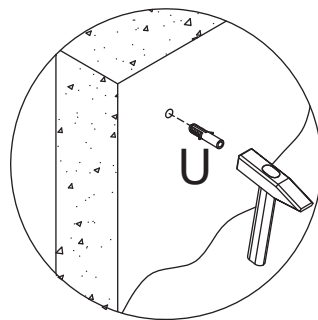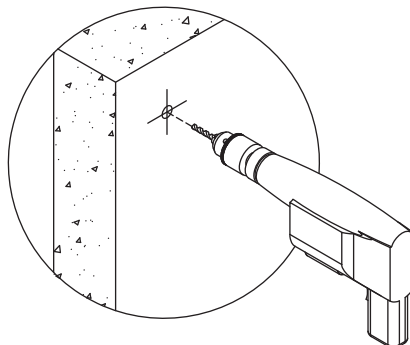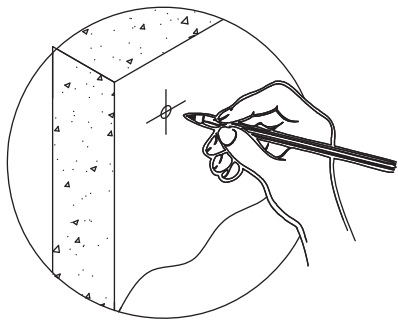












Install anti-tipping device as shown.

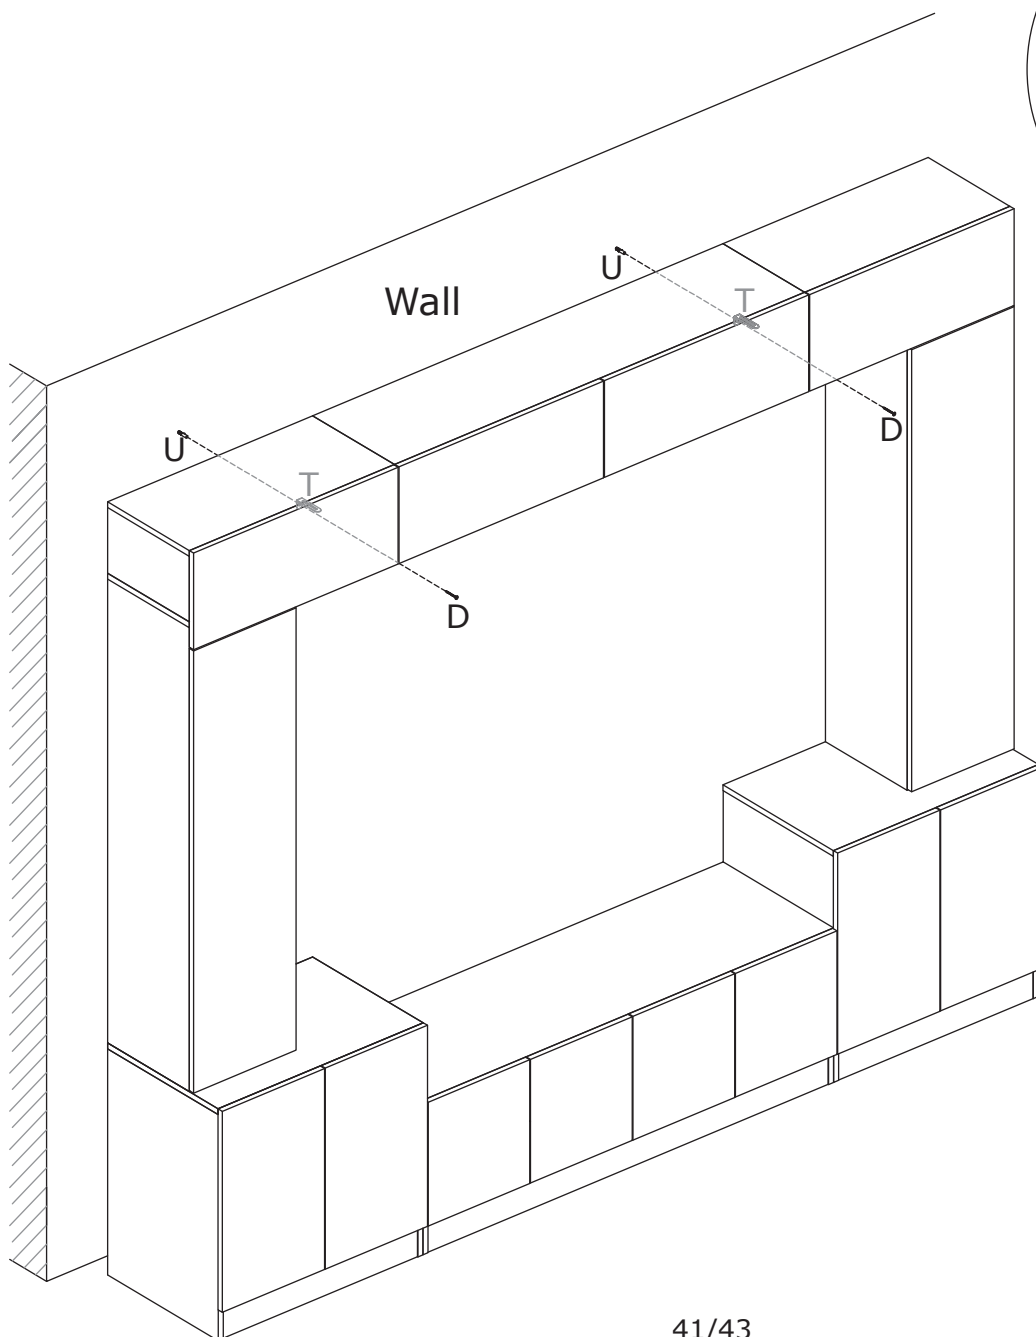

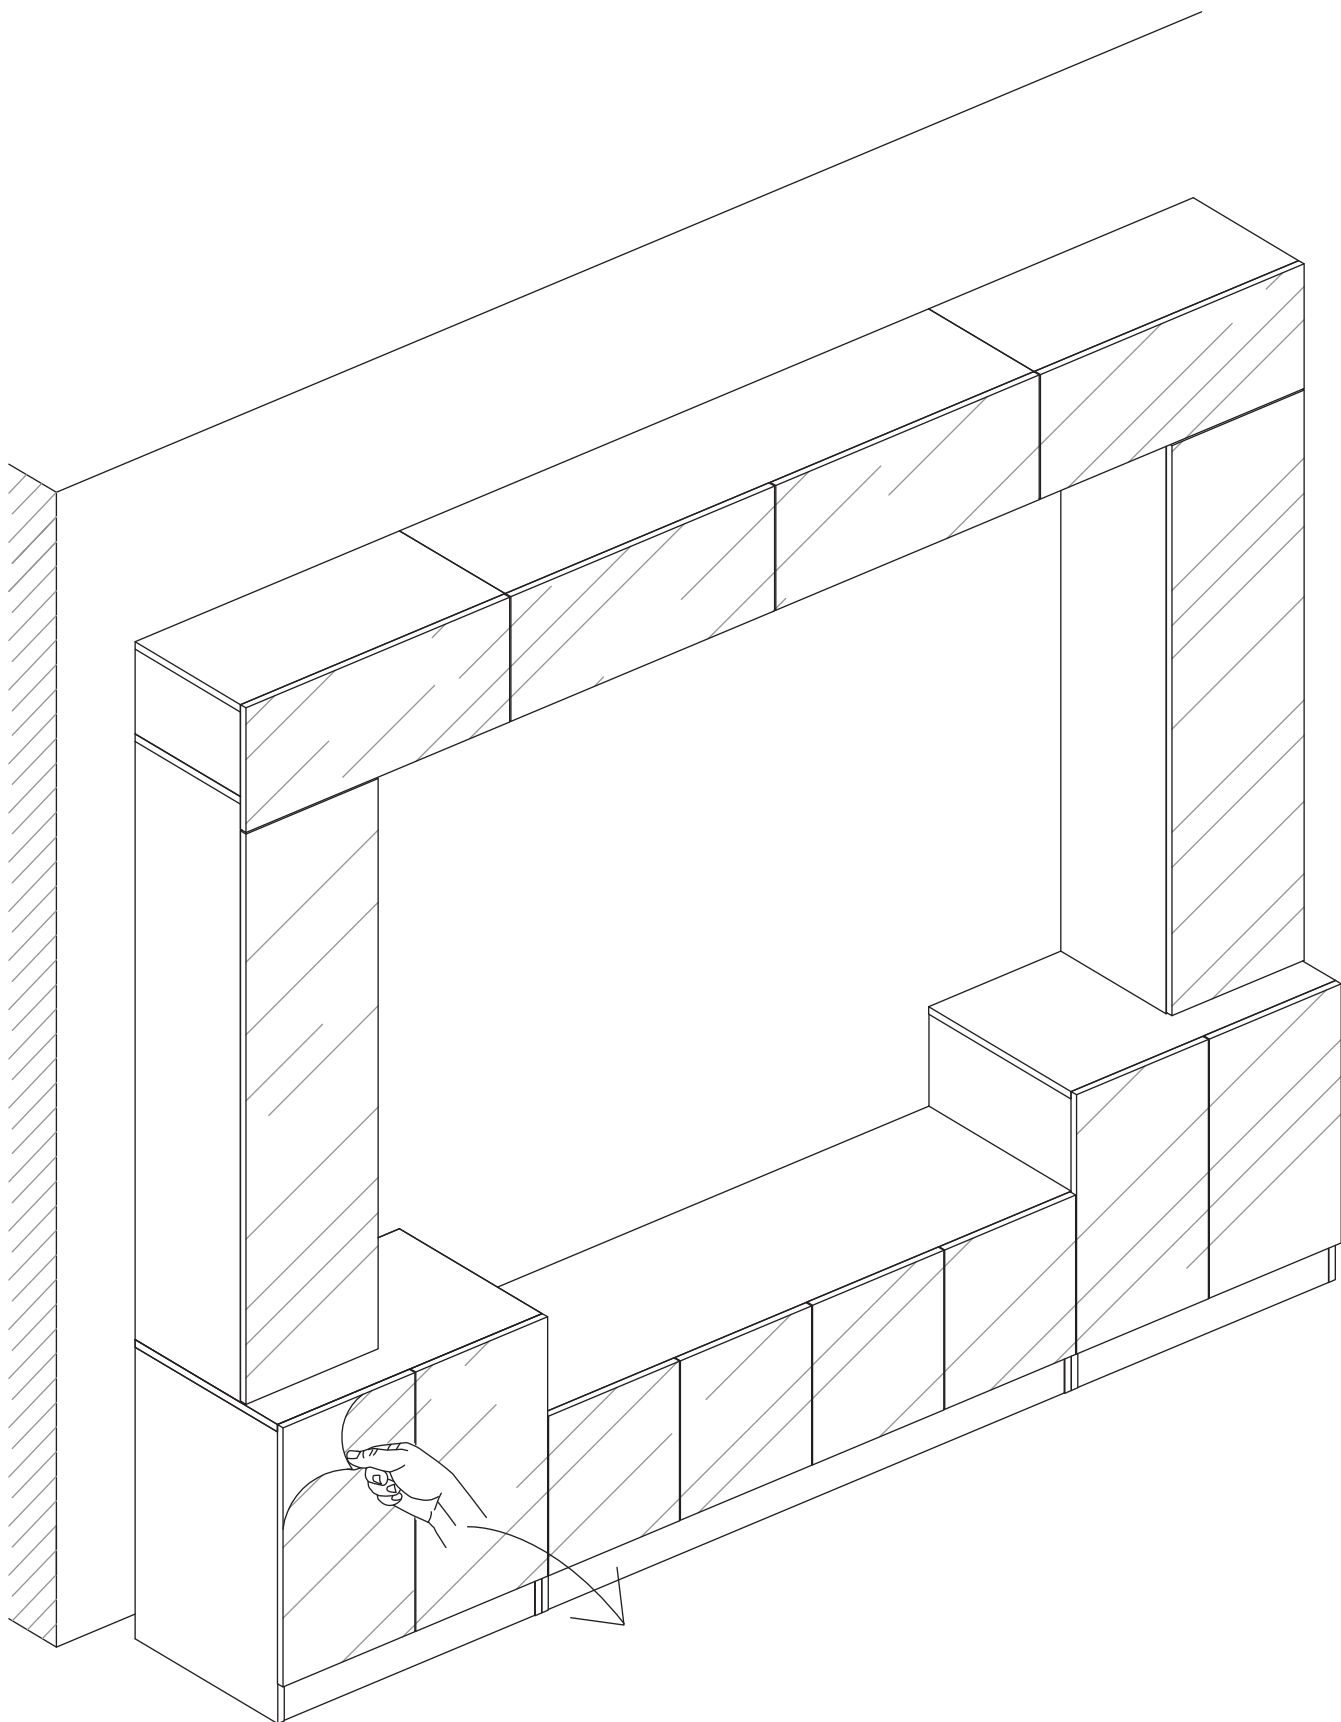

More detailed hinge adjustment mode:

- 1) Rotate out the screws connected with the cabinet counterclockwise, adjust the gap between the overall door frame and the upper and lower, and then rotate the screws clockwise after adjusting;
- 2) Rotate the screws at the end of the hinge counterclockwise to adjust the gap between the whole door frame and the cabinet before and after the adjustment, and then rotate the screws clockwise (rotate out to the movable door frame, do not need to over-rotate out);
- 3) Counterclockwise rotation of the screws in the middle of the hinge will offset the corresponding part of the rear door frame to the left, and clockwise rotation of the screws in the middle of the hinge will offset the corresponding part of the rear door frame to the right

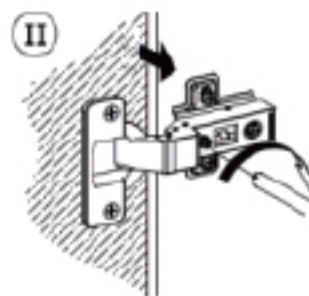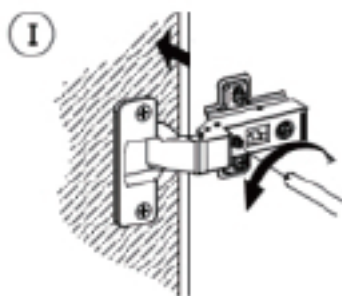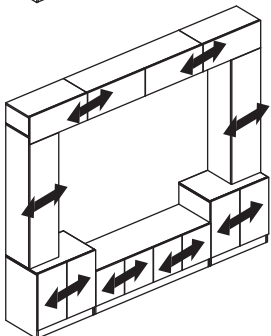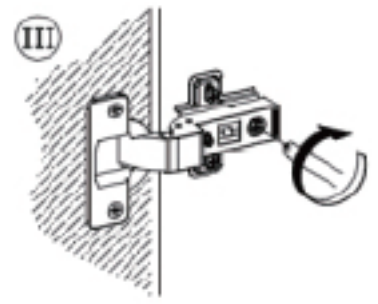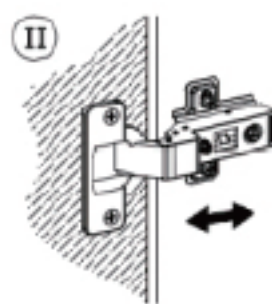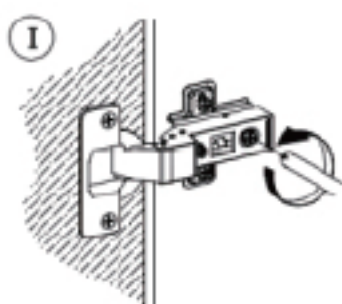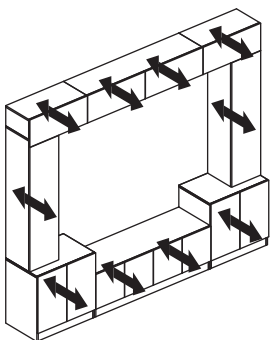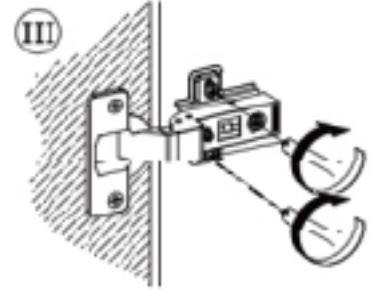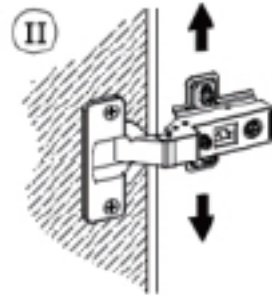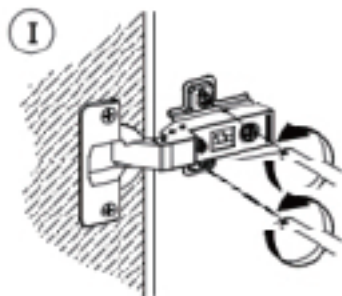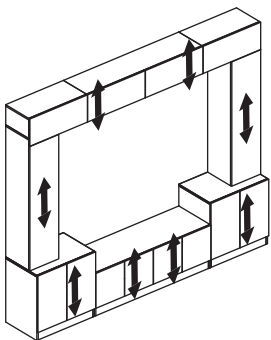

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387