

ALUMINUM FOLDING RAMP



ALUMINUM FOLDING RAMP

ASSEMBLY INSTRUCTIONS:

1. Attach the two provided securing straps to the center brace, approximately 16" from the tailgate end (on each ramp).
Wrap the loop end of each strap once around the center brace and feed the "S" hook end thru the loop.
This permanently attaches straps to the ramp. **SEE FIGURE 1.**



USE INSTRUCTIONS:

TO LOAD YOUR 4-WHEELED ATV OR LAWN TRACTOR:

1. On level ground, rest both ramps on the tailgate. **SEE FIGURE 2.** Be sure ramps are securely seated against tailgate and aligned directly to your four-wheeled ATV or lawn tractor's wheel width.
2. Hook the "S" hooks of both straps to bumper and pull on loose end of straps until straps are tight and ramps are secured to tailgate. Snap strap buckle.
3. Using an electric or manual winch, draw the ATV or lawn tractor up the ramps. **DO NOT drive the ATV or lawn tractor up the ramps.**
4. Once vehicle is in truck bed, be sure to set brake & securely tie down vehicle. Ramp can now be removed, folded up, and stored.

TO UNLOAD YOUR 4-WHEELED ATV OR LAWN TRACTOR:

1. Reverse loading procedures to unload your ATV or lawn tractor.

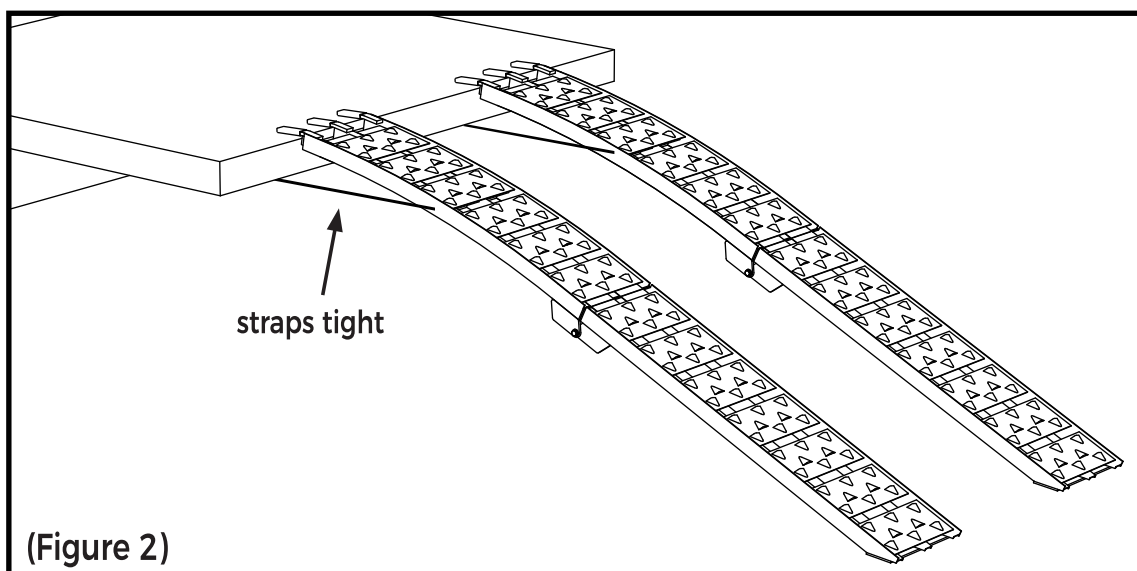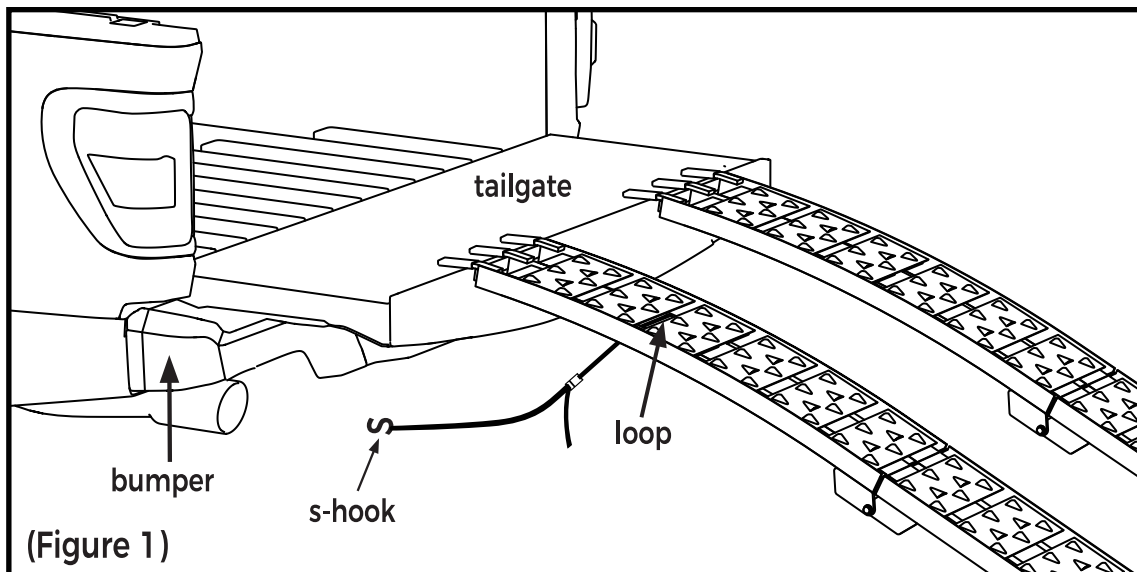

ALUMINUM FOLDING RAMP

WARNING

READ, UNDERSTAND AND FOLLOW ALL ASSEMBLY, INSPECTION, & USE INSTRUCTIONS PROVIDED BEFORE EACH USE. FAILURE TO FOLLOW ALL INSTRUCTIONS, WARNINGS & LOAD CAPACITY RATINGS COULD RESULT IN SERIOUS INJURY OR DEATH.

DO NOT USE AN ATV ON THIS RAMP IF THE ATV HAS SNOW CHAINS OR TIRES. CHAINS WILL CAUSE DAMAGE TO YOUR RAMP AND IS HAZARDOUS.

BE CAREFUL OF PINCH POINTS AT RAMP HINGE LOCATIONS.

BE CAREFUL OF PINCH POINTS AT RAMP TAB LOCATIONS WHILE SECURING RAMP TO TAILGATE.

Safety straps must be securely hooked up to the vehicle to prevent ramps from sliding off the tailgate. Start the engine only after everything is secure. Keep your foot on the brake to avoid serious injury. Be sure the ramp is centered to avoid misalignment.

If loading or unloading from a trailer, make sure trailer is firmly coupled to tow vehicle.

MAXIMUM USABLE HEIGHT (ground to load position) is no more than half the length of the ramp.

Be sure ramps are properly placed and secured as described in loading instructions.

Do not use on soft surfaces or unlevel ground.

Rear engine equipment should be loaded in reverse to avoid the front end lifting up.

Do not exceed the capacity of your loading surface (i.e. tailgate, bumper).

If unknown, consult the manufacturer to find load capacities.

If loading or unloading from a trailer, make sure the trailer is properly coupled to tow vehicle.

Never stand in the path of equipment when loading/unloading with the ramp, and keep bystanders away from the ramps.

Do not step between rungs. This may cause a person to fall through and possibly result in serious bodily injury.

Ramps are intended for loading/unloading equipment onto a trailer or pickup truck. **Do not use ramp sections as a ladder, bridge, scaffolding, or for any other purpose.**

ACCESS

Use on level ground and securely attach ramp to truck.

Be careful of pinch points at ramp hinge locations.

Be careful of pinch points at ramp tab locations while securing ramp to tailgate.

Inspect before each and every use to be sure there is no product damage or loose/missing bolts & hardware. Lubricate hinges as necessary.

NEVER...

Never exceed load capacity of 750 lbs per ramp (1,500 lbs as a pair), evenly distributed over four wheels.


Never use a damaged ramp; replace with new one.

Never use while under the influence of alcohol or drugs.

Never load ATV on ramp with any gear on racks of ATV.

Never use carelessly — Think Safety!

Never use in slippery conditions.

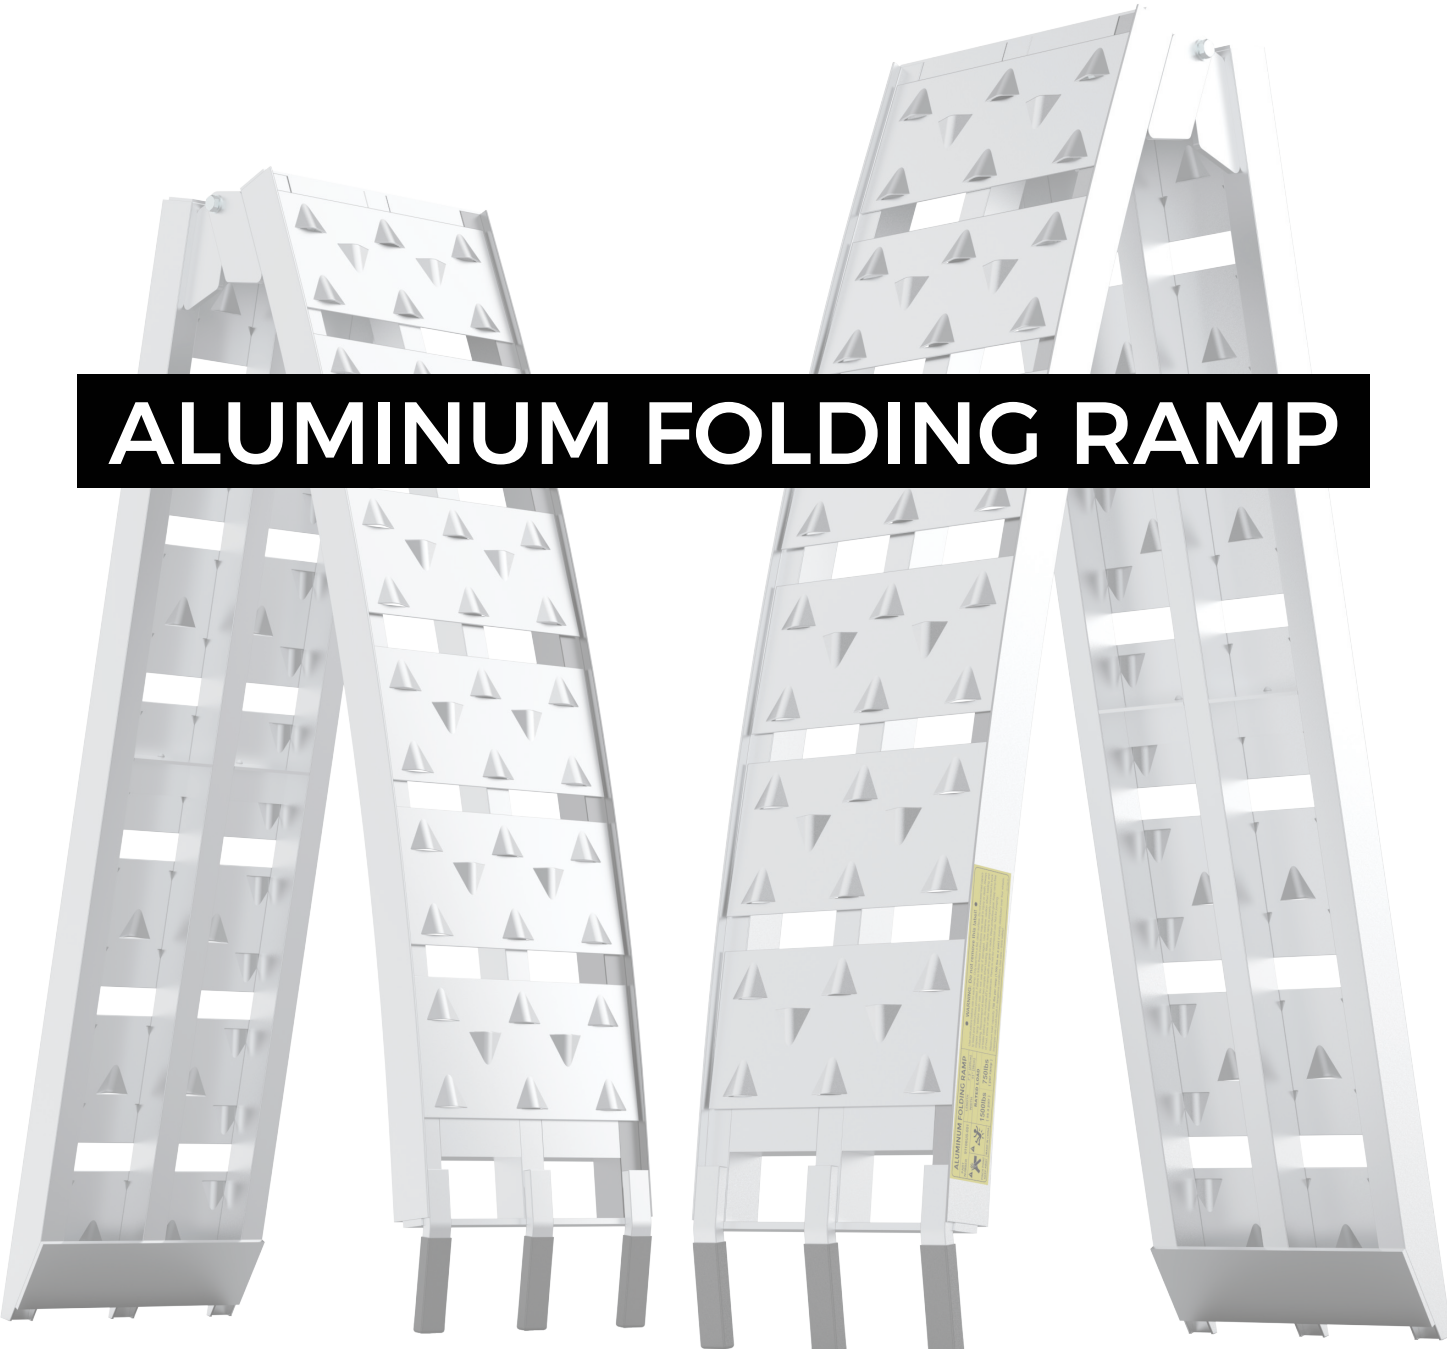

ALUMINUM FOLDING RAMP