
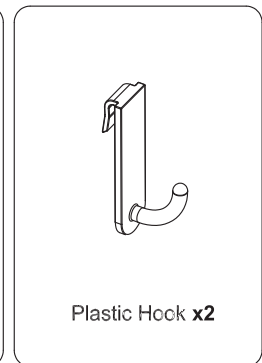
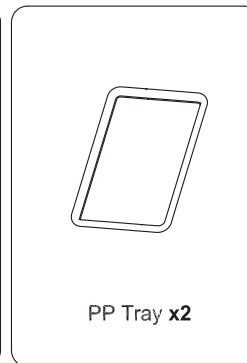
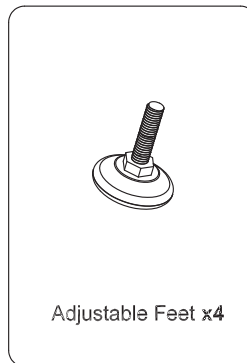
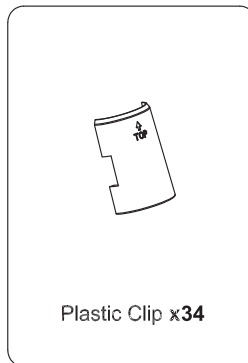
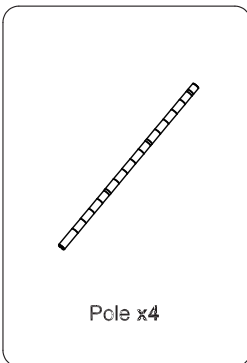
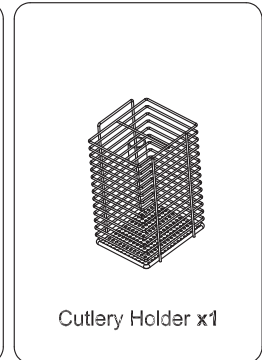
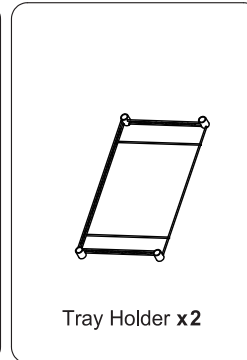
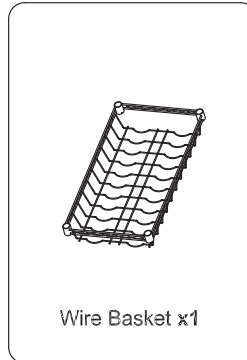
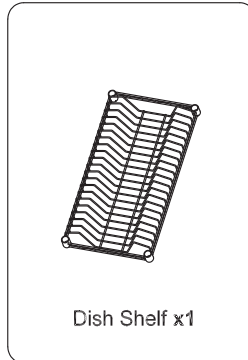


happiness

ITEM#: DSH1002A

Installation Manual


Components

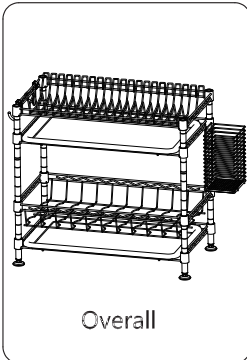

Installation Guide


Step 1:

Screw Adjustable Feet into the bottom of the Poles clockwise. Snap one pair of Plastic Clips on the bottom grooves of each pole. Make sure that the arrow of all plastic clips should be pointed up.

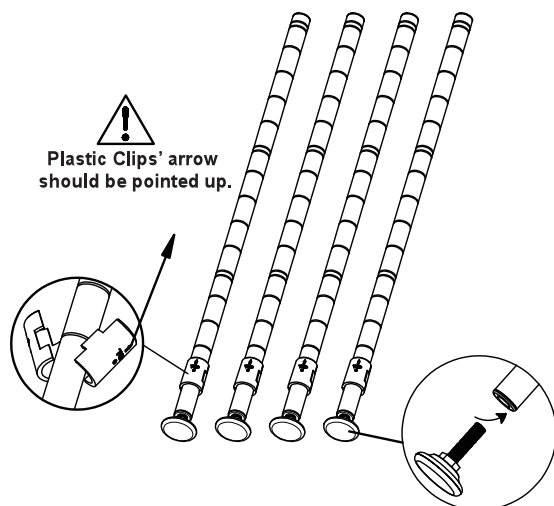


Step 2:

Make sure you have the first Tray Holder in correct way up and slide it from the top of each pole down onto the plastic clips until there is snug fit.

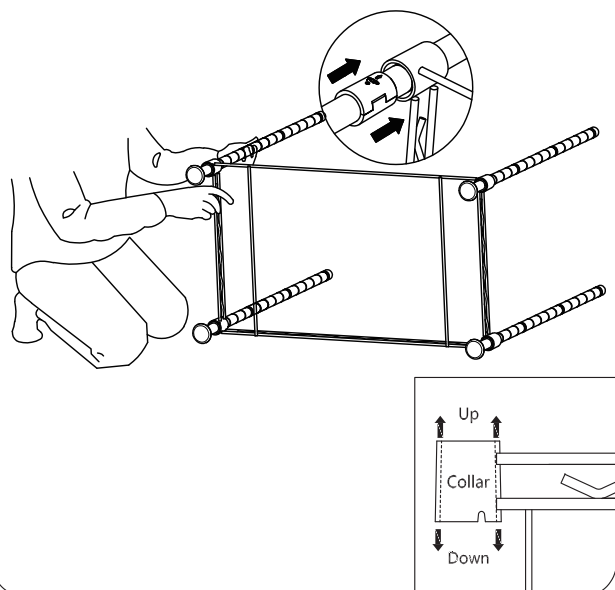


Step 3:

Set the rack upright. Refer to Step ①, ② to snap a pair of plastic clips on 4-section (around 4 inches) higher grooves of each pole. Then slide the Wire Basket from the top of each pole down onto the plastic clips.

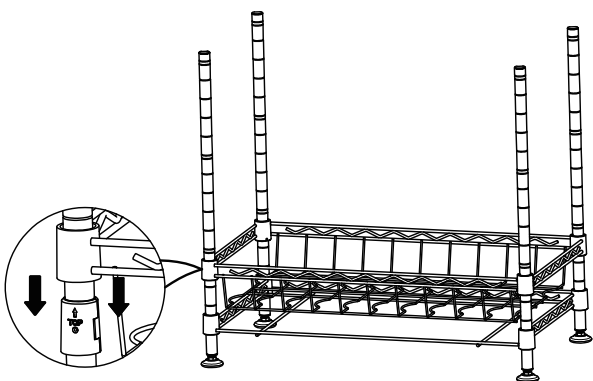


Step 4:

Snap one pair of plastic clips on the groove of one pole and assemble the Cutlery Holder pictured below.

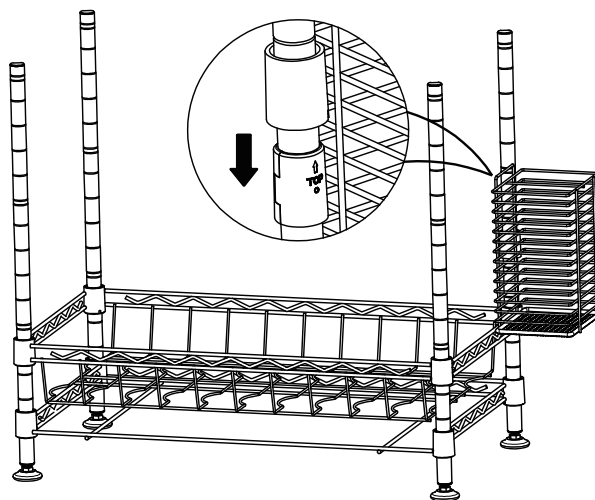

Step 5:

Refer to Step ①, ② to snap a pair of plastic clips on the same grooves of each pole and assemble the second tray holder first. Then snap a pair of plastic clips on the top grooves of each pole. Make sure that the top plastic clips' position is around 3 inches higher than that with the top tray holder assembled. Assemble the Dish Shelf on the top of the poles. Screw the adjustable feet to attain proper leveling for the rack.

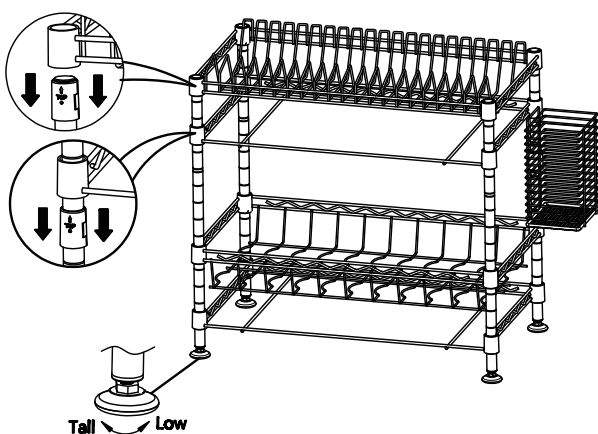

Step 6:

Respectively slide both PP Trays into each tray holder. And hang up both Plastic Hooks onto the side frame of the dish shelf as the picture. Now the kitchen dish rack has been completely assembled.

