

6 in1 Swing Set

FOR AGES:

3-12

WEIGHT LIMIT:



50KG
/per seat

TO BUILD:



TIME:

1-2H





HOW-TO
Paper
instructions



WARNING: ONLY FOR DOMESTIC OUTDOOR USE

To guarantee safety. Please give special attention to the assembly, safety, and care instructions detailed in this document.

PARTS LIST

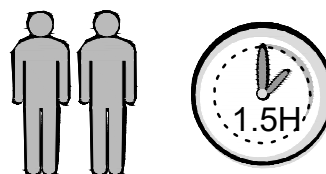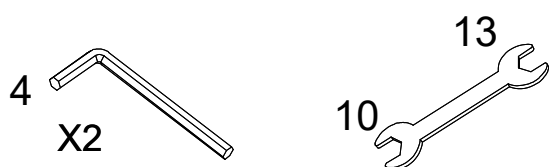


P-ZP x1




YC51x2




YB454 x1




YB453 x1



P/QK x1



YB452x1



YD1 x2




YB211x4



YBB4 x4



P/DB x1




YC52 x2



YC34 x1




YBB5 x2



YB19 x2



P/PT x1



YC50 x2



YD2 x4



YB20 x2



YB22 x2



YC3 x8



YN1 x4



Ø 8/M6x50

YN2 x12



Ø 8/M6x45

YN4 x4



Ø 8/M6x20

YF2 x2



M 8x50

YF11 x8



M 6x25

YE1 x2




M 6x35

YE5 x2



M 8x78

YG2 x10



M 8

YE12 x8




M 6x40

YG13x36



M 6x20

YG1 x2



M 6

YD10x8



Ø 6

YD11 x28



Ø 8

YD12x2



Ø 10

YL1 x28



Ø 8

YL2 x8



Ø 6

YD3 x6



Safety and Assembly Instructions

IMPORTANT

READ AND FOLLOW ALL SAFETY INFORMATION AND INSTRUCTIONS, KEEP FOR FUTURE REFERENCE



WARNING! CHOKING HAZARD-SMALL PARTS, NOT FOR CHILDREN UNDER 3 YEARS.

WARNING! MAXIMUM WEIGHT SHOULD NOT EXCEED 150KGS.

WARNING! DO NOT USE WITHOUT ADULT SUPERVISION!

WARNING! ADULT ASSEMBLING REQUIRED!

ESSENTIAL INFORMATION

- Recommended for children 3+ years
- Do not leave child unattended while in use
- CAUTION: Use only under adult supervision
- Good safety practices should be followed at all times
- Read all instructions before using this product.

Intended solely for family and domestic use, not for a commercial playground or daycare. Two adults needed for assembly. Maximum weight capacity: 150KGS.

Hanging hardware not included. Ideally, the swing body should be hung over grass, sand, wood chips, or other soft surfaces. Under no circumstances should it be hung over concrete, asphalt, or other hard surfaces. Distance from ground should not exceed 40cm; the maximum fall height should not be more than 46cm. Two S hooks are attached to the rope to allow for adjustment of the rope length.

Please be sure to examine the ropes regularly to check for wear. Rope will, in time, degrade. If the color of the rope has become pale, frays easily, or gives off a powdery material when rubbed between the fingers, we recommend you replace the rope.


Equipment should be hung in such a way that a distance of at least 2m is clear on either side. Can be hung on an A-frame or swing set or on a tree limb of a diameter of at least 25cm.

WARNING! Small parts for assembly by an adult.


Tools Required (included in the packaging)



Swing Assembling

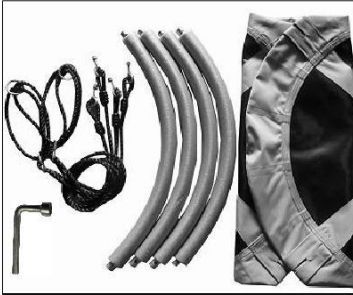

1. Swings arrives in 4 poles, and 2 hanging ropes, a swing mat for assembly.

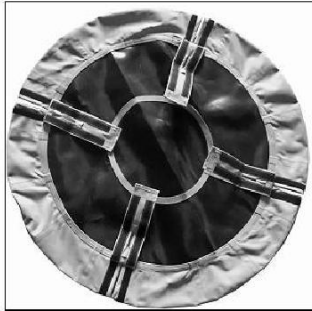

2. Put the swing mat on the floor, and open the 4 velcro covers as shown.



3. Insert the curved frame pole with foam into the sleeve opening as shown.



4. Put the tube like this.



5. Put 2nd pole to the sleeve, small socket to the big socket of the 1st pole, and connect it.



6. Repeat on each side so it folds in half like diagram shown



7. Connect remaining frame poles to form a full circle.



8. Insert the rope with rings through the slit in velcro



9. Unscrew the nut and washer from the eyelet of bolt.






10. Insert the eyelet bolt go through the frame pole hole.



11. Attach the washer and nut to the eyelet bolt.

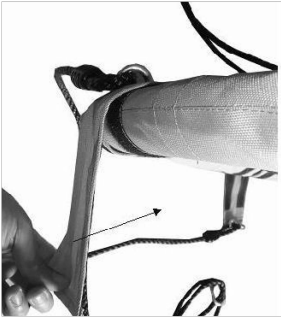

12. Using the wrench to tighten the nut onto the eyelet bolt.

		
<p>13. Close the velcro cover and continue this step on the next hole.</p>	<p>14. Top looking and appearance</p>	<p>15. Assemble finished, and ready for swing.</p>

Tent Assembling


1. Lay the cover on swing surface. The four openings are facing to four hanging ropes.



2. Lock the buckle on the bottom of the opening. Repeat this 3 times one by one.



3. Pull the rope and pass through the ring on top of the swing. Then go through the black plastic buckle on the rope like pictures shows. And repeat it for the other rope.

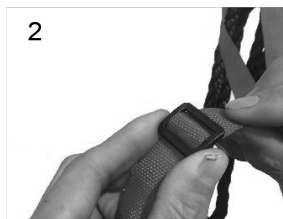

4. The length of the rope is adjustable. Adjust it to a suitable height, then the cover is finished.



Ensuring Safety of the Swing

Clearance distance should be 4m around the swing.

A fall onto a hard surface can result in serious injury to the equipment user.

Do not use the equipment until properly installed.

This swing is not to be used in any other manner other than its intended use.

Adult supervision is required.

Adults should verify that the hanging ropes are secured and cannot be looped back on the swing.

It is important for adults to instruct children to:

- Dress appropriately while using the swing (avoid ponchos, scarves, and other loose-fitting clothing that is potentially hazardous)
- Sit in the center of the swing with full weight on the seat if swinging alone
- Avoid swinging empty seats
- Do not lean heavily on the sides of tent
- Never lean on the gate of tent

It is important for adults to instruct children **NOT to**

- Walk close to, in front of, behind, or between moving items
- Twist ropes or loop them over the top support bar since such action may reduce the strength of the rope
- Get off the sing while it is in motion
- Climb on the swing when it is wet.
- Attach additional items to the swing that might cause a strangulation hazard.
- Wear a bicycle or sport helmet while on the swing.

Maintaining the Swing


At the beginning of the each play season, adults should:

- Tighten all hardware.
- Tighten all the buckles of tent
- Check all protective coverings on pipes, edges, and corners, Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seat, ropes for wear, rust, or other deterioration, Replace as needed. The hardware used for this swing(binding post, screw, S hook, lock washer, flat washer, and metal ring) can be found at local hardware store.

ASSEMBLY INSTRUCTIONS

STEP 1


YBB4 x4
 YB211 x4
 P/QK x1
 YB454 x1
 YB453 x1
 YB452 x1
 YN1 x4
 YN2 x12
 YG13 x16
 YD1 x2
 YL1 x16
 YD11 x16

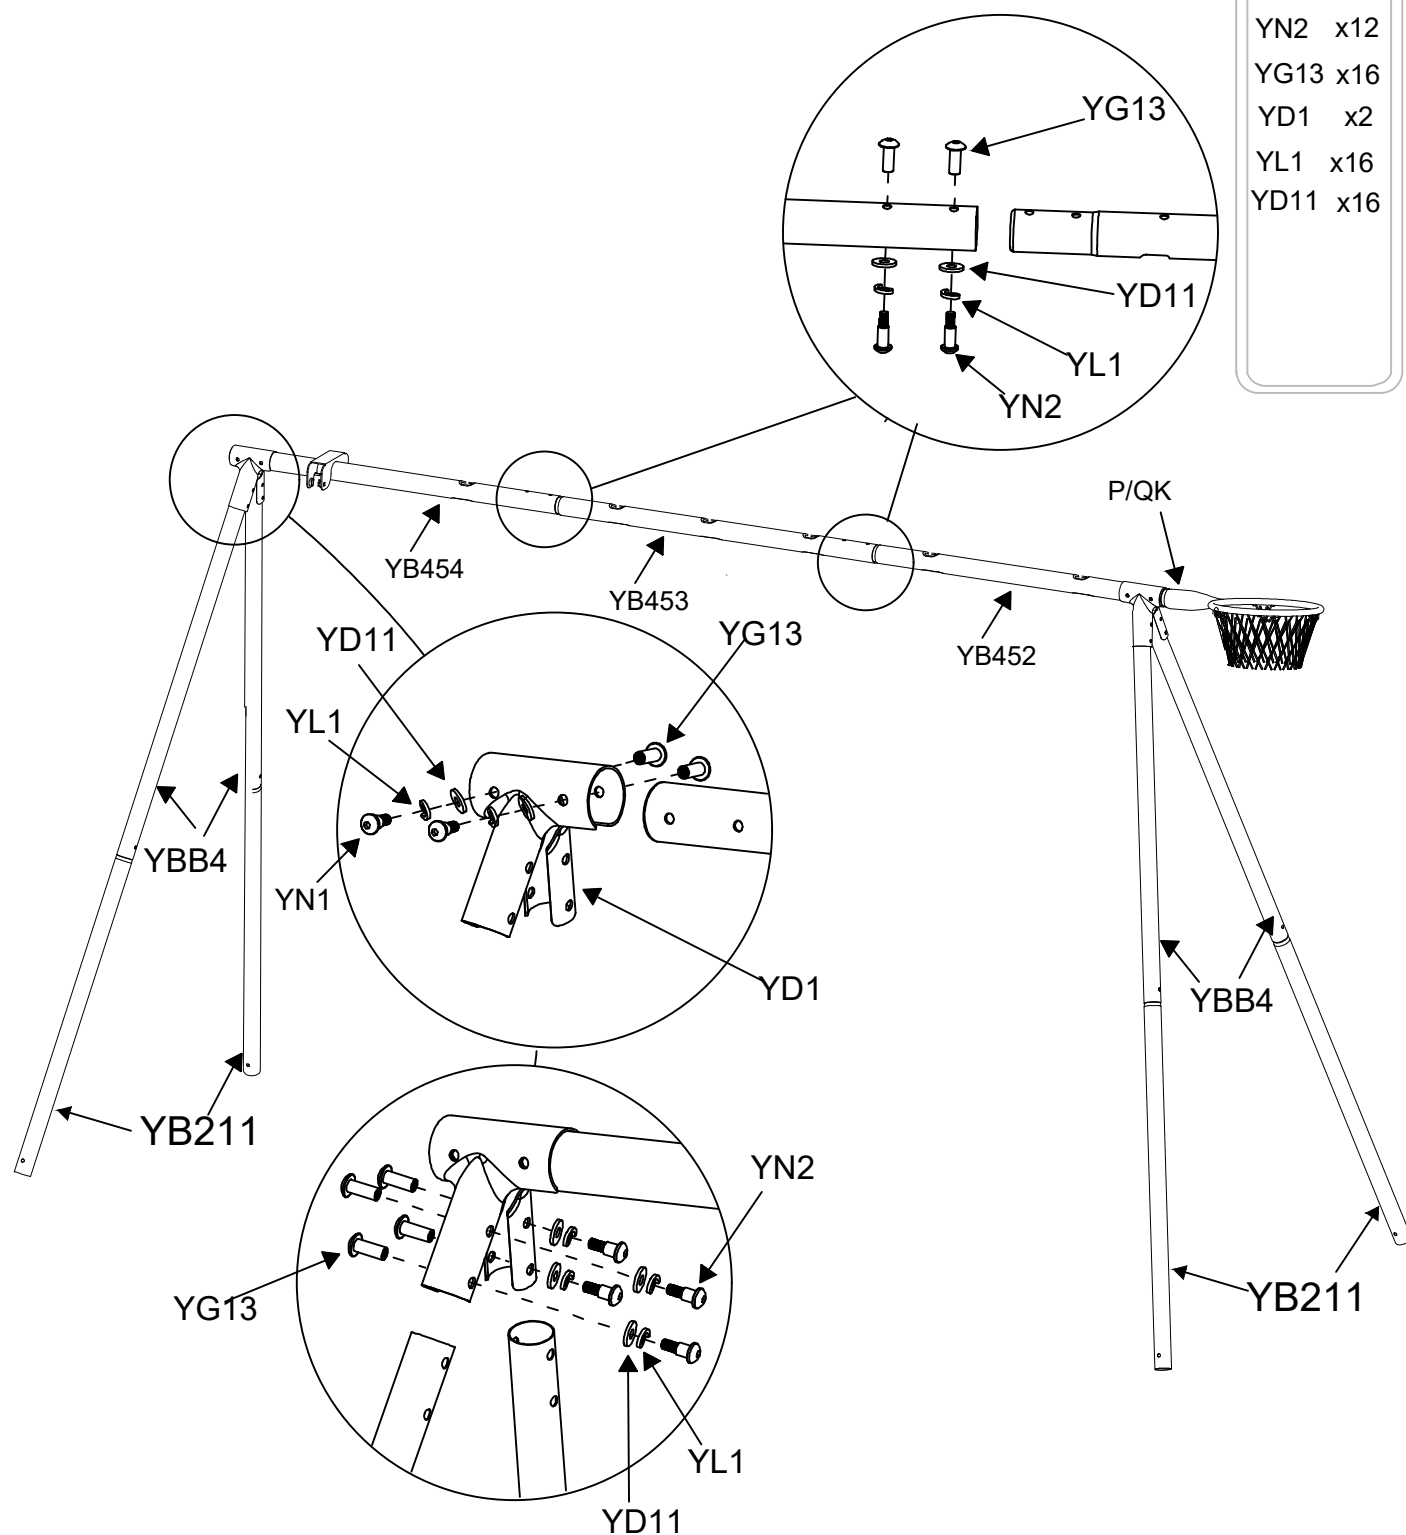

ASSEMBLY INSTRUCTIONS

STEP 2


YBB5 x2
P-PT x1
YC34 x1
P-ZP x1
YD10 x4
YL2 x4
YD3 x6
YG2 x6
YE12 x4
YG13 x4
P/DB x1

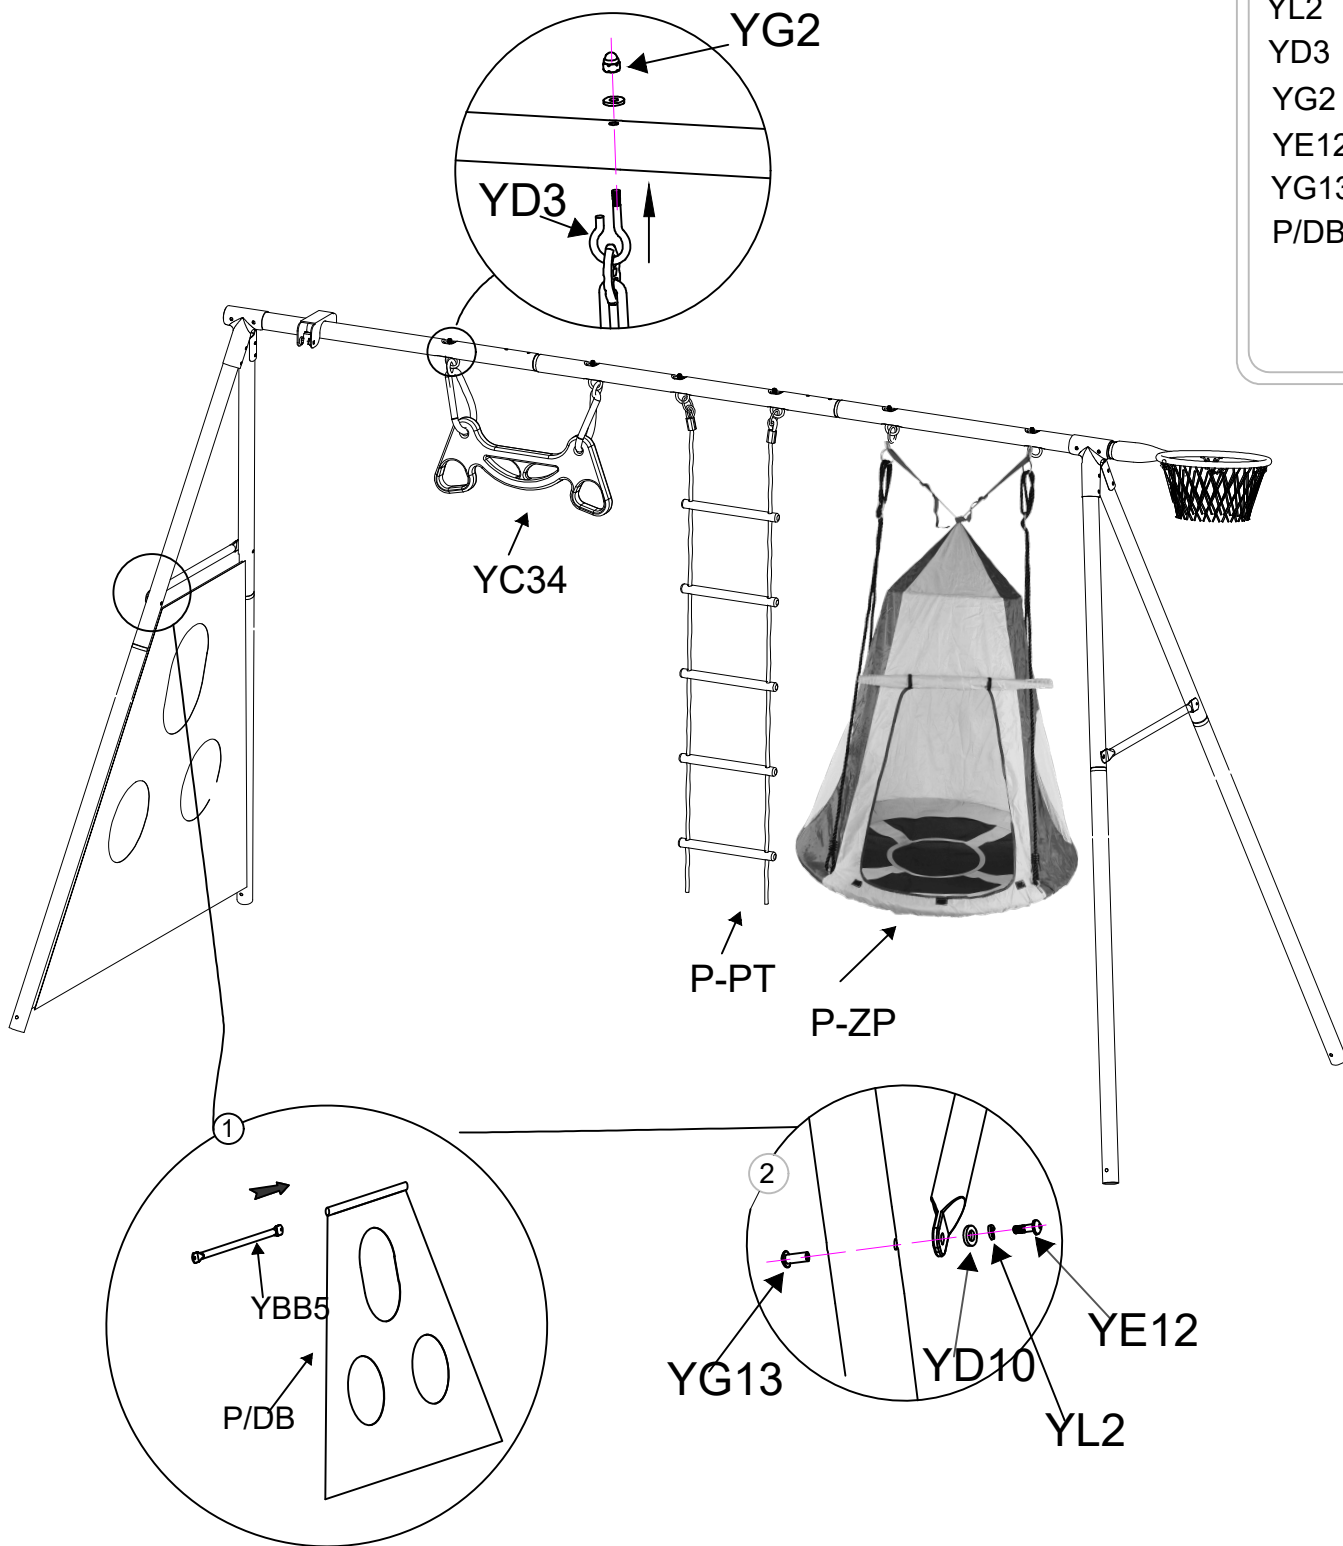

ASSEMBLY INSTRUCTIONS

STEP 3


YD11 x4
 YG2 x4
 YF2 x2
 YD12 x2
 YC3 x8
 YG13 x4
 YL1 x4
 YB19 x2
 YB20 x2
 YB22 x2
 YN4 x4
 YE5 x2

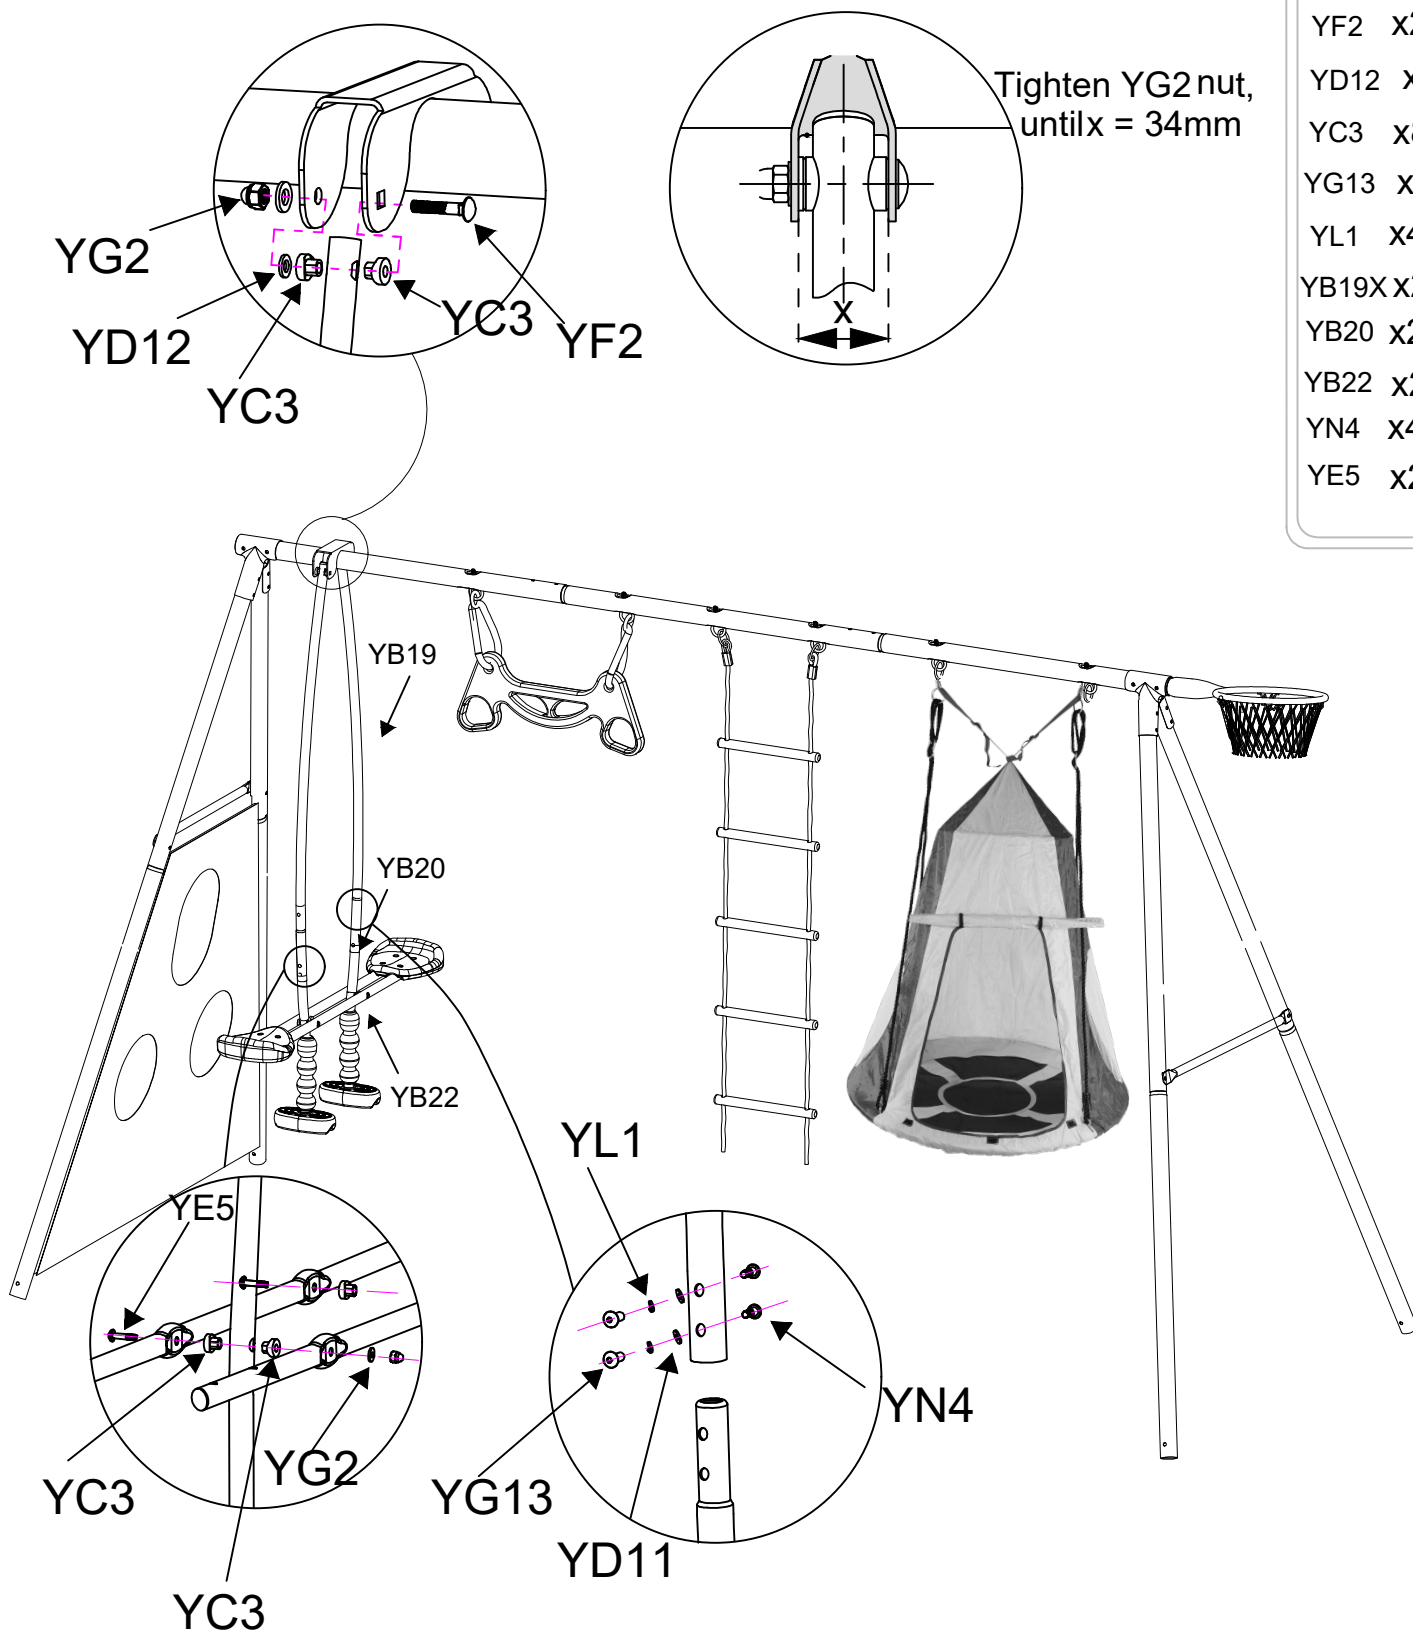

ASSEMBLY INSTRUCTIONS

STEP 4

YD11	x8
YL1	x8
YF11	x8
YC50	x2
YG13	x8
YC51	x2
YC52	x2
YG1	x2
YE1	x2

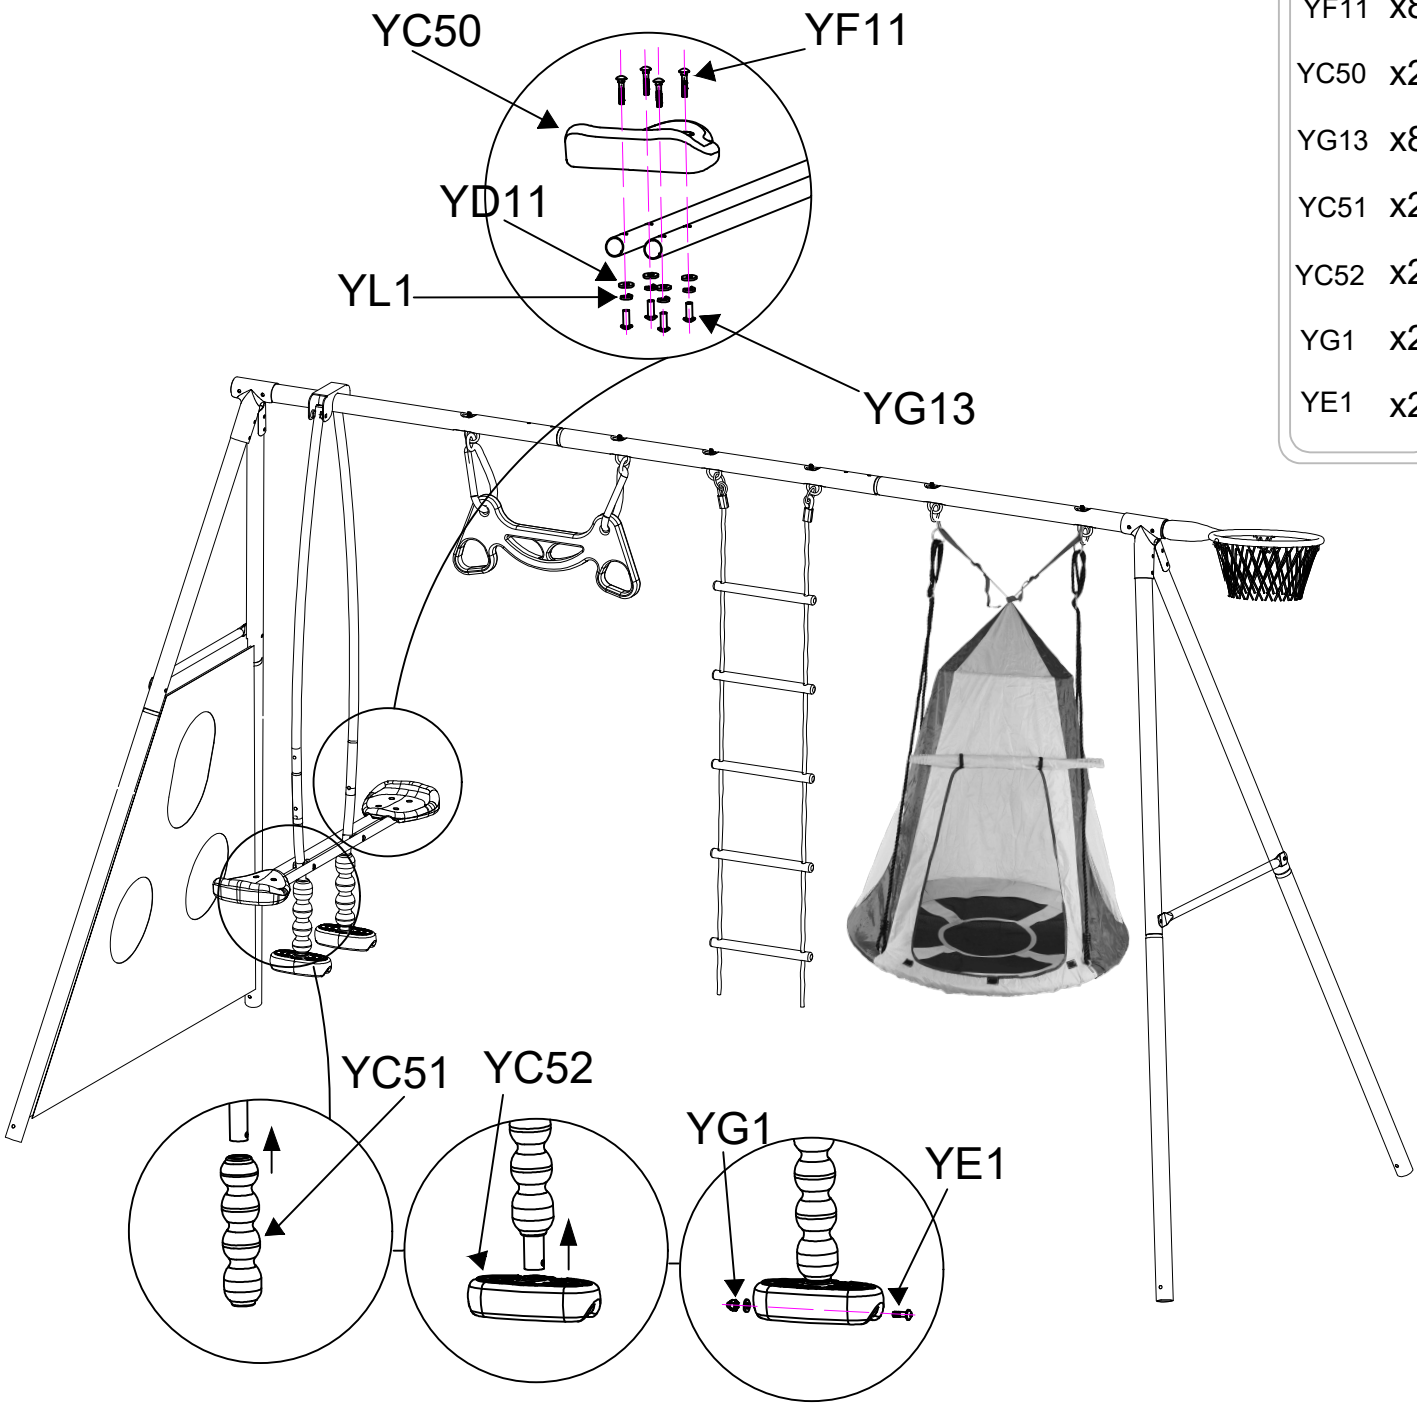

ASSEMBLY INSTRUCTIONS

STEP 5




YL2 x4

YD10 x4

YE12 x4

YD2 x4

YG13 x4

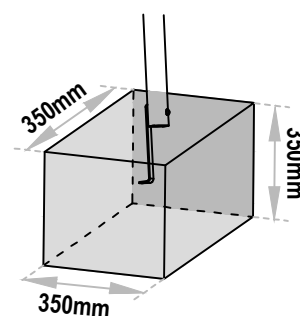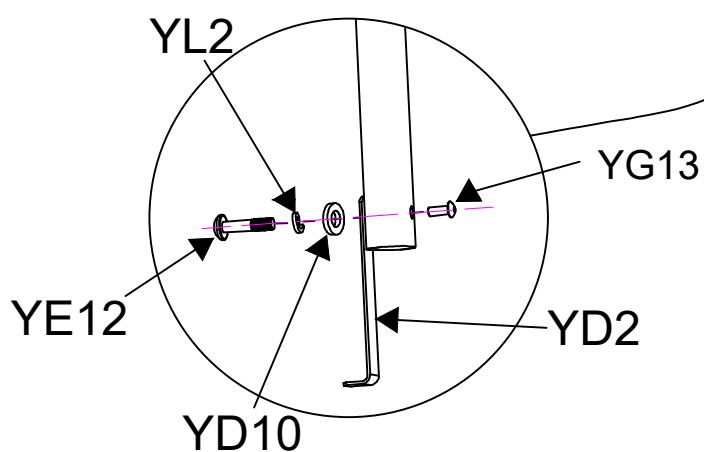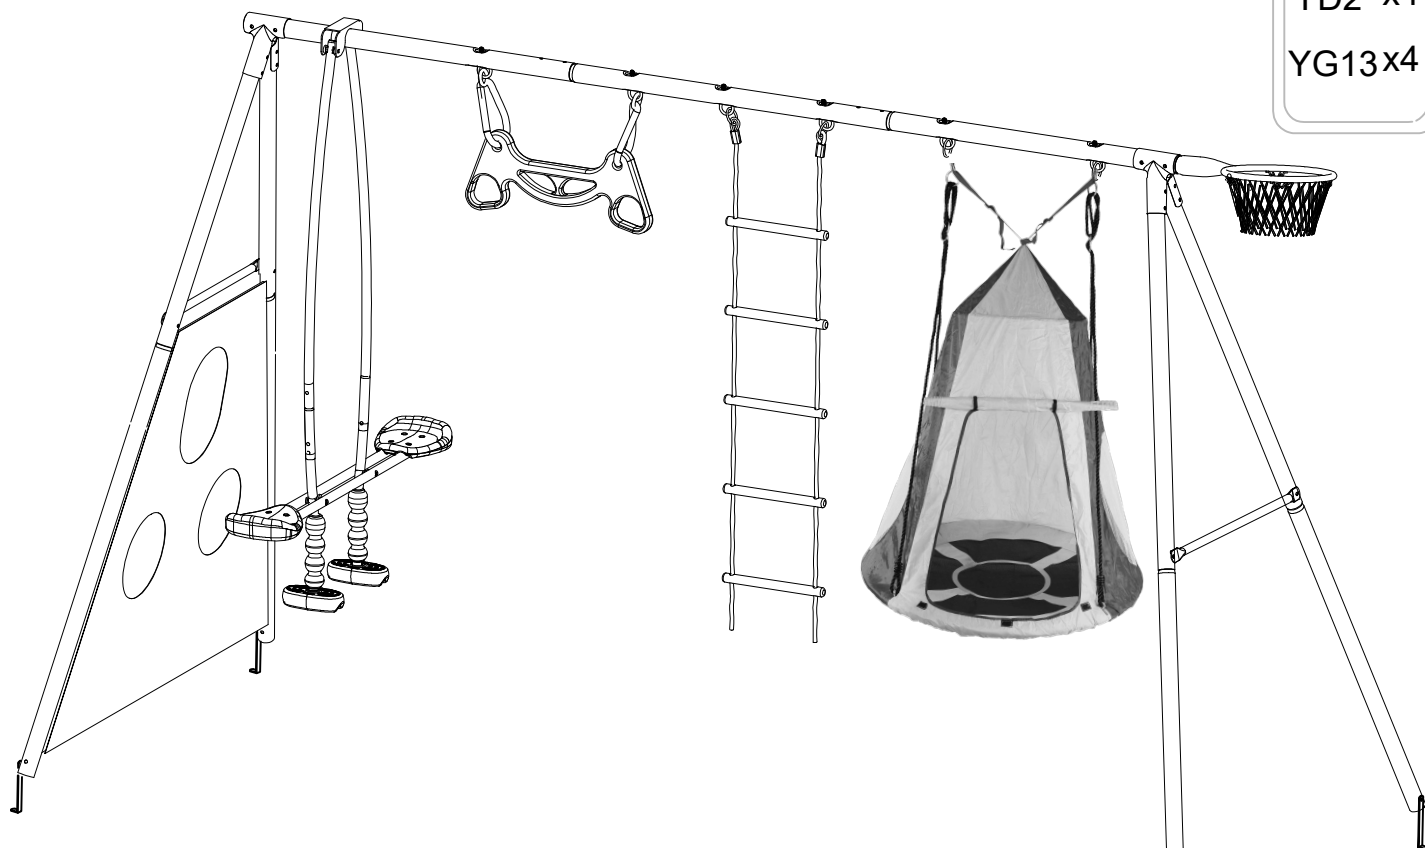

WARNING: The anchors must be placed under the ground in order to reduce tipping hazards

WARNINGS

ASSEMBLY INSTRUCTIONS

To be retained for future reference.

WARNING: *Only for domestic outdoor use.*

Dear Customer,

To guarantee safety, please give special attention to the assembly, safety, and care instructions detailed in this document.

ASSEMBLY ADVICE

Please follow the assembly instructions exactly as given.

- 1) This product must be assembled by an adult.
- 2) Keep a copy of your assembly instructions for future reference. This can be particularly handy for identification of parts if any after sales service is required.
- 3) The EN 71-8, chapter 4.6 standard requires a 40cm minimum distance between the ground and a 2 person swing and a 35cm minimum distance between the ground and swings. These distances are important for safe use. After having assembled the playground, check these distances. In case of non-conformity, do not hesitate to contact our after-sales service.
- 4) We advise that the swing set is not faced towards the sun
- 5) Before commencing, check that none of the parts are missing. If you find that you are missing a part please contact our after sales service department.
- 6) Dispose of packaging thoughtfully.
- 7) Do not allow children to play with packaging.

SAFETY ADVICE

- 1) This product must not be used by children under the age of 36 months. It is suitable only for children between the ages of 3 and 12 years with a maximum weight of 35kg. It must be used under adult supervision.
- 2) Only 4 children may safely use the equipment simultaneously
- 3) As this product contains small parts that could be swallowed, please keep parts away from children under 36 months.
- 4) This product is only for private use at home and must never be used in parks and public gardens, in schools, camp sites, hotels, public leisure areas, etc.
- 5) The swing set should be set up on a flat surface 2 meters away from all other things, structures or obstacles (walls, fences, trees, washing lines or electric cables etc.) that could cause injury during use.
- 6) This product must not be set up over hard surfaces such as concrete, asphalt or other hard surfaces. We recommend installation over grass or other soft surfaces.
- 7) This swing set must be embedded firmly into the ground. Please follow the instructions carefully for doing so. Only use this product when the concrete is dry.
- 8) Anchors should be placed level with or below ground level in order to reduce tripping hazards
- 9) The anchorage must be checked regularly, in addition to the hooks and fixtures.
- 10) Dispose of packaging thoughtfully.
- 11) Do not allow children to play with packaging.
- 12) During the assembly, keep children away from the toy to avoid child swallowing the small accessories.

FIXING INTO THE GROUND

- 1) Assemble the swing set completely and place it in the desired place.
- 2) Locate and mark the position for the sealing legs.
- 3) Check the dimensions showed on the diagram, and correct if necessary.
- 4) Under the four feet, mark a square of 350 X 350 mm and dig a 350 mm deep hole.
- 5) Fill these holes with concrete following the diagram of the recto. The top of the concrete should not exceed ground level.
- 6) Place the sealing legs in the concrete in the located place (see point 2). Make sure the drilled end of the sealing legs is above the level of the concrete.
- 7) Once the concrete is set, screw the feet into the sealing legs.
- 8) Ensure that the concrete is completely dry before using the swing.
- 9) Cover the concrete with soil. We strongly advise checking this anchoring periodically

MAINTENANCE

- 1) All metal parts are galvanized steel and powder coated for rust protection; however, in certain areas close to the sea we advise that additional rust prevention treatment may be necessary.
- 2) The surfaces of all the parts should be checked at least once a month, especially for the fixtures such as hooks on the overhead beam. If the fixtures and hooks show wear over 10% of their original thickness, then they should be replaced with the same fixtures as those originally provided.
- 3) To check all nuts and bolts for tightness and tighten when required.
- 4) To check all coverings for bolts and sharp edges and replace when required.
- 5) Toys may collapse or be dangerous if they don't check regularly.
- 6) All parts that are under constant friction should be oiled regularly with a suitable lubricant.
- 7) The ground on which the product is placed should be controlled regularly. All elements such as stones or other objects that could cause injury in the case of a fall should be removed. It is advised to remove the apparatus during the winter period, when not in use, to avoid any deterioration due to bad weather conditions.
- 8) Check for signs of wear, especially where swinging apparatus' plastic ring attaches to the metal swing hooks on the upper beam. As soon as the plastic ring shows signs of deterioration, the apparatus should be replaced.
- 9) All used apparatuses and/or parts must be replaced by a part delivered by our after sales service, or by an approved retailer.
- 10) If any modifications made by consumer to the original activity toy shall be carried out according to the instructions of the manufacturer.
- 11) Sand rusted areas and tubular members and repaint using a non-lead based paint when required.
- 12) Check swing seats, chains, ropes and other means of attachment for evidence of deterioration;

PRACTICAL ADVICE

Frequent questions and observations

SAFETY

Safety checks should be carried out regularly on this product. These checks should include, if necessary, removing any sharp edges, replacing missing screw covers, and tightening the nuts and bolts. These checks should be done to avoid any danger or upturning of the swing set through normal wear and tear.

Comfort

1) If the swing set develops a squeak apply a suitable gel lubricant. Do not use liquid lubricant as it will run down the fixings and apparatus. The height of the swing can be adjusted using the plastic eyelet fixture. By pulling the rope through the fixture, the height of the seat can be adjusted to suit the user.

The dimensions given are indicative only, they may vary according to the assembly method.

- 2) This Swing Set must be used under adult supervision. Keep any additional components, they may be useful for later operation of maintenance.
- 3) When a child is playing on the device, other children can not run in the area of movements of elements to impact.

CAUTION !Fall danger

WARNINGS

Consumer information sheet for playground surfacing materials

The US Consumer Product Safety Commission (CPSC) estimates that about 100000 playground equipment related injuries resulting from falls to the ground surface are treated annually in US hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall on to a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces, such as concrete or asphalt, and while grass may appear to be acceptable, it may quickly turn to hard-packed earth in areas of high traffic. Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

Table B.1 lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall on to four different loose-fill surfacing materials if they are installed and maintained at depths of 150 mm, 225 mm and 300 mm.

Table B.1---Fall height in millimeters from which a life-threatening head injury would not be expected

Type of material	Depth of surfacing material		
	150mm	225mm	300mm
Double shredded bark mulch	1800	3000	3300
Wood chips	1800	2100	3600
Fine sand	1500	1500	2700
Fine gravel	1800	2100	3000

However, it should be recognised that all injuries due to falls cannot be prevented, no matter what surfacing material is used.

It is recommended that a shock absorbing material extend a minimum of 1 800 mm in all directions from the perimeter of stationary equipment such as climbing frames and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of twice the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for the equipment in question. The choice of a material depends on the type and height of the playground equipment, the availability of the material in a particular area, and its cost.

This information has been extracted from the CPSC publications “*Playground Surfacing — Technical Information Guide*” and “*Handbook for Public Playground Safety*”.